

FAULT CODE, SYMPTOM, POSSIBLE CAUSE

1

Engine runs normally
Faulty MAP sensor or wiring

2

Engine runs normally
Faulty MAP sensor / vacuum hose

7

Engine difficult to start at low temp.
Faulty coolant temp. sensor or wiring

8

Poor throttle response
Faulty throttle position sensor or wiring

9

Engine runs normally
Faulty intake air temp. sensor or wiring

10 (see note 1)

Engine runs poor at high altitude
Faulty atmospheric pressure sensor

11

engine operates normally
Faulty speed sensor or wiring

12

Engine does not start
Faulty no. 1 fuel injector

13

Engine does not start
Faulty no. 2 fuel injector

14

Engine does not start
Faulty no. 3 fuel injector

15

Engine does not start
Faulty no. 4 fuel injector

18

Engine does not start
Faulty cam pulse gen.r or wiring

19

Engine does not start
Faulty ignition pulse gen. or wiring

20

engine operates normally
Faulty EPROM in ECM

25

engine operates normally
Faulty knock sensor or wiring

21

engine operates normally
faulty oxygen sensor

23

engine operates normally
Faulty oxygen sensor heat element