



BMW Motorrad



Rider's Manual

F 900 XR

<https://www.motorcycle-manual.com/>

Vehicle data/dealership details

Vehicle data

Model

Vehicle Identification Number

Colour code

Date of first registration

Registration number

Dealership details

Person to contact in Service department

Ms/Mr

Phone number

Dealership address/phone number (company stamp)

<https://www.motorcycle-manual.com/>

Welcome to BMW

We congratulate you on your choice of a vehicle from BMW Motorrad and welcome you to the community of BMW riders. Familiarise yourself with your new vehicle so that you can ride it safely and confidently in all traffic situations.

About these operating instructions

Read these operating instructions carefully before starting to use your new BMW. They contain important information on how to operate the controls and how to make the best possible use of all your BMW's technical features. In addition, they contain information on maintenance and care to help you maintain your vehicle's reliability and safety, as well as its value.

The record of the maintenance work you have had performed on your vehicle is a precondition for generous treatment of goodwill claims.

If the time comes to sell your BMW, please remember to hand over these operating instructions to the new owner. They are an important part of the vehicle.

Suggestions and criticism

If you have questions concerning your vehicle, your authorised BMW Motorrad retailer will gladly provide advice and assistance.

We hope you will enjoy riding your BMW and that all your journeys will be pleasant and safe

BMW Motorrad.

01 40 1 603 401

<https://www.motorcycle-manual.com/>



Table of Contents

1 General instructions 7	Instrument cluster 28	Daytime riding light..... 72
Overview 8	3 Status indicators 29	Hazard warning lights 74
Abbreviations and symbols 8	Indicator and warning lights 30	Turn indicators 74
Equipment 9	TFT display in Pure Ride view 31	Traction control (ASC/DTC) 75
Technical data 9	TFT display in Menu view 33	Electronic Suspension Adjustment (D-ESA) 76
Currency 10	TFT display in Sport 1 view 35	Riding mode 79
Additional sources of information..... 10	Warning indicators 36	PRO riding mode 82
Certificates and operating licences 10	4 Operation..... 61	Cruise-control system..... 83
Data memory..... 10	Ignition switch/steering lock 62	Shift light..... 86
Intelligent emergency call system 15	Ignition with Keyless Ride 63	Anti-theft alarm (DWA) 86
2 General views 19	Electronic immobiliser EWS 67	Tyre pressure monitoring (RDC) 89
General view, left side 21	Emergency-off switch (kill switch) 67	Heated handlebar grips 89
General view, right side 23	Intelligent emergency call 68	Seat 90
Underneath the seat 24	Lights 70	5 TFT display 93
Multifunction switch, left 25		General notes 94
Multifunction switch, right 26		Principle 95
Multifunction switch, right 27		Pure Ride view 101
		General settings..... 102
		Bluetooth..... 104
		My vehicle 107
		On-board computer 110

Navigation	110	Refuelling	133	Brake system	160
Media	112	Securing motorcycle for transportation	138	Clutch	164
Telephone	113			Coolant.....	165
Display software version	114	8 Engineering details	141	Tyres.....	166
Display licence informa- tion.....	114	General notes	142	Rims and tyres	167
6 Adjustment.....	115	Antilock Brake System (ABS).....	142	Wheels	167
Mirrors	116	Traction control (ASC/ DTC)	145	Trim panel	176
Headlight.....	116	Dynamic engine brake con- trol	146	Air filter.....	177
Windscreen	117	Dynamic ESA	147	Lighting	179
Clutch.....	117	Riding mode	147	Jump-starting	180
Brakes	118	Dynamic Brake Control....	150	Battery	181
Spring preload	118	Tyre pressure monitoring (RDC)	150	Fuses	184
Damping	119	Gear Shift Assistant	152	Diagnostic connector.....	186
7 Riding.....	121	Adaptive Headlight	153	Chain.....	187
Safety instructions	122	9 Maintenance	155	10 Accessories	191
Regular check.....	124	General notes	156	General notes	192
Starting.....	125	Toolkit.....	156	Power sockets	192
Running in	128	Service tool kit	156	Touring cases	193
Shifting gear	129	Front-wheel stand.....	157	Soft cases.....	195
Shift light.....	130	Engine oil	158	Topcase.....	196
Brakes	131			Navigation system.....	199
Parking your motor- cycle	133				

11 Care	205	Suspension	221	14 Appendix.....	253
Care products	206	Brakes	222	Declaration of conform-	
Washing the vehicle.....	206	Wheels and tyres.....	223	ity for electronic immobil-	254
Cleaning easily damaged		Electrical system	225	iser	
components.....	207	Anti-theft alarm.....	226	Certificate for electronic	
Care of paintwork	208	Dimensions	227	immobiliser	260
Paintwork preservation	208	Weights	228	Declaration of conformity	
Laying up the motor-		Performance figures.....	228	for Keyless Ride.....	262
cycle	208			Certificate for Key-	
Restoring motorcycle to		13 Service	229	less Ride	267
use	209	BMW Motorrad Service ...	230	Declaration of conformity	
		BMW Motorrad Service		for tyre pressure monitor-	
12 Technical data	211	history.....	230	ing (Reifendruck-Control,	
Troubleshooting chart	212	BMW Motorrad mobility		RDC)	269
Threaded fasteners	214	services	231	Certificate for tyre pressure	
Fuel F 900 XR (0K21).....	216	Maintenance work.....	231	monitoring (Reifendruck-	
Fuel F 900 XR A2 (0K41)...	217	Maintenance schedule	235	Control, RDC)	276
Engine oil	217	Maintenance confirma-		Declaration of conformity	
Engine		tions.....	236	for TFT instrument	
F 900 XR (0K21).....	218	Service confirmations	250	cluster.....	277
Engine				Certificate for TFT instru-	
F 900 XR A2 (0K41)	219			ment cluster.....	283
Clutch	220			Declaration of conformity	
Transmission	220			for intelligent emergency	
Final drive	221			call	286
Frame	221				

Declaration of conformity for anti-theft alarm system	292
15 Index	298

<https://www.motorcycle-manual.com/>

General instructions

Overview	8
Abbreviations and symbols	8
Equipment	9
Technical data	9
Currency	10
Additional sources of information	10
Certificates and operating licences	10
Data memory	10
Intelligent emergency call system	15

<https://www.motorcycle-manual.com/>

Overview

Chapter 2 of these operating instructions will provide you with an initial overview of your motorcycle. All maintenance and repair work on the vehicle is documented in Chapter 13. The record of the maintenance work you have had performed on your vehicle is a precondition for generous treatment of goodwill claims.

If the time comes to sell your BMW, please remember to hand over these operating instructions to the new owner. They are an important part of the motorcycle.

Abbreviations and symbols



CAUTION Low-risk hazard. Non-avoidance can lead to slight or moderate injury.



WARNING Medium-risk hazard. Non-avoidance can lead to fatal or severe injury.



DANGER High-risk hazard. Non-avoidance leads to fatal or severe injury.



ATTENTION Special notes and precautionary measures. Non-compliance can lead to damage to the vehicle or accessory and, consequently, to voiding of the warranty.



NOTICE Specific instructions on how to operate, control, adjust or look after items of equipment on the vehicle.



Indicates the end of an item of information.



Instruction.



Result of an activity.



Reference to a page with more detailed information.



Indicates the end of a passage relating to specific accessories or items of equipment.



Tightening torque.



Technical data.

NV

National-market version.

OE

Optional equipment. The vehicles are assembled complete with all the BMW Motorrad optional equipment originally ordered.

OA	Optional accessories. You can obtain BMW Motorrad optional accessories through your authorised BMW Motorrad dealer; optional accessories have to be retrofitted to the vehicle.
ABS	Anti-lock brake system.
ASC	Automatic Stability Control.
EWS	Electronic immobiliser.
D-ESA	Electronic chassis and suspension adjustment.
DTC	Dynamic Traction Control (optional extra only in combination with Pro riding modes).
DWA	Anti-theft alarm.

RDC Tyre pressure monitoring.

Equipment

When you purchased your BMW motorcycle, you chose a model with individual equipment. These operating instructions describe the optional equipment (OE) offered by BMW and selected optional accessories (OA).

This explains why the manual may also contain descriptions of equipment that you might not have selected. Please note, too, that on account of country-specific differences, your motorcycle might not be exactly as illustrated.

If your motorcycle contains equipment that has not been described, its description can be found in a separate manual.

Technical data

All dimensions, weights and power ratings stated in the operating instructions are quoted to the standards and comply with the tolerance requirements of the Deutsches Institut für Normung e.V. (DIN).

Technical data and specifications in this rider's manual serve as reference points. The vehicle-specific data may deviate from these, for example as a result of selected optional equipment, the national-market version or country-specific measuring procedures. Detailed values can be taken from the vehicle registration documents and signs on the vehicle, or can be obtained from your authorised BMW Motorrad retailer or another qualified service partner or specialist workshop. The specifications in the vehicle documents always have priority

<https://www.motorcycle-manual.com/>

over the information provided in this rider's manual.

Currency

The high safety and quality standards of BMW motorcycles are maintained by constant development work on designs, equipment and accessories. Because of this, your motorcycle may differ from the information supplied in the Rider's Manual. Nor can BMW Motorrad entirely rule out errors and omissions. We hope you will appreciate that no claims can be entertained on the basis of the data, illustrations or descriptions in these operating instructions.

Additional sources of information

Authorised BMW Motorrad retailer

Your BMW Motorrad retailer will be happy to answer any questions you may have.

Internet

The operating instructions for your vehicle, operating and installation instructions for accessories and general information about BMW Motorrad, in relation to technology, for example, are available for download from **www.bmw-motorrad.com/manuals**.

Certificates and operating licences

The certificates for the vehicle and the official operating licences for accessories can be downloaded from **bmw-motorrad.com/certification**.

Data memory

General

Control units are installed in the vehicle. Control units process data that they receive, for example, from vehicle sensors, or that they generate themselves or exchange between each other. Some control units are required for the vehicle to function safely or provide assistance during riding, for example assistance systems. In addition, control units enable comfort or infotainment functions.

Information on data that has been stored or exchanged can

<https://www.motorcycle-manual.com/>

be obtained from the manufacturer of the vehicle, for example via a separate booklet.

Personal reference

Each vehicle is identified with a clear vehicle identification number. Depending on the country, the vehicle identification number, the number plate and the corresponding authorities can be referenced to ascertain the vehicle owner. There are also other ways to use data obtained from the vehicle to trace the rider or vehicle owner, for example using the ConnectedDrive user account.

Data protection rights

In accordance with applicable data protection laws, vehicle users have certain rights in relation to the manufacturer of the vehicle or in relation to compan-

ies which collect or process personal data.

Vehicle users have the right to obtain full information at no cost from persons or entities storing personal data of the vehicle user.

These entities may include:

- Manufacturer of the vehicle
- Qualified service partners
- Specialist workshops
- Service providers

Vehicle users have the right to request information on what personal data has been stored, for what purpose the data is used, and where the data comes from.

To obtain this information, proof of ownership or use is required.

The right to information also includes information about data that has been shared with other companies or entities.

The website of the vehicle manufacturer contains the applicable data protection information. This

data protection information includes information on the right to have data deleted or corrected.

The manufacturer of the vehicle also provides their contact details and those of the data protection officer on their website.

The vehicle owner can also request that a BMW Motorrad retailer or another qualified service partner or specialist workshop read out the data that is stored in the vehicle for a charge.

The vehicle data is read out using the legally prescribed socket for on-board diagnosis (OBD) in the vehicle.

Legal requirements for the disclosure of data

As part of its legal responsibilities, the manufacturer of the vehicle is obligated to make its stored data available to the relevant authorities. This data is provided in the required scope in

individual cases, for example to clarify a criminal offence.

In the context of applicable laws, public agencies are entitled in individual cases to read out data from the vehicle themselves.

Operating data in the vehicle

Control units process data to operate the vehicle.

This includes, for example:

- Status reports of the vehicle and its individual components, for example wheel revolutions, wheel speed, deceleration
- Environmental conditions, for example temperature

The data is only processed in the vehicle itself and is generally non-permanent. The data is not stored beyond the operating period.

Electronic components, for example control units, contain components for storing technical in-

formation. Information can be temporarily or permanently stored on the vehicle condition, component loads, incidents or errors. This information is generally used to document the condition of a component, a module, a system or the surrounding area, for example:

- Operating conditions of system components, for example filling levels, tyre pressure
- Malfunctions and faults in important system components, for example light and brakes
- Response of the vehicle in special riding situations, for example engagement of the driving dynamics systems
- Information on incidents resulting in damage to the vehicle

The data is necessary for the provision of control unit functions. Furthermore, the data is used to detect and rectify malfunctions

and to enable the vehicle manufacturer to optimise vehicle functions.

The vast majority of this data is non-permanent and is only processed in the vehicle itself. Only a small amount of the data is stored in incident or fault memories as required by events.

If services are accessed, for example repairs, service processes, warranty cases and quality assurance measures, this technical information can be read out of the vehicle together with the vehicle identification number.

The information can be read out by a BMW Motorrad retailer or another qualified service partner or specialist workshop. The legally stipulated socket for on-board diagnosis (OBD) in the vehicle is used to read out the data.

The data is obtained, processed and used by the relevant parts of

the retailer network. The data is used to document the technical conditions of the vehicle, to help with error localization, to comply with warranty obligations and to improve quality.

In addition, the manufacturer has various product monitoring obligations arising from product liability legislation. To meet these obligations, the vehicle manufacturer requires technical data from the vehicle. The data from the vehicle can also be used to check warranty claims from the customer.

Error and incident memories in the vehicle can be reset during servicing or repair work by a BMW Motorrad retailer or another qualified service partner or specialist workshop.

Data input and data transfer in the vehicle

General

Depending on the equipment, comfort and customised settings can be stored in the vehicle and can be changed or reset at any time.

This includes, for example:

- Settings of the windscreen position
- Chassis and suspension settings

If required, data can be entered in the entertainment and communication system of the vehicle, for example using a smartphone.

Depending on the individual equipment, this includes:

- Multimedia data, such as music for playback
- Contacts data for use in connection with a communication system or an integrated navigation system

- Entered destinations
- Data on the use of internet services. This data can be stored locally in the vehicle or is located on a device that is connected to the vehicle, for example smartphone, USB stick, MP3 player. If this data is stored in the vehicle, the data can be deleted at any time.

This data is transferred to third parties only if personally requested within the context of using online services. This depends on the selected settings when using the services.

Incorporation of mobile devices

Depending on the equipment, mobile devices connected to the vehicle, for example smartphones, can be controlled using the operating elements of the vehicle.

<https://www.motorcycle-manual.com/>

The image and sound of the mobile device can then be output via the multimedia system. At the same time, specific information is transferred to the mobile device. Depending on the type of integration, this includes, for example, position data and additional general vehicle information. This enables optimal use of the selected apps, for example navigation or music playback.

The type of additional data processing is determined by the provider of the respective app. The scope of the possible settings depends on the corresponding app and the operating system of the mobile device.

Services

General

If the vehicle has a wireless connection, this enables the exchange of data between the vehicle and other systems. The

wireless connection is enabled by the vehicle's own transmitter and receiver unit or using personally integrated mobile devices, for example smartphones. Online functions can be used using this wireless connection. These include online services and apps that are provided by the vehicle manufacturer or by other providers.

Services of the vehicle manufacturer

For online services of the vehicle manufacturer, the individual functions are described at suitable points, for example rider's manual, website of the manufacturer. At the same time, information is also provided on the relevant data protection law. Personal data may be used to provide online services. Data is exchanged using a secure connection, for example with

the IT systems provided by the vehicle manufacturer.

Obtaining, processing and using personal data outside of the normal provision of services requires legal permission, contractual agreement or consent. It is also possible to have the entire data connection activated or deactivated. Statutory functions are excluded from this.

Services from other providers

When using online services from other providers, these services are subject to the responsibility and the data protection and operating conditions of the individual provider. The vehicle manufacturer has no influence on the content that is exchanged in this instance. Information on the type, scope and purpose of the data capture and use of personal data as part of the services of third parties can be ascertained from the individual provider.

Intelligent emergency call system

- with intelligent emergency call^{OE}

Principle

The intelligent emergency call system enables manual or automatic emergency calls, for example in the event of an accident.

The emergency calls are received by an emergency call centre that is commissioned by the vehicle manufacturer.

For information on operating the intelligent emergency call system and its functions, please refer to "Intelligent emergency call".

Legal basis

Processing of personal data using the intelligent emergency call system is in line with the following regulations:

- Protection of personal data: Directive 95/46/EC of the European Parliament and of the Council.
- Protection of personal data: Directive 2002/58/EC of the European Parliament and of the Council.

The legal basis for the activation and function of the intelligent emergency call system is the concluded ConnectedRide contract for this function, as well as the corresponding laws, ordinances and directives of the European Parliament and of the European Council.

The relevant ordinances and directives regulate the protection of natural persons during the processing of personal data.

The processing of personal data by the intelligent emergency call system satisfies the European

directives for the protection of personal data.

The intelligent emergency call system processes personal data only with the agreement of the vehicle owner.

The intelligent emergency call system and other services with additional benefits can process personal data only with the express permission of the person affected by the data processing, for example the vehicle owner.

SIM card

The intelligent emergency call system operates via the mobile phone network using the SIM card installed in the vehicle. The SIM card is permanently logged into the mobile phone network to enable rapid connection setup. Data is sent to the vehicle manufacturer in the event of an emergency.

<https://www.motorcycle-manual.com/>

Improving quality

The data that is transferred in an emergency is also used by the manufacturer of the vehicle to improve product and service quality.

Location determination

The position of the vehicle can be determined exclusively by the mobile phone network provider based on the mobile phone site locations. It is not possible for the provider to trace a connection between the vehicle's VIN and the phone number of the installed SIM card. Only the manufacturer of the vehicle can link a VIN and the phone number of the SIM card installed in a particular vehicle.

Log data of emergency calls

The log data of emergency calls is stored in a memory of the vehicle. The oldest log data is

regularly deleted. The log data includes, for example, information on when and where an emergency call was made. In exceptional cases, the log data can be read out of the vehicle memory. As a rule, log data is only read out following a court order, and this is only possible if the corresponding devices are connected directly to the vehicle.

Automatic emergency call

The system is designed so that, following a sufficiently serious accident, which is detected by sensors in the vehicle, an emergency call is automatically activated.

Sent information

When making an emergency call using the intelligent emergency call system, the system forwards the same information to the designated emergency call centre as

is forwarded to the public emergency operations centre by the statutory emergency call system eCall.

In addition, the intelligent emergency call system sends the following additional information to an emergency call centre commissioned by the vehicle manufacturer and, if required, to the emergency services:

- Accident data, for example the direction of impact detected by the vehicle sensors, to assist the emergency services response.
- Contact details, for example the phone number of the installed SIM card and the phone number of the rider, if available, to enable rapid contact with those involved in the accident if required.

Data storage

The data for an activated emergency call is stored in the vehicle. The data contains information on the emergency call, for example the location and time of the emergency call.

The voice recordings of the emergency call are stored at the emergency call centre.

The voice recordings of the customer are stored for 24 hours in case details of the emergency call need to be analysed. After this, the voice recordings are deleted. The voice recordings of the employee of the emergency call centre are stored for 24 hours for quality assurance purposes.

Information on personal data

The data that is processed as part of the intelligent emergency call is processed exclusively to carry out the emergency call. As

part of its statutory obligation, the manufacturer of the vehicle provides information about the data that it has processed and any data that it still has stored.

<https://www.motorcycle-manual.com/>

<https://www.motorcycle-manual.com/>

General views

General view, left side.....	21
General view, right side	23
Underneath the seat	24
Multifunction switch, left	25
Multifunction switch, right.....	26
Multifunction switch, right.....	27
Instrument cluster	28



<https://www.motorcycle-manual.com/>





General view, left side

- 1 Power socket (■ 192)
- 2 Seat lock (■ 90)
- 3 Adjuster for damping characteristic (■ 119)
- 4 Oil filler opening and oil dipstick (■ 158)




<https://www.motorcycle-manual.com/>

General view, right side


- 1 Adjuster for spring preload
( 118)
- 2 Brake-fluid reservoir, rear
( 163)
- 3 Brake-fluid reservoir, front
( 162)
- 4 Vehicle identification number, type plate (on steering head)
- 5 Coolant level indicator (behind the side trim panel)
( 165)

Underneath the seat

- 1 Operating instructions (➡ 8)
First-aid kit (behind the operating instructions)
- 2 Toolkit (➡ 156)
- 3 Connector for coding plug – with riding modes Pro^{OE}
Install the coding plug (➡ 81).
- 4 Battery (➡ 181)
- 5 Replace the main fuse (➡ 184).
- 6 Diagnostic connector (➡ 186)
- 7 Replace the fuses (➡ 185).

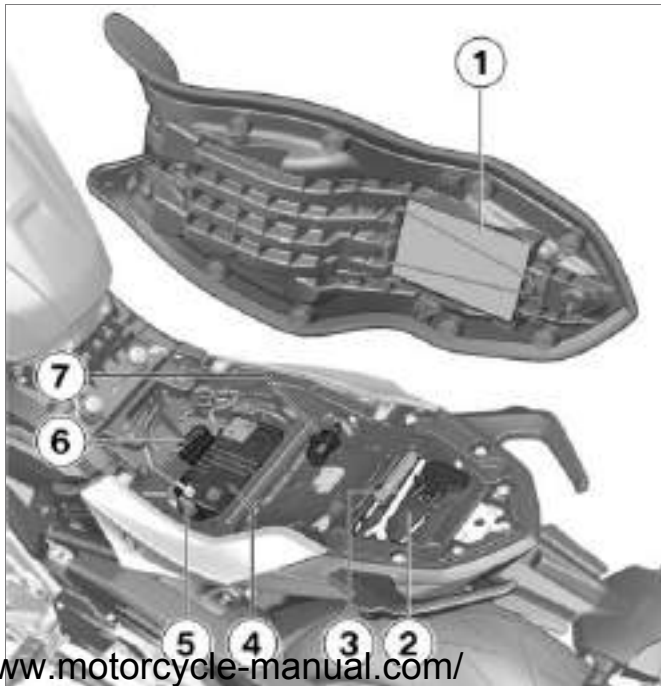


Multifunction switch, left

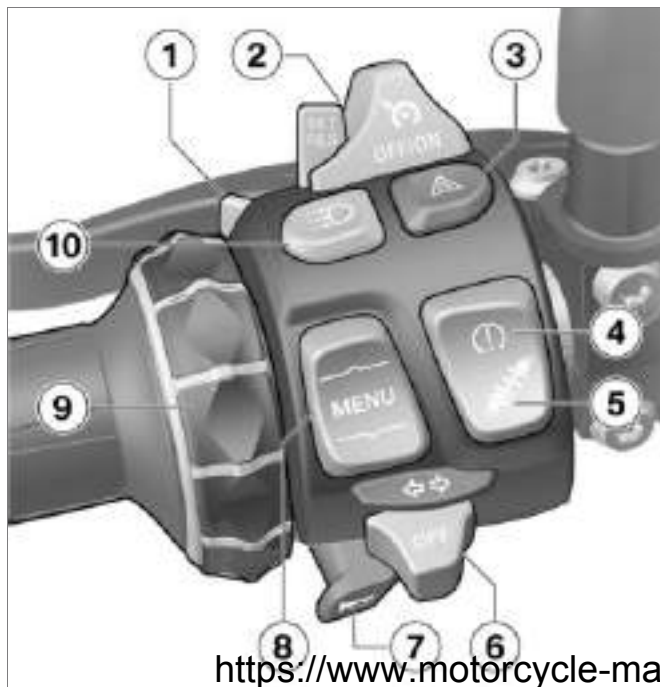

- 1** High-beam headlight and headlight flasher (➡ 71)
- 2** – with cruise control^{OE}
Cruise-control system (➡ 84).
- 3** Hazard warning lights (➡ 74)
- 4** ASC/DTC (➡ 75)
- 5** – with Dynamic ESA^{OE}
Possibilities for adjustment (➡ 77)
- 6** Turn indicators (➡ 74)
- 7** Horn
- 8** MENU rocker button (➡ 95)
- 9** Multi-Controller Controls (➡ 95)
- 10** – with daytime riding light^{OE}
Manual daytime riding light (➡ 72).

Multifunction switch, right

- with intelligent emergency call^{OE}
- 1 – with heated grips^{OE}
Operating the heated handlebar grips (➡ 89).
- 2 Riding mode (➡ 79)
- 3 Emergency-off switch (kill switch) (➡ 67)
- 4 Starter button (➡ 125)
- 5 SOS button
Intelligent emergency call (➡ 68)

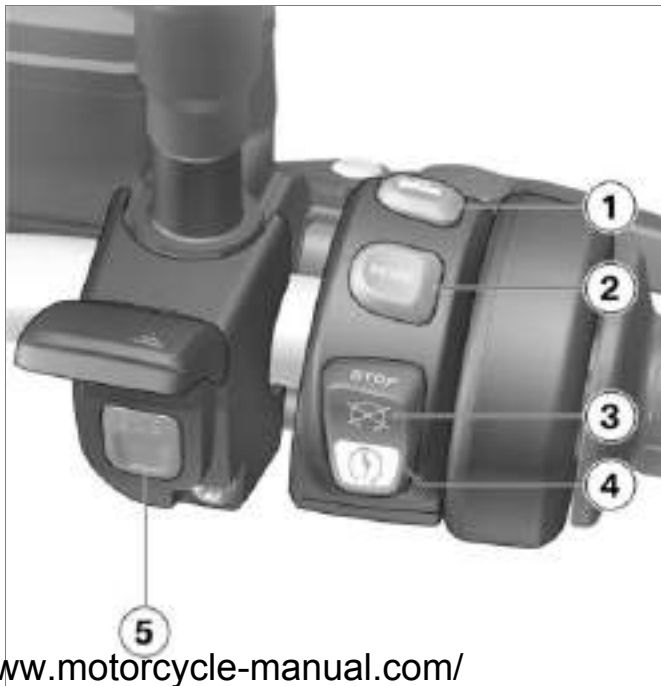

Multifunction switch, right

– without intelligent emergency call^{OE}

- 1 – with heated grips^{OE}
Operating the heated handlebar grips (➡ 89).
- 2 Riding mode (➡ 79)
- 3 Emergency-off switch (kill switch) (➡ 67)
- 4 Starter button (➡ 125)



<https://www.motorcycle-manual.com/>

Instrument cluster

- 1 Indicator and warning lights (➡ 30)
- 2 Shift light
- 3 TFT display (➡ 31) (➡ 33)
- 4 Alarm system LED
– with anti-theft alarm (DWA)^{OE}
Alarm signal (➡ 87)
– with Keyless Ride^{OE}
Indicator light for the radio-operated key
Ignition with Keyless Ride (➡ 64).
- 5 Photosensor (for adapting the brightness of the instrument lighting)





Status indicators

Indicator and warning lights	30
TFT display in Pure Ride view	31
TFT display in Menu view	33
TFT display in Sport 1 view	35
Warning indicators	36

Indicator and warning lights

- 1 Turn indicators, left
Operating the turn indicators (➡ 74).
- 2 High-beam headlight
(➡ 71)
- 3 General warning light
(➡ 36)
- 4 Turn indicators, right
- 5 - with EU markets export^{NV}
Malfunction indicator lamp
Emissions warning (➡ 49)
- 6 ASC/DTC (➡ 56)
- 7 ABS (➡ 55)
- 8 - with daytime riding light^{OE}
Manual daytime riding light
(➡ 72).
- 9 Auxiliary headlights

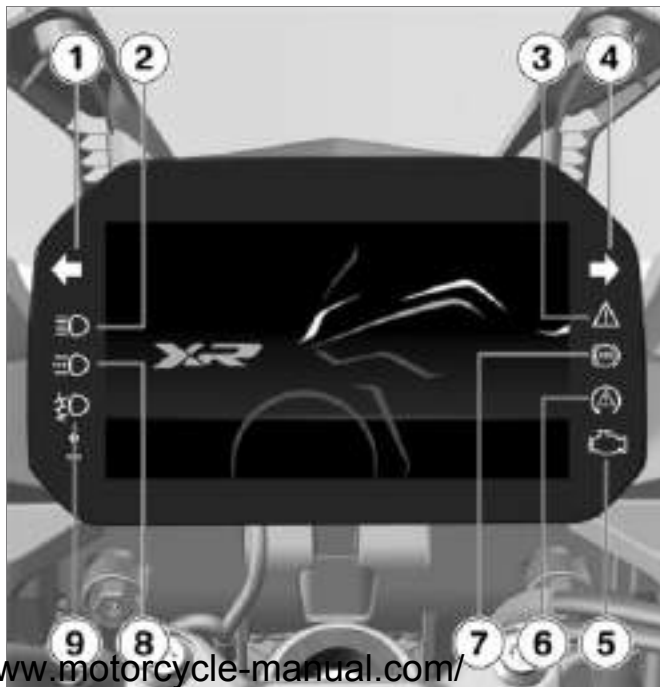

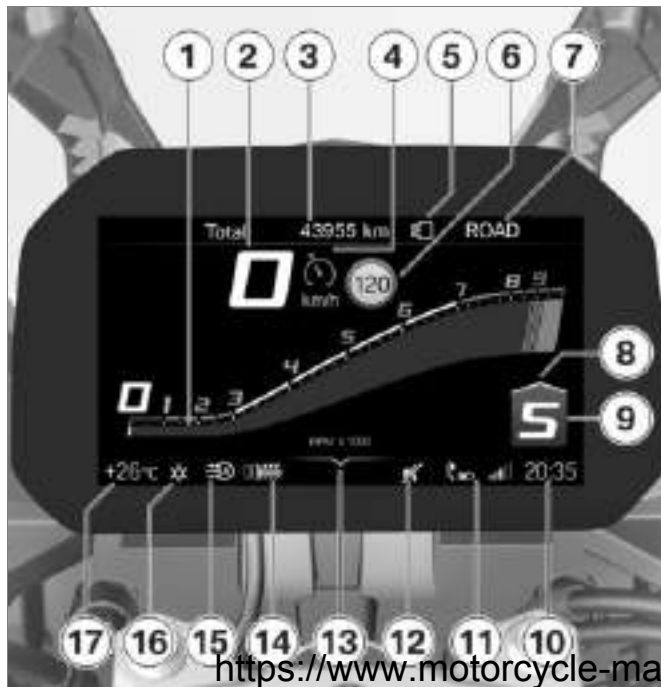


TFT display in Pure Ride view

- 1 Rev. counter (➡ 101)
- 2 Speedometer
- 3 Driver info. status line (➡ 100)
- 4 – with cruise control^{OE}
Cruise-control system (➡ 84).
- 5 Coding plug
– with riding modes Pro^{OE}
Install the coding plug (➡ 81).
- 6 Speed Limit Info (➡ 101)
- 7 Riding mode (➡ 79)
- 8 Recommendation to up-shift (➡ 102)
- 9 Gear indicator; "N" indicates neutral.
- 10 Clock (➡ 103)
- 11 Connection status (➡ 105)
- 12 Muting (➡ 102)
- 13 Operating help

<https://www.motorcycle-manual.com/>

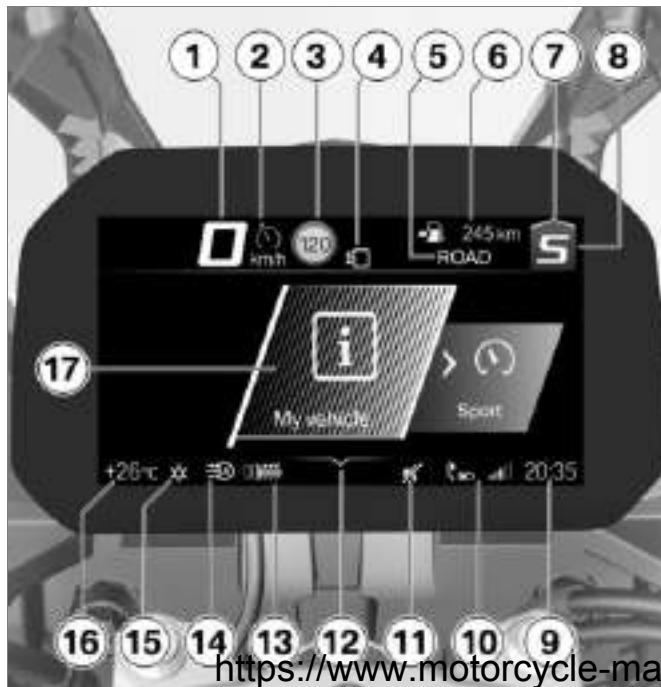

- 14** Heating stages, handlebar grips (89)
- 15** Automatic daytime riding light (73)
- 16** Outside temperature warning (45)
- 17** Ambient temperature



TFT display in Menu view

- 1 Speedometer
- 2 – with cruise control^{OE}
Cruise-control system (➡ 84).
- 3 Speed Limit Info (➡ 101)
- 4 Coding plug
– with riding modes Pro^{OE}
Install the coding plug (➡ 81).
- 5 Riding mode (➡ 79)
- 6 Driver info. status line (➡ 100)
- 7 Recommendation to up-shift (➡ 102)
- 8 Gear indicator; "N" indicates neutral.
- 9 Clock
- 10 Connection status
- 11 Muting (➡ 102)
- 12 Operating help
- 13 Heating stages, handlebar grips (➡ 89)

<https://www.motorcycle-manual.com/>

- 14** Automatic daytime riding light ( 73)
- 15** Outside temperature warning ( 45)
- 16** Ambient temperature
- 17** Menu section



TFT display in Sport 1 view

– with riding modes Pro^{OE}

- 1 Maximum DTC torque reduction
- 2 Current DTC torque reduction
- 3 Rev. counter
- 4 Maximum braking deceleration
- 5 Current braking deceleration
- 6 Current lean angle
- 7 Maximum lean angle
- 8 Unit for rpm display: 1000 revolutions per minute

Warning indicators

Mode of presentation

Warnings are indicated by the corresponding warning lights. Warnings are indicated by 'General' warning light showing in combination with a dialogue in the TFT display. The 'General' warning light shows yellow or red, depending on the urgency of the warning.



The status of the 'General' warning light matches the most urgent warning. The possible warnings are listed on the next pages.



Check Control display

The messages differ in how they show on the display. Different colours and symbols are used depending on priority:

- Green CHECK OK **1**: no message, optimum values.
- White circle with small "i" **2**: information.
- Yellow warning triangle **3**: warning, value not ideal.
- Red warning triangle **3**: warning, value critical



Values display

Symbols **4** differ in how they show on the display. The colours used differ and reflect the urgency of the message. Along with numerical values **8** with units **7**, texts **6** are displayed as well:

Colour of the symbol

- Green: (OK) Current value is ideal.
- Blue: (Cold!) Current temperature is too low.
- Yellow: (Low! / High!) Current value is too low or too high.

- Red: (Hot! / High!) Current temperature or value is too high.
- White: (---) No valid value available. Dashes **5** are displayed instead of a numerical value.



NOTICE

The assessment of some values is only possible from a certain journey duration or speed. If a measured value is still not being displayed because the conditions for measurement have not been met, dashes are displayed instead as a placeholder. If there are no valid measured values, there will be no assessment in the form of a coloured symbol.◀



Check Control dialogue

Messages are output as Check Control dialogues **1**.

- If there are two or more Check Control messages of equal priority, the messages keep changing in the order of their occurrence until they are acknowledged.
- If symbol **2** is actively displayed, it can be acknowledged by tilting the Multi-Controller to the left.
- Check Control messages are dynamically attached as additional tabs on the pages in the

You can go to the message again as long as the fault persists.













<https://www.motorcyclemanual.com/>
















Warnings, overview

Indicator and warning lights

Display text

Meaning

		Ice-crystal symbol appears on the display.	Outside temperature warning (➡ 45)	
	General warning light shows yellow.		Remote key not in range.	Radio-operated key out of range (➡ 45)
	General warning light shows yellow.		Remote key battery at 50%.	Replace battery of radio-operated key (➡ 46)
		Remote key battery weak.		
	General warning light shows yellow.		is displayed in yellow.	Voltage of the vehicle electrical system too low (➡ 46)
		Vehicle voltage low.		
	General warning light shows red.		is displayed in red.	Voltage of the vehicle electrical system critical (➡ 47)
		Vehicle voltage critical!		

Indicator and warning lights	Display text	Meaning
 General warning light shows yellow.	 The faulty bulb is displayed.	Bulb faulty (➡ 47)
 General warning light flashes yellow.	 The faulty bulb is displayed.	
	 Alarm system batt. capacity weak.	Anti-theft alarm battery weak (➡ 48)
 General warning light shows yellow.	 Alarm system battery empty.	Anti-theft alarm battery flat (➡ 48)
 General warning light shows red.	 Coolant temperature too high!	Coolant temperature too high (➡ 49)
 The malfunction indicator lamp lights up.	 Engine!	Emissions warning (➡ 49)
 General warning light shows yellow.	 No communication with engine control.	Engine control failed (➡ 50)
 General warning light shows yellow.	 Fault in the engine control.	Engine in emergency-operation mode (➡ 50)

Indicator and warning lights**Display text****Meaning**

General warning light flashes yellow.



Serious fault in the engine control!

Severe fault in the engine control (➡ 50)



General warning light shows yellow.



is displayed in yellow.

Tyre pressure close to limit of permitted tolerance (➡ 51)



Tyre pressure does not match setpoint.



General warning light flashes red.



is displayed in red.

Tyre pressure outside permitted tolerance (➡ 51)



Tyre pressure does not match setpoint.



Tyre pressure control. Loss of pressure.



"---"

Transmission fault (➡ 52)













General warning light shows yellow.























"---"


Sensor faulty or system fault (➡ 53)

Indicator and warning lights	Display text	Meaning
 General warning light shows yellow.	 RDC sensor battery weak.	Battery for tyre pressure sensor weak (➡ 53)
	 Drop sensor faulty.	Drop sensor defective (➡ 54)
	 Emergency call failure.	Emergency call function restricted (➡ 54)
	 Side stand monitoring faulty.	Side stand monitoring is faulty (➡ 54)
 ABS indicator and warning light flashes.		ABS self-diagnosis not completed (➡ 54)
 ABS indicator and warning light comes on.	 Limited ABS availability!	ABS fault (➡ 55)
 ABS indicator and warning light comes on.	 ABS failure!	ABS failed (➡ 55)

Indicator and warning lights**Display text****Meaning**

	ABS indicator and warning light comes on.	 ABS Pro failure!	ABS Pro failed (55)
	ASC/DTC indicator and warning light quick-flashes.		ASC/DTC intervention (56)
	ASC/DTC indicator and warning light slow-flashes.		ASC/DTC self-diagnosis not completed (56)
	ASC/DTC indicator and warning light comes on.	 Off!	ASC/DTC switched off (56)
		 Traction control deactivated.	
	ASC/DTC indicator and warning light comes on.	 Traction control limited!	ASC/DTC restricted (56)
	ASC/DTC indicator and warning light comes on.	 Traction control failure!	ASC/DTC fault (57)

Indicator and warning lights	Display text	Meaning
 General warning light shows yellow.	 Spring strut adjustment faulty!	D-ESA fault (57)
	 Fuel reserve reached. Go to a filling station soon	Fuel down to reserve (58)
	 The gear indicator flashes.	Gear not taught (58)
 Turn signal indicator light flashes green.		Hazard warning lights system is switched on (58)
 Turn signal indicator light flashes green.		
	 is displayed in white.	Service due (59)
	Service due!	
 General warning light shows yellow.	 is displayed in yellow.	Service-due date has passed (59)

Indicator and warning lights	Display text	Meaning
	Service over- due!	Service-due date has passed ( 59)

Ambient temperature

The ambient temperature is displayed status line of the TFT display.

When the vehicle is at a standstill, the heat of the engine can falsify the ambient-temperature reading. If the heat of the engine is affecting it too much, dashes are temporarily shown in place of the value.



There is a risk of black ice if the ambient temperature falls below the following limit value.



Limit value for the ambient temperature

approx. 3 °C

The first time the temperature drops below this value, the ambient-temperature reading and the ice crystal symbol flash in the status line of the TFT display.

Outside temperature warning



Ice-crystal symbol appears on the display.

Possible cause:

The air temperature measured at the motorcycle is lower than 3 °C.



WARNING

Risk of black ice also applicable at over 3 °C

Risk of accident

- Always take extra care when temperatures are low; remember that there is particular danger of black ice forming on bridges and where the road is in shade.◀
- Ride carefully and think well ahead.

Radio-operated key out of range

– with Keyless Ride^{OE}



General warning light shows yellow.



Remote key not in range. Not possible to switch on ignition again.

Possible cause:

Communication between radio-operated key and engine electronics is disrupted.

- Check the battery in the radio-operated key.
- with Keyless Ride^{OE}
- Replace battery of radio-operated key (➡ 66).
- Use the spare key to continue your journey.
- with Keyless Ride^{OE}
- Battery of the radio-operated key is empty or loss of the radio-operated key (➡ 65).

- Remain calm if the Check Control dialogue appears on the display while you are riding. You can continue your journey, the engine will not switch off.
- Have the faulty radio-operated key replaced by an authorised BMW Motorrad retailer.

Replace battery of radio-operated key

– with Keyless Ride^{OE}



General warning light shows yellow.



Remote key battery at 50%. No functional impairment.



Remote key battery weak. Limited central locking function. Change battery.

Possible cause:

- The integral battery in the radio-operated key has lost a significant proportion of its original capacity. There is no assurance of how long the radio-operated key can remain operational.
- Replace battery of radio-operated key (➡ 66).

Voltage of the vehicle electrical system too low



General warning light shows yellow.



is displayed in yellow.



Vehicle voltage low. Switch off unnecessary consumers.



WARNING

Failure of the vehicle systems

Risk of accident

- Do not continue your journey. ◀

Battery is not being charged. If you continue to ride the motorcycle the on-board electronics will drain the battery.



NOTICE

The fuse for the alternator regulator can blow if the 12 V battery is installed incorrectly or if the terminals are swapped (e.g. when using a starting aid). ◀

Possible cause:

The alternator or alternator drive is faulty, battery is faulty or the fuse for the alternator regulator has blown.

- Have the fault rectified as quickly as possible by a specialist workshop, preferably an authorised BMW Motorrad retailer.

Voltage of the vehicle electrical system critical



General warning light shows red.



is displayed in red.



Vehicle voltage critical! Consumers were switched off. Check battery condition.



WARNING

Failure of the vehicle systems

Risk of accident

- Do not continue your journey.◀

Battery is not being charged. If you continue to ride the motorcycle the on-board electronics will drain the battery.



NOTICE

The fuse for the alternator regulator can blow if the 12 V battery is installed incorrectly or if the terminals are swapped (e.g. when using a starting aid).◀

Possible cause:

The alternator or alternator drive is faulty, battery is faulty or the fuse for the alternator regulator has blown.

- Have the fault rectified as quickly as possible by a specialist workshop, preferably an authorised BMW Motorrad retailer.

Bulb faulty



General warning light shows yellow.



The faulty bulb is displayed:



High beam faulty!



Front left turn indicator faulty! or
Front right turn indicator faulty!



Low-beam headlight faulty!



Front side light faulty!

– with daytime riding light^{OE}



Daytime riding light faulty!◀



Tail light faulty!



Brake light faulty!



Rear left turn indicator faulty! or
Rear right turn indicator faulty!



Number plate light faulty!

- Have it checked by a specialist workshop.



General warning light flashes yellow.



The faulty bulb is displayed:



Active headlight faulty. Have it checked by a specialist workshop.



WARNING

Vehicle overlooked in traffic due to failure of the lights on the vehicle

Safety risk

- Replace defective bulbs as soon as possible; always carry a complete set of spare bulbs if possible. ◀

Possible cause:

Bulb faulty.

- Visually inspect to ascertain which bulb is faulty.
- Replace the LEDs for low-beam and high-beam headlight (➡ 179).
- Replace the LED for side light (➡ 179).
- Replace the LEDs for brake light and tail light (➡ 179).
- Replacing bulbs for front and rear turn indicators (➡ 179).
- with LED additional headlight^{OA}
- Replace the auxiliary headlight (➡ 179).

Anti-theft alarm battery weak

- with anti-theft alarm (DWA)^{OE}



Alarm system batt. capacity weak. No restrictions. Make an ap-

pointment at a specialist workshop.



NOTICE

This error message shows briefly only after the Pre-Ride-Check completes. ◀

Possible cause:

The integral battery in the anti-theft alarm has lost a significant proportion of its original capacity. There is no assurance of how long the anti-theft alarm can remain operational if the vehicle's battery is disconnected.

- Consult a specialist workshop, preferably an authorised BMW Motorrad retailer.

Anti-theft alarm battery flat

- with anti-theft alarm (DWA)^{OE}

<https://www.motorcycle-manual.com/>



General warning light shows yellow.



Alarm system battery empty. No independent alarm. Make an appointment at a specialist workshop.



NOTICE

This error message shows briefly only after the Pre-Ride-Check completes.◀

Possible cause:

The integral battery in the anti-theft alarm has lost its entire original capacity. There is no assurance that the anti-theft alarm will be operational if the motorcycle's battery is disconnected.

- Consult a specialist workshop, preferably an authorised BMW Motorrad retailer.

Coolant temperature too high



General warning light shows red.



Coolant temperature too high! Check coolant level. Continue driving in part. load to cool down.



ATTENTION

Riding with overheated engine

Engine damage

- Compliance with the information set out below is essential.◀

Possible cause:

The coolant level is too low.

- Check the coolant level (➡ 165).

If the coolant level is too low:

- Top up the coolant (➡ 166).

Possible cause:

The coolant temperature is too high.

- If possible, ride in the part-load range to cool down the engine.
- In traffic jams, switch off the engine, but leave the ignition switched on so that the radiator fan continues to operate.
- If the coolant temperature is frequently too high, have the fault rectified as soon as possible by a specialist workshop, preferably an authorised BMW Motorrad retailer.

Emissions warning



The malfunction indicator lamp lights up.



Engine! Have it checked by a specialist workshop.

Possible cause:

The engine control unit has diagnosed a fault which affects the pollutant emissions.

- Have the fault rectified by a specialist workshop, preferably an authorised BMW Motorrad retailer.
- » You can continue riding; pollutant emissions are higher than the threshold values.

Engine control failed



General warning light shows yellow.



No communication with engine control. Multiple sys. affected. Ride carefully to the next specialist workshop.

Engine in emergency-operation mode



General warning light shows yellow.



Fault in the engine control. Onward journey possible. Ride carefully to next specialist workshop.



WARNING

Unusual ride characteristics when engine running in emergency-operation mode

Risk of accident

- Avoid accelerating sharply and overtaking. ◀

Possible cause:

The engine control unit has diagnosed a fault. In exceptional cases, the engine stops and refuses to start. Otherwise, the engine runs in emergency operating mode.

- You can continue to ride, but bear in mind that the usual engine performance might not be available.
- Have the fault rectified as quickly as possible by a specialist workshop, preferably an authorised BMW Motorrad retailer.

Severe fault in the engine control



General warning light flashes yellow.



Serious fault in the engine control!

Riding at mod. speed pos. Damage possible. Have checked by workshop.



WARNING

Engine damage when running in emergency-operation mode

Risk of accident

- Ride slowly, avoid accelerating sharply and overtaking.
- If possible, have the vehicle picked up and have the fault rectified by a specialist workshop, preferably an authorised BMW Motorrad Retailer. ◀

Possible cause:

The engine control unit has diagnosed a fault which may cause severe secondary faults. The engine is in emergency-operation mode.

- Avoid high load and rpm ranges if possible.
- Have the fault rectified as quickly as possible by a specialist workshop, preferably

an authorised BMW Motorrad retailer.

- » It is possible to continue to ride but not recommended.

Tyre pressure close to limit of permitted tolerance

- with tyre pressure control (RDC)^{OE}



General warning light shows yellow.



is displayed in yellow.





Tyre pressure does not match setpoint. Check tyre pressure.

Possible cause:

Measured tyre pressure is close to the limit of permitted tolerance.

- Correct tyre pressure.
- Before adjusting tyre pressure,

perature compensation and adjusting pressure in the section entitled "Engineering details":

- » Temperature compensation ( 151)
- » Pressure adaptation ( 151)
- » Find the correct tyre pressures in the following places:
 - Back cover of the operating instructions
 - Instrument cluster in the TYRE PRESSURE view
 - Sign under the seat

Tyre pressure outside permitted tolerance

- with tyre pressure control (RDC)^{OE}



General warning light flashes red.



is displayed in red.

<https://www.motorcycle-manual.com/>



Tyre pressure does not match setpoint. Stop immediately! Check tyre pressure.



Tyre press. control. Loss of pressure. Stop immediately! Check tyre pressure.



WARNING

Tyre pressure outside the permitted tolerance.

Risk of accident, degradation of the vehicle's driving characteristics.

- Adapt your style of riding accordingly. ◀

Possible cause:

Measured tyre pressure is outside permitted tolerance.

- Check the tyre for damage and to ascertain whether the

vehicle can be ridden with the tyre in its present condition.

If the vehicle can be ridden with the tyre in its present condition:

- Correct the tyre pressure at the earliest possible opportunity.
- Before adjusting tyre pressure, read the information on temperature compensation and adjusting pressure in the section entitled "Engineering details":
 - » Temperature compensation (151)
 - » Pressure adaptation (151)
 - » Find the correct tyre pressures in the following places:
 - Back cover of the operating instructions
 - Instrument cluster in the TYRE PRESSURE view
 - Sign under the seat
 - Have the tyre checked for damage by a specialist workshop, preferably an

authorised BMW Motorrad retailer.

If you are unsure whether the vehicle can be ridden with the tyre in its present condition:

- Do not continue your journey.
- Notify the breakdown service.

Transmission fault

– with tyre pressure control (RDC)^{OE}



"---"

Possible cause:


The vehicle has not reached the minimum speed (150).



RDC sensor is not active

min 30 km/h (The RDC sensor does not transmit its signal to the vehicle until a certain minimum speed has been reached.)

- Increase speed above this threshold and observe the RDC readings.

 Assume that a permanent fault has not occurred unless the 'General' warning light comes on to accompany the symptoms.

Under these circumstances:

- Have the fault rectified by a specialist workshop, preferably an authorised BMW Motorrad retailer.

Possible cause:

Wireless communication with the RDC sensors has been disrupted. Radio systems are located in the surrounding area which are interfering with the transmission between the RDC control unit and the sensors.

- Move to another location and observe the RDC readings.



Assume that a permanent fault has not occurred unless the 'General' warning light comes on to accompany the symptoms.

Under these circumstances:

- Have the fault rectified by a specialist workshop, preferably an authorised BMW Motorrad retailer.

Sensor faulty or system fault

– with tyre pressure control (RDC)^{OE}



General warning light shows yellow.



"---"

Possible cause:

Vehicle is fitted with wheels not equipped with RDC sensors.

- Fit wheels and tyres equipped with RDC sensors.

Possible cause:

1 or 2 RDC sensors have failed or there is a system fault.

- Have the fault rectified by a specialist workshop, preferably an authorised BMW Motorrad retailer.

Battery for tyre pressure sensor weak

– with tyre pressure control (RDC)^{OE}



General warning light shows yellow.



RDC sensor battery weak. Function limited. Have it checked by a specialist workshop.

**NOTICE**

This error message shows briefly only after the Pre-Ride-Check completes. ◀

Possible cause:

The integral battery in the tyre-pressure sensor has lost a significant proportion of its original capacity. There is no assurance of how long the tyre pressure monitoring system can remain operational.

- Consult a specialist workshop, preferably an authorised BMW Motorrad retailer.

Drop sensor defective

Drop sensor faulty. Have it checked by a specialist workshop.

Possible cause:

The drop sensor is not available.

- Consult a specialist workshop, preferably an authorised BMW Motorrad retailer.

Emergency call function restricted

– with intelligent emergency call^{OE}



Emergency call failure. Make an appointment at a specialist workshop.

Possible cause:

The emergency call cannot be made automatically or via BMW.

- Consult the information on operating the intelligent emergency call on page (➔ 68)ff.
- Consult a specialist workshop, preferably an authorised BMW Motorrad retailer.

Side stand monitoring is faulty

Side stand monitoring faulty. Onward journey possible. Engine stop. when stationary! Have checked by workshop.

Possible cause:

The side-stand switch or its wiring are damaged.

- Consult a specialist workshop, preferably an authorised BMW Motorrad retailer.

ABS self-diagnosis not completed

ABS indicator and warning light flashes.

Possible cause:

The ABS function is not available, because self-diagnosis did not complete. The motorcycle has to move forward

a few metres for the wheel sensors to be tested.

- Pull away slowly. Bear in mind that the ABS function is not available until self-diagnosis has completed.

ABS fault



ABS indicator and warning light comes on.



Limited ABS availability! Onward journey possible. Ride carefully to next specialist workshop.

Possible cause:

The ABS control unit has detected a fault. The ABS function is available, subject to restrictions.

- You can continue to ride. Bear in mind the more detailed information on certain situations that can lead to an ABS fault message (143).

- Have the fault rectified as quickly as possible by a specialist workshop, preferably an authorised BMW Motorrad retailer.

ABS failed



ABS indicator and warning light comes on.



ABS failure! Onward journey possible. Ride carefully to next specialist workshop.

Possible cause:

The ABS control unit has detected a fault.

- You can continue to ride. Bear in mind that the ABS function is not available. Take note of the more detailed information on certain situations that can lead to an ABS fault message (143).
- Have the fault rectified as quickly as possible by a

specialist workshop, preferably an authorised BMW Motorrad retailer.

ABS Pro failed

– with riding modes Pro^{OE}



ABS indicator and warning light comes on.



ABS Pro failure! Onward journey possible. Ride carefully to next specialist workshop.

Possible cause:

The ABS Pro control unit has detected a fault. The ABS Pro function is not available. The ABS function is available, subject to restrictions. ABS provides support only for braking in straight-ahead driving.

- You can continue to ride. Bear in mind the more detailed information on certain situations

<https://www.motorcycle-manual.com/>

that can lead to an ABS Pro fault message (143).

- Have the fault rectified as quickly as possible by a specialist workshop, preferably an authorised BMW Motorrad retailer.

ASC/DTC intervention



ASC/DTC indicator and warning light quick-flashes. The ASC/DTC has detected a degree of instability at the rear wheel and has intervened to reduce torque. The indicator and warning light flashes for longer than ASC/DTC intervention lasts. This affords the rider visual feedback on control intervention even after the critical situation has been dealt with.

ASC/DTC self-diagnosis not completed



ASC/DTC indicator and warning light slow-flashes.

Possible cause:



ASC/DTC self-diagnosis not completed

The ASC/DTC function is not available, because self-diagnosis did not complete. (The motorcycle has to reach a defined minimum speed for the wheel sensors to be checked: min 5 km/h)

- Pull away slowly. The ASC/DTC indicator and warning light must go out after a few metres. If the ASC/DTC indicator and warning light continues flashing:
- Seek the advice of a specialist workshop, preferably an authorised BMW Motorrad retailer.

ASC/DTC switched off



ASC/DTC indicator and warning light comes on.



Off!



Traction control deactivated.

Possible cause:

The rider has switched off the ASC/DTC system.

- Switch on the ASC/DTC function (76).

ASC/DTC restricted



ASC/DTC indicator and warning light comes on.



Traction control limited! Onward journey possible. Ride carefully to next specialist workshop.

Possible cause:

The ASC/DTC control unit has detected a fault.



ATTENTION

Damaged components

Damage to sensors, for example, which causes malfunctions

- Do not transport any objects underneath the driver or passenger seat.
- Secure the toolkit. ◀
- Do not damage the angular rate sensor.
- Bear in mind that the ASC/DTC function is restricted.
- You can continue to ride. Bear in mind the more detailed information on situations that can lead to a ASC/DTC fault (145).
- Have the fault rectified as quickly as possible by a specialist workshop, preferably

an authorised BMW Motorrad retailer.

ASC/DTC fault



ASC/DTC indicator and warning light comes on.



Traction control failure! Onward journey possible. Ride carefully to next specialist workshop.

Possible cause:

The ASC/DTC control unit has detected a fault.



ATTENTION

Damaged components

Damage to sensors, for example, which causes malfunctions

- Do not transport any objects underneath the driver or passenger seat.
- Secure the toolkit. ◀

- Do not damage the angular rate sensor.
- Bear in mind that the ASC/DTC function and dynamic engine brake control are not available.
- You can continue to ride. Bear in mind the more detailed information on situations that can lead to an ASC/DTC fault (145).
- Have the fault rectified as quickly as possible by a specialist workshop, preferably an authorised BMW Motorrad retailer.

D-ESA fault



General warning light shows yellow.



Spring strut adjustment faulty! Onward journey possible. Ride carefully to next specialist workshop.

<https://www.motorcycle-manual.com/>

Possible cause:

The D-ESA control unit has detected a fault. The damping and/or spring adjuster may be the cause. In this condition, the motorcycle may have too much damping and is uncomfortable to drive, especially on roads in poor condition. Alternatively, the spring preload may be incorrectly adjusted.

- Have the fault rectified as quickly as possible by a specialist workshop, preferably an authorised BMW Motorrad retailer.

Fuel down to reserve



Fuel reserve reached. Go to a filling station soon.



WARNING

Irregular engine operation or engine shutdown due to lack of fuel

Risk of accident, damage to catalytic converter

- Do not run the fuel tank dry. ◀

Possible cause:

The fuel tank contains no more than the reserve quantity of fuel.



Reserve fuel

approx. 3.5 l

- Refuelling (134).

Gear not taught

– with shift assistant Pro^{OE}



The gear indicator flashes. The Pro shift assistant is not available.

Possible cause:

– with shift assistant Pro^{OE}

The gearbox sensor is not fully trained.

- Select neutral N and allow the engine to idle for at least

10 seconds to teach the neutral position.

- Use clutch control to engage each gear in turn and ride for a minimum of 10 seconds in each gear.
 - » The gear indicator stops flashing when the gearbox sensor has been trained successfully.
- When the gearbox sensor has been taught successfully, Gear Shift Assistant Pro works as described (152).
- If teaching is not successful, have the fault rectified by a specialist workshop, preferably an authorised BMW Motorrad retailer.

Hazard warning lights system is switched on



Turn signal indicator light flashes green.



Turn signal indicator light flashes green.

Possible cause:

The driver has switched on the hazard warning lights system.

- Operating hazard warning flashers (74).

Service display



If service is overdue, the due date or the odometer reading at which service was due is accompanied by the 'General' warning light showing yellow.

If the service is overdue, a yellow CC message is displayed. Exclamation marks also draw your attention to the displays for service, service appointment and remaining distance in the MY VEHICLE and SERVICE REQUIREMENTS menu screens.



NOTICE

If the service-due indicator appears more than a month before the service date, the current date has to be corrected. This situation can occur if the battery was disconnected.◀

Service due



is displayed in white.

Service due! Have service performed by a specialist workshop.

Possible cause:

Service is due, because of either distance covered or time expired.

- Have your motorcycle serviced regularly by a specialist workshop, preferably by an authorised BMW Motorrad retailer.
- » The vehicle remains operationally reliable and roadworthy.
- » The vehicle retains its value.

Service-due date has passed



General warning light shows yellow.



is displayed in yellow.

Service overdue! Have service performed by a specialist workshop.

Possible cause:

Service is overdue because of the driving performance or the date.

- Have your motorcycle serviced regularly by a specialist workshop, preferably by an authorised BMW Motorrad retailer.
- » The vehicle remains operationally reliable and roadworthy.
- » The vehicle retains its value.

<https://www.motorcycle-manual.com/>

<https://www.motorcycle-manual.com/>

Operation

Ignition switch/steering lock	62	Shift light	86
Ignition with Keyless Ride	63	Anti-theft alarm (DWA)	86
Electronic immobiliser EWS	67	Tyre pressure monitoring (RDC)	89
Emergency-off switch (kill switch)	67	Heated handlebar grips	89
Intelligent emergency call	68	Seat	90
Lights	70		
Daytime riding light	72		
Hazard warning lights	74		
Turn indicators	74		
Traction control (ASC/DTC)	75		
Electronic Suspension Adjustment (D-ESA)	76		
Riding mode	79		
PRO riding mode	82		
Cruise-control system	83		

Ignition switch/steering lock

Keys

You receive two vehicle keys. If a key is lost or mislaid, consult the notes on the electronic immobiliser (EWS) (➡ 67). Ignition switch, fuel filler cap lock and seat lock are all operated with the same key.

- with touring cases^{OA}
- with topcase^{OA}

If you wish you can arrange to have the cases and the topcase fitted with locks that can be opened with this key as well. Consult a specialist workshop, preferably an authorised BMW Motorrad retailer.

Engaging steering lock

- Turn the handlebars all the way to the left.



- Turn the key to position **1** while moving the handlebars slightly.
 - » Ignition, lights and all function circuits switched off.
 - » Steering lock engaged.
 - » Key can be removed.

Switching on ignition



- Turn the key to position **1**.
 - » Side lights and all function circuits switched on.
 - » Engine can be started.
 - » Pre-Ride-Check is performed. (➡ 126)
 - » ABS self-diagnosis is in progress. (➡ 126)
 - » ASC self-diagnosis is in progress. (➡ 127)
 - with riding modes Pro^{OE}
 - » DTC self-diagnosis is in progress. (➡ 128)◁

Welcome lights

- Switch on the ignition.
 - » The side lights briefly light up.
 - with daytime riding light^{OE}
 - » The daytime riding lights briefly light up.◁
 - with LED additional headlight^{OA}
 - » The LED auxiliary headlights briefly light up.◁

Switching off ignition



- Turn the key to position **1**.
 - » Light switched off.
 - » Handlebars not locked.
 - » Key can be removed.

- » Electrically powered accessories remain operational for a limited period of time.
- » The battery can be recharged via the vehicle socket.

Ignition with Keyless Ride

- with Keyless Ride^{OE}

Keys



NOTICE

The telltale light for the radio-operated key flashes while the search for the radio-operated key is in progress.

The light goes out as soon as the radio-operated key or the emergency key is found. The light goes out briefly if the search times out without the radio-operated key or the emergency key being found.◀

You receive one radio-operated key and one spare key. If a key is lost or mislaid, consult the notes on the electronic immobiliser (EWS) (67).

Ignition, fuel filler cap and anti-theft alarm system all work with the radio-operated key. Seat lock, topcase and cases can be locked and unlocked manually.



NOTICE

The vehicle cannot be started if the radio control key is not within range (e.g. key inside one of the cases or the topcase).

If the radio-operated key remains out of range, the ignition is switched off after about 1.5 minutes to protect the battery. It is advisable to keep the radio-operated key on your person (e.g. in a jacket pocket) and to have the emergency key with you as an alternative.◀



Range of the Keyless
Ride radio-operated key

– with Keyless Ride^{OE}

approx. 1 m<

Engaging steering lock Requirement

Handlebars are turned to the left. Radio-operated key is within range.



- Press and hold down button **1**.
- » The steering lock engages with an audible click.

- » Ignition, lights and all function circuits switched off.
- Short-press button **1** to disengage the steering lock.

Switching on ignition Requirement

Radio-operated key is within range.



- There are **two** ways of activating the ignition.

Version 1:

- Briefly press button **1**.
- » Side lights and all function circuits are switched on.

- with daytime riding light^{OE}
- » Daytime riding light is switched on.<
- with LED additional headlight^{OA}
- » LED auxiliary headlights are switched on.<
- » Pre-Ride-Check is performed. (126)
- » ABS self-diagnosis is in progress. (126)
- » ASC self-diagnosis is in progress. (127)

Version 2:

- Steering lock is engaged; press and hold down button **1**.
- » The steering lock disengages.
- » Side lights and all function circuits switched on.
- » Pre-Ride-Check is performed. (126)
- » ABS self-diagnosis is in progress. (126)
- » ASC self-diagnosis is in progress. (127)

Switching off ignition

Requirement

Radio-operated key is within range.



- There are **two** ways of deactivating the ignition.

Version 1:

- Briefly press button **1**.
 - » Light is switched off.
 - » Handlebars (steering lock) are not locked.

Version 2:

- Turn the handlebars all the way to the left.

- Press and hold down button **1**.
 - » Light is switched off.
 - » The steering lock engages.

Battery of the radio-operated key is empty or loss of the radio-operated key

- If a key is lost or mislaid, consult the notes on the electronic immobiliser (**EWS**) .
- If you happen to lose or mislay the radio-operated key while on a journey, you can start the vehicle with the spare key.
- If the battery of the radio-operated key is empty, the vehicle can be started by simply inserting the folded radio-operated key into the ring aerial under the seat.



- Remove the seat (→ 90).
- Insert the spare key or folded-in radio-operated key with the empty battery **1** into ring aerial **2**.



NOTICE

The spare key or the closed radio-operated key with the empty battery **must be inserted into** the opening in the ring aerial.◀

<https://www.motorcycle-manual.com/>



Time during which the engine has to be started. The unlocking procedure has to be repeated if this time is allowed to expire.

30 s

- » Pre-Ride-Check is performed.
- Key has been recognised.
- Engine can be started.
- Start the engine (125).


Replacing battery of radio-operated key Requirement

The radio-operated key does not react because the battery is weak.



Remote key battery weak. Limited central locking function. Change battery.

- Change the battery.

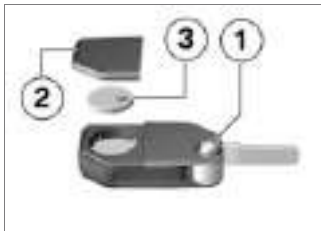

- Press button **1**.
- » Key bit flips out.
- Push battery cover **2** up.
- Remove battery **3**.
- Dispose of the old battery in accordance with all applicable laws and regulations; do not attempt to dispose of batteries as domestic waste.



ATTENTION

Unsuitable or incorrectly inserted batteries

Component damage

- Use a battery compliant with the manufacturer's specifications.
- When inserting the battery, always make sure polarity is correct. ◀
- Insert the new battery with the positive terminal up.



Battery type

For Keyless Ride radio-operated key

CR 2032

- Install battery cover **2**.
- » Red LED in the instrument cluster flashes.
- » The radio-operated key is again ready for use.

Electronic immobiliser EWS

The on-board electronics access the data saved in the vehicle key via a ring aerial in the ignition lock / R/C ignition lock. The ignition is not enabled for starting until the engine control unit has recognised the ignition key as "authorised" for your motorcycle.



NOTICE

A spare key attached to the same ring as the ignition key/radio-operated key used to start the engine could "irritate" the electronics, in which case the enabling signal for starting is not issued.

Always keep the spare key separate from the ignition key/radio-operated key. ◀

If you lose your key, you can have it barred by your BMW Motorrad authorised retailer. In order to have a key barred you must bring along all the other keys belonging to the motorcycle.

The engine cannot be started by a barred ignition key, but an ignition key that has been barred can subsequently be reactivated.

You can obtain spare keys only through an authorised BMW Motorrad retailer. The ignition keys are part of an integrated security system, so the retailer is under an obligation to check the legitimacy of all applications for replacement/extra keys.

Emergency-off switch (kill switch)



- 1 Emergency-off switch (kill switch)




WARNING

Operation of the kill switch while riding

Risk of fall due to rear wheel locking

- Do not operate the kill switch when riding. ◀

The emergency off switch is a kill switch for switching off the engine quickly and easily.

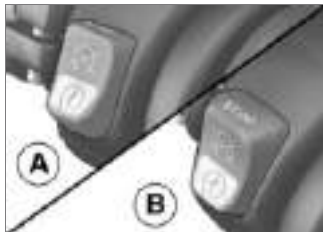

- A** Engine switched off
B Normal operating position (run)

Intelligent emergency call

- with intelligent emergency call^{OE}

Emergency call via BMW

Press the SOS button in an emergency only.

Even if an emergency call using BMW is not possible, the system may make an emergency call to a public emergency call number. This depends on the respective mobile phone network and the national regulations.

The emergency call is not able to be ensured because of technical reasons due to unfavourable conditions, e.g. in areas where there is no mobile phone reception.

Language for emergency call

Each vehicle has a language assigned to it depending on the market for which it is intended. The BMW Call Center answers in this language.



NOTICE

A changeover of the language for the emergency call can only be performed by the BMW Motorrad partner. The language assigned to the vehicle varies from the selectable language the driver can choose as the display language in the multifunction display. ◀

Manual emergency call Requirement

An emergency call has occurred. The vehicle is at a standstill. The ignition is switched on.



- Open cover **1**.
- Briefly press SOS button **2**.



- » The time until transmission of the emergency call is displayed. During that time, it is

possible to cancel the emergency call.

- Operate the emergency-off switch to stop the engine.
- Remove helmet.
- » After expiry of the timer, a voice contact to the BMW Call Center is established.



The connection was established.



- Provide information to the emergency services using the microphone **3** and speaker **4**.

Automatic emergency call

The intelligent emergency call is active after the ignition is switched on and reacts if a fall or crash occurs.

Emergency call in the event of a light fall


- A minor fall or a crash is detected.
- » An acoustic signal is sounded.

<https://www.motorcycle-manual.com/>



The connection was established.

- » The time until transmission of the emergency call is displayed. During that time, it is possible to cancel the emergency call.
- If possible, remove helmet and stop engine.
- » A voice contact connection to the BMW Call Center is established.

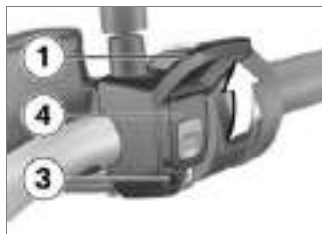

- Open cover **1**.
- Provide information to the emergency services using the microphone **3** and speaker **4**.

Emergency call in the event of a severe fall

- A severe fall or a crash is detected.
- » The emergency call is placed automatically without delay.

Lights

Low-beam headlight and sidelights

The side lights switch on automatically when the ignition is switched on.



NOTICE

The side lights place a strain on the battery. Do not switch the ignition on for longer than absolutely necessary. ◀

The low-beam headlight switches on automatically under the following conditions:

<https://www.motorcycle-manual.com/>

- When the engine is started.
- If the vehicle is pushed while the ignition is on.



NOTICE

When the engine is not running you can switch on the lights by switching on the ignition and either switching on the high-beam headlight or operating the headlight flasher.◀

– with daytime riding light^{OE}
In daytime the daytime riding light can be switched on as an alternative to the low-beam headlight.

High-beam headlight and headlight flasher

- Switch on the ignition (➡ 62).



- Push switch **1** forward to switch on the high-beam headlight.
- Pull switch **1** back to operate the headlight flasher.

Headlight courtesy delay feature

- Switch off the ignition.



- Immediately after switching off the ignition, pull switch **1** back and hold it in that position until the headlight courtesy delay feature comes on.
 - » The vehicle's lights come on for one minute and then switch off automatically.
- This can be used to light up the path to the house door after the vehicle has been parked, for example.

Parking lights

- Switch off the ignition (➡ 63).

<https://www.motorcycle-manual.com/>



- Immediately after switching off the ignition, push button **1** to the left and hold it in that position until the parking lights come on.
- Switch the ignition on and off again to switch off the parking lights.

Daytime riding light

– with daytime riding light^{OE}

Manual daytime riding light

Requirement

Automatic daytime riding light is switched off.



WARNING

Switching on the daytime riding light in the dark.

Risk of accident

- Do not use the daytime riding light in the dark. ◀



NOTICE

By comparison with the low-beam headlight, the daytime running light makes the vehicle more visible to oncoming traffic. This improves daytime visibility. ◀

- Start the engine (125).
- Navigate to Settings, Vehicle settings, Lights and switch off the Auto.

daytime light function. (For mode detailed information on how to operate the Multi-Controller, see the section headed "TFT display".)



- Press button **1** to switch on the daytime riding light.



The indicator light for the daytime riding light lights up.

- » The low-beam headlight and the front side lights are switched off.
- In the dark or in tunnels: Press button **1** again to switch off the

daytime riding light and switch on the low-beam headlight and front side light.



NOTICE

If the high-beam headlight is switched on while the daytime riding light is on, the daytime riding light is switched off after approx. 2 seconds and the high-beam headlight, low-beam headlight and front side light are switched on.

If the high beam headlight is switched off again, the daytime running light is not automatically reactivated, but must be switched on again if required.◀

Automatic daytime riding light



WARNING

The automatic daytime riding light does not replace the

personal assessment of the light conditions

Risk of accident

- Switch off the automatic daytime riding light in poor light conditions.◀



NOTICE

The changeover between daytime riding light and low-beam headlight including front side lights can be effected automatically.◀

- Navigate to Settings, Vehicle settings, Lights and switch on the Auto. daytime light function.



The indicator light for the automatic daytime riding light lights up.

- » If the ambient brightness decreases below a certain value, the low-beam headlight is automatically switched

on (e.g. in a tunnel). When sufficient ambient brightness is detected, the daytime riding light is switched back on.



The indicator light for the daytime riding light shows if the daytime riding light is active.

Manual operation of the light when the automatic system is switched on

- If you press the button for the daytime riding light the daytime riding light is switched off and the low-beam headlight and front side lights are switched on (e. g. when you ride into a tunnel, and the response of the automatic daytime riding light to the change in ambient brightness is delayed).
- If you press the button again the daytime riding light is re-activated, in other words the daytime riding light is switched

on again when ambient light is bright enough.

Hazard warning lights

Operating hazard warning flashers

- Switch on the ignition.



NOTICE

The hazard warning flashers place a strain on the battery. Do not use the hazard warning flashers for longer than absolutely necessary. ◀



NOTICE

The indicator function replaces the hazard warning lights function while the indicator button is pressed once operating readiness is switched on. The hazard warning lights function becomes active again once the indicator button is released. ◀



- Press button **1** to switch on the hazard warning lights system.
- » Ignition can be switched off.
- To switch off the hazard warning lights system, switch on the ignition if necessary and press button **1** again.



- Push button **1** to the left to switch on the left turn indicators.
- Push button **1** to the right to switch on the right turn indicators.
- Centre button **1** to cancel the turn indicators.

Turn indicators

Operating the turn indicators

- Switch on the ignition.

<https://www.motorcycle-manual.com/>

Comfort turn indicator



If button **1** has been pressed to the right or left, the turn indicators are automatically switched off under the following circumstances:

- Speed below 30 km/h: after 50 m distance covered.
- Speed between 30 km/h and 100 km/h: after a speed-dependent distance covered or in case of acceleration.
- Speed over 100 km/h: after flashing five times.

If button **1** is pressed to the right or left slightly longer, the turn indi-

cators only switch off automatically once the speed-dependent distance covered is reached.

Traction control (ASC/DTC)

Switch off the ASC/DTC function

- Switch on the ignition (➡ 62).



NOTICE

You have the option of deactivating the ASC/DTC function while the motorcycle is on the move. ◀



- Press and hold down button **1** until the ASC/DTC indicator and warning light changes its status.

The ASC/DTC system status **ON** is displayed immediately after button **1** is pressed.



ASC/DTC indicator and warning light comes on.

Possible ASC system status **OFF!** is displayed.

- Release button **1** after the ASC/DTC system status changes.



ASC/DTC indicator and warning light remains on.

The new ASC/DTC system status OFF! is displayed briefly.

- » The ASC/DTC function is switched off.

Switch on the ASC/DTC function



- Press and hold down button **1** until the ASC/DTC indicator and warning light changes its status.

The ASC/DTC system status OFF! is displayed immediately after button **1** is pressed.



ASC/DTC indicator and warning light goes out; if self-diagnosis has not completed the warning light starts flashing.

Possible ASC system status ON is displayed.

- Release button **1** once the status has changed.



ASC/DTC indicator and warning light remains off or continues to flash.

The new ASC/DTC system status ON is displayed briefly.

- » The ASC/DTC function is switched on.
- If the coding plug is not inserted, you have the alternative of switching the ignition off and then on again.



If the ASC/DTC indicator and warning light remains on even though the vehicle has accelerated past the minimum speed stated below after the ignition was switched off and then on again, an ASC/DTC fault has occurred.

min 5 km/h

- See the section entitled "Engineering details" for more information on traction control ASC/DTC.
- » How does traction control work? (145)

Electronic Suspension Adjustment (D-ESA)

– with Dynamic ESA^{OE}

Possibilities for adjustment


Dynamic ESA (electronic chassis and suspension adjustment) provides a convenient way of adapting the damping characteristic of the rear suspension to the surface over which you intend riding. Two damper settings and three spring preload stages are available.

Viewing suspension settings



- Switch on the ignition (62).

- Short-press button **1** to view the current setting.

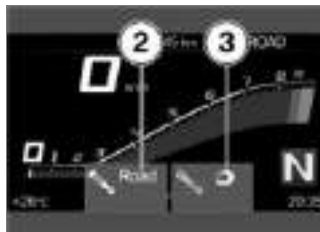

The settings for damping **2** and spring preload **3** appear on the display.

- » The setting shows briefly, then disappears automatically.

Adjusting suspension

- Switch on the ignition (62).



- Short-press button **1** to view the current setting.


To adjust damping:

- Repeatedly press button **1** briefly until the setting you want to use appears on the display.



NOTICE

You can adjust the damping characteristic while the motorcycle is on the move.◀

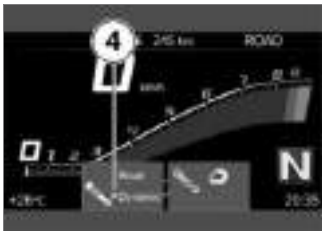

Selection arrow **4** appears on the display.

» The selection arrow **4** disappears after the status is changed.

The following settings are available:

- ROAD: Damping for comfortable on-road riding
- DYNAMIC: Damping for dynamic on-road riding



To adjust spring preload:

- Start the engine (125).
- Repeatedly press and hold button **1** until the setting you want to use appears on the display.



NOTICE

You cannot adjust spring preload while the motorcycle is on the move. ◀

The following settings are available:



One-up riding




One-up with luggage



Two-up (with luggage)

The following message is displayed if it is not possible to adjust a setting: Load adjustment only avail. stopped.

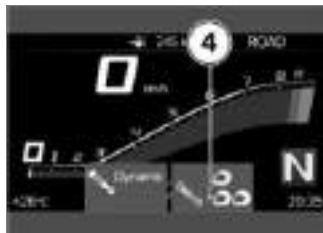

Selection arrow **4** appears on the display.

» The selection arrow **4** disappears after the status is changed.

- Wait for the mechanism to complete all adjustments before you ride off.
- » The settings for damping and spring preload shown on the display are automatically accepted if you allow a certain length of time to pass without pressing button **1**.

Riding mode

Using the riding modes

BMW Motorrad has developed operational scenarios for your motorcycle from which you can select the scenario suitable for your situation:

Standard

- RAIN: Riding on a rain-wet road surface.
- ROAD: Riding on a dry road surface.

- with riding modes Pro^{OE}

with Pro riding modes

- DYNAMIC: Dynamic riding on a dry road surface.
- DYNAMIC PRO: Dynamic riding on a dry road surface with provision for the rider's custom settings.

The respective optimum interplay of engine characteristic, ABS control, ASC/DTC control and dynamic engine brake control is provided for each of these scenarios.



NOTICE

See the section entitled "Engineering details" for more information on the riding modes that can be selected.◀

- with Dynamic ESA^{OE}

The chassis and suspension settings can also be adapted in the selected scenario.

Selecting riding mode

- Switch on the ignition (➡ 62).



- Press button **1**.



The riding mode currently active **2** is sent to the back and the first selectable riding mode **3** is displayed. The guide **4** displays how many riding modes are available.



- Press button **1** repeatedly until the required riding mode is indicated beneath the selection arrow.

The following ride modes can be selected:

- RAIN: For riding on rain-wet roads.
- ROAD: For riding on dry roads.

- with riding modes Pro^{OE}

The following riding modes are additionally available for selection:

- DYNAMIC: For dynamic riding on dry roads.<

- with riding modes Pro^{OE}

With coding plug installed:

- DYNAMIC PRO: For sporty riding on dry roads.<

» With the motorcycle at a standstill, the selected mode is activated after approximately two seconds.

» The following conditions must be satisfied for activation of a new riding mode while riding:

- Throttle grip is in idle position.
- Brake is not applied.
- The cruise-control system is deactivated.

» Following activation of the new riding mode the clock is displayed again.

» The selected riding mode is retained with the engine-characteristic, ABS, ASC/DTC and Dynamic ESA adaptation settings even after the ignition has been switched off.


Installing coding plug

– with riding modes Pro^{OE}

- Switch off the ignition (🔌 63).
- Remove the seat (🔌 90).



- From behind, flip holder for toolkit **1** up and remove.

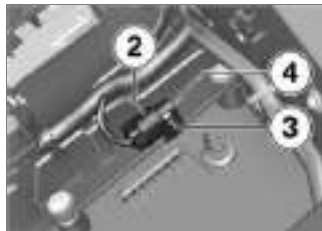

- Remove connector **2** from holding clip **3**.



ATTENTION

Dirt and damp penetrating inside open connectors

Malfunctions

- Reinstall the protective cap after removing the coding plug.◀
- Remove cover cap **4**.




- Insert coding plug **5** into connector **2** and install in holding clip **3**.



NOTICE

The encoding plug and the cover cap are stored in the motorcycle seat together with the toolkit.◀

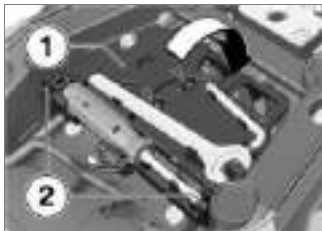

- Insert holder for toolkit **1** into holders **2** and flip it down.
- Install the seat (➡ 91).
- Switch on the ignition.



NOTICE

If the encoding plug is in place, the disabled driving safety systems remain disabled even after switching the ignition off and back on.◀



Symbol for coding plug is displayed.

- Select the riding mode (➡ 79).

PRO riding mode

– with riding modes Pro^{OE}

Adjustment option

The PRO riding modes can be set individually.

Setting up PRO riding mode

- Install the coding plug (➡ 81).
- Switch on the ignition (➡ 62).
- Navigate to **Settings**, **Vehicle settings**.
 - » The DYNAMIC PRO riding mode can be modified.
- Select and confirm riding mode.

Setting up Dynamic Pro

– with riding modes Pro^{OE}

- Setting up PRO riding mode (➡ 82).



The Engine system has been selected. The current setting is displayed as a diagram **1** with explanatory texts relating to the system **2**.

- Select system and confirm.



You can browse through the available settings **3** and the corresponding explanations **4**.

- Set up the system.
 - » The Engine, DTC and ABS systems can be set up in the same way.
- The settings can be reset to the factory settings:
- Resetting riding mode settings (83).

Resetting riding mode settings

- Setting up PRO riding mode (82).

- Select **Reset** and confirm.
 - » The following factory settings apply for **DYNAMIC PRO** riding mode:
 - DTC: **DYNAMIC PRO**
 - ABS: **Dynamic**
 - Engine: **Dynamic**

Cruise-control system

- with cruise control^{OE}


Display when adjusting settings (Speed Limit Info not active)



The symbol **1** for cruise control is displayed in the Pure Ride view and the top status line.


<https://www.motorcycle-manual.com/>

Display when adjusting settings (Speed Limit Info active)

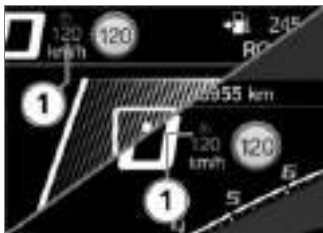

The symbol **1** for cruise control is displayed in the Pure Ride view and the top status line.

Switching on cruise control

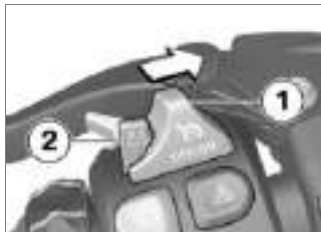

- Slide switch **1** to the right.
- » Button **2** is operational.

Setting road speed



- Briefly push button **1** forward.



Adjustment range for cruise control

30...210 km/h



Indicator light for cruise control lights up.

- » The motorcycle maintains your current cruising speed and the setting is saved.

Accelerating



- Briefly push button **1** forward.
- » Speed is increased by 1-2 km/h each time you push the button.

- Push button **1** forward and hold it in this position.
 - » The motorcycle accelerates smoothly.
 - » The current speed is maintained and saved if button **1** is not pushed again.

Decelerating



- Briefly push button **1** back.
 - » The speed is reduced by 1-2 km/h each time you push the button.
- Push button **1** back and hold it in this position.

- » The motorcycle decelerates smoothly.
- » The current speed is maintained and saved if button **1** is not pushed again.

Deactivating cruise control

- Brake, pull the clutch lever or turn the throttle grip (close the throttle by turning the grip back past the idle position) to deactivate cruise control.
 - » Indicator light for cruise control goes out.

Resuming former cruising speed



- Briefly push button **1** back to return to the speed saved beforehand.



NOTICE

Opening the throttle does not deactivate the cruise-control system. If you release the twistgrip the motorcycle will decelerate only to the cruising speed saved in memory, even though you might have intended slowing to a lower speed.◀



Indicator light for cruise control lights up.


Switching off cruise control



- Slide switch **1** to the left.
 - » The system is deactivated.
 - » Button **2** is disabled.

Shift light

Switching gearshift light on and off

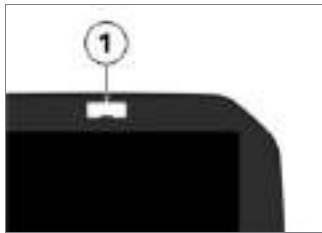

- Navigate to Settings, Vehicle settings.
- Switch Shift light on or off.

Setting shift light

- Switch on the Shift light function.
- Navigate to Settings, Vehicle settings, Configuration (under Shift light).

» The following settings are available:

- Start RPM
- End RPM
- Brightness
- Frequency. A flashing frequency of 0 Hz corresponds to steady light.
- » Changes to brightness and the flashing frequency are demonstrated by the shift light with it briefly lighting up or flashing.

Anti-theft alarm (DWA)

Activation

- with anti-theft alarm (DWA)^{OE}
- Switch on the ignition (➡ 62).
- Customise the anti-theft alarm settings (➡ 89).
- Switch off the ignition.
- » If the alarm system is activated, then the alarm system will be automatically activated when the ignition is switched off.

- » Activation takes approximately 30 seconds to complete.
- » Turn indicators flash twice.
- » Confirmation tone sounds twice (if programmed).
- » Anti-theft alarm is active.
- with Keyless Ride^{OE}



- Switch off the ignition.
- Press button **1** on the radio-operated key twice.
- » Activation takes approximately 30 seconds to complete.
- » Turn indicators flash twice.
- » Confirmation tone sounds twice (if programmed).

- » Anti-theft alarm is active.



- To deactivate the motion sensor (for example if you are about to transport the motorcycle on a train and the swaying movement of the moving train could trip the alarm), press button **1** on the radio-operated key again during the activation phase.
- » Turn indicators flash three times.
- » Confirmation tone sounds three times (if programmed).
- » Motion sensor has been deactivated.

Alarm signal

- with anti-theft alarm (DWA)^{OE}

A DWA alarm can be triggered by:

- Motion sensor
- Switch-on attempt with an unauthorised vehicle key.
- Disconnection of the DWA anti-theft alarm from the motorcycle's battery (DWA internal battery in the anti-theft alarm provides power - alarm tone only, the turn indicators do not flash)

All functions are sustained even if the internal battery of the DWA anti-theft alarm system is flat; the only difference is that an alarm cannot be triggered if the system is disconnected from the motorcycle's battery.

<https://www.motorcycle-manual.com/>

An alarm lasts for approximately 26 seconds. While an alarm is in progress an alarm tone sounds and the turn indicators flash. The type of alarm tone can be set by an authorised BMW Motorrad retailer.

– with Keyless Ride^{OE}



The activated alarm can be aborted at any time by pressing the **1** button on the radio-operated key, without deactivating the anti-theft alarm.

If an alarm was triggered while the motorcycle was unattended, the rider is notified accordingly by an alarm tone sounding once when the ignition is switched on. The DWA LED then indicates the reason for the alarm for one minute.

Light signals issued by the DWA LED:

- Flashes 1x: motion sensor 1
- Flashes 2x: motion sensor 2
- Flashes 3x: ignition switched on with unauthorised vehicle key
- Flashes 4x: disconnection of the anti-theft alarm from the motorcycle's battery
- Flashes 5x: motion sensor 3

Deactivation

- with anti-theft alarm (DWA)^{OE}
 - Kill switch in operating position (run).
 - Switch on the ignition.

- » Turn indicators flash once.
- » Confirmation tone sounds once (if programmed).
- » DWA has been switched off.
- with Keyless Ride^{OE}



- Press button **1** on the radio-operated key once.



NOTICE

The alarm function is reactivated after 30 seconds if "activation after ignition off" has been selected if the alarm function is deactivated using the radio-operated key and the ignition is not then switched on. ◀

- » Turn indicators flash once.
- » Confirmation tone sounds once (if programmed).
- » DWA has been switched off.

Customising anti-theft alarm settings

- Switch on the ignition (➡ 62).
- Navigate to **Settings**, **Vehicle settings**, **Alarm system**.
- » The following settings are available:
 - Adapt warning signal
 - Switch Tilt sensor on and off
 - Switch Arming tone on and off
 - Switch Arm automatically on and off
 - with anti-theft alarm (DWA)^{OE}
 - » Possibilities for adjustment (➡ 89)◀

Possibilities for adjustment

- with anti-theft alarm (DWA)^{OE}

Warning signal: Set the increasing and decreasing or intermittent alarm tone.

Tilt sensor: Activate tilt sensor to monitor the inclination of the vehicle. The anti-theft alarm is tripped if any attempt is made to steal a wheel or lift the vehicle for towing, for example.



NOTICE

Deactivate the tilt sensor when transporting the vehicle in order to prevent the DWA from tripping.◀

Arming tone: In addition to turn indicators flashing, alarm tone sounds as confirmation of activation/deactivation of the DWA.

Arm automatically: Automatic activation of the alarm

function when the ignition is switched off.

Tyre pressure monitoring (RDC)

- with tyre pressure control (RDC)^{OE}

Switching specified-pressure warning on or off

- The system can be set to issue a specified-pressure warning when tyre pressure drops to the defined minimum.
- Navigate to **Settings**, **Vehicle settings**, **RDC**.
- Switch **Target pressure warn.** on or off.

Heated handlebar grips

- with heated grips^{OE}

Operating the heated handlebar grips

- Start the engine (➡ 125).




NOTICE

The heating in the heated handlebar grips can be activated only when the engine is running.◀



NOTICE

The increase in power consumption caused by having the heated handlebar grips switched on can drain the battery if you are riding at low engine speeds. If the charge level is low, the heated handlebar grips are switched off to ensure the battery's starting capability.◀

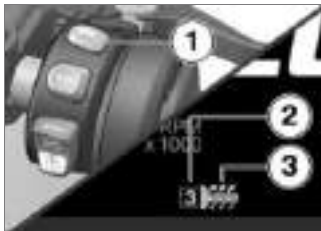

- Repeatedly press button **1** until the desired heating level **2** appears in front of the heated grip symbol **3**.

The handlebar grips can be heated to three levels. Stage three is for heating the grips quickly: it is advisable to switch back to stage one or two as soon as the grips are warm.



75% heating power



55% heating power



35% heating power

- » The selected heating stage will be saved if you allow a certain length of time to pass without making further changes.
- In order to switch off the heated grips, press button **1** repeatedly until the heated grip symbol **3** is no longer shown on the display.


Seat

Removing seat Requirement

Place the motorcycle on its stand on firm, even ground.




- Use the ignition key to turn seat lock **1** counter-clockwise.
» Seat bench is unlocked.

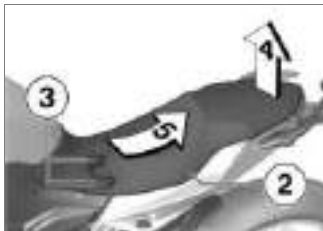

- Slightly raise seat **2** in direction of arrow **4**.

- Work seat **2** in direction of arrow **5** to disengage it from holder **3**.
- Lay seat **2** on a clean surface.

Installing seat

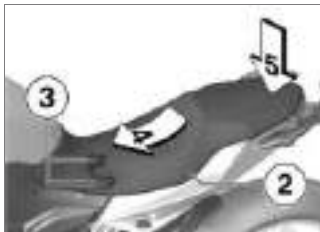

- Work seat **2** in direction of arrow **4** to engage it in holders **3**.
- Press seat bench firmly in direction of arrow **5**.
» The seat bench audibly engages.

<https://www.motorcycle-manual.com/>

<https://www.motorcycle-manual.com/>

TFT display

General notes.....	94
Principle	95
Pure Ride view.....	101
General settings	102
Bluetooth	104
My vehicle	107
On-board computer.....	110
Navigation	110
Media.....	112
Telephone	113
Display software version	114
Display licence information.....	114

General notes

Warnings



WARNING

Using a smartphone during the journey or while the engine is running

Risk of accident

- Always observe the relevant road traffic regulations.
- Do not use the smartphone during the journey (apart from applications that do not require operation, e.g. making telephone calls with the hands-free system).◀



WARNING

Distraction from the road and loss of control

Operating the integrated information system and communication devices while driving results in a risk of accident

- Operate those systems or devices only when the traffic situation allows for it.
- If necessary, stop and operate the systems or devices when stationary.◀

Connectivity functions

Connectivity functions include media, telephony and navigation. Connectivity functions can be used if the TFT display is connected to a mobile device and a helmet (104). For more information on the Connectivity functions go to **bmw-motorrad.com/connectivity**



NOTICE

If the fuel tank is between the mobile device and the TFT display, the Bluetooth connection may be restricted.

BMW Motorrad recommends

storing the device above the fuel tank (e.g. in your jacket pocket).◀



NOTICE

Depending on the mobile device, the scope of the Connectivity functions may be restricted.◀

BMW Motorrad Connected app

The BMW Motorrad Connected app contains usage and vehicle information. For some functions, such as navigation, the app must be installed on the mobile device and connected to the TFT display. The app is used to start route guidance and adjust the navigation.



NOTICE

On some mobile devices, e.g. those with iOS operating systems, the BMW Motorrad Con-

<https://www.motorcycle-manual.com/>

nected App must be opened before use. ◀

Currency

The TFT display may be updated after the publication date. Because of this, your motorcycle may differ from the information supplied in the Rider's Manual. Up-to-date information is available at:

bmw-motorrad.com/service

Principle Controls



All contents of the display are operated using the multi-controller **1** and the MENU **2** rocker button.

Depending on the context, the following functions are possible.

Multi-controller functions

Turn the multi-controller upwards:

- Move the cursor upwards in lists.
- Adjust settings.

Turn the multi-controller downwards:

- Move the cursor downwards in lists.
- Adjust settings.
- Decrease volume.

Tilt the multi-controller to the left:

- Activate the function in accordance with the operation feedback.
- Activate the function to the left or back.
- Go back to the Menu view after making the settings.
- In the Menu view, change up a level.
- In the My Vehicle menu: advance one menu screen.

Tilt the multi-controller to the right:

- Activate the function in accordance with the operation feedback.

<https://www.motorcycle-manual.com/>

- Confirm selection.
- Confirm settings.
- Advance a menu step.
- Scroll to the right in lists.
- In the My Vehicle menu: advance one menu screen.

MENU rocker button functions



NOTICE

Instructions given by the navigation system are displayed in a dialogue box if the **Navigation** menu has not been called up. Operation of the MENU rocker button is temporarily restricted. ◀

Briefly push MENU up:

- In the Menu view, change up a level.
- In the Pure Ride view: change the display for rider info status line.

Long-press the top section of the MENU button:

- In the View menu: call up Pure Ride view.
- In Pure Ride view: change operating focus to the Navigator.

Briefly push MENU down:

- Change down a level.
- No function if the lowest hierarchical level has been reached.

Hold MENU down:

- Change back to the last menu after a previous menu change by holding up the MENU rocker button.

Operating instructions in the main menu



Operating instructions show whether interactions are possible, and which ones.



Meaning of the operating instructions:

- Operating instruction **1**: the left end has been reached.
- Operating instruction **2**: it is possible to scroll to the right.
- Operating instruction **3**: it is possible to scroll down.
- Operating instruction **4**: it is possible to scroll to the left.
- Operating instruction **5**: the right end has been reached.

Operating instructions in submenus

In addition to the operating instructions in the main menu, there are further operating instructions in submenus.



Meaning of the operating instructions:

- Operating instruction **1**: The current display is in a hierarchical menu. One symbol represents one submenu level. Two symbols indicate two or more submenu levels. The colour of the symbol changes, depend-

ing on whether you can return to a higher level.

- Operating instruction **2**: One more submenu level can be accessed.
- Operating instruction **3**: There are more entries than can be displayed.

Display Pure Ride view

- Long-press the top section of the MENU rocker button.

Switching functions on and off



Some menu items have a check box in front of them. The check box shows whether the function is on or off. Action symbols after the menu items show what will be switched by tilting the multi-controller briefly to the right.

Examples for switching on and off:

- Symbol **1** shows that the function is switched on.
- Symbol **2** shows that the function is switched off.

- Symbol **3** shows that the function can be switched off.
- Symbol **4** shows that the function can be switched on.

Calling up menu



- Display Pure Ride view (≡ 97).
- Briefly push button **2** down.

The following menus can be called up:

- My vehicle
- Navigation
- Media
- Telephone
- Settings

- Repeatedly press the multi-controller **1** briefly to the right until the desired menu item is highlighted.
- Briefly push button **2** down.



NOTICE

The Settings menu can only be called up when the vehicle is stationary. ◀

Move the cursor in lists



- Call up the menu (≡ 98).
- To move the cursor down in lists, turn the multi-controller **1**

down until the desired entry is highlighted.

- To move the cursor up in lists, turn the multi-controller **1** up until the desired entry is highlighted.

Confirming selection



- Select the desired entry.
- Briefly press the multi-controller **1** to the right.

Call up the last menu used

- In Pure Ride view: press and hold the MENU rocker button.

- » The last menu used is called up. The last entry highlighted is selected.

Change of operating focus

- with preparation for navigation system^{OE}

If the Navigator is connected, it is possible to switch between operation of the Navigator and the TFT display.

Changing operating focus


- with preparation for navigation system^{OE}
- Secure the navigation device (199).
- Display Pure Ride view (97).
- Long-press the top section of the MENU rocker button.
- » Operating focus switches to the Navigator or the TFT display, as applicable. The active device is highlighted on the menu on the top status line.

Operator actions affect the currently active device until the operating focus is changed again.

- » Operating navigation system (200)

System status displays

The system status is displayed in the lower area of the menu if a function is switched on or off.

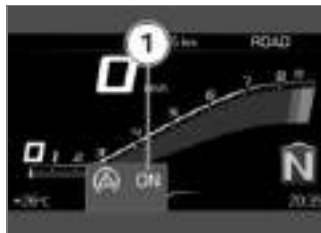

Example of what the system statuses mean:

- System status **1**: ASC/DTC function is switched on.

<https://www.motorcycle-manual.com/>

Changing display for driver info. status line

Requirement



The vehicle is at a standstill. The Pure Ride view is displayed.










- Switch on the ignition (➡ 62).
 - » All necessary information from the on-board computer for operation on public roads (e.g. TRIP 1) and trip computer (e.g. TRIP 2) are available in the TFT display. The information can be displayed in the top status line.
- with tyre pressure control (RDC)^{OE}
 - » Information from the tyre pressure control can also be displayed.<
- Select the content of the driver info. status line (➡ 101).



- Long-press button **1** to obtain the Pure Ride view.
- Briefly press button **1** to select the value in the top status line **2**.

The following values can be displayed:

- Odometer *Total*
- Trip distance 1 TRIP 1
- Trip distance 2 TRIP 2
-  Average consumption 1
-  Average consumption 2

-  Riding time 1
-  Riding time 2
-  Break time 1
-  Break time 2
-  Average speed 1
-  Average speed 2
-  Tyre pressure
-  Fuel gauge
-  Range

Selecting content of the driver info. status line

- Navigate to Settings, Display, Status line content.
- Switch on the desired displays.
 - » You can switch between the selected displays in the driver info. status line. If no displays are selected, only the range will be displayed.

Adjust settings



- Select and confirm the desired settings menu.

- Turn the multi-controller **1** downwards until the desired setting is highlighted.
- If there are operating instructions, tilt the multi-controller **1** to the right.
- If there are no operating instructions, tilt the multi-controller **1** to the left.
 - » The setting is saved.

Switching Speed Limit Info on or off

Requirement

Vehicle is connected with a compatible mobile device. The BMW Motorrad Connected app is installed on the mobile device.

- Speed Limit Info displays the maximum speed currently permitted.
- Call up the Settings, Display menu.
- Switch Speed Limit Info on or off.

Pure Ride view

Rev. counter



- 1 Scale
- 2 Low engine speed range
- 3 Upper/red engine speed range
- 4 Needle
- 5 Secondary indicator
- 6 Unit for engine speed display:
1000 revolutions per minute

<https://www.motorcycle-manual.com/>

Range



The range readout **1** indicates how far you can ride with the fuel remaining in the tank. This distance is calculated on the basis of average consumption and the quantity of fuel on board.

- When the motorcycle is propped on its side stand the slight angle of inclination means that the sensor cannot register the fuel level correctly. This is the reason why the range is recalculated only when the side stand is in the retracted position.

- The range is shown together with a warning once the fuel reserve has been reached.
- After a refuelling stop, range is recalculated if the amount of fuel in the tank is greater than the reserve quantity.
- The calculated range is only an approximate figure.

Recommendation to upshift



The recommendation to upshift in **1** view **2** or in status line indicates the best time to upshift to conserve fuel.

General settings

Adjusting volume

- Connect rider's and passenger's helmet (➡ 106).
- Increase volume: turn the multi-controller upwards.
- Decrease volume: turn the multi-controller downwards.
- Mute: turn the multi-controller all the way down.

Setting the date

- Switch on the ignition (➡ 62).
- Navigate to Settings, System settings, Date and time, Set date.
- Set Day, Month and Year.
- Confirm setting.

Set date format

- Navigate to Settings, System settings, Date and time, Date format.
- Select the desired setting.
- Confirm setting.

Setting clock

- Switch on the ignition (➡ 62).
- Navigate to Settings, System settings, Date and time, Set time.
- Set Hour and Minute.

Setting time format

- Navigate to Settings, System settings, Date and time, Time format.
- Select the desired setting.
- Confirm setting.

Switching GPS

synchronisation on or off

- with preparation for navigation system^{OE}
- Navigate to Settings, System settings, Date and time.
- Switch GPS synchronisation on or off.
- » If the corresponding option in the Navigator is activated, clock

time is taken from the Navigator.

» Special functions (➡ 203)

Setting units of measurement

- Navigate to Settings, System settings, Units.

The following units of measurement can be set:

- Speed
- Consumption
- Pressure
- Temperature

Setting language

- Navigate to Settings, System settings, Language.

The following languages can be set:

- German
- English (UK)
- English (US)
- Spanish
- French

- Italian
- Dutch
- Polish
- Portuguese
- Turkish
- Russian
- Ukrainian
- Chinese
- Japanese

Adjusting brightness

- Navigate to Settings, Display, Brightness.
- Adjust display brightness.
- » When ambient brightness drops below a defined threshold, the display is dimmed to the brightness set here.

Resetting all settings

- All the settings in the Settings menu can be reset to the factory settings.
- Call up the Settings menu.

- Select **Reset all** and confirm.

The settings in the following menus are reset:

- Vehicle settings
- System settings
- Connections
- Display
- Information

» Existing Bluetooth connections are not deleted.

Bluetooth

Short-range wireless technology

The Bluetooth function might not be available in certain countries.

Bluetooth is a short-range wireless technology. Bluetooth devices are short-range devices transmitting on the license-free ISM band (Industrial, Scientific, Medical) between 2.402 GHz and 2.480 GHz. They can be

operated anywhere in the world without a licence being required. Although Bluetooth is designed to establish and sustain robust connections over short distances, as with every other wireless technology disruptions are possible. Interference can affect connections or connections can sometimes fail. Particularly when multiple devices operate in a Bluetooth network, with wireless technology of this nature it is not possible to ensure fault-free communications in every situation.

Possible sources of interference:

- interference zones due to transmission masts and similar.
- devices with non-compliant Bluetooth implementations.
- proximity of other Bluetooth-compatible devices.

Pairing

Two Bluetooth devices have to recognise each other before they can communicate. This process of mutual recognition is known as pairing. When two devices have paired they remember each other, so the pairing process is conducted only once, on initial contact.



NOTICE

On some mobile devices, e.g. those with iOS operating systems, the BMW Motorrad Connected App must be opened before use.◀

During the pairing process, the TFT display searches for other Bluetooth-compatible devices within its reception range. The conditions that have to be satisfied before the audio system can recognise another device are as

- The device's Bluetooth function must be active
- The device must be "visible" to others
- The device must support the A2DP profile
- Other Bluetooth-compatible devices must be OFF (e.g. mobile phones and navigation systems).

Please consult the operating instructions for your communication system.

Pairing

- Call up the **Settings, Connections** menu.
- » Bluetooth connections can be established, managed and deleted in the **CONNECTIONS** menu. The following Bluetooth connections are displayed:
 - Mobile device
 - Rider's helmet

- Passenger helm.
- The connection status for mobile devices is displayed.

Connect mobile device

- Pairing (105).
 - Activate the mobile device's Bluetooth function (see mobile device's operating instructions).
 - Select **Mobile device** and confirm.
 - Select **Pair new mobile device** and confirm.
- Mobile devices are being searched for.



The Bluetooth symbol flashes in the bottom status line during pairing.

Mobile devices found are displayed.

- Select and confirm mobile device.
- Follow the instructions on the mobile device.

- Confirm that the code matches.
 - » The connection is established and the connection status updated.
 - » If the connection is not established, consult the troubleshooting chart in the section entitled "Technical data". (212)
 - » Depending on the mobile device, telephone data is transferred to the vehicle automatically.
 - » Telephone data (114)
 - » If the telephone book is not displayed, consult the troubleshooting chart in the section entitled "Technical data". (213)
 - » If the Bluetooth connection is not working as expected, consult the troubleshooting chart in the section entitled "Technical data". (213)

Connect rider's and passenger's helmet

- Pairing (105).
 - Select Rider's helmet or Passenger helm. and confirm.
 - Make the helmet's communication system visible.
 - Select Pair new rider's helmet or Pair new passenger. helmet and confirm.
- Helmets are searched for.



The Bluetooth symbol flashes in the bottom status line during pairing.

Helmets found are displayed.


- Select and confirm helmet.
- » The connection is established and the connection status updated.
- » If the connection is not established, consult the troubleshooting chart in the

section entitled "Technical data". (212)

- » If the Bluetooth connection is not working as expected, consult the troubleshooting chart in the section entitled "Technical data". (213)

Deleting connections

- Call up the Settings, Connections menu.
- Select Delete connections.
- To delete an individual connection, select the connection and confirm.
- To delete all connections, select Delete all connections and confirm.

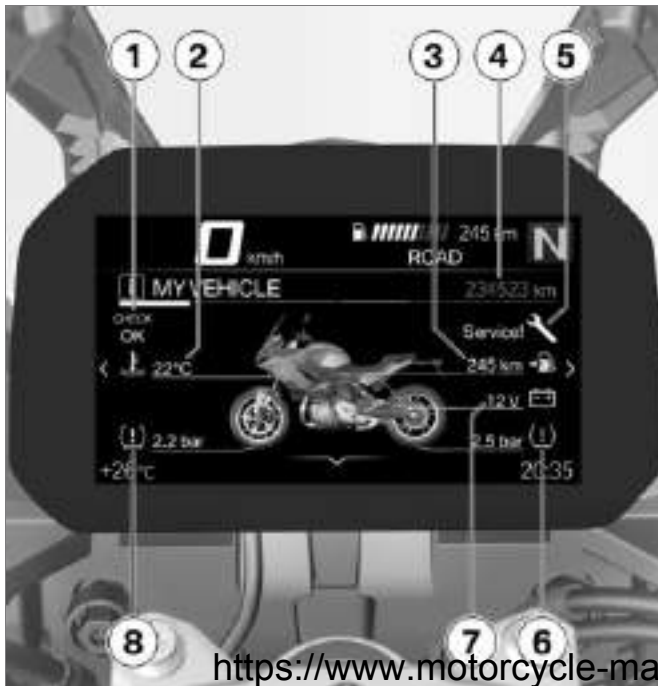


My vehicle

Start screen

- 1 Check Control display
Mode of presentation (➡ 36)
- 2 Coolant temperature (➡ 49)
- 3 Range (➡ 102)
- 4 Total distance covered
- 5 Service display (➡ 59)
- 6 Tyre pressure, rear (➡ 166)
- 7 On-board voltage (➡ 181)
- 8 Tyre pressure, front (➡ 166)

Operating instructions

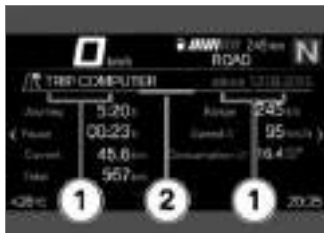

- Operating instruction **1**: tabs which show how far to the left or right can be scrolled.
- Operating instruction **2**: tab which shows the position of the current menu screen.

Scrolling through menu screens



- Call up the **My vehicle** menu.
- To scroll to the right, short-press Multi-Controller **1** to the right.
- To scroll to the left, short press Multi-Controller **1** to the left.

The **My Vehicle** menu contains the following screens:

- **MY VEHICLE**
- **CC MESSAGE** (if available)
- **ON-BOARD COMPUTER**
- **TRIP COMPUTER**

- with tyre pressure control (RDC)^{OE}
- **TYRE PRESSURE** <
- **SERVICE REQUIREMENTS**
- For more information on tyre pressures and Check Control messages, see the "Displays" section.



NOTICE

Check Control messages are attached dynamically to the menu screens as additional tabs in the **My vehicle** menu. ◀

On-board computer and trip computer

The **ON-BOARD COMPUTER** and **TRIP COMPUTER** menu screens display vehicle and trip data, such as average values.

Service requirements



If the time remaining to the next service is less than a month or if the next service is due within 1000 km, a white Check Control message appears on the display.


<https://www.motorcycle-manual.com/>

On-board computer

Calling up on-board computer

- Call up the `My vehicle` menu.
- Scroll to the right until the `ON-BOARD COMPUTER` menu screen is displayed.


Resetting on-board computer

- Call up the on-board computer ( 110).
- Press down the MENU rocker button.
- Select `Reset all values` or `Reset individual values` and confirm.


The following values can be reset:

- Break
- Journey
- Current (TRIP 1)
- Speed
- Consump.

Calling up trip computer

- Call up the on-board computer ( 110).
- Scroll to the right until the `TRIP COMPUTER` menu screen is displayed.

Resetting trip computer

- Call up the trip computer ( 110).
- Press down the MENU rocker button.
- Select `Autom. reset` or `Reset all values` and confirm.
» If `Autom. reset` is selected, the trip computer is automatically reset when a minimum of 6 hours have passed and the date has changed since the ignition was switched off.

Navigation

Warnings



WARNING

Using a smartphone during the journey or while the engine is running

Risk of accident

- Always observe the relevant road traffic regulations.
- Do not use the smartphone during the journey (apart from applications that do not require operation, e.g. making telephone calls with the hands-free system). ◀



WARNING

Distraction from the road and loss of control

Operating the integrated information system and communication devices while driving results in a risk of accident

- Operate those systems or devices only when the traffic situation allows for it.
- If necessary, stop and operate the systems or devices when stationary.◀

Precondition

The vehicle is connected to a compatible mobile device.

The BMW Motorrad Connected app is installed on the connected mobile device.



NOTICE

On some mobile devices, e.g. those with iOS operating systems, the BMW Motorrad Connected App must be opened before use.◀

Entering destination address

- Connect mobile device (➡ 105).
- Call up the BMW Motorrad Connected app and start the route guidance.
- Call up the **Navigation** menu in the TFT display.
 - » Active route guidance is displayed.
 - » If the active route guidance is not displayed, consult the troubleshooting chart in the section entitled "Technical data". (➡ 213)

Selecting destination from recent destinations

- Call up the **Navigation, Recent destinations** menu.
- Select and confirm destination.
- Select **Start route guidance**.

Selecting destination from favourites

- The **FAVOURITES** menu displays all destinations which have been saved as favourites in the BMW Motorrad Connected app. You cannot use the TFT display to add favourites to the list.
- Call up the **Navigation, Favourites** menu.
- Select and confirm destination.
- Select **Start guidance**.

Entering special destinations

- Special destinations, such as points of interest, can be displayed on the map.
- Call up the Navigation, POIs menu.

The following locations can be selected:

- At current location
- At destination
- Along the route
- Select where the special destinations should be looked for. e.g. the following special destination can be selected:
- Filling station
- Select and confirm the special destination.
- Select Start route guidance and confirm.

Setting route criteria

- Call up the Navigation, Route criteria menu.
- The following criteria can be selected:
- Route type
 - Avoid
 - Select desired Route type.
 - Switch desired Avoid on or off.

The number of avoidances activated is displayed in brackets.

Ending route guidance

- Call up the Navigation, Active route guidance menu.
- Select End route guidance and confirm.

Switching spoken instructions on or off

- Connect rider's and passenger's helmet (106).
- The navigation can be read out by a computer voice. For this

purpose, Spoken instruction must be switched on.

- Call up the Navigation, Active route guidance menu.
- Switch Spoken instruction on or off.

Repeating last spoken instruction

- Call up the Navigation, Active route guidance menu.
- Select Current instruction and confirm.

Media

Precondition

The vehicle is connected to a compatible mobile device and helmet.

Control music playback



- Call up the **Media** menu.



NOTICE

BMW Motorrad recommends setting the volume on the mobile end device for media and calls to maximum before setting off.◀

- Adjust the volume (102).
- Next track: Short-tilt Multi-Controller **1** to the right.
- Last track or start of the current track: Short-tilt Multi-Controller **1** to the left.

- Fast forward: Long-tilt Multi-Controller **1** to the right.
- Rewind: Long-tilt Multi-Controller **1** to the left.
- Call up context menu: Press bottom part of button **2**.



NOTICE

Depending on the mobile device, the scope of the Connectivity functions may be restricted.◀

» The following functions can be used in the context menu:

- Start playback or Pause playback.
- Select the **Now playing**, **All artists**, **All albums** or **All tracks** category for search and playback.
- Select **Playlists**.

You can make the following adjustments in the **Audio options** submenu:

- Switch **Shuffle** on or off.

- Select **Repeat**: **Off**, **One** (current track) or **All**.

Telephone Precondition

The vehicle is connected to a compatible mobile device and helmet.

Telephone calls



- Call up the **Telephone** menu.
- Accept call: Tilt Multi-Controller **1** to the right.
- Reject call: Tilt Multi-Controller **1** to the left.

<https://www.motorcycle-manual.com/>

- End call: Tilt Multi-Controller 1 to the left.

Muting

During active phone calls, the microphone in the helmet can be muted.

Phone calls with multiple participants

While a phone call is in progress, a second call can be accepted. The first phone call is put on hold. The number of active calls is shown in the Telephone menu. It is possible to switch between two phone calls.

Telephone data

Depending on the mobile device, when pairing (104) completes telephone data are automatically sent to the vehicle.

Phone book: List of contacts saved on the mobile device

Call list: List of calls with the mobile device

Favourites: List of favourites saved on the mobile device

Display software version

- Navigate to Settings, Information, Software version.

Display licence information

- Navigate to Settings, Information, Licences.

Adjustment

Mirrors	116
Headlight	116
Windscreen	117
Clutch	117
Brakes	118
Spring preload	118
Damping	119

Mirrors

Adjusting mirrors



- Turn the mirror to the desired position.

Adjusting mirror arm



- Push protective cap **1** over the threaded fastener of the mirror arm up to expose the threaded fastener.
- Loosen nut **2**.
- Turn the mirror arm to the appropriate position.
- Tighten the nut to the specified torque, while holding the mirror arm to ensure that it does not move out of position.



Mirror (locknut) to clamping piece

22 Nm (Left-hand thread)

- Push the protective cap over the threaded fastener.

Headlight

Headlight beam throw and spring preload

Headlight beam throw is generally kept constant when spring preload is adjusted to suit load. Spring preload adjustment might not suffice only if the motorcycle is very heavily loaded. Under these circumstances, headlight beam throw has to be adjusted to suit the weight carried by the motorcycle.



NOTICE

If there are doubts about the correct headlight beam throw, have the setting checked by a specialist.

ist workshop, preferably an authorised BMW Motorrad dealer.◀

Adjusting headlight beam throw



If, for a high load, the adjustment of the spring pre-load is no longer sufficient not to dazzle oncoming traffic:

- Use adjusting screws **1** on left and right to adjust beam throw for both headlights.

When the motorcycle is again ridden with a lower load:

- Return the headlight to its basic setting.

Windscreen

Adjusting windscreen

Requirement

The motorcycle is at a standstill.



WARNING

Adjusting the windscreen while riding

Risk of falling

- Do not attempt to adjust the windscreen unless the motorcycle is at a standstill.◀
- Pull lever **2** down to raise windscreen **1**.

- Push lever **2** up to lower windscreen **1**.

Clutch

Adjusting clutch lever

WARNING

Adjusting the clutch lever while riding

Risk of accident

- Adjust the clutch lever only when the motorcycle is at a standstill.◀



- Turn adjusting screw **1** clockwise to increase the span

<https://www.motorcycle-manual.com/>

between the clutch lever and the handlebar grip.

- Turn adjusting screw **1** anti-clockwise to reduce the span between the clutch lever and the handlebar grip.



NOTICE

The adjusting screw can be turned more easily if the clutch lever is pushed forward.◀

Brakes

Adjusting brake lever



WARNING

Relocated brake fluid tank

Air in the brake system

- Do not turn the handlebars or the handlebar fitting on the handlebar.◀




WARNING

Adjusting the brake lever while riding

Risk of accident

- Do not attempt to adjust the brake lever unless the motorcycle is at a standstill.◀

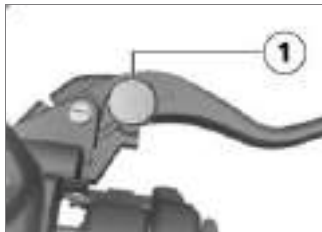

- Turn adjusting screw **1** anti-clockwise to increase the span between the brake lever and the handlebar grip.
- Turn adjusting screw **1** clockwise to reduce the span between the brake lever and the handlebar grip.



NOTICE

The adjusting screw is easier to turn if you push the brake lever forward.◀

Spring preload

Adjustment

It is essential to set spring preload of the rear suspension to suit the load carried by the motorcycle. Increase spring preload when the motorcycle is heavily loaded and reduce spring preload accordingly when the motorcycle is lightly loaded.

Adjusting spring preload for rear wheel

- Remove the seat (➡ 90).
- Removing the toolkit.



WARNING

Spring preload setting and spring-strut damping setting not matched.

Impaired handling.

- Adjust spring-strut damping to suit spring preload. ◀
- If you want to increase spring preload, use the tool from the on-board toolkit to turn adjuster knob **1** clockwise.
- If you want to reduce spring preload, use the tool from the toolkit to turn adjuster knob **1** counter-clockwise.



Basic setting of spring preload, rear

– without Dynamic ESA^{OE}

Turn the adjuster knob as far as it will go counter-clockwise. (One-up riding without luggage)

Turn the adjuster as far as it will go counter-clockwise, then back it off 20 turns in the clockwise direction. (One-up with luggage)

Turn the knob clockwise as far as it will go. (Two-up with luggage)◀

- Stow the on-board toolkit in its correct position.
- Install the seat (➡ 91).

Damping Adjustment

Damping must be adapted to suit the condition of the surface on which the motorcycle is ridden and to suit spring preload.

- An uneven surface requires softer damping than a smooth surface.
- An increase in spring preload requires firmer damping, a reduction in spring preload requires softer damping.

Adjusting damping for rear wheel

- Make sure the ground is level and firm and place the motorcycle on its stand.

<https://www.motorcycle-manual.com/>



- Adjust the damping action by turning adjusting screw **1**.



- Turn the adjusting screw **1** clockwise to harden the damping action.

- Turn the adjusting screw **1** anticlockwise to soften the damping action.



Basic setting of rear-suspension damping characteristic

– without Dynamic ESA^{OE}

Turn the adjusting screw as far as it will go clockwise, then back it off 1.5 turns. (One-up riding without luggage)

Turn the adjusting screw clockwise to the limit position, and then 0.5 turns anticlockwise. (One-up with luggage)

Turn the adjusting screw as far as it will go clockwise, then back it off 0.25 of a turn. (Two-up with luggage)<

Riding

Safety instructions	122
Regular check	124
Starting	125
Running in	128
Shifting gear	129
Shift light	130
Brakes	131
Parking your motorcycle	133
Refuelling	133
Securing motorcycle for transportation	138

<https://www.motorcycle-manual.com/>

Safety instructions

Rider's equipment

The following clothing will protect you on every journey:

- Helmet
- Suit
- Gloves
- Boots

This applies even to short journeys, and to every season of the year. Your authorised BMW Motorrad retailer will be glad to advise you on the correct clothing for every purpose.

Restricted angle of heel

- with low-slung^{OE}

A motorcycle with lowered suspension has less ground clearance and cannot corner at angles of heel as extreme as those achievable by a counterpart motorcycle with standard-height suspension (see

the section entitled "Technical data").



WARNING

When a motorcycle with lowered suspension is cornering, certain components can come into contact with the surface at a bank angle less than that to which the rider is accustomed.

Risk of falling

- Carefully try out the limits of the motorcycle's bank angle and adapt your style of riding accordingly.◀

Test your motorcycle's angle of heel in situations that do not involve risk. When riding over kerbs and similar obstacles, bear in mind that your motorcycle's ground clearance is limited.

Lowering the motorcycle's suspension shortens suspension travel. Ride comfort might be restricted as a result. Be sure to adjust spring preload accordingly, particularly for riding two-up.

Loading correctly



WARNING

Handling adversely affected by overloading and imbalanced loads

Risk of falling

- Do not exceed the permissible gross weight and be sure to comply with the instructions on loading.◀
- Adjusting spring preload setting and damping to the total weight.
- with touring cases^{OA}
- Ensure that the case volumes on the left and right are equal.

<https://www.motorcycle-manual.com/>

- Make sure that the weight is uniformly distributed between right and left.
- Pack heavy items at the bottom of the cases and toward the inboard side.
- Note the maximum permissible payload and maximum permissible speed (see also the section entitled "Accessories").



Payload per case

max 5 kg<

- with topcase^{OA}
- Note the maximum permissible payload and maximum permissible speed (see also the section entitled "Accessories").



Payload of topcase

max 5 kg<

Speed

If you ride at high speed, always bear in mind that various boundary conditions can adversely affect the handling of your motorcycle, e.g.:

- Spring-strut and shock-absorber system not set up correctly
- Imbalanced load
- Loose clothing
- Insufficient tyre pressure
- Poor tyre tread
- Added luggage systems such as cases, topcase and tank rucksack.

Risk of poisoning

Exhaust fumes contain carbon monoxide, which is colourless and odourless but highly toxic.



WARNING

Exhaust gases adversely affecting health

Risk of asphyxiation

- Do not inhale exhaust fumes.
- Do not run the engine in an enclosed space.◀

Risk of burn injury



CAUTION

Engine and exhaust system become very hot when the vehicle is in use

Risk of burn injury

- When you park the vehicle make sure that no-one and no objects can come into contact with the hot engine and exhaust system.◀

Catalytic converter

If misfiring causes unburned fuel to enter the catalytic converter, there is a danger of overheating and damage.

The following guidelines must be observed:

<https://www.motorcycle-manual.com/>

- Do not run the fuel tank dry
- Do not attempt to start or run the engine with a spark-plug cap disconnected
- Stop the engine immediately if it misfires
- Use only unleaded fuel
- Comply with all specified maintenance intervals.

**ATTENTION****Unburned fuel in catalytic converter**

Damage to catalytic converter

- Note the points listed for protection of the catalytic converter. ◀

Risk of overheating**ATTENTION**

Engine running for prolonged period with vehicle at standstill

Overheating due to insufficient cooling; in extreme cases vehicle fire

- Do not allow the engine to idle unnecessarily.
- Ride away immediately after starting the engine. ◀

Tampering**ATTENTION****Tampering with the motorcycle (e.g. engine management ECU, throttle valves, clutch)**

Damage to the affected parts, failure of safety-relevant functions, voiding of warranty

- Do not tamper with the vehicle in any way that could result in tuned performance. ◀

Regular check**Comply with checklist**

- At regular intervals, use the checklist below to check your motorcycle.

Always before riding off:

- Check operation of the brake system.
- Check operation of the lights and signalling equipment.
- Check operation of the clutch (164).
- Check the tyre tread depth (167).
- Check the tyre pressures (166).
- Check security of cases and luggage.

When load status changes:

- without Dynamic ESA^{OE}
- Adjust the spring preload for rear wheel (118).

- Adjust the damping for rear wheel (119).<

- with Dynamic ESA^{OE}
- Adjust the suspension (77).<

Every 3rd refuelling stop:

- Check the engine oil level (158).
- Check the brake pad thickness, front brakes (160).
- Check the brake pad thickness, rear brakes (161).
- Check the brake-fluid level, front brakes (162).
- Check the brake-fluid level, rear brakes (163).
- Check the coolant level (165).
- Lubricate the chain (187).
- Check chain sag (187).

Starting

Starting engine



ATTENTION

Sufficient gearbox lubrication only with the engine is running.

Gearbox damage

- Do not allow the motorcycle to roll for a lengthy period of time or push it a long distance with the engine switched off.◀
- Switch on the ignition (62).
 - » Pre-Ride-Check is performed. (126)
 - » ABS self-diagnosis is in progress. (126)
 - » ASC self-diagnosis is in progress. (127)
- with riding modes Pro^{OE}
 - » DTC self-diagnosis is in progress. (128)<
- Select neutral or, if a gear is engaged, pull the clutch lever



NOTICE

You cannot start the motorcycle with the side stand extended and a gear engaged. The engine will switch itself off if you start it with the gearbox in neutral and then engage a gear before retracting the side stand.◀



- Press the starter button 1.



NOTICE

The start attempt is automatically interrupted if battery voltage is too low. Recharge the battery

before you start the engine, or use jump leads and a donor battery to start.

See the subsection on jump starting in "Maintenance" for more details. ◀



The engine starts.

- » If the engine refuses to start, consult the troubleshooting chart in the section entitled "Technical data". (➡ 212)

Pre-Ride-Check

The instrument cluster runs a test of the instruments and the indicator and warning lights when the ignition is switched on. This test is known as the Pre-Ride-Check. The check is aborted if you start the engine before it completes.

Phase 1

All indicator and warning lights are switched on.

After a longer vehicle standstill period, an animation is displayed when the system starts up.

Phase 2

The 'General' warning light changes from red to yellow.

Phase 3

All the indicator and warning lights switched on in the initial phase are switched off in reverse sequence.

The malfunction indicator lamp only goes out after 15 seconds.

If one of the indicator and warning lights did not switch on:

- Have the fault rectified as quickly as possible by a specialist workshop, preferably an authorised BMW Motorrad dealer.

ABS self-diagnosis

BMW Motorrad ABS performs self-diagnosis to ensure its operability. Self-diagnosis starts automatically when you switch on the ignition.

Phase 1

- » Test of the diagnosis-compatible system components with the vehicle at a standstill.



ABS indicator light flashes.

Phase 2

- » Test of the wheel-speed sensors as the vehicle pulls away from rest.



ABS indicator light flashes.

ABS self-diagnosis completed

- » The ABS indicator and warning light goes out.



ABS self-diagnosis not completed

The ABS function is not available, because self-diagnosis did not complete. (The motorcycle has to reach a defined minimum speed for the wheel speed sensors to be checked: 5 km/h)

If an indicator showing an ABS fault appears when ABS self-diagnosis completes:

- You can continue to ride. Bear in mind that the ABS function is not available.
- Have the fault rectified as quickly as possible by a specialist workshop, preferably an authorised BMW Motorrad retailer.

ASC self-diagnosis

BMW Motorrad ASC performs self-diagnosis to ensure its operability. Self-diagnosis is performed automatically when you switch on the ignition.

Phase 1

- » Test of the diagnosable system components with the vehicle at a standstill.



ASC indicator and warning light slow-flashes.

Phase 2

- » Test of the diagnosis-compatible system components while the motorcycle is on the move.



ASC indicator and warning light slow-flashes.

ASC self-diagnosis completed

- » The ASC indicator and warning light goes out.

- Observe all the indicator and warning lights.



ASC self-diagnosis not completed

The ASC function is not available, because self-diagnosis did not complete. (The motorcycle has to reach a defined minimum speed for the wheel sensors to be checked: min 5 km/h)

If an indicator showing an ASC fault appears when ASC self-diagnosis completes:

- You can continue to ride. Bear in mind that the ASC function is not available.
- Have the fault rectified as quickly as possible by a specialist workshop, preferably an authorised BMW Motorrad retailer.

<https://www.motorcycle-manual.com/>

DTC self-diagnosis

– with riding modes Pro^{OE}

BMW Motorrad DTC performs self-diagnosis to ensure its operability. Self-diagnosis is performed automatically when you switch on the ignition.

Phase 1

» Test of the diagnosis-compatible system components with the vehicle at a standstill.



DTC indicator and warning light slow-flashes.

Phase 2

» Pullaway test of the system components with diagnostic capability.



DTC indicator and warning light slow-flashes.

DTC self-diagnosis completed

» The DTC symbol no longer shows.

- Observe all the indicator and warning lights.



DTC self-diagnosis not completed

The DTC function is not available, because self-diagnosis did not complete. (The motorcycle has to reach a defined minimum speed with the engine running for the wheel-speed sensors to be checked: min 5 km/h)

If an indicator showing a DTC fault appears when DTC self-diagnosis completes:

- You can continue to ride. Bear in mind that the DTC function is not available or the functionality might be subject to certain restrictions.

- Have the fault rectified as quickly as possible by a specialist workshop, preferably an authorised BMW Motorrad retailer.

Running in Engine

- Until the running-in check, vary the throttle opening and engine-speed range frequently; avoid riding at constant engine rpm for prolonged periods.
- Try to do most of your riding during this initial period on twisting, fairly hilly roads, avoiding high-speed main roads and highways if possible.
- Comply with the running-in speeds.



Running-in speed

<6500 min⁻¹ (Odometer reading 0 - 1200 km)



Running-in speed

No full load (Odometer reading 0...1200 km)

- Note the mileage after which the running-in check should be carried out.



Mileage until the first running-in check

500...1200 km

Brake pads

New brake pads have to bed down before they can achieve their optimum friction levels. You can compensate for this initial reduction in braking efficiency by exerting greater pressure on the levers.



WARNING

New brake pads

Longer stopping distance, risk of accident

- Apply the brakes in good time.◀

Tyres

New tyres have a smooth surface. This must be roughened by riding in a restrained manner at various heel angles until the tyres are run in. This running in procedure is essential if the tyres are to achieve maximum grip.



WARNING

New tyres losing grip on wet roads and at extreme bank angles

Risk of accident

- Ride carefully and avoid extremely sharp inclines.◀

Shifting gear


– with shift assistant Pro^{OE}

Gear Shift Assistant Pro



NOTICE

Whenever the Pro shift assistant shifts gears, cruise control is automatically disengaged for safety reasons.◀

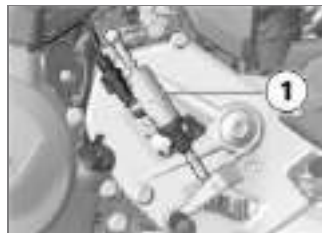


- Select the gears in the usual way by using the foot-operated gearshift lever.
 - » The shift assistant assists upshifts and downshifts without

<https://www.motorcycle-manual.com/>

- the rider having to pull the clutch or close the throttle.
- This is not an automatic-shift system.
 - The rider is the most important part of the system and decides when to shift gears.
 - The sensor **1** on the gearshift shaft registers the gearshift request and triggers shift assistance.
 - » When riding at a steady speed in a low gear at high engine rpm, an attempt to shift gear without pulling the clutch can cause a severe load-change reaction.
 - BMW Motorrad recommends disengaging the clutch for shifts in these circumstances.
 - It is advisable to avoid using Gear Shift Assistant Pro at engine speeds close to the limits at which the governor cuts in to limit engine rpm.

- » Shift assistance is not available in the following situations:
 - With clutch lever pulled.
 - Shift lever not in its initial position
 - Upshifts with the throttle valve closed (engine overrun) and when slowing.
 - Downshifts with throttle valve open and when accelerating.
- Once the gearshift has completed the shift lever has to be fully released before another gearshift with the Gear Shift Assistant Pro can take place.
- » See the "Engineering details" section for more information on Gear Shift Assistant Pro:
- » Gear Shift Assistant Pro (152)

Shift light Function

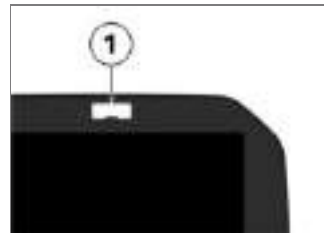

The gearshift light **1** indicates to the rider that the speed for shifting to the next higher gear is approaching.

- Shift light flashes at preset frequency: Approaching upshift rpm
- Shift light goes out: Engine revving at upshift rpm

The engine-speed thresholds and the way in which the shift light indicates the various states can be customised in the set-

tings menu, Vehicle settings (see the section headed "Operation").

Brakes

How can stopping distance be minimised?

Each time the brakes are applied, a load distribution shift takes place with the load shifting forward from the rear to the front wheel. The sharper the motorcycle decelerates, the more load is shifted to the front wheel. The higher the wheel load, the more braking force can be transmitted without the wheel locking.

To optimise stopping distance, apply the front brakes rapidly and keep on increasing the force you apply to the brake lever. This makes the best possible use of the dynamic increase in load at the front wheel. Remember to pull the clutch at the same time.

In the "emergency braking cir-

umstances" that are trained so frequently, braking force is applied as rapidly as possible and with the rider's full force applied to the brake levers; under these circumstances the dynamic shift in load distribution cannot keep pace with the increase in deceleration and the tyres cannot transmit the full braking force to the surface of the road. Under these circumstances the front wheel can lock up.

BMW Motorrad ABS prevents the front wheel from locking up.

Panic braking

If you brake sharply from a speed in excess of 50 km/h, the brake light flashes rapidly as a warning for road users behind you.

If you brake until your speed is less than 15 km/h, the hazard warning lights start to flash as well. The hazard warning lights switch off automatically as soon

as you start to accelerate and vehicle speed reaches 20 km/h.

Descending mountain passes



WARNING

Braking only with the rear brake on mountain descents

Brake fade, destruction of the brakes due to overheating

- Use both front and rear brakes, and make use of the engine's braking effect as well.◀

Wet and dirty brakes

Wetness and dirt on the brake discs and the brake pads diminish braking efficiency.

Delayed braking action or poor braking efficiency must be reckoned with in the following situations:

<https://www.motorcycle-manual.com/>

- Riding in the rain or through puddles of water.
- After the vehicle has been washed.
- Riding on salted or gritted roads.
- After work has been carried on the brakes, due to traces of oil or grease.
- Riding on dirt-covered surfaces or off-road.

**WARNING****Wetness and dirt result in diminished braking efficiency**

Risk of accident

- Apply the brakes lightly while riding to remove wetness and dirt, or dismount and clean the brakes.
- Think ahead and brake in good time until full braking efficiency is restored.◀

ABS Pro

- with riding modes Pro^{OE}

Physical limits applicable to motorcycling**WARNING****Braking when cornering**

Risk of crash despite ABS Pro

- Invariably, it remains the rider's responsibility to adapt riding style to riding conditions.
- Do not take risks that would negate the additional safety offered by this system.◀

ABS Pro is available in all riding modes except Dynamic PRO.

Possibility of a fall not precluded

Although ABS Pro provides the rider with valuable assistance and constitutes a huge advance in safety for braking with the motorcycle banked for cornering, it

cannot under any circumstances be considered as redefining the physical limits that apply to motorcycling. It is still possible for these limits to be overshoot due to misjudgement or rider error. In extreme cases this can result in a crash.

Use on public roads

ABS Pro helps make the motorcycle even safer for riding on public roads. When the brakes are applied because of an unforeseen hazard when the motorcycle is banked for cornering, within the physical limits that apply to motorcycling the system prevents the wheels from locking and skidding away.

**NOTICE**

ABS Pro was not developed to enhance individual braking performance with the motorcycle banked into corners.◀

Parking your motorcycle

Side stand

- Switch off the engine.



ATTENTION

Poor ground underneath the stand

Risk of damage to parts if vehicle topples

- Always check that the ground under the stand is level and firm.◀



ATTENTION

Additional weight placing strain on the side stand

Risk of damage to parts if vehicle topples

- Do not sit or lean on the vehicle while it is propped on the side stand.◀

- Extend the side stand and prop the motorcycle on the stand.
- If the camber of the roadway permits, turn the handlebars all the way to the left.
- On a gradient, the motorcycle should always face uphill; select 1st gear.

Centre stand

– with centre stand^{OE}

- Switch off the engine.



ATTENTION

Poor ground underneath the stand

Risk of damage to parts if vehicle topples

- Always check that the ground under the stand is level and firm.◀



ATTENTION

Centre stand retracts due to severe movements

Risk of damage to parts if vehicle topples

- Do not lean or sit on the vehicle with the centre stand extended.◀
- Extend the centre stand and lift the motorcycle on to the stand.

Refuelling

Fuel grade

Requirement

For optimum fuel consumption, fuel should be sulphur-free or as low-sulphur as possible.



ATTENTION

Engine operation with leaded fuel

Damage to catalytic converter

- Do not attempt to run the vehicle on leaded fuel or fuel with metallic additives (e.g. manganese or iron).◀
- Observe the maximum ethanol content of the fuel.



NOTICE

Recommended fuel grade, F 900 XR A2 (0K41)

A different fuel grade can be used for the A2 version. See the more detailed information in the "Technical data" section.◀



Recommended fuel grade



Premium unleaded (maximum 15% ethanol, E15)



95 ROZ/RON
90 AKI

– with regular-grade fuel, unleaded^{OE}



Recommended fuel grade

Regular, unleaded (control is national-market-specific) (maximum 15% ethanol, E15)
91 ROZ/RON
87 AKI◀

» Pay attention to the following symbols in the fuel filler cap and on the fuel pump:



Refuelling



WARNING

Fuel is highly flammable

Risk of fire and explosion

- Do not smoke. Never bring a naked flame near the fuel tank.◀



WARNING

Escape of fuel due to heat-induced expansion if fuel tank is overfilled

Risk of falling

- Do not overfill the fuel tank.◀



ATTENTION

Wetting of plastic surfaces by fuel

Damage to the surfaces (surfaces become unsightly or dull)

- Clean plastic surfaces immediately after contact with fuel.◀
- Make sure the ground is level and firm and place the motorcycle on its side stand.
- with centre stand^{OE}
- Make sure the ground is level and firm and place the motorcycle on its centre stand.◀



- Open protective flap **1**.
- Unlock fuel tank cap **2** by turning the ignition key clockwise and open up.



- Do not fill the tank past the bottom edge of the filler neck.



NOTICE

When refuelling after running on reserve, make sure that you top up the tank to a level above reserve, so that the new level is detected and the fuel reserve indicator light is switched off.◀



NOTICE

The "usable fuel capacity" specified in the technical data is the quantity that the fuel tank could hold if refilled after it had been run dry and the engine had cut out due to a lack of fuel.◀



Fuel tank capacity

approx. 15.5 l



Reserve fuel

approx. 3.5 l

- Press the fuel tank cap down firmly to close.
- Remove the ignition key and close the protective cap.

Refuelling

– with Keyless Ride^{OE}

Requirement

The steering lock is disengaged.



WARNING

Fuel is highly flammable

Risk of fire and explosion

- Do not smoke. Never bring a naked flame near the fuel tank.◀



WARNING

Escape of fuel due to heat-induced expansion if fuel tank is overfilled

Risk of falling

- Do not overfill the fuel tank.◀



ATTENTION

Wetting of plastic surfaces by fuel

Damage to the surfaces (surfaces become unsightly or dull)

- Clean plastic surfaces immediately after contact with fuel.◀
- Make sure the ground is level and firm and place the motorcycle on its side stand.
 - with centre stand^{OE}
- Make sure the ground is level and firm and place the motorcycle on its centre stand.◁
- with Keyless Ride^{OE}
- Switch off the ignition (65).



NOTICE

The fuel filler cap can be opened within the defined waiting time after the ignition has been switched off, without the radio-

operated key being within range.◀



Waiting time for opening the fuel filler cap

2 min


- » There are **two variant ways** of opening the fuel filler cap:
- Within the waiting time.
 - After the waiting time has expired.

Version 1

- with Keyless Ride^{OE}

Requirement

Within the waiting time

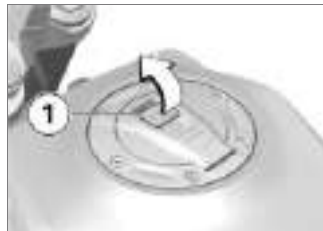

- Slowly pull tab **1** on the fuel filler cap up.
- » Fuel filler cap unlocks.
- Fully open the fuel filler cap.

Version 2

- with Keyless Ride^{OE}

Requirement

After the waiting time has expired

- Bring the radio-operated key into range.
- Slowly pull tab **1** up.
- » The indicator light for the radio-operated key flashes

while the search for the radio-operated key is in progress.

- Slowly pull tab **1** on the fuel filler cap up again.
- » Fuel filler cap unlocks.
- Fully open the fuel filler cap.



- Refuel with fuel of the grade stated above; do not fill the tank past the bottom edge of the filler neck.



NOTICE

When refuelling after running on reserve, make sure that you top up the tank to a level above reserve, so that the new tank is

detected and the fuel reserve indicator light is switched off.◀



NOTICE

The "usable fuel capacity" specified in the technical data is the quantity that the fuel tank could hold if refilled after it had been run dry and the engine had cut out due to a lack of fuel.◀



Fuel tank capacity

approx. 15.5 l



Reserve fuel

approx. 3.5 l

- Press down firmly on the filler cap of the fuel tank.
- » The fuel filler cap engages with an audible click.

- » The fuel filler cap locks automatically when the waiting time expires.
- » The engaged fuel filler cap locks immediately when you secure the steering lock or switch on the ignition.

Opening fuel filler cap emergency release

– with Keyless Ride^{OE}

Fuel filler cap cannot be opened.

- Have the fault rectified as quickly as possible by a specialist workshop, preferably an authorised BMW Motorrad retailer.



- Remove screws **1**.
- Remove emergency release **2**.
» Fuel filler cap unlocks.
- Fully open the fuel filler cap.
- Refuel (135).
- Close the fuel filler cap emergency release (138).

Closing fuel filler cap emergency release

– with Keyless Ride^{OE}

Requirement

Fuel filler cap is in closed position.



- Hold emergency release **2** in position.
- Install screws **1**.

Securing motorcycle for transportation

- Make sure that all components that might come into contact with straps used to secure the motorcycle are adequately protected against scratching. Use adhesive tape or soft cloths, for example, for this purpose.



ATTENTION

Vehicle topples to side when being lifted on to stand

Risk of damage to parts if vehicle topples

- Secure the vehicle to prevent it toppling, preferably with the assistance of a second person.◀
- Push the motorcycle on to the transportation flat and hold it in position: do not place it on the side stand or centre stand.



ATTENTION

Trapping of components

Component damage

- Do not trap components such as brake lines or cable legs.◀
- At the front, secure the straps to the bottom fork bridge on both sides and tighten the straps.



- At the rear, secure the straps to the rear footrests on both sides and tighten the straps.
- Uniformly tighten all the straps.

<https://www.motorcycle-manual.com/>

<https://www.motorcycle-manual.com/>

Engineering details

General notes.....	142
Antilock Brake System (ABS)	142
Traction control (ASC/DTC).....	145
Dynamic engine brake control	146
Dynamic ESA.....	147
Riding mode	147
Dynamic Brake Control	150
Tyre pressure monitoring (RDC).....	150
Gear Shift Assistant.....	152
Adaptive Headlight.....	153

<https://www.motorcycle-manual.com/>

General notes

To find out more about engineering go to:

bmw-motorrad.com/technology

Antilock Brake System (ABS)

How does ABS work?

The amount of braking force that can be transferred to the road depends on factors that include the coefficient of friction of the road surface. Loose stones, ice and snow or a wet road all have much lower coefficients of friction than a clean, dry asphalt surface. The lower the coefficient of friction, the longer the stopping distance.

If the rider increases braking pressure to the extent that braking force exceeds the maximum transferable limit, the wheels start to lock and the motorcycle loses

its directional stability; a fall is imminent. Before this situation can occur, ABS intervenes and adapts braking pressure to the maximum transferable braking force, so the wheels continue to turn and directional stability is maintained irrespective of the condition of the road surface.

What are the effects of surface irregularities?

Humps and surface irregularities can cause the wheels to lose contact temporarily with the road surface; if this happens the braking force that can be transmitted to the road can drop to zero. If the brakes are applied under these circumstances the ABS has to reduce braking force to ensure that directional stability is maintained when the wheels regain contact with the road surface. At this instant the BMW Motorrad ABS

must assume an extremely low coefficient of friction (gravel, ice, snow), so that the wheels will continue to rotate under all imaginable circumstances, because this is the precondition for ensuring directional stability. As soon as it registers the actual circumstances, the system reacts instantly and adjusts braking force accordingly to achieve optimum braking.

Rear wheel lift

Under very severe and sudden deceleration, however, under certain circumstances it is possible that the BMW Motorrad ABS will be unable to prevent the rear wheel from lifting clear of the ground. If this happens the outcome can be a highside situation in which the motorcycle can flip over.

<https://www.motorcycle-manual.com/>



WARNING

Rear wheel lift due to severe braking

Risk of falling

- When you brake sharply, bear in mind that ABS control cannot always be relied on to prevent the rear wheel from lifting clear of the ground. ◀

What is the design baseline for BMW Motorrad ABS?

Within the limits imposed by physics, the BMW Motorrad ABS ensures directional stability on any surface.

At speeds above 4 km/h, within the limits imposed by physics the BMW Motorrad ABS can ensure directional stability on any surface. Limitations inherent to the design principle mean that at lower speeds the

BMW Motorrad ABS cannot provide optimum assistance on all surfaces.

The system is not optimised for special requirements that apply under extreme competitive situations off-road or on the track.

Special situations

The speeds of the front and rear wheels are compared as one means of detecting a wheel's incipient tendency to lock. If the system registers implausible values for a lengthy period the ABS function is deactivated for safety reasons and an ABS fault message is issued. Self-diagnosis has to complete before fault messages can be issued. In addition to problems with the BMW Motorrad ABS, exceptional riding conditions can lead to a fault message being issued:

- Riding for a lengthy period with the front wheel lifted off the ground (wheelie).
- Rear wheel rotating with the vehicle held stationary by application of the front brake (burn-out).
- Heating up with the motorcycle on the centre stand or an auxiliary stand, engine idling or with a gear engaged.
- Rear wheel locked by the engine brake for a lengthy period, for example while descending on a loose or slippery surface.

If a fault message is issued on account of exceptional riding conditions, you can reactivate the ABS function by switching the ignition off and on again.

<https://www.motorcycle-manual.com/>

What significance devolves on regular servicing?



WARNING

Brake system not regularly serviced

Risk of accident

- In order to ensure that the BMW Motorrad ABS is always maintained in optimum condition, it is essential for you to comply strictly with the specified inspection intervals.◀

Safety reserves

The potentially shorter braking distances which BMW Motorrad ABS permits must not be used as an excuse for careless riding. The system is primarily a means of ensuring a safety margin in genuine emergencies.

Take care when cornering! When you apply the brakes on a corner

the vehicle's weight and momentum take over and even BMW Motorrad ABS is unable to counteract their effects.

Evolution of ABS to ABS Pro

– with ABS Pro^{OE}

Until now, the BMW Motorrad ABS helped ensure a very high degree of safety for braking with the motorcycle upright and travelling in a straight line. Now ABS Pro offers enhanced safety for braking in corners as well. ABS Pro prevents the wheels from locking even under sharp braking. ABS Pro reduces abrupt changes in steering force, particularly in panic-braking situations, counteracting the vehicle's otherwise natural but undesirable tendency to straighten up.

ABS intervention

Technically speaking, depending on the riding situation ABS Pro adapts ABS intervention to the motorcycle's bank angle. Signals for rate of roll and rate of yaw and lateral acceleration are used to calculate bank angle.

As the motorcycle is heeled over more and more as it banks into a corner, an increasingly strict limit is imposed on the brake-pressure gradient for the start of brake application. This slows the build-up of brake pressure to a corresponding degree. Additionally, pressure modulation is more uniform across the range of ABS intervention.

Advantages for the rider

The advantages of ABS Pro for the rider are sensitive response and high braking and directional stability combined with best-case

<https://www.motorcycle-manual.com/>

deceleration of the motorcycle, even when cornering.

Traction control (ASC/DTC)

How does traction control work?

Traction control is available in two versions

- **without** provision for the bank angle: Automatic Stability Control ASC
- ASC is a rudimentary function intended to prevent falls.
- **with** provision for bank angle: Dynamic Traction Control DTC
- DTC regulation is more delicate and more comfortable thanks to the additional bank angle and acceleration information.

Traction control compares the front and rear wheel circumferential velocities. The differential is

used to compute slip as a measure of the reserves of stability available at the rear wheel. If slip exceeds a certain limit, the engine management system intervenes and adapts engine torque accordingly.

BMW Motorrad ASC/DTC is designed as an assistant system for the rider and for use on public roads. The extent to which the rider affects ASC/DTC control can be considerable (weight shifts when cornering, items of luggage loose on the motorcycle), especially when the style of riding takes rider and machine close to the limits imposed by physics.

The system is not optimised for special requirements that apply under extreme competitive situations off-road or on the track. The BMW Motorrad ASC/DTC can be deactivated in these cases.



WARNING

Risky riding

Risk of accident despite ASC/DTC

- Invariably, it remains the rider's responsibility to adapt riding style to riding conditions.
- Do not take risks that would negate the additional safety offered by this system. ◀

Special situations

In accordance with the laws of physics, the ability to accelerate is restricted more and more as the angle of heel increases. Consequently, there can be a perceptible reduction in acceleration out of very tight bends.

The speeds of the front and rear wheels are compared and DTC, unlike ASC, also takes the bank angle into account in processing data to correct the rear wheel's

<https://www.motorcycle-manual.com/>

incipient tendency to spin or slip sideways.

- with riding modes Pro^{OE}

If the electronic processor receives values for the bank angle that it considers implausible over a lengthy period, a dummy value is used for the bank angle or the DTC function is switched off.

Under these circumstances the indicator for a DTC fault shows. Self-diagnosis has to complete before fault messages can be issued.

The BMW Motorrad Traction Control can shut down automatically under the exceptional riding conditions outlined below.

Exceptional riding conditions:

- Riding for a lengthy period with the front wheel lifted off the ground (wheelie).
- Rear wheel rotating with the vehicle held stationary by ap

plication of the front brake (burn-out).

- Heating up with the motorcycle on an auxiliary stand, in neutral or with a gear engaged.



Minimum speed for activation of DTC

min 5 km/h

If the front wheel lifts clear of the ground under severe acceleration, the ASC or DTC reduces engine torque in the RAIN and ROAD riding modes until the front wheel regains contact with the ground.

Front wheel lift-off detection allows brief wheelies when the DTC setting is DYNAMIC.

In DYNAMIC PRO riding mode, front wheel lift-off detection is switched off.

BMW Motorrad recommends turning the throttle grip back

slightly when lifting the front wheel in order to reach a stable driving condition again as soon as possible.

In RAIN, ROAD and DYNAMIC riding modes, the DTC setting corresponds to the riding mode. In the DYNAMIC PRO riding mode, DTC can be set differently.

Dynamic engine brake control

- with dynamic engine brake control^{OE}

How does dynamic engine brake control work?

The purpose of dynamic engine brake control is to prevent the unstable riding states that can be produced by excessive engine braking moment acting on the rear wheel. Depending on the road condition and riding dynamics, excessive braking

torque can produce a sharp rise in rear-wheel slip and impair directional stability. Dynamic engine brake control limits this slip at the rear wheel to a safe mode-dependent and bank-angle-dependent regulated slip.

Causes for excessive slip at the rear wheel:

- Riding with engine overrun on a surface with a low coefficient of friction (e.g. wet leaves).
- Rear-wheel hop when rider downshifts.
- Sharp braking during sporty riding.

In the same way as DTC traction control, dynamic engine brake control compares the wheel circumferential velocities of the front and rear wheels. Additional information on the bank angle enables dynamic engine brake control to calculate slip and the

reserve of stability at the rear wheel.

If slip overshoots the applicable limit, the throttle valves are opened very slightly to increase engine torque. Slip is reduced and the vehicle is stabilised.

Effect of dynamic engine brake control

- In the RAIN and ROAD riding modes: Maximum stability.
- In the DYNAMIC and DYNAMIC PRO riding modes: High stability.

Dynamic ESA

- with Dynamic ESA^{OE}

Dynamic ESA function

By interpreting ride height sensor signals, Dynamic ESA detects movements in the suspension and responds by adjusting the damper valves. The chassis and suspension will thus be adapted

to the characteristics of the terrain.

Dynamic ESA calibrates itself at regular intervals to ensure the system functions correctly.

Possibilities for adjustment Damping modes

- Road: Damping for comfortable on-road riding
- Dynamic: Damping for dynamic on-road riding

Load settings

- One-up riding
- One-up with luggage
- Two-up (with luggage)

Riding mode Selection

To adjust the motorcycle to the road condition and the desired driving experience, the following riding modes can be selected:

<https://www.motorcycle-manual.com/>

- RAIN
- ROAD (default mode)
- with riding modes Pro^{OE}
- DYNAMIC

With coding plug installed:

- DYNAMIC PRO

For each of these riding modes, there is a matching setting for the ABS, ASC/DTC systems, for dynamic engine brake control and for throttle response.

- with Dynamic ESA^{OE}

Dynamic ESA can be parametrised independently of the selected riding mode.

ASC/DTC can be switched off in each riding mode. The following explanations always refer to the driving safety systems that are switched on.

Throttle response

- In RAIN riding mode: the engine's throttle response is soft.
- In ROAD riding mode: the engine's throttle response is optimum.
- In DYNAMIC riding mode: the engine's throttle response is direct.
- In DYNAMIC PRO riding mode: the engine's throttle response can be parametrised to suit the rider's individual needs and preferences.

ABS

- Rear wheel lift-off detection is active in all riding modes except in the factory default settings of the DYNAMIC PRO mode.
- Rear wheel lift-off detection is reduced in the DYNAMIC riding mode to achieve an enhanced braking effect.

- In DYNAMIC PRO riding mode, ABS can be set up differently.

- with riding modes Pro^{OE}

ABS Pro

- In the RAIN and ROAD riding modes, ABS Pro is fully available. The tendency of the motorcycle to straighten up when the brakes are applied with the machine banked for cornering is reduced to a minimum.
- In the DYNAMIC riding mode, ABS Pro is available only when the coefficient of friction is good. Assistance is less than in the RAIN and ROAD riding modes riding mode and instead, the system is set up to achieve maximised braking effect.
- In the DYNAMIC PRO riding mode, the factory default setting for ABS Pro is OFF.

<https://www.motorcycle-manual.com/>

ASC

- Front-wheel lift-off detection is active in the RAIN and ROAD riding modes.
- ASC is set up for on-road riding.
- ASC provides high driving stability in ROAD riding mode and maximum driving stability in RAIN riding mode.
- with riding modes Pro^{OE}

DTC

Tyres

- DTC is set up for on-road riding with road tyres in all riding modes.

Driving stability

- In the ASC/DTC setting for RAIN, ASC/DTC intervenes early enough to achieve maximum driving stability.
- In the ASC/DTC setting for ROAD, ASC/DTC intervenes later than in the RAIN riding

mode. This prevents the rear wheel from spinning whenever possible.

- In the ASC/DTC settings for RAIN and ROAD, the front wheel is prevented from lifting.
- In the ASC/DTC setting DYNAMIC, ASC/DTC intervenes later than in the ROAD riding mode, so slight drift can be induced when exiting corners and brief wheelies are also possible.

In the ASC/DTC settings RAIN, ROAD and DYNAMIC the ASC/DTC setting corresponds to the riding mode.

In the ASC/DTC setting DYNAMIC PRO, ASC/DTC can be set differently.

Mode changes

The riding mode can be changed while the vehicle is stationary with the ignition on. It is possible to change it while driving under the following conditions:

- No drive torque on the rear wheel.
- No brake pressure in the brake system.

The following steps must be taken to change the riding mode:

- Close the throttle twistgrip.
- Release the brake levers.
- Deactivate the cruise control.

The desired riding mode is initially preselected. The mode change does not take place until the systems in question are all in the appropriate state.

The selection menu does not disappear from the display until the mode change has taken place.

<https://www.motorcycle-manual.com/>

Dynamic Brake Control

- with riding modes Pro^{OE}

Dynamic Brake Control function

The Dynamic Brake Control function assists the rider during emergency braking.

Detection of emergency braking

- Emergency braking is detected when the front brake is actuated quickly and forcefully.

Behaviour during emergency braking

- If emergency braking is initiated at a speed above 10 km/h, the Dynamic Brake Control takes effect in addition to the ABS function.

Behaviour during accidental actuation of the throttle grip

- If the throttle is accidentally opened (throttle grip position

> 5 %) during emergency braking, Dynamic Brake Control ensures the desired braking effect by ignoring actuation of the throttle grip. The effect of emergency braking is guaranteed.

- If the throttle is closed (throttle grip position < 5 %) while Dynamic Brake Control is in action, the engine torque requested by the ABS brake system is restored.
- If emergency braking finishes and the throttle grip is still actuated, the Dynamic Brake Control will reduce the engine torque to the driver's choice in a controlled manner.

Tyre pressure monitoring (RDC)

- with tyre pressure control (RDC)^{OE}

Function

A sensor integrated into each tyre measures the air temperature and the air pressure inside the tyre and transmits this information to the control unit. Each sensor has a centrifugal-force tripswitch that does not enable transmission of the measured values until the motorcycle has accelerated to a defined minimum speed for the first time.



Minimum speed for transmission of the RDC measured values:

min 30 km/h

The display shows -- for each tyre until the tyre-pressure signal is received for the first time. The

sensors continue to transmit the measured-value signals for some time after the vehicle comes to a stop.



Time for transmission of measured values after vehicle comes to a stop:

min 15 min

An error message is issued if wheels without sensors are fitted to a vehicle equipped with an RDC control unit.

Tyre pressure ranges

The RDC control unit distinguishes between three tyre pressure ranges matched to the vehicle:

- Tyre pressure within permitted tolerance.
- Tyre pressure close to limit of permitted tolerance.
- Tyre pressure outside permitted tolerance.

Temperature compensation

Tyre pressure is a temperature-sensitive variable: pressure increases as tyre-air temperature rises and decreases as tyre-air temperature drops. Tyre-air temperature depends on ambient temperature as well as on the style of riding and the duration of the ride.



The tyre pressures are shown in the display as temperature compensated and always refer to the following tyre air temperature:

20 °C

The air lines available to the public in petrol stations and motorway service areas have gauges that do not compensate for temperature; the reading shown by a gauge of this nature is the temperature-dependent tyre-air pressure. As a result, the values displayed there usually do not correspond to the values displayed in the display.

Pressure adaptation



Example

According to the operating instructions, the tyre pressure should be:

2.5 bar

The following value is shown in the display:

2.3 bar

<https://www.motorcycle-manual.com/>



Example

So pressure is low by:

0.2 bar

The gauge on the air line shows:

2.4 bar

You must now increase tyre pressure until the value is:

2.6 bar

Gear Shift Assistant

– with shift assistant Pro^{OE}

Gear Shift Assistant Pro

Your vehicle is equipped with Gear Shift Assistant Pro, a system originally developed for racing and now adapted for the touring sector. It permits upshifts and downshifts without declutching or closing the throttle in virtually all load and rpm ranges.

Advantages

- 70-80 % of all gearshifts on a trip can be done without using the clutch.
- Less relative movement between rider and passenger because the shift pauses are shorter.
- It is not necessary to close the throttle valve when shifting under acceleration.
- When braking and downshifting (throttle valve closed), engine speed is adjusted by blipping the throttle.
- Shift time is shorter than a gearshift with clutch actuation.

In order for the system to identify a request for a gearshift, the rider has to move the shift lever from its idle position in the desired direction against the force of the spring through a certain "over-travel" at ordinary speed or rap-

idly and keep the shift lever in this position until the gearshift is completed. It is not necessary to increase the force applied to the gearshift lever while shifting is in progress. Once the gearshift has completed the shift lever has to be fully released before another gearshift with the Pro shift assistant can take place. When shifting gears with the Gear Shift Assistant Pro, the rider has to keep load state (throttle twistgrip position) constant before and during the gearshift. A change in the position of the throttle twistgrip during a gearshift can cause the function to abort and/or lead to a missed shift. Gear Shift Assistant Pro provides no assistance for the gearshift if the rider declutches.

<https://www.motorcycle-manual.com/>

Downshifting

- Downshifting is assisted until maximum rpm for the target gear to be selected is reached. This prevents over-rewving.



Maximum engine speed

max 9000 min⁻¹

Upshifting

- Upshifting is assisted until idle rpm for the target gear to be selected is reached.
- This prevents the engine from dropping below idle speed.



Idle speed

1250±⁵⁰ min⁻¹ (Engine at regular operating temperature)

Adaptive Headlight

- with adaptive head light^{OE}

Function

In addition to the bulbs for low beam, high beam and daytime riding light, or side light, the headlight has two separate LED elements complete with their own reflectors. The LED elements are activated as a function of bank angle in addition to the low-beam headlight, enabling the headlight to illuminate the inside of the bend as the motorcycle banks for cornering. The adaptive cornering headlight is optimised for bank angles up to 25 °.

The adaptive cornering headlight is activated under the following conditions:

- Bank angle is more than 10 °.
- Speed is higher than 10 km/h.
- The low-beam headlight is

<https://www.motorcycle-manual.com/>

<https://www.motorcycle-manual.com/>

Maintenance

General notes	156	Battery	181
Toolkit	156	Fuses	184
Service tool kit	156	Diagnostic connector	186
Front-wheel stand	157	Chain	187
Engine oil	158		
Brake system	160		
Clutch	164		
Coolant	165		
Tyres	166		
Rims and tyres	167		
Wheels	167		
Trim panel	176		
Air filter	177		
Lighting	179		
Jump-starting	180		

<https://www.motorcycle-manual.com/>

General notes


The "Maintenance" chapter describes straightforward procedures for checking and replacing certain wear parts.

Special tightening torques are listed as applicable. The tightening torques for the threaded fasteners on your motorcycle are listed in the section entitled "Technical data".

You will find information on more extensive maintenance and repair manual in the repair instructions on DVD for your vehicle, available from your authorised BMW Motorrad retailer.

Some of the work calls for special tools and a thorough knowledge of the technology involved. If you are in doubt, consult a specialist workshop, preferably your authorised BMW Motorrad retailer.

Toolkit

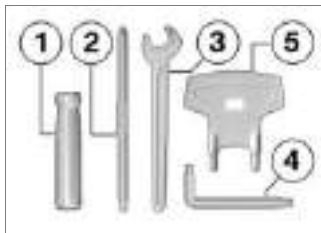

- 1** Screwdriver handle
- 2** Reversible screwdriver blade
With star-head and plain-tip ends
 - Replacing bulbs for front and rear turn indicators (⇒ 179).
 - Removing battery (⇒ 183).
 - Adjust the damping for rear wheel (⇒ 119).
- 3** Open-ended spanner
Width across flats 14

- 3** – Adjust the mirror arm (⇒ 116).
- 4** Torx wrench, T25/T30
T25 on short end, T30 on long end
- 5** Keys
 - Adjust the spring preload for rear wheel (⇒ 118).

Service tool kit

- with service toolkit^{OA}



BMW Motorrad has assembled a service toolkit that is ideal for carrying out extended service work (e.g. removing and installing wheels) on this motorcycle. This

toolkit is available from your authorised BMW Motorrad retailer.

Front-wheel stand

Installing front-wheel stand




ATTENTION

Use of the BMW Motorrad front-wheel stand without also using the auxiliary stand


Risk of damage to parts if vehicle topples

- Place the motorcycle on an auxiliary stand before lifting the front wheel with the BMW Motorrad front-wheel stand.◀
- Place the motorcycle on a suitable auxiliary stand.
 - with centre stand OE
- Make sure the ground is level and firm and place the motorcycle on its centre stand.◀

- Use a suitable front-wheel stand.

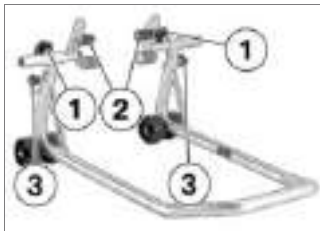

- Loosen the mounting bolts **1**.
- Push the two adapters **2** apart until the front forks fit between them. Adjust the adapter studs to suit the front suspension.
- Use locating pins **3** to set the front-wheel stand to the desired height.
- Centre the front wheel stand relative to the front wheel and push it into position at the front axle.

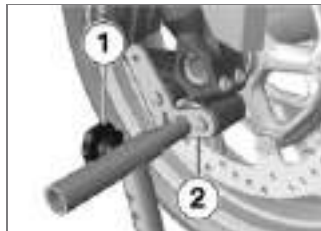

- Align the two adapters **2** so that the front forks are securely seated.
- Tighten mounting bolts with wheel **1**.

<https://www.motorcycle-manual.com/>



- Apply uniform pressure to push the front-wheel stand down and raise the motorcycle.

– with centre stand^{OE}



ATTENTION

Centre stand retracts if the vehicle lifted too high

Risk of damage to parts if vehicle topples

- When raising the vehicle, make sure that the centre stand remains on the ground.
- If necessary, adjust the height of the front-wheel stand.◀

- Make sure the motorcycle is standing firmly.◀

Engine oil

Checking engine oil level



ATTENTION

Misinterpretation of oil level reading, because oil level is temperature-dependent (the higher the temperature, the higher the oil level)

Engine damage

- Check the oil level only after a lengthy ride or when the engine is at operating temperature.◀
- Wipe the area around the oil filler opening clean.
- Allow the engine to idle until the fan starts up, then allow it to idle one minute longer.
- Switch off the engine.
- Make sure the engine is at operating temperature and

hold the motorcycle upright.
BMW Motorrad recommends using a suitable auxiliary stand.

– with centre stand^{OE}



ATTENTION



Vehicle topples to side when being lifted on to stand

Risk of damage to parts if vehicle topples

- Secure the vehicle to prevent it toppling, preferably with the assistance of a second person.◀
- Make sure the ground is level and firm and with the engine at operating temperature, place the motorcycle on its centre stand.◀



- Seat the oil dipstick on the oil filler neck, but do not engage the threads.
- Remove the oil dipstick and check the oil level.

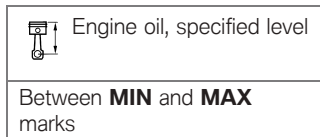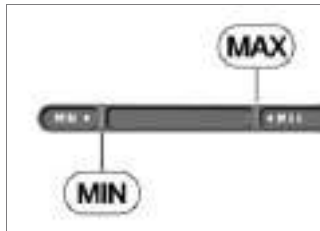

Engine oil, quantity for topping up

Product recommended by BMW Motorrad: ADVANTEC Ultimate oil, SAE 5W-40, API SL / JASO MA2

max 0.5 l (Difference between MIN and MAX)

If the oil level is below the MIN mark:

- Top up the engine oil (➡ 159).


If the oil level is above the MAX mark:

- Have the oil level corrected by a specialist workshop, preferably an authorised BMW Motorrad retailer.
- Install the oil dipstick.

Topping up engine oil

- Make sure the ground is level and firm and place the motorcycle on its stand.

- Wait five minutes for the oil to drain into the oil pan.
- Remove oil dipstick **1**.

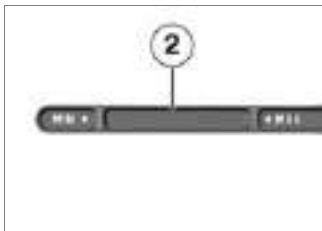

- Clean measuring area **2** with a dry cloth

- Wipe the area around the filler neck clean.



- Remove oil dipstick **1**.



ATTENTION

Use of insufficient engine oil or too much engine oil

Engine damage

- Always make sure that the oil level is correct. ◀
- Top up the engine oil to the specified level.
- Check the engine oil level (158).
- Install the oil dipstick.

Brake system

Checking operation of the brakes

- Operate the brake lever.
 - » The pressure point must be clearly perceptible.
- Press the footbrake lever.
 - » The pressure point must be clearly perceptible.

If pressure points are not clearly perceptible:



ATTENTION

Work on brake system not in compliance with correct procedure

Risk to operational reliability of the brake system

- Have all work on the brake system undertaken by trained and qualified specialists. ◀
- Have the brakes checked by a specialist workshop, preferably

an authorised BMW Motorrad retailer.

 
Checking brake pad thickness, front brakes

- Make sure the ground is level and firm and place the motorcycle on its stand.



- Visually inspect the left and right brake pads to ascertain their thickness. Viewing direction: Between wheel and front suspension toward brake calipers **1**.

<https://www.motorcycle-manual.com/>



Brake-pad wear limit,
front

min 1.0 mm (Friction pad only, without backing plate. The wear indicators, i.e. the grooves, must be clearly visible.)

If the wear indicating marks are no longer clearly visible:



WARNING

Brake-pad thickness less than permissible minimum

Diminished braking effect, damage to the brakes

 
- In order to ensure the dependability of the brake system, do not permit the brake pads to wear past the minimum permissible thickness. ◀
- Have the brake pads replaced by a specialist workshop, preferably an authorised BMW Motorrad retailer.

Checking brake pad thickness, rear brakes

- Make sure the ground is level and firm and place the motorcycle on its stand.



- Visually inspect the brake pads to ascertain their thickness. Viewing direction: from the rear towards the brake caliper **1**.



Brake-pad wear limit,
rear

min 1.0 mm (Friction pad only, without backing plate.)

<https://www.motorcycle-manual.com/>

If the brake pads are worn:



WARNING

Brake-pad thickness less than permissible minimum

Diminished braking effect, damage to the brakes

- In order to ensure the dependability of the brake system, do not permit the brake pads to wear past the minimum permissible thickness.◀
- Have the brake pads replaced by a specialist workshop, preferably an authorised BMW Motorrad retailer.

Checking brake-fluid level, front brakes



WARNING

Not enough brake fluid in brake fluid reservoir, or contaminants in brake fluid

Considerably reduced braking power due to presence of air, contaminants or water in the brake system

- Cease operation of the vehicle immediately and do not ride it until the fault has been rectified.
- Check the brake-fluid levels at regular intervals.
- Always make sure that the lid of the brake fluid reservoir and the area around the lid are cleaned before opening.
- Make sure that only fresh brake fluid from a sealed container is used.◀
- with centre stand^{OE}
- Make sure the ground is level and firm and place the motorcycle on its centre stand.
- Move the handlebars to the straight-ahead position.◀

- Make sure the ground is level and firm and hold the motorcycle upright.
- Move the handlebars to the straight-ahead position.



- Check the brake fluid level in brake fluid reservoir for front wheel brake **1**.



NOTICE

Wear of the brake pads causes the brake fluid level in the reservoir to sink.◀



Brake fluid level, front

Brake fluid, DOT4

It is not permissible for the brake fluid level to be below the MIN mark. (Brake-fluid reservoir horizontal, motorcycle upright)

If the brake fluid level drops below the permitted level:

- Have the fault rectified as quickly as possible by a specialist workshop, preferably an authorised BMW Motorrad retailer.

Checking brake-fluid level, rear brakes

- Make sure the ground is level and firm and hold the motorcycle upright.
 - with centre stand^{OE}
- Make sure the ground is level and firm and place the motorcycle on its centre stand.◀

**WARNING**

Not enough brake fluid in brake fluid reservoir, or contaminants in brake fluid

Considerably reduced braking power due to presence of air, contaminants or water in the brake system

- Cease operation of the vehicle immediately and do not ride it until the fault has been rectified.
- Check the brake-fluid levels at regular intervals.
- Always make sure that the lid of the brake fluid reservoir and the area around the lid are cleaned before opening.
- Make sure that only fresh brake fluid from a sealed container is used.◀
- Check the brake fluid level in brake fluid reservoir for rear wheel brake **1**.

**NOTICE**

Wear of the brake pads causes the brake fluid level in the reservoir to sink.◀

<https://www.motorcycle-manual.com/>



Brake fluid level, rear
(visual inspection)

Brake fluid, DOT4

It is not permissible for the brake fluid level to be below the **MIN** mark.

If the brake fluid level drops below the permitted level:

- Have the fault rectified as quickly as possible by a specialist workshop, preferably an authorised BMW Motorrad retailer.

Clutch


Checking operation of clutch

- Pull the clutch lever.
- » An increase in force with increasing actuation must be perceptible.

If no increase in force with increasing actuation is perceptible:

- Have the clutch checked by a specialist workshop, preferably an authorised BMW Motorrad retailer.

Checking the clutch play

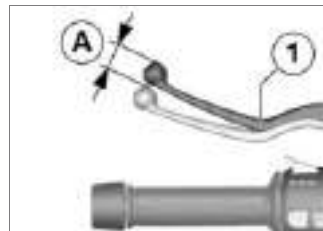

- Repeatedly pull clutch lever **1** tight against the grip.
- Pull clutch lever **1** gently until resistance is perceptible, observing the clutch play **A**.




Clutch cable play

3...5 mm (at the outer end of the handlebar lever, handlebars in straight-ahead position, engine cold)

- Clutch play is out of tolerance:
- Adjust the clutch play (165).

Adjusting clutch play

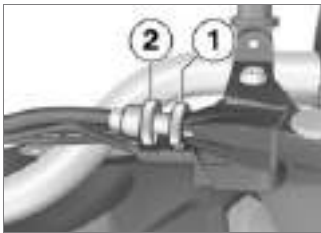

- Loosen lock nut **1**.
- To increase clutch play: Tighten adjusting screw **2** into the handlebar fitting.
- To reduce clutch play: Back off adjusting screw **2** in the handlebar fitting.



NOTICE

The distance between lock nut and nut (measured internally) must not exceed 14 mm.

Consult a specialist workshop, preferably an authorised BMW Motorrad Retailer, should it only be possible to set the correct clutch play by unscrewing further.◀

- Checking the clutch play (164).
- Tighten lock nut **1** while holding adjusting screw **2**.

Coolant

Checking coolant level

- Make sure the ground is level and firm and place the motorcycle on its stand.
- Turn the handlebars all the way to the right.



- Check the coolant level in expansion tank **1**. Viewing direction: from behind through opening in right-hand side trim panel.



Specified coolant level

Between MIN and MAX marks on the expansion tank (Engine cold)

If the coolant drops below the permitted level:

- Top up the coolant.

Topping up coolant



- Open cap **1** of expansion tank **2**.
- Using a suitable container such as a laboratory flask **3**, top up the coolant to the specified level.
- Check the coolant level (165).
- Close cap **1** of expansion tank **2**.

Tyres

Checking tyre pressures



WARNING

Incorrect tyre pressure

Impaired handling characteristics of the motorcycle, shorter useful tyre life

- Always check that the tyre pressures are correct.◀



WARNING



Tendency of valve inserts installed vertically to open by themselves at high riding speeds

Sudden loss of tyre pressure

- Install valve caps fitted with rubber sealing rings and tighten firmly.◀
- Make sure the ground is level and firm and place the motorcycle on its stand.

<https://www.motorcycle-manual.com/>

- Check tyre pressures against the data below.

 Tyre pressure, front
2.5 bar (tyre cold)
 Tyre pressure, rear
2.9 bar (tyre cold)

If tyre pressure is too low:

- Correct tyre pressure.

Rims and tyres

Checking rims

- Make sure the ground is level and firm and place the motorcycle on its stand.
- Visually inspect the rims for defects.
- Have damaged rims checked and, if necessary, replaced by a specialist workshop, preferably

an authorised BMW Motorrad retailer.

Checking tyre tread depth



WARNING

Riding with badly worn tyres

Risk of accident due to impaired handling

- If applicable, have the tyres changed in good time before they wear to the minimum tread depth permitted by law.◀
- Make sure the ground is level and firm and place the motorcycle on its stand.
- Measure the tyre tread depth in the main tread grooves with wear marks.



NOTICE

Wear indicators are built into the main profile grooves on each tyre. The tyre is worn out when the tyre tread has worn down

to the level of the marks. The locations of the marks are indicated on the edge of the tyre, e.g. by the letters TI, TWI or by an arrow.◀

If the tyre tread is worn to minimum:

- Replace tyre or tyres, as applicable.

Wheels

Tyre recommendation

For each size of tyre, BMW Motorrad tests and classifies as roadworthy certain makes. BMW Motorrad cannot assess the suitability or provide any guarantee of road safety for other tyres.

BMW Motorrad recommends using only tyres tested by BMW Motorrad.

Detailed information is available from your authorised

<https://www.motorcycle-manual.com/>

BMW Motorrad retailer or online from

bmw-motorrad.com

Effect of wheel size on chassis and suspension control systems

Wheel size is very important as a parameter for the chassis and suspension control systems ABS and ASC. In particular, the diameter and the width of a vehicle's wheels are programmed into the control unit and are fundamental to all calculations. Any change in these influencing variables, caused for example by a switch to wheels other than those installed ex-works, can have serious effects on the performance of the control systems.

The sensor rings are essential for correct road-speed calculation, and they too must match the motorcycle's control sys-

tems and consequently cannot be changed.

If you decide that you would like to fit non-standard wheels to your motorcycle, it is very important to consult a specialist workshop beforehand, preferably an authorised BMW Motorrad retailer. In some cases, the data programmed into the control units can be changed to suit the new wheel sizes.

Removing front wheel

- Make sure the ground is level and firm and place the motorcycle on its stand.



- Remove screw **1** and remove the wheel speed sensor from its bore.



- Disengage the cable for the wheel speed sensor from holding clips **2** and **3**.

<https://www.motorcycle-manual.com/>

- Remove mounting bolts **4** from the left and right brake calipers.



- Force brake pads **3** slightly apart by rocking brake caliper **4** back and forth against brake disc **5**.
- Mask off the parts of the wheel rim that could be scratched in the process of removing the brake calipers.



ATTENTION

Unwanted inward movement of the brake pads

Component damage on attempt to install the brake caliper.

cause brake pads have to be forced apart

- Do not operate the brakes with a brake caliper not correctly secured.◀

- Carefully pull the brake calipers back and out until clear of the brake discs.

- Place the motorcycle on a suitable auxiliary stand.
– with centre stand^{OE}

- Make sure the ground is level and firm and place the motorcycle on its centre stand.<

- Raise front of motorcycle until the front wheel can turn freely. Use a suitable front-wheel stand to lift the front of the motorcycle.

- Install the front-wheel stand (➡ 157).




- Remove the axle screw **2**.
- Loosen the left axle clamping screws **3**.



- Loosen the right axle clamping screws **1**.



- With the wheel suitably supported, remove axle **4**.
- Do not remove the grease from the axle.
- Roll the front wheel forward to remove.

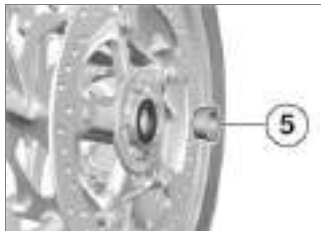

- Remove spacer bush **5** from the left-hand side of the wheel hub.

Installing front wheel



WARNING

Use of a non-standard wheel

Malfunction as part of ABS and ASC control interventions

- See the information on the effect of wheel size on the ABS and ASC systems at the start of this chapter.◀




ATTENTION

Tightening threaded fasteners to incorrect tightening torque

Damage, or threaded fasteners work loose

- Always have the security of the fasteners checked by a specialist workshop, preferably an authorised BMW Motorrad dealer.◀

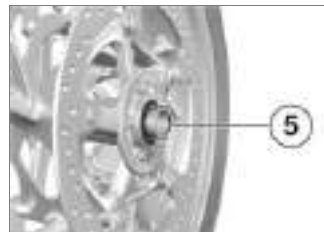

- Slip spacer bush **5**, turned with the collar facing out, on to the wheel hub on the left-hand

side



ATTENTION

Front wheel installed wrong way round

Risk of accident

- Note direction-of-rotation arrows on tyre or rim. ◀
- Roll the front wheel into position between the forks, making sure that the brake disc passes between the brake pads of the brake caliper on the left.



- Raise the front wheel and insert axle **4** until seated.

- Remove front-wheel stand and firmly compress front forks several times. Do not operate the brake lever in this process.
- Install the front-wheel stand (157).



- Install axle screw **2** and tighten to the specified torque. Counter-hold quick-release axle on the right-hand side.



Axle screw in front quick-release axle

50 Nm

- Tighten left-hand axle clamping screws **3** to the specified torque.



Clamp of quick-release axle

Tightening sequence: Tighten screws six times in alternate sequence

19 Nm



- Tighten right-hand axle clamping screws **1** to torque.




Clamp of quick-release axle

Tightening sequence: Tighten screws six times in alternate sequence

19 Nm

- Remove the front-wheel stand.
- Position the right-hand brake caliper on the brake disc.

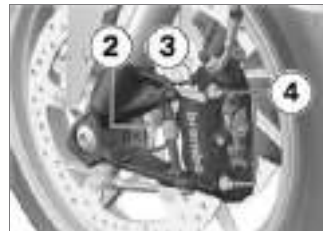

- Tighten mounting bolts **4** of the left and right brake calipers to the specified torque.



Brake caliper to telescopic fork

38 Nm

- Remove the adhesive tape from the wheel rim.



WARNING

Brake pads not lying against the brake disc

Risk of accident due to delayed braking effect.

- Before driving, check that the brakes respond without delay.◀
- Operate the brake several times until the brake pads are bedded.
- Seat the cable for the wheel-speed sensor in holding clips **2** and **3**.



- Insert the wheel speed sensor into the bore and tighten screw **1** to the specified torque.



Wheel-speed sensor,
front, to fork leg

Thread-locking compound:
micro-encapsulated

8 Nm

Removing rear wheel

- Make sure the ground is level and firm and place the motorcycle on a suitable auxiliary stand.

– with centre stand^{OE}

- Make sure the ground is level and firm and place the motorcycle on its centre stand.◀




- Press the brake caliper **1** against the brake disc **2**.
» Brake pistons are pushed back.

<https://www.motorcycle-manual.com/>



- Remove screw **3** and remove the wheel speed sensor from its bore.

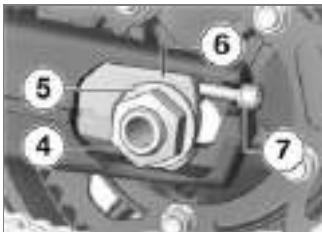

- Remove axle nut **4** and washer **5**.

- Back off adjusting screws **7** on both sides.
- Remove chain tensioner **6** and push the axle forward as far as it will go.



- Remove quick-release axle **7** and remove chain tensioner **8**.



- Roll the rear wheel as far forward as possible and disengage chain **9** from the sprocket.
- Roll the rear wheel back until it is clear of the swinging arm.



NOTICE

The sprocket and the spacer bushes on left and right are loose fits in the wheel. Make sure that these parts are not damaged or get lost on removal.◀

Installing rear wheel



WARNING

Use of a non-standard wheel

Malfunction as part of ABS and ASC control interventions

- See the information on the effect of wheel size on the ABS and ASC systems at the start of this chapter.◀



ATTENTION

Tightening threaded fasteners to incorrect tightening torque

Damage, or threaded fasteners work loose

- Always have the security of the fasteners checked by a specialist workshop, preferably an authorised BMW Motorrad dealer.◀

- Roll the rear wheel into the swinging arm, making sure that the brake disc passes between the brake pads.




- Roll the rear wheel as far forward as possible and loop chain **7** over the sprocket.



- Insert right chain tensioner **6** into the swinging arm, install quick-release axle **5** in brake caliper carrier **4** and rear wheel.
- Make sure that the axle fits into the recess of the chain tensioner.

<https://www.motorcycle-manual.com/>

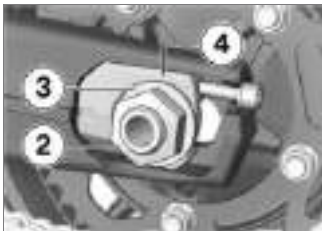

- Insert left-hand chain tensioner **4**.
- Install washer **3** and axle nut **2**, but do not tighten yet.

- without centre stand^{OE}
- Remove the auxiliary stand.<



- Insert the wheel speed sensor into the bore and tighten screw **1** to the specified torque.



Wheel-speed sensor,
rear, to brake caliper car-
rier

Thread-locking compound:
micro-encapsulated

8 Nm



WARNING

**Brake pads not lying against
the brake disc**

Risk of accident due to delayed
braking effect.

- Before driving, check that the
brakes respond without delay.<
- After completing work, operate
the brake several times until
the brake pads are bedded.
- Check chain sag (➡ 187).
- Adjust the chain sag (➡ 187).

Trim panel


Removing tank cover

- Remove the seat (➡ 90).




- Remove screws **1** on left and right.
- Remove screws **2**.
- Work tank cover **3** up to release it from the retaining lugs and remove.

Installing tank cover

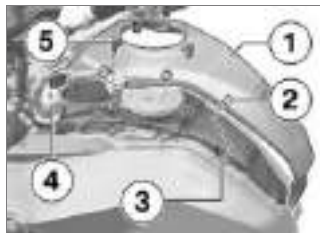

- Make sure that all six holders **2** engage in retaining lugs **3** and that all four connectors **5** engage in securing clips **4**.
- Install tank cover **1**.

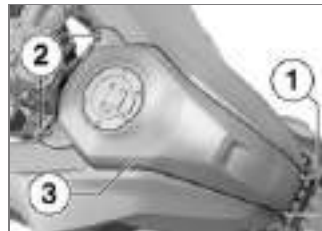

- Install screws **2**.
- Install screws **1**.
- Install the seat (■ 91).


Air filter

Removing air filter

- Remove the seat (■ 90).
- Remove the tank cover (■ 176).



- Unclip hose **1** from retaining lugs **2**.

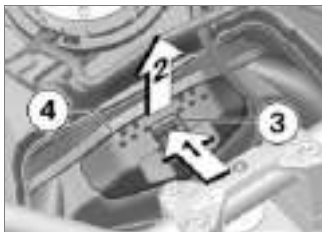

- To unlock, press button **3** in direction of arrow **1** and hold it in this position.

- Pull frame **4** in direction of arrow **2** out of the holder.




- Remove frame **4**.
- Remove air filter insert **5**.


Installing air filter



- Install air filter **5** in frame **4**.

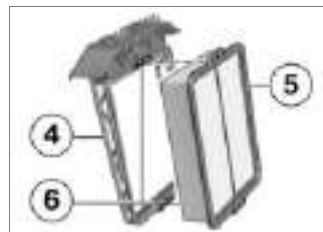

- Make sure that air filter **5** is correctly seated on lugs **6** on frame **4**.

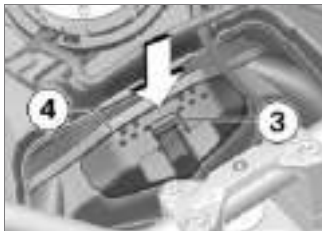

- Install the frame **4**.
- » Button **3** latches.



- Clip the hose **1** into the retaining lugs **2**.

Lighting

Replacing LEDs for low-beam and high-beam headlight

- LED low-beam headlight and LED high-beam headlight can be replaced only as a complete unit. Consult a specialist workshop, preferably an authorised BMW Motorrad retailer.

Replacing LED for side light

- The LED side light can be replaced only as a complete unit. Consult a specialist workshop, preferably an authorised BMW Motorrad retailer.

Replacing LEDs for brake light and tail light

- The LED rear light can be replaced only as a complete unit. Consult a specialist work-

shop, preferably an authorised BMW Motorrad retailer.

Replacing bulbs for front and rear turn indicators

- LED turn indicators can be replaced only as a complete unit. Consult a specialist workshop, preferably an authorised BMW Motorrad retailer.

Replacing auxiliary headlight

- with LED additional headlight^{OA}
- An auxiliary headlight can be replaced only as a complete unit. Consult a specialist workshop, preferably an authorised BMW Motorrad retailer.

<https://www.motorcycle-manual.com/>

Jump-starting



ATTENTION

Excessive current flowing when the motorcycle is jump-started

Wiring smoulders/ignites or damage to the on-board electronics

- If the motorcycle has to be jump-started connect the leads to the battery terminals; never attempt to jump-start the engine by connecting leads to the on-board socket.◀



ATTENTION

Contact between crocodile clips of jump leads and vehicle

Risk of short-circuit

- Use jump leads fitted with fully insulated crocodile clips at both ends.◀




ATTENTION

Jump-starting with a voltage greater than 12 V

Damage to the on-board electronics

- Make sure that the battery of the donor vehicle has a voltage rating of 12 V.◀
- Remove the seat (≡ 90).
- When jump-starting the engine, do not disconnect the battery from the on-board electrical system.

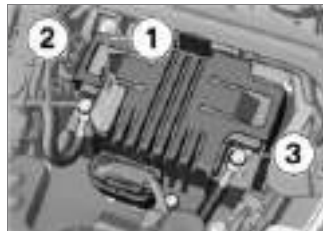

- Press in the lock and flip open positive terminal cover **1**.
- Begin by connecting one end of the red jump lead to the positive terminal of the discharged battery and the other end to the positive terminal of the donor battery (positive on this vehicle: position **2**).
- Then connect one end of the black jump lead to the negative terminal of the donor battery and the other end to the negative terminal of the discharged battery (negative on this vehicle: position **3**).



NOTICE

The spring-strut screw can be used as an alternative to the battery's negative terminal.◀

- Run the engine of the donor vehicle during jump-starting.
- Start the engine of the vehicle with the discharged battery in the usual way; if the engine does not start, wait a few minutes before repeating the attempt in order to protect the starter motor and the donor battery.
- Allow both engines to idle for a few minutes before disconnecting the jump leads.
- Disconnect the jump lead from the negative terminals first, then disconnect the second lead from the positive terminals.



NOTICE

Do not use proprietary start-assist sprays or other products to start the engine.◀

- Install the seat (91).

Battery

Maintenance instructions

Correct upkeep, recharging and storage will prolong the life of the battery and are essential if warranty claims are to be considered.

Compliance with the points below is important in order to maximise battery life:

- Keep the surface of the battery clean and dry.
- Do not open the battery.
- Do not top up with water.
- Be sure to read and comply with the instructions for charging the battery on the following pages.

– Do not turn the battery upside down.



ATTENTION

On-board electronics (e.g. clock) draining connected battery

Battery is deep-discharged; this voids the guarantee

- Connect a float charger to the battery if the motorcycle is to remain out of use for more than four weeks.◀



NOTICE

BMW Motorrad has developed a float charger specially designed for compatibility with the electronics of your motorcycle. Using this charger, you can keep the battery charged during long periods of disuse, without having

to disconnect the battery from the motorcycle's on-board systems. You can obtain additional information from your authorised BMW Motorrad dealer.◀

Charging battery when connected

- Disconnect devices plugged into the sockets.



ATTENTION

Charging the battery that is connected to the vehicle via the battery terminals

Damage to the on-board electronics

- Disconnect the battery at the battery terminals before charging.◀



ATTENTION

Unsuitable chargers connected to a socket

Damage to charger and vehicle electronics

- Use suitable BMW chargers. The suitable charger is available from your authorised BMW Motorrad dealer.◀



ATTENTION

Recharging a fully discharged battery via the power socket or extra socket

Damage to the vehicle electronics

- If a battery has discharged to the extent that it is completely flat (battery voltage less than 12 V, indicator lights and multifunction display remain off when the ignition is switched on) always charge the **disconnected** battery with the charger connected directly to the battery terminals.◀
- With the battery connected to

the vehicle's on-board electrical

system, charge via the power socket.



NOTICE

The motorcycle's on-board electronics know when the battery is fully charged. The on-board socket is switched off when this happens.◀

- Comply with the operating instructions of the charger.



NOTICE

If you are unable to charge the battery through the on-board socket, you may be using a charger that is not compatible with your motorcycle's electronics. In this case, directly charge the battery at the terminals of the battery that has been disconnected from the vehicle.◀

<https://www.motorcycle-manual.com/>

Charging battery when disconnected

- Charge the battery using a suitable charger.
- Comply with the operating instructions of the charger.
- After charging, disconnect the charger's terminal clips from the battery terminals.




NOTICE

The battery has to be recharged at regular intervals in the course of a lengthy period of disuse. See the instructions for caring for your battery. Always fully recharge the battery before restoring it to use.◀

Removing battery

- Remove the seat (90).
- Make sure the ground is level and firm and place the motorcycle on its stand.

- with anti-theft alarm (DWA)^{OE}
- If applicable, switch off the anti-theft alarm.◀
- Switch off the ignition.

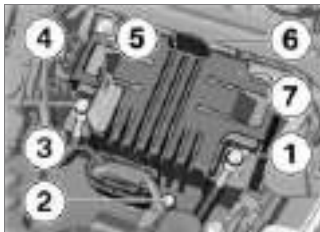

ATTENTION

Battery not disconnected in accordance with correct procedure

Risk of short-circuit

- Always proceed in compliance with the specified disconnection sequence.◀

- First disconnect negative battery cable **1**.
- Press in the lock and flip open positive terminal cover **5**.
- Then disconnect positive battery cable **4**.
- Disconnect connector **3**.
- Remove screw **2**.
- Push lock **6** to the rear.
- Remove battery holder **7**.
- Lift the battery up and out; work it slightly back and forth if it is difficult to remove.

Installing battery




NOTICE

If the vehicle has been disconnected from the battery for a significant time, the current date will have to be entered in the instrument cluster to guarantee correct operation of the service display.◀

<https://www.motorcycle-manual.com/>

- Switch off the ignition.
- Insert the battery into the battery compartment, with the positive terminal on the right in the direction of travel.

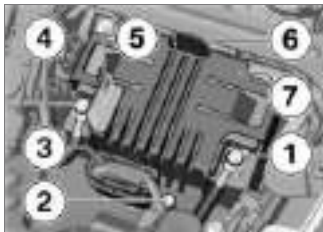

- Hold battery holder **7** in position. Holder **6** engages with an audible click.
- Install screw **2**.
- Connect connector **3**.
- Flip open positive terminal cover **5**.




ATTENTION

Battery not connected in accordance with correct procedure

Risk of short-circuit

- Always proceed in compliance with specified installation sequence.◀
- Connect positive battery cable **4**.
- Close positive terminal cover **5**.

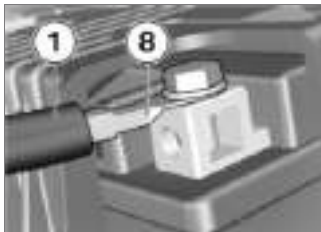

- Connect negative battery cable **1** aligned in direction **8**.

- with anti-theft alarm (DWA)^{OE}
- If applicable, switch on the anti-theft alarm.◀

- Install the seat (➡ 91).
- Set the clock (➡ 103).
- Set the date (➡ 102).

Fuses

Replacing main fuse




ATTENTION

Jumpering of blown fuses

Risk of short-circuit and fire

- Never attempt to jumper a blown fuse.
- Always replace a defective fuse with a new fuse of the same amperage.◀
- Switch off the ignition.
- Make sure the ground is level and firm and place the motorcycle on its stand.
- Remove the seat (➡ 90).

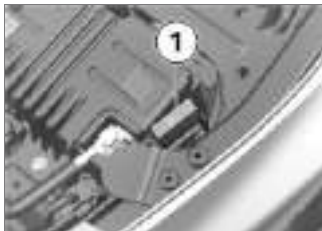

- Replace blown fuse **1**.



NOTICE

If fuse defects recur frequently have the electric circuits checked by a specialist workshop, preferably an authorised BMW Motorrad dealer.◀



Main fuse


40 A (Voltage regulator)

- Install the seat (91).

Replacing fuses



- Switch off the ignition.
- Remove the seat (90).
- Disconnect connector **1**.

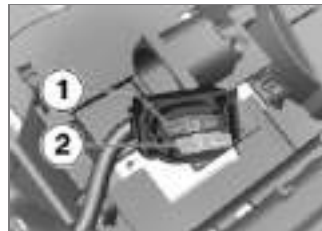

ATTENTION

Jumping of blown fuses

Risk of short-circuit and fire

- Never attempt to jumper a blown fuse.
- Always replace a defective fuse with a new fuse of the same amperage.◀
- Consult the fuse assignment diagram and replace blown fuse **1** or **2**.



NOTICE

If fuse defects recur frequently have the electric circuits checked

by a specialist workshop, preferably an authorised BMW Motorrad dealer.◀



Fuse box

10 A (Slot 1: instrument cluster, alarm system (DWA), ignition lock, diagnostic socket, coil main relay)

7.5 A (Slot 2: multifunction switch left, tyre pressure control (RDC))

- Re-connect the connector.
- Install the seat (➡ 91).

Diagnostic connector

Disengaging diagnostic socket




CAUTION

Incorrect procedure followed when loosening the

diagnostic connector for the on-board diagnosis

Motorcycle experiences malfunctions

- Only have the diagnostic connector loosened by a specialist workshop or other authorised persons during your next BMW Service appointment.
- Have the work performed by appropriately trained staff.
- Refer to the vehicle manufacturer specifications.◀
- Remove the seat (➡ 90).

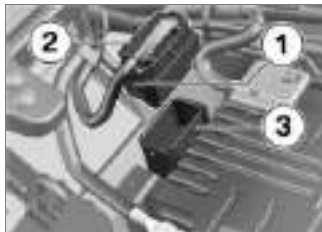


- Press locks **1** on both sides.

- Disengage diagnostic socket **2** from holder **3**.
- » The interface to the diagnosis and information system can be connected to the diagnostic connector **2**.

Securing diagnostic socket

- Disconnect the interface for the diagnosis and information system.

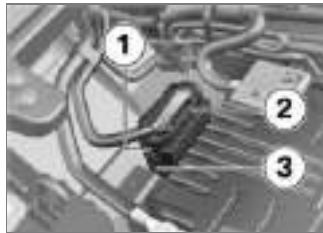

- Insert diagnostic socket **2** into holder **3**.
- » The locks **1** engage.
- » Install the seat (➡ 91).

Chain

Lubricating chain



ATTENTION

Inadequate cleaning and lubrication of the drive chain

Accelerated wear

- Clean and lubricate the drive chain at regular intervals.◀
- Lubricate the drive chain every 800 km at the latest. Lubricate the chain more frequently if the motorcycle is ridden in wet, dusty or dirty conditions.
- Switch the ignition off and select neutral.
- Clean the drive chain with a suitable cleaning product, dry it and apply chain lubricant.



NOTICE


BMW Motorrad recommends that you use the chain cleaning products and chain lubricants

obtainable from your authorised BMW Motorrad dealer.◀

- Wipe off excess lubricant.

Checking chain sag

- Make sure the ground is level and firm and place the motorcycle on its stand.
- Turn the rear wheel until it reaches the position with the lowest amount of chain sag.

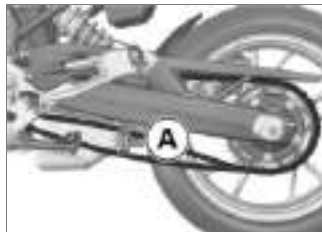

- Use a screwdriver to push the chain up and down and measure difference **A**.



Chain deflection

35...45 mm (Motorcycle with no weight applied, supported on its side stand)

– with low-slung^{OE}


30...40 mm (Motorcycle with no weight applied, supported on its side stand)◀

If measured value is outside permitted tolerance:

- Adjust the chain sag (➡ 187).

Adjusting chain sag

- Make sure the ground is level and firm and place the motorcycle on its stand.

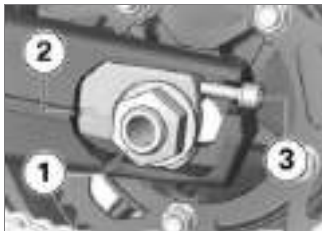

- Loosen the axle nut **1**.
- Use the adjusting screws **3** on left and right to adjust chain sag.
- Check chain sag (➡ 187).
- Make sure that scale readings **2** are the same on left and right.
- Tighten quick-release axle nut **1** to the specified torque.



Rear quick-release axle
in swinging arm

Thread-locking compound:
mechanical

100 Nm



- Check that the washer **4** is lying flat against the screw head **3**, correct as necessary.

Checking chain wear

Requirement


Chain tension is set correctly.

- Make sure the ground is level and firm and place the motorcycle on its stand.



- Check whether the third marker line **1** can be fully seen. Check chain length if the third marker line **1** can be fully seen:
 - Engage 1st gear.
 - Turn the rear wheel in the normal direction of travel until the chain is tensioned.
- Measure the length of the chain, rivet centre to rivet centre, over 10 rivets below the rear wheel swinging arm.
- Turn the rear wheel in the forward direction of travel and

measure chain length at 3 different points.

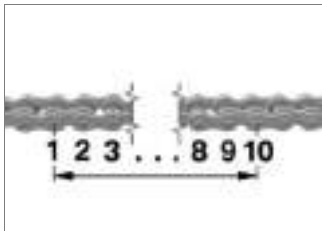


Permissible chain length

max 144 mm (measured
centre to centre over 10
pins, chain pulled taut)

If the chain has stretched to the maximum permissible length:

- Consult a specialist workshop, preferably an authorised BMW Motorrad retailer.

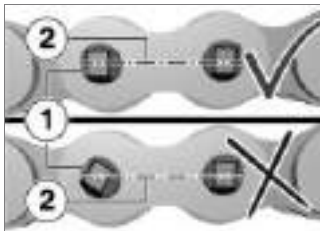

- Check whether a rivet head **1** has twisted out of line.

Rivet heads are parallel to the chain centreline **2**.

- Chain riveting is OK.

If one or more rivet heads have twisted out of line:

- Consult a specialist workshop, preferably an authorised BMW Motorrad retailer.

<https://www.motorcycle-manual.com/>

<https://www.motorcycle-manual.com/>

Accessories

General notes	192
Power sockets	192
Touring cases	193
Soft cases	195
Topcase	196
Navigation system	199

General notes



CAUTION

Use of other-make products

Safety risk

- BMW Motorrad cannot examine or test each product of outside origin to ensure that it can be used on or in connection with BMW vehicles without constituting a safety hazard. Country-specific official authorisation does not suffice as assurance. Tests conducted by these instances cannot make provision for all operating conditions experienced by BMW vehicles and, consequently, they are not sufficient in some circumstances.
- Use only parts and accessories approved by BMW for your vehicle. ◀

BMW has conducted extensive testing of the parts and ac-

cessory products to establish that they are safe, functional and suitable. Consequently, BMW accepts responsibility for the products. BMW accepts no liability whatsoever for parts and accessories that it has not approved.

All modifications must be in compliance with legal requirements. Make sure that the vehicle does not infringe the national road-vehicle construction and use regulations applicable in your country.

Your BMW Motorrad retailer can offer expert advice on the choice of genuine BMW parts, accessories and other products.

To find out more about accessories go to:

[bmw-motorrad.com/equipment](https://www.bmw-motorrad.com/equipment)

Power sockets

Notes on use of power sockets:

Automatic shutdown

Power sockets are shut down automatically under the following circumstances:

- If battery charge state is too low to maintain the motorcycle's start capability.
- If the maximum load capacity as stated in the technical data is exceeded.
- During the starting operation.

Operating electrical accessories

You can start using electrical accessories connected to the motorcycle's sockets only when the ignition is switched on. The accessory remains operational if the ignition is subsequently switched off. The power sockets are switched off approximately 2 minutes after the ignition is

switched off, in order to prevent overloading of the on-board electrical system.

Low-wattage electrical accessories might not be recognised by the vehicle's electronics. In such cases, power sockets are switched off very shortly after the ignition is turned off.

Cable routing


Note the following with regard to the routing of cables from sockets to items of electrical equipment:

- Make sure that cables do not impede the rider.
- Make sure that cables do not restrict the steering angle or obstruct handling.
- Make sure that cables cannot be trapped.

Touring cases

Opening touring cases

- with case holder, left/right^{OE}
- with touring cases^{OA}

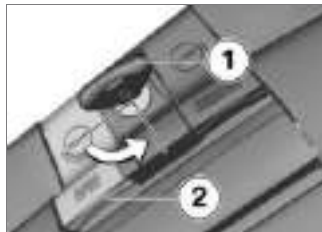

- Turn key **1** counter-clockwise to the **OPEN** position.
- Pull the grey release lever **2** (**OPEN**) all the way up and simultaneously open the case lid.

Closing touring cases

- with case holder, left/right^{OE}
- with touring cases^{OA}




- Turn key **1** counter-clockwise to the **OPEN** position.
- Press catches **2** of the case lid into latches **3**. Check that nothing is trapped between the lid and the case.
- Pull the grey release lever **4** (**OPEN**) all the way up and simultaneously close the case lid.
 - » The lid engages with an audible click.
- Turn spare key **1** in the case lock to the position in which it is parallel with the direction of travel and remove the key.

<https://www.motorcycle-manual.com/>

Removing touring cases

- with case holder, left/right^{OE}
- with touring cases^{OA}

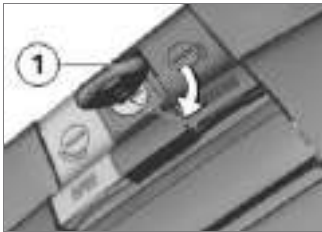


- Turn key **1** clockwise to the **RELEASE** position.



- Pull the black release lever **1** (**RELEASE**) up and simultaneously pull the case out.
- Then lift the case out of bottom mount **2**.

Installing touring cases

- with case holder, left/right^{OE}
- with touring cases^{OA}

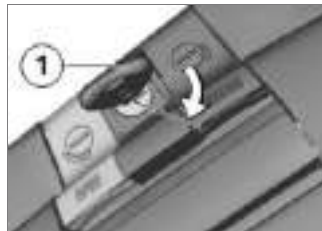

- Turn key **1** clockwise to the **RELEASE** position.



- Seat the case in bottom retaining lugs **1**, then pivot it until it is seated at mount **2**.
- Pull the black release lever **3** (**RELEASE**) up and simultan-

eously push the case into the upper fixture **2**.

- Push black release lever **3** (RELEASE) down until it engages.
- Turn the key in the case lock to the position in which it is parallel with the direction of travel and remove the key.

Maximum payload and maximum speed

- with case holder, left/right^{OE}
- with touring cases^{OA}

Note the maximum payload and the maximum permissible speed.



Maximum permissible speed for riding with cases fitted to the motorcycle

max 180 km/h




Payload per case

max 8 kg

Soft cases

Installing soft cases

- with case holder, left/right^{OE}
- with case^{OA}

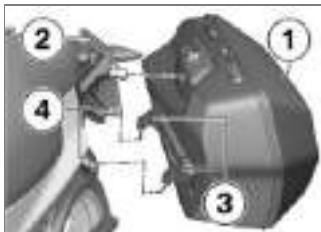

- Lower soft case **1** from above until retaining lugs **3** engage holders **4** and seat the case against latch **2**.




- Turn key **1** in the direction opposite to the direction of travel and push the soft case into the latch.
» Soft case snaps into engagement with the latch.

Removing soft cases

- with case holder, left/right^{OE}
- with case^{OA}



- Turn key **1** in the direction opposite to the direction of travel.

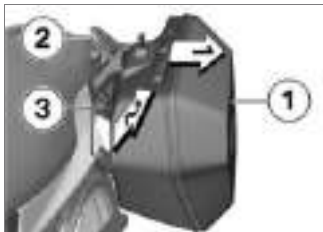

- Ease soft case **1** in direction of arrow **1** until it disengages from latch **2**. Then lift soft case **1** in direction of arrow **2**.

and disengage it from retaining lugs **3**.

Maximum payload and maximum speed

- with case holder, left/right^{OE}
- with case^{OA}

Note the maximum payload and the maximum permissible speed.



Maximum permissible speed for riding with cases fitted to the motorcycle

max 180 km/h



Payload per case

max 5 kg

Topcase

Opening topcase

- with topcase^{OA}
- with luggage carrier^{OA}



- Turn key **1** counter-clockwise in the topcase lock to the OPEN position.



- Push lock barrel **1** forward.
» Release lever **2** pops up.

- Pull release lever **2** all the way up and open the lid of the topcase.

Closing topcase

- with topcase^{OA}
- with luggage carrier^{OA}



- Pull release lever **1** up as far as it will go.
- Close the lid of the topcase and hold it down. Check that nothing is trapped between the lid and the case.

NOTICE

The topcase can also be closed when the lock is in the **LOCK** position. In this case, make sure that the key is not left inside the topcase.◀



- Push release lever **1** down until it engages.
- Turn the key in the topcase lock to the **LOCK** position and remove the key from the lock.

Removing topcase

- with topcase^{OA}
- with luggage carrier^{OA}



- Turn key **1** clockwise to the **RELEASE** position.
» The handle pops out.

<https://www.motorcycle-manual.com/>



- Pull carry handle **1** up as far as it will go.
- Lift the topcase at the rear and remove it from the luggage carrier.

Installing topcase

- with topcase^{OA}
- with luggage carrier^{OA}

- Pull the handle up as far as it will go.



- Hook the topcase into position on the luggage carrier. Make sure that hooks **1** are securely seated in corresponding keepers **2**.



- Push carry handle **1** down until it engages.
- Turn the key in the topcase lock to the **LOCK** position and remove the key from the lock.

Maximum payload and maximum speed

- with topcase^{OA}
- with luggage carrier^{OA}

Note the maximum payload and the maximum permissible speed.



Maximum speed for riding with a loaded topcase

max 180 km/h



Payload of topcase

max 5 kg

Navigation system

– with preparation for navigation system^{OE}

Securing navigation device



NOTICE

Navigation preparation is suitable from BMW Motorrad Navigator IV.◀



NOTICE

The latching system of the Mount Cradle is not designed to protect against theft.

Always remove the navigation system and stow it away safely as soon as you finish your ride.◀



- Turn ignition key **1** anti-clockwise.
- Pull the lock retainer **2** to the **left**.
- Press the lock **3** in.
 - » Mount Cradle is unlocked and cover **4** can be removed to the front in a swivelling motion.



- Insert the navigation device **1** at the bottom and swing it towards the rear in one rotational movement.
 - » The navigation device engages with an audible click.
- Push the lock retainer **2** all the way to the **right**.
 - » Lock **3** is locked.
- Turn ignition key **4** clockwise.
 - » The navigation device is secured and the ignition key can be removed.

<https://www.motorcycle-manual.com/>

Removing navigation device and installing cover



ATTENTION

Dust and dirt on the Mount Cradle contacts


Damaged contacts

- Always reinstall the cover as soon as you finish your ride.◀



- Turn ignition key **1** anti-clockwise.
- Pull the lock retainer **2** all the way to the **left**.
- » Lock **3** is unlocked.

- Push lock **3** all the way to the **left**.
- » The navigation device **4** is unlocked.
- Tilt the navigation device **4** downwards and remove.

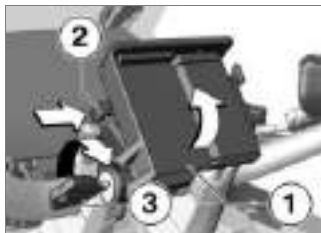

- Insert cover **1** in the lower section and swing to the top with a rotational movement.
- » The cover engages with an audible click.
- Push lock retainer **2** to the **right**.
- Turn ignition key **3** clockwise.
- » The cover **1** is secured.

Operating navigation system



NOTICE

The description below is based on the BMW Motorrad Navigator V and the BMW Motorrad Navigator VI. The BMW Motorrad Navigator IV does not support all the options described here.◀



NOTICE

Only the latest version of the BMW Motorrad communication system is supported. A software update of the BMW Motorrad communication system may be necessary. If this is the case, consult your authorised BMW Motorrad dealer.◀

If the BMW Motorrad Navigator is installed and the operating focus is switched to the Navigator (p. 99), some of its functions can

be operated without the rider removing a hand from the handlebars.



The navigation system is operated using Multi-Controller 1 and MENU rocker button 2.

Turning Multi-Controller 1 up and down

On the compass and Mediaplayer page: increase or decrease the volume of a Bluetooth-connected BMW Motorrad communication system.

In the BMW special menu: Select menu item.


Short-tilting Multi-Controller 1 to the left and right


Switch between the main pages of the Navigator:

- Map view
- Compass
- Mediaplayer
- BMW special menu
- My Motorcycle page

Long-tilting Multi-Controller 1 to the left and right

Activate certain functions on the Navigator display. An arrow to the right or to the left above the corresponding button area on the display indicates a function that can be activated in this way.

 Long-push to the right to activate this function.

 Long-push to the left to activate this function.

Pressing bottom section of MENU rocker button 2

Switch operating focus to Pure Ride view.

In detail, the following functions can be controlled:

Map view

- Turn up: Zoom in.
- Turn down: Zoom out.

BMW special menu

- Speak: Repeat most recent navigation announcement.
- Waypoint: Save current location as a favourite.
- Home: Starts navigation to home address (greyed if no

<https://www.motorcycle-manual.com/>

- home address has been defined).
- Mute: Switch automatic navigation announcements off or on (off: a crossed-out lips symbol appears in the top line of the display). "Speak" will still activate navigation announcements. All other acoustic outputs remain switched on.
 - Switch off display: Deactivate the display.
 - Dial home number: Dials the home phone number saved in the Navigator (not shown unless a telephone is connected).
 - Diversion: Activates the diversion function (not shown unless a route is active).
 - Skip: Skips the next waypoint (not shown unless the route has waypoints).

My Motorcycle

- Turn: Changes the number of data shown.

- Touch a data field on the display to open the menu for selecting data.
- The values available for selection depend on the optional extras installed on the vehicle.



NOTICE

The Mediaplayer function is only available when a Bluetooth device complying with the A2DP standard is used, for example a BMW Motorrad communication system.◀

Mediaplayer

- Long-push to the left: Play preceding track.
- Long-push to the right: Play next track.
- Turning increases or decreases the volume of a BMW Motorrad communication system connected via Bluetooth.

Indicator and warning messages



Indicator and warning messages from the motorcycle are indicated by an appropriate symbol **1** which appears at the top left in the map view.



NOTICE

If a BMW Motorrad communication system is connected, warnings are accompanied by an acoustic signal.◀

If there are two or more active warnings the number appears below the warning triangle.

Touching the warning triangle when more than one warning is active opens a list of all the warnings. Additional information appears as soon as a message is selected.



NOTICE

Detailed information cannot be displayed for all warnings. ◀

Special functions

Integration of the BMW Motorrad Navigator has produced a number of deviations from the descriptions in the operating instructions for the Navigator.

Reserve fuel level warning

The settings for the fuel gauge are not available, because the reserve warning is transmitted from the vehicle to the Navigator. Touch the message when it is active to view the locations of the nearest filling stations.

Time and date

The Navigator sends the time and date to the motorcycle. To accept the time in the TFT display, navigate to **Settings**, **System settings**, **Date and time** and activate the **GPS synchronisation** function.

Security settings

The BMW Motorrad Navigator V and the BMW Motorrad Navigator VI can be secured against unauthorised use with a four-digit PIN (Garmin Lock). If this function is activated, while the Navigator is cradled on the motorcycle and the ignition is switched on you are prompted to add the motorcycle to the list of secured vehicles. If you answer "Yes" at this prompt, the Navigator saves the VIN of this vehicle in its internal memory.

A maximum of five VINs can be saved in this way.

It is then no longer necessary to enter the PIN when the Navigator is switched on by ignition ON on any of these vehicles. If the Navigator is removed from the vehicle while switched on, a security prompt is issued asking for the PIN to be entered.

Screen brightness

Screen brightness is adjusted by the motorcycle while the unit is cradled. Manual input is not necessary.

Automatic setting can be switched off in the display settings for the Navigator if desired.

<https://www.motorcycle-manual.com/>

Care

Care products	206
Washing the vehicle	206
Cleaning easily damaged components.....	207
Care of paintwork	208
Paintwork preservation.....	208
Laying up the motorcycle	208
Restoring motorcycle to use	209

<https://www.motorcycle-manual.com/>

Care products

BMW Motorrad recommends that you use the cleaning and care products you can obtain from your authorised BMW Motorrad retailer. The substances in BMW Care Products have been tested in laboratories and in practice; they provide optimised care and protection for the materials used in your vehicle.



ATTENTION

Use of unsuitable cleaning and care products

Damage to vehicle parts

- Do not use solvents such as cellulose thinners, cold cleaners, fuel or the like, and do not use cleaning products that contain alcohol. ◀



ATTENTION

Use of strongly acidic or strongly alkaline cleaning agents

Damage to vehicle parts

- Dilute in accordance with the dilution ratio stated on the packaging of the cleaning agent.
- Do not use strongly acidic or strongly alkaline cleaning agents. ◀

Washing the vehicle

BMW Motorrad recommends that you use BMW insect remover to soften and wash off insects and stubborn dirt on painted parts prior to washing the vehicle.

To prevent stains, do not wash the motorcycle immediately after it has been exposed to strong

sunlight and do not wash it in the sun.

Remove dirt from the fork legs at regular intervals.

Make sure that the vehicle is washed frequently, especially during the winter months.

To remove road salt, clean the motorcycle with cold water immediately after every trip.



WARNING

Wet brake discs and brake pads after vehicle wash, after riding through water and in rainy conditions

Diminished braking effect, risk of accident

- Apply the brakes in good time to allow the friction and heat to dry the brake discs and brake pads. ◀

<https://www.motorcycle-manual.com/>



ATTENTION

Effect of road salt intensified by warm water

Corrosion

- Use only cold water to wash off road salt.◀



ATTENTION

Damage due to high water pressure from high pressure cleaners or steam cleaners

Corrosion or short circuit, damage to labels, seals, hydraulic brake system, electrical system and the motorcycle seat

- Exercise restraint when using a steam jet or high pressure cleaning equipment.◀

Cleaning easily damaged components

Plastics



ATTENTION

Use of unsuitable cleaning agents

Damage to plastic surfaces

- Do not use cleaning agents that contain alcohol, solvents or abrasives.
- Do not use insect-remover pads or cleaning pads with hard, scouring surfaces.◀

Trim panel components

Clean trim panel components with water and BMW Motorrad solvent cleaner.

Plastic windscreens and headlight lenses

Remove dirt and insects with a soft sponge and plenty of water.



NOTICE

Soften stubborn dirt and insects by covering the affected areas with a wet cloth.◀

TFT display

Clean the TFT display with warm water and washing-up liquid. Then dry it with a clean cloth, e.g. a paper towel.

Chrome

Carefully clean chrome parts with plenty of water and motorcycle cleaner from the BMW Motorrad Care Products range. This is particularly important to counter the effects of road salt. For an additional treatment, use BMW Motorrad metal polish.

Radiator

Clean the radiator regularly to prevent overheating of the engine due to inadequate cooling. For example, use a garden hose with low water pressure.



ATTENTION

Bending of radiator fins

Damage to radiator fins

- Take care not to bend the radiator fins when cleaning.◀

Rubber

Treat rubber components with water or BMW rubber-care products.



ATTENTION

Application of silicone sprays to rubber seals

Damage to the rubber seals

- Do not use silicone sprays or care products that contain silicon.◀

Care of paintwork

Washing the vehicle regularly will help counteract the long-term effects of substances that can damage the paint, especially if your vehicle is ridden in areas with high air pollution or natural sources of dirt, for example tree resin or pollen.

Remove particularly aggressive substances immediately, however, as otherwise the paint can be affected or become discoloured. Substances of this nature include spilt fuel, oil, grease, brake fluid and bird droppings. For this, we recommend BMW Motorrad solvent cleaner followed by BMW Motorrad gloss polish for preservation.

Marks on the paintwork are particularly easy to see after the motorcycle has been washed. Remove stains of this kind at the

ing benzine or petroleum spirit on a clean cloth or ball of cotton wool. BMW Motorrad recommends using BMW tar remover for removing specks of tar. Then apply preserving agent to the areas treated in this way.

Paintwork preservation

If water no longer rolls off the paint, the paint must be preserved.

For paint preservation, BMW Motorrad recommends the use of BMW Motorrad gloss polish or agents containing carnauba wax or synthetic wax.

Laying up the motorcycle

- Clean the motorcycle.
- Fill the motorcycle's fuel tank.
- Removing battery (🔋 183).

- Spray the brake and clutch lever pivots and the side-stand and centre-stand pivot mounts with a suitable lubricant.
- Coat bright metal and chrome-plated parts with an acid-free grease (e.g. Vaseline).
- Stand the motorcycle in a dry room in such a way that there is no load on either wheel (preferably using the front-wheel and rear-wheel stands from BMW Motorrad).

Restoring motorcycle to use

- Remove the protective wax coating.
- Clean the motorcycle.
- Installing battery (■ 183).
- Comply with checklist (■ 124).

<https://www.motorcycle-manual.com/>

<https://www.motorcycle-manual.com/>

Technical data

Troubleshooting chart	212	Anti-theft alarm	226
Threaded fasteners	214	Dimensions	227
Fuel F 900 XR (0K21)	216	Weights.....	228
Fuel F 900 XR A2 (0K41).....	217	Performance figures	228
Engine oil	217		
Engine F 900 XR (0K21).....	218		
Engine F 900 XR A2 (0K41)	219		
Clutch	220		
Transmission	220		
Final drive.....	221		
Frame	221		
Suspension	221		
Brakes	222		
Wheels and tyres	223		
Electrical system.....	225		

<https://www.motorcycle-manual.com/>

Troubleshooting chart

The engine does not start:

Possible cause	Rectification
Side stand extended and gear engaged	Select neutral or retract the side stand.
Gear engaged and clutch not disengaged	Select neutral or pull the clutch lever.
No fuel in tank	Refuel.
Battery flat	Charge the battery when connected.
Starter motor overheating protection has tripped. The starter motor can be operated for a limited time only.	Allow the starter motor to cool down for approximately 1 minute before trying again.

The Bluetooth connection is not established.

Possible cause	Rectification
The steps required for pairing were not carried out.	Check the necessary steps for pairing in the operating instructions for the communication system.
The communication system was not connected automatically despite successful pairing.	Switch off the helmet's communication system and reconnect it after a minute or two.
Too many Bluetooth devices are saved on the helmet.	All pairing entries on the helmet are deleted (see the communication system operating instructions).
There are other vehicles with Bluetooth-capable devices in the vicinity.	Avoid simultaneously pairing with more vehicles.

Bluetooth connection is interrupted.

Possible cause**Rectification**

The Bluetooth connection to the mobile device is interrupted.

Switch off energy saving mode.

The Bluetooth connection to the helmet is interrupted.

Switch off the helmet's communication system and reconnect it after a minute or two.

The volume in the helmet cannot be adjusted.

Switch off the helmet's communication system and reconnect it after a minute or two.

The telephone book is not displayed in the TFT display.

Possible cause**Rectification**

The phone book was not transmitted to the vehicle.

Confirm transmission of the phone data (114) when pairing the mobile device.

Active route guidance is not displayed in the TFT display.

Possible cause**Rectification**

Navigation from the BMW Motorrad Connected app was not transmitted.

The BMW Motorrad Connected app is opened on the connected mobile device prior to departure.

The route guidance cannot be started.

Secure the mobile device's data connection and check the map data on the mobile device.



Threaded fasteners

Front wheel	Value	Valid
Wheel-speed sensor, front, to fork leg		
M6 x 16, Replace screw micro-encapsulated	8 Nm	
Front-wheel cover to telescopic fork		
M5 x 14, Replace screw micro-encapsulated	2 Nm	
Brake caliper to telescopic fork		
M10 x 65	38 Nm	
Clamp of quick-release axle		
M8 x 35	Tightening sequence: Tighten screws six times in alternate sequence	
	19 Nm	
Axle screw in front quick-release axle		
M20 x 1.5	50 Nm	



<https://www.motorcycle-manual.com/>

Rear wheel	Value	Valid
Wheel-speed sensor, rear, to brake caliper carrier		
M6 x 16, Replace screw micro-encapsulated	8 Nm	
Rear quick-release axle in swinging arm		
M24 x 1.5 mechanical	100 Nm	
Mirror arm	Value	Valid
Mirror (locknut) to clamping piece		
M10 x 1.25	Left-hand thread, 22 Nm	
Adapter to clamping block		
M10 x 14 - 4.8	25 Nm	

Fuel F 900 XR (0K21)

Recommended fuel grade	 Premium unleaded (maximum 15% ethanol, E15)  95 ROZ/RON 90 AKI
– with regular-grade fuel, unleaded ^{OE}	Regular, unleaded (control is national-market-specific) (maximum 15% ethanol, E15) 91 ROZ/RON 87 AKI
Fuel tank capacity	approx. 15.5 l
Reserve fuel	approx. 3.5 l
Fuel consumption	4.2 l/100 km, according to WMTC
CO2 emission	99 g/km, according to WMTC
Exhaust emissions standard	EU 5

Fuel F 900 XR A2 (0K41)

Recommended fuel grade	 Regular unleaded (maximum 15% ethanol, E15)  91 ROZ/RON 87 AKI
Fuel tank capacity	approx. 15.5 l
Reserve fuel	approx. 3.5 l
Fuel consumption	4.2 l/100 km, according to WMTC
CO2 emission	99 g/km, according to WMTC
Exhaust emissions standard	EU 5

Engine oil

Engine oil, capacity	approx. 3.0 l, with filter change
Specification	SAE 5W-40, API SL / JASO MA2, Additives (e.g. molybdenum-based) are not permissible because they can attack coated components of the engine, BMW Motorrad recommends BMW Motorrad ADVANTEC Ultimate oil.

BMW recommends **ADVANTEC**
ORIGINAL BMW ENGINE OIL

<https://www.motorcycle-manual.com/>

Engine F 900 XR (0K21)

Engine number location	Crankcase top section, near oil/coolant heat exchanger
Engine type	A24A09A
Engine design	Water-cooled, 2-cylinder 4-stroke engine with four valves per cylinder operated via rocker arms, two overhead camshafts and dry-sump lubrication
Displacement	895 cm ³
Cylinder bore	86 mm
Piston stroke	77 mm
Compression ratio	13.1:1

<https://www.motorcycle-manual.com/>

Nominal capacity	77 kW, at engine speed: 8500 min ⁻¹
– with regular-grade fuel, unleaded ^{OE}	73 kW, (control is national-market-specific) at engine speed: 8500 min ⁻¹
Torque	92 Nm, at engine speed: 6500 min ⁻¹
– with regular-grade fuel, unleaded ^{OE}	88 Nm, (control is national-market-specific) at engine speed: 6750 min ⁻¹
Maximum engine speed	max 9000 min ⁻¹
Idle speed	1250±50 min ⁻¹ , Engine at regular operating temperature

Engine F 900 XR A2 (0K41)

Engine number location	Crankcase top section, near oil/coolant heat exchanger
Engine type	A24A09A
Engine design	Water-cooled, 2-cylinder 4-stroke engine with four valves per cylinder operated via rocker arms, two overhead camshafts and dry-sump lubrication
Displacement	895 cm ³
Cylinder bore	86 mm
Piston stroke	77 mm
Compression ratio	13.1:1

<https://www.motorcycle-manual.com/>

Nominal capacity	70 kW, at engine speed: 8000 min ⁻¹
– with power reduction to 35 kW ^{OE}	35 kW, at engine speed: 6500 min ⁻¹
Torque	88 Nm, at engine speed: 6750 min ⁻¹
– with power reduction to 35 kW ^{OE}	66 Nm, at engine speed: 4500 min ⁻¹
Maximum engine speed	max 9000 min ⁻¹
Idle speed	1250 ^{±50} min ⁻¹ , Engine at regular operating temperature

Clutch

Clutch type	Multi-plate oil-bath (anti-hopping)
-------------	-------------------------------------

Transmission

Type of transmission	Claw-shifted 6-speed manual gearbox integrated in the engine housing
Gearbox transmission ratios	1.821, Primary transmission ratio 1:2.833, 1st gear 1:2.067, 2nd gear 1:1.600, 3rd gear 1:1.308, 4th gear 1:1.103, 5th gear 1:0.968, 6th gear

Final drive

Type of final drive	Chain drive
Type of rear suspension	Cast aluminium double swinging arm
Final drive, number of teeth (Pinion / sprocket)	17/44

Frame

Frame type	Monocoque bridge-type steel frame
Type plate location	Frame, front left at steering head
Position of the vehicle identification number	Frame, front right

Suspension

Front wheel

Type of front suspension	Telescopic forks
Spring travel, front	170 mm, at front wheel
– with low-slung ^{OE}	150 mm, at front wheel

<https://www.motorcycle-manual.com/>

Rear wheel

Type of rear suspension	Cast aluminium double swinging arm
Type of rear-wheel suspension	Central spring strut with coil spring, adjustable rebound stage damping and spring preload
Spring travel at rear wheel	172 mm, at rear wheel
– with low-slung ^{OE}	152 mm, at rear wheel

Brakes**Front wheel**

Type of front brake	Hydraulically operated twin disc brake with 4-piston radial brake calipers and floating brake discs
Brake-pad material, front	Sintered metal
Brake disc thickness, front	4.5 mm, When new min 4.0 mm, Wear limit
Play of brake controls (Front brake)	0.7...1.7 mm, measured at piston

Rear wheel

Type of rear brake	Hydraulically actuated disc brake with 1-piston floating caliper and fixed disc
Brake-pad material, rear	Organic material
Brake disc thickness, rear	5.0 mm, When new min 4.5 mm, Wear limit
Blow-by clearance of the footbrake lever	2.0...3.0 mm, At right angles to direction of travel, between brake-light switch actuator and footrest plate

Wheels and tyres

Recommended tyre combinations	Your authorised BMW Motorrad retailer will be happy to supply an up-to-date list of the approved wheel/tyre combinations, or you can check the information posted on the bmw-motorrad.com website.
Speed category, front/rear tyres	W, required at least: 270 km/h

<https://www.motorcycle-manual.com/>

Front wheel

Front-wheel type	Aluminium cast wheel
Front-wheel rim size	3.50" x 17"
Tyre designation, front	120/70 ZR 17
Load index, front tyre	58
Permissible front-wheel imbalance	max 5 g

Rear wheel

Rear-wheel type	Aluminium cast wheel
Rear wheel rim size	5.50" x 17"
Tyre designation, rear	180/55 ZR 17
Load index, rear tyre	73
Permissible rear-wheel imbalance	max 45 g

Tyre pressure

Tyre pressure, front	2.5 bar, tyre cold
Tyre pressure, rear	2.9 bar, tyre cold

Electrical system

Main fuse	40 A, Voltage regulator
Fuse box	10 A, Slot 1: instrument cluster, alarm system (DWA), ignition lock, diagnostic socket, coil main relay 7.5 A, Slot 2: multifunction switch left, tyre pressure control (RDC)
Electrical rating of on-board sockets	5 A

Battery

Battery type	AGM battery (Absorbent Glass Mat)
Battery rated voltage	12 V
Battery rated capacity	12 Ah
Battery type (For Keyless Ride radio-operated key)	
– with Keyless Ride ^{OE}	CR 2032

Spark plugs

Spark plugs, manufacturer and designation	NGK LMAR8J-9E
---	---------------

<https://www.motorcycle-manual.com/>

Lighting

Bulb for high-beam headlight	LED
Bulbs for the low-beam headlight	LED
Bulb for parking light	LED
Bulb for tail light/brake light	LED
Light source for the number plate light	Integrated in rear light
Bulbs for turn indicators	LED
Bulbs for flashing turn indicators, rear	LED

Anti-theft alarm

Activation time on arming	approx. 30 s
Alarm duration	approx. 26 s
Battery type	CR 123 A

<https://www.motorcycle-manual.com/>

Dimensions

Length of motorcycle	2160 mm, over rear wheel
– with low-slung ^{OE}	2150 mm, over rear wheel
Height of motorcycle	1320...1420 mm, over windscreen, at DIN unladen weight
– with low-slung ^{OE}	1300...1400 mm, over windscreen, at DIN unladen weight
Width of motorcycle	860 mm, using the hand lever
Height of rider's seat	825 mm, without rider, at DIN unladen weight
– with seat, low ^{OE}	795 mm, without rider, at DIN unladen weight
– with low-slung ^{OE}	775 mm, without rider, at DIN unladen weight
Rider's inside-leg arc, heel to heel	1840 mm, without rider, at DIN unladen weight
– with seat, low ^{OE}	1795 mm, without rider, at DIN unladen weight
– with low-slung ^{OE}	1765 mm, without rider, at DIN unladen weight

<https://www.motorcycle-manual.com/>

Weights

Vehicle kerb weight	219 kg, DIN unladen weight, ready for road, 90 % load of fuel, without optional equipment
Wheel load, front, at unladen weight	112 kg
Permissible wheel load, front	max 180 kg
Wheel load, rear, at unladen weight	107 kg
Permissible wheel load, rear	max 300 kg
Permissible gross vehicle weight	438 kg
Maximum payload	219 kg

Performance figures

Top speed	>200 km/h
-----------	-----------

<https://www.motorcycle-manual.com/>

Service

BMW Motorrad Service	230
BMW Motorrad Service history	230
BMW Motorrad mobility services	231
Maintenance work	231
Maintenance schedule	235
Maintenance confirmations	236
Service confirmations	250

<https://www.motorcycle-manual.com/>

BMW Motorrad Service

BMW Motorrad has an extensive network of dealerships in place to look after you and your motorcycle in more than 100 countries. Authorised BMW Motorrad dealerships have the technical information and the technical know-how to carry out reliably all maintenance and repair work on your BMW.

You can locate the nearest authorised BMW Motorrad retailer by visiting our website:

bmw-motorrad.com



WARNING

Maintenance and repair work not in compliance with correct procedure

Risk of accident due to consequential damage

- BMW Motorrad recommends having work of this nature carried out on the vehicle by a

specialist workshop, preferably an authorised BMW Motorrad dealer. ◀

In order to help ensure that your BMW is always in optimum condition, BMW Motorrad recommends compliance with the maintenance intervals specified for your motorcycle. Have all maintenance and repair work carried out confirmed in the "Service" chapter in this manual. Evidence of regular maintenance is essential for generous treatment of claims submitted after the warranty period has expired.

Your authorised BMW Motorrad retailer can provide information on BMW services and the work undertaken as part of each service.

BMW Motorrad Service history

Entries

Maintenance work that has been carried out is entered in the proof of maintenance. The entries are like a Service Booklet and provide proof of regular maintenance.

When an entry is made in the electronic service booklet of the vehicle, service-relevant data is saved in the central IT systems of BMW AG, Munich, Germany. If there is a change in vehicle owner, the data saved in the electronic service booklet can also be viewed by the new vehicle owner. A BMW Motorrad retailer or a specialist workshop can also view data that is stored in the electronic service booklet.

<https://www.motorcycle-manual.com/>

Objection

The vehicle owner can object to entries being made by the BMW Motorrad retailer or a specialist workshop in the electronic service booklet along with the corresponding storage of data in the vehicle and transfer of data to the vehicle manufacturer for the period of time that they are the vehicle owner. In this instance, no entry is made in the electronic service booklet of the vehicle.

BMW Motorrad mobility services

As owner of a new BMW vehicle, in circumstances in which assistance is required you can benefit from the protection afforded by the various BMW Motorrad mobility services (e.g. Mobile Service, breakdown service, vehicle recovery service).

Ask your authorised BMW Motorrad retailer for information about the mobility services offered.

Maintenance work

BMW pre-delivery check

Your authorised BMW Motorrad retailer conducts the BMW pre-delivery check before handing over the vehicle to you.

BMW Running-in Check

The BMW running-in check has to be performed when the motorcycle has covered between 500 km and 1200 km.

BMW Service

The BMW Service is carried out once a year; the extent of servicing can vary, depending on the age of the vehicle and the distance it has covered. Your authorised BMW Motorrad retailer

has been carried out and enters the date when the next service will be due.

Riders who cover long distances in a year might have to bring in their vehicles for service before the next scheduled date. It is to allow for these cases that a maximum odometer reading is entered as well in the confirmation of service. Servicing has to be brought forward if this odometer reading is reached before the next scheduled date for the service.

The service-due indicator in the display reminds you about one month or 1000 km in advance when the time for a service is approaching, on the basis of the programmed values.

<https://www.motorcycle-manual.com/>

To find out more about service go to:

[bmw-motorrad.com/service](https://www.bmw-motorrad.com/service)

The maintenance tasks necessary for your vehicle are set out in the maintenance schedule below:

<https://www.motorcycle-manual.com/>

<https://www.motorcycle-manual.com/>

	500 - 1200 km 300 - 750 mls	10 000 km 6 000 mls	20 000 km 12 000 mls	30 000 km 18 000 mls	40 000 km 24 000 mls	50 000 km 30 000 mls	60 000 km 36 000 mls	70 000 km 42 000 mls	80 000 km 48 000 mls	90 000 km 54 000 mls	100 000 km 60 000 mls	12 months	24 months
①	X												
②												X	
③		X	X	X	X	X	X	X	X	X	X	X ^a	
④			X		X		X		X		X		
⑤			X		X		X		X		X		
⑥			X		X		X		X		X		
⑦				X			X			X			
⑧												X ^b	X ^b

<https://www.motorcycle-manual.com/>

Maintenance schedule

- 1** BMW Running-in check
- 2** BMW Service, standard scope
- 3** Engine-oil change, with filter
- 4** Check valve clearances
- 5** Replace all spark plugs
- 6** Replace air filter insert
- 7** Oil change in the telescopic forks
- 8** Change brake fluid, entire system
 - ^a annually or every 10000 km (whichever comes first)
 - ^b for the first time after one year, then every two years

<https://www.motorcycle-manual.com/>

Maintenance confirmations

BMW Service standard scope

The repair tasks in the BMW Service standard scope are listed below. The actual scope of maintenance work applicable for your vehicle may vary.

- Performing vehicle test with BMW Motorrad diagnosis system
- Checking coolant level
- Checking/adjusting clutch play
- Checking front brake pads and brake discs for wear
- Checking rear brake pads and brake disc for wear
- Checking brake fluid level, front and rear
- Visual inspection of the brake lines, brake hoses and connections
- Checking tyre pressure and tread depth
- Checking and lubricating the chain drive
- Check the side stand's ease of movement
- Checking ease of movement of the centre stand
- Checking steering-head bearing
- Check lighting and signalling system
- Function test, engine start suppression
- Final inspection and check for road safety
- Setting service date and remaining distance with BMW Motorrad diagnosis system
- Checking battery state of charge
- Confirming BMW service in on-board literature

<https://www.motorcycle-manual.com/>

BMW pre-delivery check

carried out

at _____

Stamp, signature

BMW Running-in Check

carried out

at _____

Odometer reading _____

Next service

at the latest

at _____

or, when reached earlier

Odometer reading _____

Stamp, signature

BMW Service

carried out

at _____

Odometer reading _____

Next service

at the latest

at _____

or, when reached earlier

Odometer reading _____

Work performed

BMW Service

Yes

No

☐☐

Oil change, engine, with filter

☐☐

Checking valve clearance

☐☐

Renewing all spark plugs

☐☐

Renewing air cleaner insert

☐☐

Oil change in telescopic front forks

☐☐

Change brake fluid in entire system

☐☐

Notes

Stamp, signature

<https://www.motorcycle-manual.com/>

BMW Service

carried out

at _____

Odometer reading _____

Next service

at the latest

at _____

or, when reached earlier

Odometer reading _____

Work performed

BMW Service

Yes

No

☐☐

Oil change, engine, with filter

☐☐

Checking valve clearance

☐☐

Renewing all spark plugs

☐☐

Renewing air cleaner insert

☐☐

Oil change in telescopic front forks

☐☐

Change brake fluid in entire system

☐☐

Notes

Stamp, signature

BMW Service

carried out

at _____

Odometer reading _____

Next service

at the latest

at _____

or, when reached earlier

Odometer reading _____

Work performed

BMW Service

Yes

No

☐☐

Oil change, engine, with filter

☐☐

Checking valve clearance

☐☐

Renewing all spark plugs

☐☐

Renewing air cleaner insert

☐☐

Oil change in telescopic front forks

☐☐

Change brake fluid in entire system

☐☐

Notes

Stamp, signature

<https://www.motorcycle-manual.com/>

BMW Service

carried out

at _____

Odometer reading _____

Next service

at the latest

at _____

or, when reached earlier

Odometer reading _____

Work performed

BMW Service

Yes

No

☐☐

Oil change, engine, with filter

☐☐

Checking valve clearance

☐☐

Renewing all spark plugs

☐☐

Renewing air cleaner insert

☐☐

Oil change in telescopic front forks

☐☐

Change brake fluid in entire system

☐☐

Notes

Stamp, signature

BMW Service

carried out

at _____

Odometer reading _____

Next service

at the latest

at _____

or, when reached earlier

Odometer reading _____

Work performed

BMW Service

Yes

No

☐☐

Oil change, engine, with filter

☐☐

Checking valve clearance

☐☐

Renewing all spark plugs

☐☐

Renewing air cleaner insert

☐☐

Oil change in telescopic front forks

☐☐

Change brake fluid in entire system

☐☐

Notes

Stamp, signature

<https://www.motorcycle-manual.com/>

BMW Service

carried out

at _____

Odometer reading _____

Next service

at the latest

at _____

or, when reached earlier

Odometer reading _____

Work performed

BMW Service

Yes

No

☐☐

Oil change, engine, with filter

☐☐

Checking valve clearance

☐☐

Renewing all spark plugs

☐☐

Renewing air cleaner insert

☐☐

Oil change in telescopic front forks

☐☐

Change brake fluid in entire system

☐☐

Notes

Stamp, signature

BMW Service

carried out

at _____

Odometer reading _____

Next service

at the latest

at _____

or, when reached earlier

Odometer reading _____

Work performed

BMW Service

Yes

No

☐☐

Oil change, engine, with filter

☐☐

Checking valve clearance

☐☐

Renewing all spark plugs

☐☐

Renewing air cleaner insert

☐☐

Oil change in telescopic front forks

☐☐

Change brake fluid in entire system

☐☐

Notes

Stamp, signature

<https://www.motorcycle-manual.com/>

BMW Service

carried out

at _____

Odometer reading _____

Next service

at the latest

at _____

or, when reached earlier

Odometer reading _____

Work performed

BMW Service

Yes

No

☐☐

Oil change, engine, with filter

☐☐

Checking valve clearance

☐☐

Renewing all spark plugs

☐☐

Renewing air cleaner insert

☐☐

Oil change in telescopic front forks

☐☐

Change brake fluid in entire system

☐☐

Notes

Stamp, signature

BMW Service

carried out

at _____

Odometer reading _____

Next service

at the latest

at _____

or, when reached earlier

Odometer reading _____

Work performed

BMW Service

Yes

No

☐☐

Oil change, engine, with filter

☐☐

Checking valve clearance

☐☐

Renewing all spark plugs

☐☐

Renewing air cleaner insert

☐☐

Oil change in telescopic front forks

☐☐

Change brake fluid in entire system

☐☐

Notes

Stamp, signature

<https://www.motorcycle-manual.com/>

BMW Service

carried out

at _____

Odometer reading _____

Next service

at the latest

at _____

or, when reached earlier

Odometer reading _____

Work performed

BMW Service

Yes

No

☐☐

Oil change, engine, with filter

☐☐

Checking valve clearance

☐☐

Renewing all spark plugs

☐☐

Renewing air cleaner insert

☐☐

Oil change in telescopic front forks

☐☐

Change brake fluid in entire system

☐☐

Notes

Stamp, signature

BMW Service

carried out

at _____

Odometer reading _____

Next service

at the latest

at _____

or, when reached earlier

Odometer reading _____

Work performed

BMW Service

Yes

No

☐☐

Oil change, engine, with filter

☐☐

Checking valve clearance

☐☐

Renewing all spark plugs

☐☐

Renewing air cleaner insert

☐☐

Oil change in telescopic front forks

☐☐

Change brake fluid in entire system

☐☐

Notes

Stamp, signature

<https://www.motorcycle-manual.com/>

BMW Service

carried out

at _____

Odometer reading _____

Next service

at the latest

at _____

or, when reached earlier

Odometer reading _____

Work performed

BMW Service

Yes

No

☐☐

Oil change, engine, with filter

☐☐

Checking valve clearance

☐☐

Renewing all spark plugs

☐☐

Renewing air cleaner insert

☐☐

Oil change in telescopic front forks

☐☐

Change brake fluid in entire system

☐☐

Notes

Stamp, signature

Service confirmations

The table is used to verify maintenance and repair work as well as installed optional accessories and purchased special promotions.

Work performed	Odometer reading	Date

<https://www.motorcycle-manual.com/>

Work performed	Odometer reading	Date

<https://www.motorcycle-manual.com/>

<https://www.motorcycle-manual.com/>

Appendix

Declaration of conformity for electronic immobiliser 254

Certificate for electronic immobiliser 260

Declaration of conformity for Keyless Ride 262

Certificate for Keyless Ride 267

Declaration of conformity for tyre pressure monitoring (Reifendruck-Control, RDC) 269

Certificate for tyre pressure monitoring (Reifendruck-Control, RDC) 276

Declaration of conformity for TFT instrument cluster 277

Certificate for TFT instrument cluster 283

Declaration of conformity for intelligent emergency call 286

Declaration of conformity for anti-theft alarm system 292

<https://www.motorcycle-manual.com/>

Declaration of Conformity

Radio equipment electronic immobiliser (EWS)

Simplified EU Declaration of Conformity acc.
Radio Equipment Directive 2014/53/EU after
12.06.2016 and during transition period



Technical information

Frequency Band: 134 kHz
(Transponder: TMS37145 / TypeDST80,
TMS3705 Transponder Base Station IC)
Output Power : 50 dBμV/m

Manufacturer and Address

Manufacturer: BECOM Electronics GmbH
Adress: Technikerstraße 1, A-7442 Hochstraß

Austria

Hiermit erklärt BECOM Electronics GmbH, dass
der Funkanlagentyp EWS4 der Richtlinie
2014/53/EU entspricht.

Der vollständige Text der EU-
Konformitätserklärung ist unter der folgenden
Internetadresse verfügbar:
<http://www.becom.at/de/download/>

Belgium

Le soussigné, BECOM Electronics GmbH,
déclare que l'équipement radioélectrique du type
EWS4 est conforme à la directive 2014/53/UE.
Le texte complet de la déclaration UE de
conformité est disponible à l'adresse internet
suivante:<http://www.becom.at/de/download/>

Bulgaria

С настоящото BECOM Electronics GmbH
декларира, че този тип радиосъоръжение
EWS4 е в съответствие с Директива
2014/53/EC.

Цялостният текст на ЕС декларацията за
съответствие може да се намери на следния
интернет адрес:

<http://www.becom.at/de/download/>

<https://www.motorcycle-manual.com/>

Cyprus

Με την παρούσα ο/η BECOM Electronics GmbH, δηλώνει ότι ο ραδιοεξοπλισμός EWS4 πληροί την οδηγία 2014/53/ΕΕ.

Το πλήρες κείμενο της δήλωσης συμμόρφωσης ΕΕ διατίθεται στην ακόλουθη ιστοσελίδα στο διαδίκτυο: <http://www.becom.at/de/download/>

Czech Republic

Tímto BECOM Electronics GmbH prohlašuje, že typ rádiového zařízení EWS4 je v souladu se směrnicí 2014/53/EU.

Úplné znění EU prohlášení o shodě je k dispozici na této internetové adrese:

<http://www.becom.at/de/download/>

Germany

Hiermit erklärt BECOM Electronics GmbH, dass der Funkanlagentyp EWS4 der Richtlinie 2014/53/EU entspricht.

Der vollständige Text der EU-Konformitätserklärung ist unter der folgenden Internetadresse verfügbar:

<http://www.becom.at/de/download/>

Denmark

Hermed erklærer BECOM Electronics GmbH, at radioudstyrstypen EWS4 er i overensstemmelse med direktiv 2014/53/EU.

EU-overensstemmelseserklæringens fulde tekst kan findes på følgende internetadresse:

<http://www.becom.at/de/download/>

Estonia

Käesolevaga deklareerib BECOM Electronics GmbH, et käesolev raadioseadme tüüp EWS4 vastab direktiivi 2014/53/EL nõuetele.

ELi vastavusdeklaratsiooni täielik tekst on kättesaadav järgmisel internetiaadressil:

<http://www.becom.at/de/download/>

Spain

Por la presente, BECOM Electronics GmbH declara que el tipo de equipo radioeléctrico EWS4 es conforme con la Directiva 2014/53/UE.

El texto completo de la declaración UE de conformidad está disponible en la dirección Internet siguiente:

<http://www.becom.at/de/download/>

<https://www.motorcycle-manual.com/>

Finland

BECOM Electronics GmbH vakuuttaa, että radiolaitetyyppi EWS4 on direktiivin 2014/53/EU mukainen.

EU-vaatimustenmukaisuusvakuutuksen täysimittainen teksti on saatavilla seuraavassa internetosoitteessa:
<http://www.becom.at/de/download/>

France

Le soussigné, BECOM Electronics GmbH, déclare que l'équipement radioélectrique du type EWS4 est conforme à la directive 2014/53/UE. Le texte complet de la déclaration UE de conformité est disponible à l'adresse internet suivante: <http://www.becom.at/de/download/>

United Kingdom

Hereby, BECOM Electronics GmbH declares that the radio equipment type EWS4 is in compliance with Directive 2014/53/EU. The full text of the EU declaration of conformity is available at the following internet address:
<http://www.becom.at/de/download/>

Greece

Με την παρούσα ο/η BECOM Electronics GmbH, δηλώνει ότι ο ραδιοεξοπλισμός EWS4 πληροί την οδηγία 2014/53/ΕΕ. Το πλήρες κείμενο της δήλωσης συμμόρφωσης ΕΕ διατίθεται στην ακόλουθη ιστοσελίδα στο διαδίκτυο: <http://www.becom.at/de/download/>

Croatia

BECOM Electronics GmbH ovime izjavljuje da je radijska oprema tipa EWS4 u skladu s Direktivom 2014/53/EU. Cjeloviti tekst EU izjave o sukladnosti dostupan je na sljedećoj internetskoj adresi:
<http://www.becom.at/de/download/>

Hungary

BECOM Electronics GmbH igazolja, hogy a EWS4 típusú rádióberendezés megfelel a 2014/53/EU irányelvnek. Az EU-megfelelőségi nyilatkozat teljes szövege elérhető a következő internetes címen:
<http://www.becom.at/de/download/>

<https://www.motorcycle-manual.com/>

Ireland

Hereby, BECOM Electronics GmbH declares that the radio equipment type EWS4 is in compliance with Directive 2014/53/EU.

The full text of the EU declaration of conformity is available at the following internet address:

<http://www.becom.at/de/download/>

Italy

Il fabbricante, BECOM Electronics GmbH, dichiara che il tipo di apparecchiatura radio EWS4 è conforme alla direttiva 2014/53/UE.

Il testo completo della dichiarazione di conformità UE è disponibile al seguente indirizzo Internet:

<http://www.becom.at/de/download/>

Lithuania

Aš, BECOM Electronics GmbH, patvirtinu, kad radijo įrenginių tipas EWS4 atitinka Direktyvą 2014/53/ES.

Visas ES atitikties deklaracijos tekstas prieinamas šiuo interneto adresu:

<http://www.becom.at/de/download/>

Luxembourg

Le soussigné, BECOM Electronics GmbH, déclare que l'équipement radioélectrique du type EWS4 est conforme à la directive 2014/53/UE.

Le texte complet de la déclaration UE de conformité est disponible à l'adresse internet suivante:

<http://www.becom.at/de/download/>

Latvia

Ar šo BECOM Electronics GmbH deklarē, ka radioiekārta EWS4 atbilst Direktīvai 2014/53/ES. Pilns ES atbilstības deklarācijas teksts ir pieejams šādā interneta vietnē:

<http://www.becom.at/de/download/>

Malta

B'dan, BECOM Electronics GmbH, niddikjara li dan it-tip ta' tagħmir tar-radju EWS4 huwa konformi mad-Direttiva 2014/53/UE.

It-test kollu tad-dikjarazzjoni ta' konformità tal-UE huwa disponibbli f'dan l-indirizz tal-Internet li ġej:

<http://www.becom.at/de/download/>

<https://www.motorcycle-manual.com/>

Netherlands

Hierbij verklaar ik, BECOM Electronics GmbH, dat het type radioapparatuur EWS4 conform is met Richtlijn 2014/53/EU.

De volledige tekst van de EU-conformiteitsverklaring kan worden geraadpleegd op het volgende internetadres:
<http://www.becom.at/de/download/>

Poland

BECOM Electronics GmbH niniejszym oświadcza, że typ urządzenia radiowego EWS4 jest zgodny z dyrektywą 2014/53/EU.

Pełny tekst deklaracji zgodności UE jest dostępny pod następującym adresem internetowym:
<http://www.becom.at/de/download/>

Portugal

O(a) abaixo assinado(a) BECOM Electronics GmbH declara que o presente tipo de equipamento de rádio EWS4 está em conformidade com a Diretiva 2014/53/EU.

O texto integral da declaração de conformidade está disponível no seguinte endereço de Internet:
<http://www.becom.at/de/download/>

Romania

Prin prezenta, BECOM Electronics GmbH declară că tipul de echipamente radio EWS4 este în conformitate cu Directiva 2014/53/UE.

Textul integral al declarației UE de conformitate este disponibil la următoarea adresă internet:
<http://www.becom.at/de/download/>

Sweden

Härmed försäkrar BECOM Electronics GmbH att denna typ av radioutrustning EWS4 överensstämmer med direktiv 2014/53/EU. Den fullständiga texten till EU-försäkran om överensstämmelse finns på följande webbadress:
<http://www.becom.at/de/download/>

Slovenia

BECOM Electronics GmbH potrjuje, da je tip radijske opreme EWS4 skladen z Direktivo 2014/53/EU.

Celotno besedilo izjave EU o skladnosti je na voljo na naslednjem spletnem naslovu:
<http://www.becom.at/de/download/>

<https://www.motorcycle-manual.com/>

Slovakia

BECOM Electronics GmbH týmto vyhlasuje, že rádiové zariadenie typu EWS4 je v súlade so smernicou 2014/53/EÚ.

Úplné EÚ vyhlásenie o zhode je k dispozícii na tejto internetovej adrese:

<http://www.becom.at/de/download/>

<https://www.motorcycle-manual.com/>

FCC Approval

Ring aerial in the ignition switch



To verify the authorization of the ignition key, the electronic immobilizer exchanges information with the ignition key via the ring aerial.

This device complies with Part 15 of the FCC rules. Operation is subject to the following two conditions:

- (1) This device may not cause harmful interference, and
- (2) this device must accept any interference received, including interference that may cause undesired operation.



Any changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment. ◀

Approbation de la FCC

Antenne annulaire présente dans le commutateur d'allumage



Pour vérifier l'autorisation de la clé de contact, le système d'immobilisation électronique échange des

informations avec la clé de contact via l'antenne annulaire.

Le présent dispositif est conforme à la partie 15 des règles de la FCC. Son utilisation est soumise aux deux conditions suivantes :

- (1) Le dispositif ne doit pas produire d'interférences nuisibles, et
- (2) le dispositif doit pouvoir accepter toutes les interférences extérieures, y compris celles qui pourraient provoquer une activation inopportune.



Toute modification qui n'aurait pas été approuvée expressément par l'organisme responsable de l'homologation peut annuler l'autorisation accordée à l'utilisateur pour utiliser le dispositif. ◀

Declaration of Conformity

Radio equipment Keyless Ride

Simplified EU Declaration of Conformity acc.
Radio Equipment Directive 2014/53/EU after
12.06.2016 and during transition period



Technical information

Frequency band: 434,42 MHz
Maximum Transmission Power: 10 mW

Manufacturer and Address

Manufacturer:
Huf Hülsbeck & Fürst GmbH & Co. KG,
Steege Str. 17, 42551 Velbert, Germany

Bŭlgarski

С настоящото Huf Hülsbeck & Fürst GmbH & Co. KG декларира, че този тип радиосъоръжение HUF5750 е в съответствие с Директива 2014/53/EC.

Цялостният текст на ЕС декларацията за съответствие може да се намери на следния интернет адрес: <http://www.huf-group.com/eudoc/>

Česky

Tímto Huf Hülsbeck & Fürst GmbH & Co. KG prohlašuje, že typ rádiového zařízení HUF5750 je v souladu se směrnicí 2014/53/EU.

Úplné znění EU prohlášení o shodě je k dispozici na této internetové adrese: <http://www.huf-group.com/eudoc/>

Dansk

Hermed erklærer Huf Hülsbeck & Fürst GmbH & Co. KG, at radioudstyrstypen HUF5750 er i overensstemmelse med direktiv 2014/53/EU. EU-overensstemmelseserklæringens fulde tekst kan findes på følgende internetadresse: <http://www.huf-group.com/eudoc/>

<https://www.motorcycle-manual.com/>

Deutsch

Hiermit erklärt Huf Hülsbeck & Fürst GmbH & Co. KG, dass der Funkanlagentyp HUF5750 der Richtlinie 2014/53/EU entspricht.

Der vollständige Text der EU-Konformitätserklärung ist unter der folgenden Internetadresse verfügbar: <http://www.huf-group.com/eudoc>

Eesti

Käesolevaga deklareerib Huf Hülsbeck & Fürst GmbH & Co. KG, et käesolev raadioseadme tüüp HUF5750 vastab direktiivi 2014/53/EL nõuetele. ELi vastavusdeklaratsiooni täielik tekst on kättesaadav järgmisel internetiaadressil: <http://www.huf-group.com/eudoc>

English

Hereby, Huf Hülsbeck & Fürst GmbH & Co. KG declares that the radio equipment type HUF5750 is in compliance with Directive 2014/53/EU. The full text of the EU declaration of conformity is available at the following internet address: <http://www.huf-group.com/eudoc>

Español

Por la presente, Huf Hülsbeck & Fürst GmbH & Co. KG declara que el tipo de equipo radioeléctrico HUF5750 es conforme con la Directiva 2014/53/UE.

El texto completo de la declaración UE de conformidad está disponible en la dirección Internet siguiente: <http://www.huf-group.com/eudoc>

Français

Le soussigné, Huf Hülsbeck & Fürst GmbH & Co. KG, déclare que l'équipement radioélectrique du type HUF5750 est conforme à la directive 2014/53/UE.

Le texte complet de la déclaration UE de conformité est disponible à l'adresse internet suivante: <http://www.huf-group.com/eudoc>

Hrvatski

Huf Hülsbeck & Fürst GmbH & Co. KG ovime izjavljuje da je radijska oprema tipa HUF5750 u skladu s Direktivom 2014/53/EU.

Cjeloviti tekst EU izjave o sukladnosti dostupan je na sljedećoj internetskoj adresi: <http://www.huf-group.com/eudoc>

<https://www.motorcycle-manual.com/>

Íslenska

Hér Hülsbeck & Fürst GmbH & Co. KG að radióbúnaður gerð HUF5750 tilskipunar 2014/53/EB samsvarandi.

The fullur texti af ESB-samræmisýfirlýsing er í boði á eftirfarandi veffang: <http://www.huf-group.com/eudoc>

Italiano

Il fabbricante, Huf Hülsbeck & Fürst GmbH & Co. KG, dichiara che il tipo di apparecchiatura radio HUF5750 è conforme alla direttiva 2014/53/UE.

Il testo completo della dichiarazione di conformità UE è disponibile al seguente indirizzo Internet: <http://www.huf-group.com/eudoc>

Latviski

Ar šo Huf Hülsbeck & Fürst GmbH & Co. KG deklarē, ka radioiekārta HUF5750 atbilst Direktīvai 2014/53/ES.

Pilns ES atbilstības deklarācijas teksts ir pieejams šādā interneta vietnē: <http://www.huf-group.com/eudoc>

Lietuvių

Aš, Huf Hülsbeck & Fürst GmbH & Co. KG, patvirtinu, kad radijo įrenginių tipas HUF5750 atitinka Direktyvą 2014/53/ES.

Visas ES atitikties deklaracijos tekstas prieinamas šiuo interneto adresu: <http://www.huf-group.com/eudoc>

Magyar

Huf Hülsbeck & Fürst GmbH & Co. KG igazolja, hogy a HUF5750 típusú rádióberendezés megfelel a 2014/53/EU irányelvnek.

Az EU-megfelelőségi nyilatkozat teljes szövege elérhető a következő internetes címen: <http://www.huf-group.com/eudoc>

Malti

B'dan, Huf Hülsbeck & Fürst GmbH & Co. KG, niddikjara li dan it-tip ta' tagħmir tar-radju HUF5750 huwa konformi mad-Direttiva 2014/53/UE.

It-test kollu tad-dikjarazzjoni ta' konformità tal-UE huwa disponibbli f'dan l-indirizz tal-Internet li ġej: <http://www.huf-group.com/eudoc>

<https://www.motorcycle-manual.com/>

Nederlands

Hierbij verklaar ik, Huf Hülsbeck & Fürst GmbH & Co. KG, dat het type radioapparatuur HUF5750 conform is met Richtlijn 2014/53/EU.

De volledige tekst van de EU-conformiteitsverklaring kan worden geraadpleegd op het volgende internetadres: <http://www.huf-group.com/eudoc>

Norsk

Herved Huf Hülsbeck & Fürst GmbH & Co. KG at radioutstyrstype HUF5750 i direktiv 2014/53/EU tilsvarende.

Den fullstendige teksten i EU-erklæring er tilgjengelig på følgende internettadresse: <http://www.huf-group.com/eudoc>

Polski

Huf Hülsbeck & Fürst GmbH & Co. KG niniejszym oświadcza, że typ urządzenia radiowego HUF5750 jest zgodny z dyrektywą 2014/53/UE. Pełny tekst deklaracji zgodności UE jest dostępny pod następującym adresem internetowym: <http://www.huf-group.com/eudoc>

Português

O(a) abaixo assinado(a) Huf Hülsbeck & Fürst GmbH & Co. KG declara que o presente tipo de equipamento de rádio HUF5750 está em conformidade com a Diretiva 2014/53/UE. O texto integral da declaração de conformidade está disponível no seguinte endereço de Internet: <http://www.huf-group.com/eudoc>

Românesc

Prin prezenta, Huf Hülsbeck & Fürst GmbH & Co. KG declară că tipul de echipamente radio HUF5750 este în conformitate cu Directiva 2014/53/UE.

Textul integral al declarației UE de conformitate este disponibil la următoarea adresă internet: <http://www.huf-group.com/eudoc>

Slovensko

Huf Hülsbeck & Fürst GmbH & Co. KG potrjuje, da je tip radijske opreme HUF5750 skladen z Direktivo 2014/53/EU.

Celotno besedilo izjave EU o skladnosti je na voljo na naslednjem spletnem naslovu: <http://www.huf-group.com/eudoc>

<https://www.motorcycle-manual.com/>

Slovensky

Huf Hülsbeck & Fürst GmbH & Co. KG týmto vyhlasuje, že rádiové zariadenie typu HUF5750 je v súlade so smernicou 2014/53/EÚ.

Úplné EÚ vyhlásenie o zhode je k dispozícii na tejto internetovej adrese: <http://www.huf-group.com/eudoc>

Suomi

Huf Hülsbeck & Fürst GmbH & Co. KG vakuuttaa, että radiolaitetyyppi HUF5750 on direktiivin 2014/53/EU mukainen.

EU-vaatimustenmukaisuusvakuutuksen täysimittainen teksti on saatavilla seuraavassa internetosoitteessa: <http://www.huf-group.com/eudoc>

Svenska

Härmed försäkrar Huf Hülsbeck & Fürst GmbH & Co. KG att denna typ av radioutrustning HUF5750 överensstämmer med direktiv 2014/53/EU.

Den fullständiga texten till EU-försäkran om överensstämmelse finns på följande webbadress: <http://www.huf-group.com/eudoc>

Ελληνική

Με την παρούσα ο/η Huf Hülsbeck & Fürst, δηλώνει ότι ο ραδιοεξοπλισμός HUF5750 πληροί την οδηγία 2014/53/ΕΕ.

Το πλήρες κείμενο της δήλωσης συμμόρφωσης ΕΕ διατίθεται στην ακόλουθη ιστοσελίδα στο διαδίκτυο: <http://www.huf-group.com/eudoc>

<https://www.motorcycle-manual.com/>

Certifications

BMW Keyless Ride ID Device



USA, Canada

Product name: BMW Keyless Ride ID Device
FCC ID: YGOHUF5750
IC: 4008C-HUF5750

Canada:

Operation is subject to the following two conditions:

- (1) This device may not cause harmful interference, and
- (2) this device must accept any interference received, including interference that may cause undesired operation.

USA:

This device complies with Part 15 of the FCC rules. Operation is subject to the following two conditions:

- (1) This device may not cause harmful interference, and
- (2) this device must accept any interference received, including interference that may cause undesired operation.



Any changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

<https://www.motorcycle-manual.com/>

Declaration Of Conformity

We declare under our responsibility that the product

BMW Keyless Ride ID Device (Model: HUF5750)

complies with the appropriate essential requirements of the article 3 of the R&TIE and the other relevant provisions, when used for its intended purpose. Applied Standards:

1. Health and safety requirements contained in article 3 (1) a)
 - EN 60950-1:2006+A11:2009+A1:2010+A12:2011; Information technology equipment- Safety
2. Protection requirements with respect to electromagnetic compatibility article 3 (1) b)
 - EN 301 489-1 (V1.9.2, 09/2011), Electromagnetic compatibility and radio spectrum matters (ERM); Electromagnetic compatibility (EMC) standard for radio equipment and services; Part 1: Common technical requirements
 - EN 301 489-3 (V1.4.1, 08/2002) Electromagnetic compatibility and radio spectrum matters (ERM); Electromagnetic compatibility (EMC) standard for radio equipment and services; Part 3: Specific conditions for short range devices (SRD) operating on frequencies between 9 kHz and 40 GHz
3. Means of the efficient use of the radio frequency spectrum article 3 (2)
 - EN 300 220-1 & -2 (V2.4.1, 05/2012), electromagnetic compatibility and radio spectrum matters (ERM); Short range devices (SRD); Radio equipment to be used in the 25 MHz to 1000 MHz frequency range with power levels ranging up to 500 mW;
Part 1: Technical characteristics and test methods.
Part 2: Harmonized EN covering essential requirements under article 3.2 of the R&TIE directive

The product is labeled with the CE marking: **CE**

Velbert, October 15th, 2013



Benjamin A. Müller
Product Development Systems
Car Access and Immobilization – Electronics
Huf Hülshock & Furst GmbH & Co. KG
Steege Straße 47, D-42331 Velbert

<https://www.motorcycle-manual.com/>

Declaration of Conformity

Radio equipment tyre pressure control (RDC)

Simplified EU Declaration of Conformity acc. Radio Equipment Directive 2014/53/EU after 12.06.2016 and during transition period



Technical information

Frequency Band: 433.895 - 433.945 MHz
Output Power : <10 mW e.r.p.

Manufacturer and Address

Manufacturer: Schrader Electronics Ltd.
Address: Technology Park, Antrim,
N. Ireland BT41 1QS, United Kingdom

Austria

Hiermit erklärt Schrader Electronics Ltd., dass der Funkanlagentyp BC5A4 der Richtlinie 2014/53/EU entspricht.
Der vollständige Text der EU-Konformitätserklärung ist unter der folgenden Internetadresse verfügbar:
http://www.tpmseuroshop.com/documents/declaration_conformities

Belgium

Le soussigné, Schrader Electronics Ltd., déclare que l'équipement radioélectrique du type BC5A4 est conforme à la directive 2014/53/UE.
Le texte complet de la déclaration UE de conformité est disponible à l'adresse internet suivante:
http://www.tpmseuroshop.com/documents/declaration_conformities

<https://www.motorcycle-manual.com/>

Bulgaria

С настоящото Schrader Electronics Ltd. декларира, че този тип радиосъоръжение BC5A4 е в съответствие с Директива 2014/53/EU.

Цялостният текст на ЕС декларацията за съответствие може да се намери на следния интернет адрес:
http://www.tpmseuroshop.com/documents/declaration_conformities

Cyprus

Με την παρούσα ο/η Schrader Electronics Ltd., δηλώνει ότι ο ραδιοεξοπλισμός BC5A4 πληροί την οδηγία 2014/53/EE.

Το πλήρες κείμενο της δήλωσης συμμόρφωσης EE διατίθεται στην ακόλουθη ιστοσελίδα στο διαδίκτυο:
http://www.tpmseuroshop.com/documents/declaration_conformities

Czech Republic

Tímto Schrader Electronics Ltd. prohlašuje, že typ rádiového zařízení BC5A4 je v souladu se směrnicí 2014/53/EU.

Úplné znění EU prohlášení o shodě je k dispozici na této internetové adrese:
http://www.tpmseuroshop.com/documents/declaration_conformities

Germany

Hiermit erklärt Schrader Electronics Ltd., dass der Funkanlagentyp BC5A4 der Richtlinie 2014/53/EU entspricht.
Der vollständige Text der EU-Konformitätserklärung ist unter der folgenden Internetadresse verfügbar:
http://www.tpmseuroshop.com/documents/declaration_conformities

Denmark

Hermed erklærer Schrader Electronics Ltd., at radioudstyrstypen BC5A4 er i overensstemmelse med direktiv 2014/53/EU.
EU-overensstemmelseserklæringens fulde tekst kan findes på følgende internetadresse:
http://www.tpmseuroshop.com/documents/declaration_conformities

<https://www.motorcycle-manual.com/>

Estonia

Käesolevaga deklareerib Schrader Electronics Ltd., et käesolev raadioseadme tüüp BC5A4 vastab direktiivi 2014/53/EL nõuetele.

ELi vastavusdeklaratsiooni täielik tekst on kättesaadav järgmisel internetiaadressil:
http://www.tpmseuroshop.com/documents/declaration_conformities

Spain

Por la presente, Schrader Electronics Ltd. declara que el tipo de equipo radioeléctrico BC5A4 es conforme con la Directiva 2014/53/UE.

El texto completo de la declaración UE de conformidad está disponible en la dirección Internet siguiente:
http://www.tpmseuroshop.com/documents/declaration_conformities

Finland

Schrader Electronics Ltd. vakuuttaa, että radiolaitetyyppi BC5A4 on direktiivin 2014/53/EU mukainen.

EU-vaatimustenmukaisuusvakuutuksen täysimittainen teksti on saatavilla seuraavassa internetosoitteessa:
http://www.tpmseuroshop.com/documents/declaration_conformities

France

Le soussigné, Schrader Electronics Ltd., déclare que l'équipement radioélectrique du type BC5A4 est conforme à la directive 2014/53/UE.

Le texte complet de la déclaration UE de conformité est disponible à l'adresse internet suivante:
http://www.tpmseuroshop.com/documents/declaration_conformities

United Kingdom

Hereby, Schrader Electronics Ltd. declares that the radio equipment type BC5A4 is in compliance with Directive 2014/53/EU.

The full text of the EU declaration of conformity is available at the following internet address:

http://www.tpmseuroshop.com/documents/declaration_conformities

Greece

Με την παρούσα ο/η Schrader Electronics Ltd., δηλώνει ότι ο ραδιοεξοπλισμός BC5A4 πληροί την οδηγία 2014/53/ΕΕ.

Το πλήρες κείμενο της δήλωσης συμμόρφωσης ΕΕ διατίθεται στην ακόλουθη ιστοσελίδα στο διαδίκτυο:

http://www.tpmseuroshop.com/documents/declaration_conformities

Croatia

Schrader Electronics Ltd. ovime izjavljuje da je radijska oprema tipa BC5A4 u skladu s Direktivom 2014/53/EU.

Cjeloviti tekst EU izjave o sukladnosti dostupan je na sljedećoj internetskoj adresi:

http://www.tpmseuroshop.com/documents/declaration_conformities

Hungary

Schrader Electronics Ltd. igazolja, hogy a BC5A4 típusú rádióberendezés megfelel a 2014/53/EU irányelvnek.

Az EU-megfelelőségi nyilatkozat teljes szövege elérhető a következő internetes címen:

http://www.tpmseuroshop.com/documents/declaration_conformities

Ireland

Hereby, Schrader Electronics Ltd. declares that the radio equipment type BC5A4 is in compliance with Directive 2014/53/EU.

The full text of the EU declaration of conformity is available at the following internet address:

http://www.tpmseuroshop.com/documents/declaration_conformities

<https://www.motorcycle-manual.com/>

Italy

Il fabbricante, Schrader Electronics Ltd., dichiara che il tipo di apparecchiatura radio BC5A4 è conforme alla direttiva 2014/53/UE.

Il testo completo della dichiarazione di conformità UE è disponibile al seguente indirizzo Internet:

http://www.tpmseuroshop.com/documents/declaration_conformities

Lithuania

Aš, Schrader Electronics Ltd., patvirtinu, kad radijo įrenginių tipas BC5A4 atitinka Direktyvą 2014/53/ES.

Visas ES atitikties deklaracijos teksto prieinamas šiuo interneto adresu:

http://www.tpmseuroshop.com/documents/declaration_conformities

Luxembourg

Le soussigné, Schrader Electronics Ltd., déclare que l'équipement radioélectrique du type BC5A4 est conforme à la directive 2014/53/UE.

Le texte complet de la déclaration UE de conformité est disponible à l'adresse internet suivante:

http://www.tpmseuroshop.com/documents/declaration_conformities

Latvia

Ar šo Schrader Electronics Ltd. deklarē, ka radioiekārta BC5A4 atbilst Direktīvai 2014/53/ES. Pilns ES atbilstības deklarācijas teksts ir pieejams šādā interneta vietnē:

http://www.tpmseuroshop.com/documents/declaration_conformities

Malta

B'dan, Schrader Electronics Ltd., niddikjara li dan it-tip ta' tagħmir tar-radju BC5A4 huwa konformi mad-Direttiva 2014/53/UE.

It-test kollu tad-dikjarazzjoni ta' konformità tal-UE huwa disponibbli f'dan l-indirizz tal-Internet li ġej: http://www.tpmseuroshop.com/documents/declaration_conformities

<https://www.motorcycle-manual.com/>

Netherlands

Hierbij verklaar ik, Schrader Electronics Ltd., dat het type radioapparatuur BC5A4 conform is met Richtlijn 2014/53/EU.

De volledige tekst van de EU-conformiteitsverklaring kan worden geraadpleegd op het volgende internetadres:
http://www.tpmseuroshop.com/documents/declaration_conformities

Poland

Schrader Electronics Ltd. niniejszym oświadcza, że typ urządzenia radiowego BC5A4 jest zgodny z dyrektywą 2014/53/UE.

Pełny tekst deklaracji zgodności UE jest dostępny pod następującym adresem internetowym:
http://www.tpmseuroshop.com/documents/declaration_conformities

Portugal

O(a) abaixo assinado(a) Schrader Electronics Ltd. declara que o presente tipo de equipamento de rádio BC5A4 está em conformidade com a Diretiva 2014/53/UE.

O texto integral da declaração de conformidade está disponível no seguinte endereço de Internet:
http://www.tpmseuroshop.com/documents/declaration_conformities

Romania

Prin prezenta, Schrader Electronics Ltd. declară că tipul de echipamente radio BC5A4 este în conformitate cu Directiva 2014/53/UE.
Textul integral al declarației UE de conformitate este disponibil la următoarea adresă internet:
http://www.tpmseuroshop.com/documents/declaration_conformities

Sweden

Härmed försäkrar Schrader Electronics Ltd. att denna typ av radioutrustning BC5A4 överensstämmer med direktiv 2014/53/EU.
Den fullständiga texten till EU-försäkran om överensstämmelse finns på följande webbadress:
http://www.tpmseuroshop.com/documents/declaration_conformities

<https://www.motorcycle-manual.com/>

Slovenia

Schrader Electronics Ltd. potrjuje, da je tip radijske opreme BC5A4 skladen z Direktivo 2014/53/EU.

Celotno besedilo izjave EU o skladnosti je na voljo na naslednjem spletnem naslovu:

http://www.tpmseuroshop.com/documents/declaration_conformities

Slovakia

Schrader Electronics Ltd. týmto vyhlasuje, že rádiové zariadenie typu BC5A4 je v súlade so smernicou 2014/53/EÚ.

Úplné EÚ vyhlásenie o zhode je k dispozícii na tejto internetovej adrese:

http://www.tpmseuroshop.com/documents/declaration_conformities

<https://www.motorcycle-manual.com/>

Certification Tire Pressure Control (TPC)

FCC ID: MRXBC54MA4
IC: 2546A-BC54MA4

FCC ID: MRXBC5A4
IC: 2546A-BC5A4

This device complies with Part 15 of the FCC Rules and with Industry Canada license-exempt RSS standard(s).

Operation is subject to the following two conditions:

- (1) This device may not cause harmful interference, and
- (2) This device must accept any interference received, including interference that may cause undesired operation.

Le présent appareil est conforme aux CNR d'Industrie Canada applicables aux appareils radio exempts de licence. L'exploitation est autorisée aux deux conditions suivantes:

- (1) l'appareil ne doit pas produire de brouillage, et
- (2) l'utilisateur de l'appareil doit accepter tout brouillage radioélectrique subi, même si le brouillage est susceptible d'en compromettre le fonctionnement.

WARNING: Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment. The term "IC:" before the radio certification number only signifies that Industry Canada technical specifications were met.

<https://www.motorcycle-manual.com/>

Declaration of Conformity

Radio equipment TFT instrument cluster

Simplified EU Declaration of Conformity acc.
Radio Equipment Directive 2014/53/EU after
12.06.2016 and during transition period



Technical information

BT operating frq. Range: 2402 – 2480 MHz
BT version: 4.2 (no BTLE)
BT output power: < 4 dBm
WLAN operating frq. Range: 2412 – 2462 MHz
WLAN standards: IEEE 802.11 b/g/n
WLAN output power: < 20 dBm

Manufacturer and Address

Manufacturer:
Robert Bosch Car Multimedia GmbH
Address: Robert Bosch Str. 200,
31139 Hildesheim, GERMANY

Austria

Hiermit erklärt Robert Bosch Car Multimedia GmbH, dass der Funkanlagentyp ICC6.5in der Richtlinie 2014/53/EU entspricht.
Der vollständige Text der EU-Konformitätserklärung ist unter der folgenden Internetadresse verfügbar: <http://cert.bosch-carmultimedia.net>

Belgium

Le soussigné, Robert Bosch Car Multimedia GmbH, déclare que l'équipement radioélectrique du type ICC6.5in est conforme à la directive 2014/53/UE.
Le texte complet de la déclaration UE de conformité est disponible à l'adresse internet suivante: <http://cert.bosch-carmultimedia.net>

<https://www.motorcycle-manual.com/>

Bulgaria

С настоящото Robert Bosch Car Multimedia GmbH декларира, че този тип радиосъоръжение ICC6.5in е в съответствие с Директива 2014/53/ЕС. Цялостният текст на ЕС декларацията за съответствие може да се намери на следния интернет адрес: <http://cert.bosch-carmultimedia.net>

Cyprus

Με την παρούσα ο/η Robert Bosch Car Multimedia GmbH, δηλώνει ότι ο ραδιοεξοπλισμός ICC6.5in πληροί την οδηγία 2014/53/ΕΕ. Το πλήρες κείμενο της δήλωσης συμμόρφωσης ΕΕ διατίθεται στην ακόλουθη ιστοσελίδα στο διαδίκτυο: <http://cert.bosch-carmultimedia.net>

Czech Republic

Tímto Robert Bosch Car Multimedia GmbH prohlašuje, že typ rádiového zařízení ICC6.5in je v souladu se směrnicí 2014/53/EU. Úplné znění EU prohlášení o shodě je k dispozici na této internetové adrese: <http://cert.bosch-carmultimedia.net>

Germany

Hiermit erklärt Robert Bosch Car Multimedia GmbH, dass der Funkanlagentyp ICC6.5in der Richtlinie 2014/53/EU entspricht. Der vollständige Text der EU-Konformitätserklärung ist unter der folgenden Internetadresse verfügbar: <http://cert.bosch-carmultimedia.net/>

Denmark

Hermed erklærer Robert Bosch Car Multimedia GmbH, at radioudstyrstypen ICC6.5in er i overensstemmelse med direktiv 2014/53/EU. EU-overensstemmelseserklæringens fulde tekst kan findes på følgende internetadresse: <http://cert.bosch-carmultimedia.net>

Estonia

Käesolevaga deklareerib Robert Bosch Car Multimedia GmbH, et käesolev raadioseadme tüüp ICC6.5in vastab direktiivi 2014/53/EL nõuetele. ELi vastavusdeklaratsiooni täielik tekst on kättesaadav järgmisel internetiaadressil: <http://cert.bosch-carmultimedia.net>

<https://www.motorcycle-manual.com/>

Spain

Por la presente, Robert Bosch Car Multimedia GmbH declara que el tipo de equipo radioeléctrico ICC6.5in es conforme con la Directiva 2014/53/UE.

El texto completo de la declaración UE de conformidad está disponible en la dirección Internet siguiente: <http://cert.bosch-carmultimedia.net>

Finland

Robert Bosch Car Multimedia GmbH vakuuttaa, että radiolaitetyyppi ICC6.5in on direktiivin 2014/53/EU mukainen.

EU-vaatimustenmukaisuusvakuutuksen täysimittainen teksti on saatavilla seuraavassa internetosoitteessa: <http://cert.bosch-carmultimedia.net>

France

Le soussigné, Robert Bosch Car Multimedia GmbH, déclare que l'équipement radioélectrique du type ICC6.5in est conforme à la directive 2014/53/UE.

Le texte complet de la déclaration UE de conformité est disponible à l'adresse internet suivante: <http://cert.bosch-carmultimedia.net>

United Kingdom

Hereby, Robert Bosch Car Multimedia GmbH declares that the radio equipment type ICC6.5in is in compliance with Directive 2014/53/EU.

The full text of the EU declaration of conformity is available at the following internet address: <http://cert.bosch-carmultimedia.net>

Greece

Με την παρούσα ο/η Robert Bosch Car Multimedia GmbH, δηλώνει ότι ο ραδιοεξοπλισμός ICC6.5in πληροί την οδηγία 2014/53/ΕΕ.

Το πλήρες κείμενο της δήλωσης συμμόρφωσης ΕΕ διατίθεται στην ακόλουθη ιστοσελίδα στο διαδίκτυο: <http://cert.bosch-carmultimedia.net>

<https://www.motorcycle-manual.com/>

Croatia

Robert Bosch Car Multimedia GmbH ovime izjavljuje da je radijska oprema tipa ICC6.5in u skladu s Direktivom 2014/53/EU.

Cjeloviti tekst EU izjave o sukladnosti dostupan je na sljedećoj internetskoj adresi: <http://cert.bosch-carmultimedia.net>

Hungary

Robert Bosch Car Multimedia GmbH igazolja, hogy a ICC6.5in típusú rádióberendezés megfelel a 2014/53/EU irányelvnek.

Az EU-megfelelőségi nyilatkozat teljes szövege elérhető a következő internetes címen: <http://cert.bosch-carmultimedia.net>

Ireland

Hereby, Robert Bosch Car Multimedia GmbH declares that the radio equipment type ICC6.5in is in compliance with Directive 2014/53/EU. The full text of the EU declaration of conformity is available at the following internet address: <http://cert.bosch-carmultimedia.net>

Italy

Il fabbricante, Robert Bosch Car Multimedia GmbH, dichiara che il tipo di apparecchiatura radio ICC6.5in è conforme alla direttiva 2014/53/UE.

Il testo completo della dichiarazione di conformità UE è disponibile al seguente indirizzo Internet: <http://cert.bosch-carmultimedia.net>

Lithuania

Aš, Robert Bosch Car Multimedia GmbH, patvirtinu, kad radijo įrenginių tipas ICC6.5in atitinka Direktyvą 2014/53/ES.

Visas ES atitikties deklaracijos tekstas prieinamas šiuo interneto adresu: <http://cert.bosch-carmultimedia.net>

Luxembourg

Le soussigné, Robert Bosch Car Multimedia GmbH, déclare que l'équipement radioélectrique du type ICC6.5in est conforme à la directive 2014/53/UE.

Le texte complet de la déclaration UE de conformité est disponible à l'adresse internet suivante: <http://cert.bosch-carmultimedia.net>

<https://www.motorcycle-manual.com/>

Latvia

Ar šo Robert Bosch Car Multimedia GmbH deklarē, ka radioiekārta ICC6.5in atbilst Direktīvai 2014/53/ES.

Pilns ES atbilstības deklarācijas teksts ir pieejams šādā interneta vietnē: <http://cert.bosch-carmultimedia.net>

Malta

B'dan, Robert Bosch Car Multimedia GmbH, niddikjara li dan it-tip ta' tagħmir tar-radju ICC6.5in huwa konformi mad-Direttiva 2014/53/UE.

It-test kollu tad-dikjarazzjoni ta' konformità tal-UE huwa disponibbli f'dan l-indirizz tal-Internet li ġej: <http://cert.bosch-carmultimedia.net>

Netherlands

Hierbij verklaar ik, Robert Bosch Car Multimedia GmbH, dat het type radioapparatuur ICC6.5in conform is met Richtlijn 2014/53/EU.

De volledige tekst van de EU-conformiteitsverklaring kan worden geraadpleegd op het volgende internetadres: <http://cert.bosch-carmultimedia.net>

Poland

Robert Bosch Car Multimedia GmbH niniejszym oświadcza, że typ urządzenia radiowego ICC6.5in jest zgodny z dyrektywą 2014/53/UE.

Pełny tekst deklaracji zgodności UE jest dostępny pod następującym adresem internetowym: <http://cert.bosch-carmultimedia.net>

Portugal

O(a) abaixo assinado(a) Robert Bosch Car Multimedia GmbH declara que o presente tipo de equipamento de rádio ICC6.5in está em conformidade com a Diretiva 2014/53/UE.

O texto integral da declaração de conformidade está disponível no seguinte endereço de Internet: <http://cert.bosch-carmultimedia.net>

Romania

Prin prezenta, Robert Bosch Car Multimedia GmbH declară că tipul de echipamente radio ICC6.5in este în conformitate cu Directiva 2014/53/UE.

Textul integral al declarației UE de conformitate este disponibil la următoarea adresă internet: <http://cert.bosch-carmultimedia.net>

<https://www.motorcycle-manual.com/>

Sweden

Härmed försäkrar Robert Bosch Car Multimedia GmbH att denna typ av radioutrustning ICC6.5in överensstämmer med direktiv 2014/53/EU.
Den fullständiga texten till EU-försäkran om överensstämmelse finns på följande webbadress:
<http://cert.bosch-carmultimedia.net>

Slovenia

Robert Bosch Car Multimedia GmbH potrjuje, da je tip radijske opreme ICC6.5in skladen z Direktivo 2014/53/EU.
Celotno besedilo izjave EU o skladnosti je na voljo na naslednjem spletnem naslovu:
<http://cert.bosch-carmultimedia.net>

Slovakia

Robert Bosch Car Multimedia GmbH týmto vyhlasuje, že rádiové zariadenie typu ICC6.5in je v súlade so smernicou 2014/53/EU.
Úplné EÚ vyhlásenie o zhode je k dispozícii na tejto internetovej adrese: <http://cert.bosch-carmultimedia.net>

<https://www.motorcycle-manual.com/>

Declaration of Conformity

Radio equipment TFT instrument cluster

For all Countries without EU

Technical information

BT operating frq. Range: 2402 – 2480 MHz

BT version: 4.2 (no BTLE)

BT output power: < 4 dBm

WLAN operating frq. Range: 2412 – 2462 MHz

WLAN standards: IEEE 802.11 b/g/n

WLAN output power: < 20 dBm

Manufacturer and Address

Manufacturer:

Robert Bosch Car Multimedia GmbH

Address: Robert Bosch Str. 200,

31139 Hildesheim, GERMANY

Turkey

Robert Bosch Car Multimedia GmbH, ICC6.5in

tipi telsiz sisteminin 2014/53/EU

nolu yönetmeliğe uygun olduğunu beyan eder.

AB Uygunluk Beyanı'nın tam metni, aşağıdaki

internet adresinden görülebilir: [http://cert.bosch-](http://cert.bosch-carmultimedia.net)

[carmultimedia.net](http://cert.bosch-carmultimedia.net)

Brazil

Este equipamento opera em caráter secundário,

isto é, não tem direito a proteção contra

interferência prejudicial, mesmo de estações do

mesmo tipo, e não pode causar interferência a

sistemas operando em caráter primário.

<https://www.motorcycle-manual.com/>

Canada

This device complies with Industry Canada's licence-exempt RSSs and part 15 of the FCC Rules. Operation is subject to the following two conditions:

- (1) this device may not cause interference, and
- (2) this device must accept any interference, including interference that may cause undesired operation of the device.

Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

Le présent appareil est conforme aux CNR d'Industrie Canada applicables aux appareils radio exempts de licence. L'exploitation est autorisée aux deux conditions suivantes : (1) l'appareil ne doit pas produire de brouillage, et (2) l'appareil doit accepter tout brouillage radioélectrique subi, même si le brouillage est susceptible d'en compromettre le fonctionnement.

Mexico

La operación de este equipo está sujeta a las siguientes dos condiciones:

- (1) es posible que este equipo o dispositivo no cause interferencia perjudicial y
- (2) este equipo o dispositivo debe aceptar cualquier interferencia, incluyendo la que pueda causar su operación no deseada.

Taiwan, Republic of

根據 NCC 低功率電波輻射性電機管理辦法 規定：
第十二條

經型式認證合格之低功率射頻電機，非經許可，公司、商號或使用者均不得擅自變更頻率、加大功率或變更原設計之特性及功能。

第十四條

低功率射頻電機之使用不得影響飛航安全及干擾合法通信；經發現有干擾現象時，應立即停用，並改善至無干擾時方得繼續使用。

前項合法通信，

指依電信法規定作業之無線電通信。

低功率射頻電機須忍受合法通信或工業、科學及醫療用電波輻射性電機設備之干擾。

<https://www.motorcycle-manual.com/>

Thailand

เครื่องโทรคมนาคมและอุปกรณ์

มีความสอดคล้องตามข้อกำหนดของ กทท.

(This telecommunication equipments is in compliance with NTC requirements)

United States (USA)

This device complies with Industry Canada's licence-exempt RSSs and part 15 of the FCC Rules. Operation is subject to the following two conditions:

(1) this device may not cause interference, and
(2) this device must accept any interference, including interference that may cause undesired operation of the device.

Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

Le présent appareil est conforme aux CNR d'Industrie Canada applicables aux appareils radio exempts de licence. L'exploitation est autorisée aux deux conditions suivantes : (1) l'appareil ne doit pas produire de brouillage, et (2) l'appareil doit accepter tout brouillage radioélectrique subi, même si le brouillage est susceptible d'en compromettre le fonctionnement.

Korea

적합성평가에 관한 고시

R-CMM-RBR-ICC65IN

상호 : Robert Bosch Car Multimedia

GmbH 모델명 : ICC6.5in

기자재명칭 : 특정소출력 무선기기

(무선데이터통신시스템용 무선기기)

제조사 및 제조국가 : Robert Bosch Car

Multimedia GmbH / 포르투갈

제조년월 : 제조년월로 표기

이 기기는 업무용 환경에서 사용할 목적으로 적합성평가를 받은 기기로서 가정용 환경에서 사용하는 경우 전파간섭의 우려가 있습니다.

Declaration of Conformity

Radio equipment intelligent emergency call

Simplified EU Declaration of Conformity acc.
Radio Equipment Directive 2014/53/EU after
12.06.2016 and during transition period



Technical information

Antenna internal:

Frequency Band: 880 MHz - 915 MHz

Radiated Power [TRP]: < 22 dBm

Not accessible by user:

Frequency Band: 1710 MHz - 1785 MHz

Radiated Power [TRP]: < 26 dBm

Frequency Band: 1920 MHz - 1980 MHz

Radiated Power [TRP]: < 22 dBm

Frequency Band: 880 MHz - 915 MHz

Radiated Power [TRP]: < 23 dBm

Manufacturer and Address

Manufacturer:

Robert Bosch Car Multimedia GmbH

Address: Robert Bosch Str. 200,
31139 Hildesheim, GERMANY

Austria

Hiermit erklärt Robert Bosch Car Multimedia GmbH, dass der Funkanlagentyp TPM E-CALL EU der Richtlinie 2014/53/EU entspricht.

Der vollständige Text der EU-Konformitätserklärung ist unter der folgenden Internetadresse verfügbar: <http://cert.bosch-carmultimedia.net/>

Belgium

Le soussigné, Robert Bosch Car Multimedia GmbH, déclare que l'équipement radioélectrique du type TPM E-CALL EU est conforme à la directive 2014/53/UE.

Le texte complet de la déclaration UE de conformité est disponible à l'adresse internet suivante: <http://cert.bosch-carmultimedia.net>

<https://www.motorcycle-manual.com/>

Bulgaria

С настоящото Robert Bosch Car Multimedia GmbH декларира, че този тип радиосъоръжение TPM E-CALL EU е в съответствие с Директива 2014/53/EC. Цялостният текст на ЕС декларацията за съответствие може да се намери на следния интернет адрес: <http://cert.bosch-carmultimedia.net/>

Cyprus

Με την παρούσα ο/η Robert Bosch Car Multimedia GmbH, δηλώνει ότι ο ραδιοεξοπλισμός TPM E-CALL EU πληροί την οδηγία 2014/53/EE. Το πλήρες κείμενο της δήλωσης συμμόρφωσης EE διατίθεται στην ακόλουθη ιστοσελίδα στο διαδίκτυο: <http://cert.bosch-carmultimedia.net/>

Czech Republic

Tímto Robert Bosch Car Multimedia GmbH prohlašuje, že typ rádiového zařízení TPM E-CALL EU je v souladu se směrnicí 2014/53/EU. Úplné znění EU prohlášení o shodě je k dispozici na této internetové adrese: <http://cert.bosch-carmultimedia.net>

Germany

Hiermit erklärt Robert Bosch Car Multimedia GmbH, dass der Funkanlagentyp TPM E-CALL EU der Richtlinie 2014/53/EU entspricht. Der vollständige Text der EU-Konformitätserklärung ist unter der folgenden Internetadresse verfügbar: <http://cert.bosch-carmultimedia.net>

Denmark

Hermed erklærer Robert Bosch Car Multimedia GmbH, at radioudstyrstypen TPM E-CALL EU er i overensstemmelse med direktiv 2014/53/EU. EU-overensstemmelseserklæringens fulde tekst kan findes på følgende internetadresse: <http://cert.bosch-carmultimedia.net>

Estonia

Käesolevaga deklareerib Robert Bosch Car Multimedia GmbH, et käesolev raadioseadme tüüp TPM E-CALL EU vastab direktiivi 2014/53/EL nõuetele. ELi vastavusdeklaratsiooni täielik tekst on kättesaadav järgmisel internetiaadressil: <http://cert.bosch-carmultimedia.net>

<https://www.motorcycle-manual.com/>

Spain

Por la presente, Robert Bosch Car Multimedia GmbH declara que el tipo de equipo radioeléctrico TPM E-CALL EU es conforme con la Directiva 2014/53/UE.

El texto completo de la declaración UE de conformidad está disponible en la dirección Internet siguiente: <http://cert.bosch-carmultimedia.net>

Finland

Robert Bosch Car Multimedia GmbH vakuuttaa, että radiolaitetyyppi TPM E-CALL EU on direktiivin 2014/53/EU mukainen.

EU-vaatimusten mukaisuusvakuutuksen täysimittainen teksti on saatavilla seuraavassa internetosoitteessa: <http://cert.bosch-carmultimedia.net>

France

Le soussigné, Robert Bosch Car Multimedia GmbH, déclare que l'équipement radioélectrique du type TPM E-CALL EU est conforme à la directive 2014/53/UE.

Le texte complet de la déclaration UE de conformité est disponible à l'adresse internet suivante: <http://cert.bosch-carmultimedia.net>

United Kingdom

Hereby, Robert Bosch Car Multimedia GmbH declares that the radio equipment type TPM E-CALL EU is in compliance with Directive 2014/53/EU.

The full text of the EU declaration of conformity is available at the following internet address: <http://cert.bosch-carmultimedia.net>

Greece

Με την παρούσα ο/η Robert Bosch Car Multimedia GmbH, δηλώνει ότι ο ραδιοεξοπλισμός TPM E-CALL EU πληροί την οδηγία 2014/53/ΕΕ.

Το πλήρες κείμενο της δήλωσης συμμόρφωσης ΕΕ διατίθεται στην ακόλουθη ιστοσελίδα στο διαδίκτυο: <http://cert.bosch-carmultimedia.net>

Croatia

Robert Bosch Car Multimedia GmbH ovime izjavljuje da je radijska oprema tipa TPM E-CALL EU u skladu s Direktivom 2014/53/EU.

Cjeloviti tekst EU izjave o sukladnosti dostupan je na sljedećoj internetskoj adresi: <http://cert.bosch-carmultimedia.net>

Hungary

Robert Bosch Car Multimedia GmbH igazolja, hogy a TPM E-CALL EU típusú rádióberendezés megfelel a 2014/53/EU irányelvnek.

Az EU-megfelelőségi nyilatkozat teljes szövege elérhető a következő internetes címen: <http://cert.bosch-carmultimedia.net>

Ireland

Hereby, Robert Bosch Car Multimedia GmbH declares that the radio equipment type TPM E-CALL EU is in compliance with Directive 2014/53/EU.

The full text of the EU declaration of conformity is available at the following internet address: <http://cert.bosch-carmultimedia.net>

Italy

Il fabbricante, Robert Bosch Car Multimedia GmbH, dichiara che il tipo di apparecchiatura radio TPM E-CALL EU è conforme alla direttiva 2014/53/UE.

Il testo completo della dichiarazione di conformità UE è disponibile al seguente indirizzo Internet: <http://cert.bosch-carmultimedia.net>

Lithuania

Aš, Robert Bosch Car Multimedia GmbH, patvirtinu, kad radijo įrenginių tipas TPM E-CALL EU atitinka Direktyvą 2014/53/ES.

Visas ES atitikties deklaracijos tekstas prieinamas šiuo interneto adresu: <http://cert.bosch-carmultimedia.net>

Luxembourg

Le soussigné, Robert Bosch Car Multimedia GmbH, déclare que l'équipement radioélectrique du type TPM E-CALL EU est conforme à la directive 2014/53/UE.

Le texte complet de la déclaration UE de conformité est disponible à l'adresse internet suivante: <http://cert.bosch-carmultimedia.net>

<https://www.motorcycle-manual.com/>

Latvia

Ar šo Robert Bosch Car Multimedia GmbH deklarē, ka radioiekārta TPM E-CALL EU atbilst Direktīvai 2014/53/ES.

Pilns ES atbilstības deklarācijas teksts ir pieejams šādā interneta vietnē: <http://cert.bosch-carmultimedia.net>

Malta

B'dan, Robert Bosch Car Multimedia GmbH, niddikjara li dan it-tip ta' tagħmir tar-radju TPM E-CALL EU huwa konformi mad-Direttiva 2014/53/UE.

It-test kollu tad-dikjarazzjoni ta' konformità tal-UE huwa disponibbli f'dan l-indirizz tal-Internet li ġej: <http://cert.bosch-carmultimedia.net>

Netherlands

Hierbij verklaar ik, Robert Bosch Car Multimedia GmbH, dat het type radioapparatuur TPM E-CALL EU conform is met Richtlijn 2014/53/EU.

De volledige tekst van de EU-conformiteitsverklaring kan worden geraadpleegd op het volgende internetadres: <http://cert.bosch-carmultimedia.net>

Poland

Robert Bosch Car Multimedia GmbH niniejszym oświadcza, że typ urządzenia radiowego TPM E-CALL EU jest zgodny z dyrektywą 2014/53/UE. Pełny tekst deklaracji zgodności UE jest dostępny pod następującym adresem internetowym: <http://cert.bosch-carmultimedia.net>

Portugal

O(a) abaixo assinado(a) Robert Bosch Car Multimedia GmbH declara que o presente tipo de equipamento de rádio TPM E-CALL EU está em conformidade com a Diretiva 2014/53/UE.

O texto integral da declaração de conformidade está disponível no seguinte endereço de Internet: <http://cert.bosch-carmultimedia.net>

Romania

Prin prezenta, Robert Bosch Car Multimedia GmbH declară că tipul de echipamente radio TPM E-CALL EU este în conformitate cu Directiva 2014/53/UE.

Textul integral al declarației UE de conformitate este disponibil la următoarea adresă internet: <http://cert.bosch-carmultimedia.net>

<https://www.motorcycle-manual.com/>

Sweden

Härmed försäkrar Robert Bosch Car Multimedia GmbH att denna typ av radioutrustning TPM E-CALL EU överensstämmer med direktiv 2014/53/EU.

Den fullständiga texten till EU-försäkran om överensstämmelse finns på följande webbadress:
<http://cert.bosch-carmultimedia.net>

Slovenia

Robert Bosch Car Multimedia GmbH potrjuje, da je tip radijske opreme TPM E-CALL EU skladen z Direktivo 2014/53/EU.

Celotno besedilo izjave EU o skladnosti je na voljo na naslednjem spletnem naslovu:
<http://cert.bosch-carmultimedia.net>

Slovakia

Robert Bosch Car Multimedia GmbH týmto vyhlasuje, že rádiové zariadenie typu TPM E-CALL EU je v súlade so smernicou 2014/53/EÚ. Úplné EÚ vyhlásenie o zhode je k dispozícii na tejto internetovej adrese: <http://cert.bosch-carmultimedia.net>

<https://www.motorcycle-manual.com/>

Declaration of Conformity

Radio equipment anti-theft alarm (DWA)

Simplified EU Declaration of Conformity acc.
Radio Equipment Directive 2014/53/EU after
12.06.2016 and during transition period



Technical information

Frequency Band: 433.05-434.79 MHz
Output Power : 10 mW e.r.p.

Manufacturer and Address

Manufacturer: Meta System S.p.A.
Adress: Via Galimberti 5
42124 Reggio Emilia - Italy –

Austria

Hiermit erklärt Meta System S.p.A., dass der
Funkanlagentyp TXBMWMMR der Richtlinie
2014/53/EU entspricht.
Der vollständige Text der EU-
Konformitätserklärung ist unter der folgenden
Internetadresse verfügbar:
<https://docs.metasystem.it/>

Belgium

Le soussigné, Meta System S.p.A., déclare que
l'équipement radioélectrique du type TXBMWMMR
est conforme à la directive 2014/53/UE.
Le texte complet de la déclaration UE de
conformité est disponible à l'adresse internet
suivante: <https://docs.metasystem.it/>

Bulgaria

С настоящото Meta System S.p.A. декларира, че
този тип радиосъоръжение TXBMWMMR е в
съответствие с Директива 2014/53/ЕС.
Цялостният текст на ЕС декларацията за
съответствие може да се намери на следния
интернет адрес: <https://docs.metasystem.it/>

<https://www.motorcycle-manual.com/>

Cyprus

Με την παρούσα ο/η Meta System S.p.A., δηλώνει ότι ο ραδιοεξοπλισμός TXBMWWR πληροί την οδηγία 2014/53/ΕΕ.

Το πλήρες κείμενο της δήλωσης συμμόρφωσης ΕΕ διατίθεται στην ακόλουθη ιστοσελίδα στο διαδίκτυο: <https://docs.metasystem.it/>

Czech Republic

Tímto Meta System S.p.A. prohlašuje, že typ rádiového zařízení TXBMWWR je v souladu se směrnicí 2014/53/EU.

Úplné znění EU prohlášení o shodě je k dispozici na této internetové adrese: <https://docs.metasystem.it/>

Germany

Hiermit erklärt Meta System S.p.A., dass der Funkanlagentyp TXBMWWR der Richtlinie 2014/53/EU entspricht.

Der vollständige Text der EU-Konformitätserklärung ist unter der folgenden Internetadresse verfügbar: <https://docs.metasystem.it/>

Denmark

Hermed erklærer Meta System S.p.A., at radioudstyrstypen TXBMWWR er i overensstemmelse med direktiv 2014/53/EU. EU-overensstemmelseserklæringens fulde tekst kan findes på følgende internetadresse: <https://docs.metasystem.it/>

Estonia

Käesolevaga deklareerib Meta System S.p.A., et käesolev raadioseadme tüüp TXBMWWR vastab direktiivi 2014/53/EL nõuetele.

ELi vastavusdeklaratsiooni täielik tekst on kättesaadav järgmisel internetiaadressil: <https://docs.metasystem.it/>

Spain

Por la presente, Meta System S.p.A. declara que el tipo de equipo radioeléctrico TXBMWWR es conforme con la Directiva 2014/53/UE.

El texto completo de la declaración UE de conformidad está disponible en la dirección Internet siguiente: <https://docs.metasystem.it/>

<https://www.motorcycle-manual.com/>

Finland

Meta System S.p.A. vakuuttaa, että radiolaitetyyppi TXBMWMMR on direktiivin 2014/53/EU mukainen.

EU-vaatimustenmukaisuusvakuutuksen täysimittainen teksti on saatavilla seuraavassa internetosoitteessa: <https://docs.metasystem.it/>

France

Le soussigné, Meta System S.p.A., déclare que l'équipement radioélectrique du type TXBMWMMR est conforme à la directive 2014/53/UE.

Le texte complet de la déclaration UE de conformité est disponible à l'adresse internet suivante: <https://docs.metasystem.it/>

United Kingdom

Hereby, Meta System S.p.A. declares that the radio equipment type TXBMWMMR is in compliance with Directive 2014/53/EU.

The full text of the EU declaration of conformity is available at the following internet address: <https://docs.metasystem.it/>

Greece

Με την παρούσα ο/η Meta System S.p.A., δηλώνει ότι ο ραδιοεξοπλισμός TXBMWMMR πληροί την οδηγία 2014/53/ΕΕ.

Το πλήρες κείμενο της δήλωσης συμμόρφωσης ΕΕ διατίθεται στην ακόλουθη ιστοσελίδα στο διαδίκτυο: <https://docs.metasystem.it/>

Croatia

Meta System S.p.A. ovime izjavljuje da je radijska oprema tipa TXBMWMMR u skladu s Direktivom 2014/53/EU.

Cjeloviti tekst EU izjave o sukladnosti dostupan je na sljedećoj internetskoj adresi: <https://docs.metasystem.it/>

Hungary

Meta System S.p.A. igazolja, hogy a TXBMWMMR típusú rádióberendezés megfelel a 2014/53/EU irányelvnek.

Az EU-megfelelőségi nyilatkozat teljes szövege elérhető a következő internetes címen: <https://docs.metasystem.it/>

<https://www.motorcycle-manual.com/>

Ireland

Hereby, Meta System S.p.A. declares that the radio equipment type TXBMWMR is in compliance with Directive 2014/53/EU. The full text of the EU declaration of conformity is available at the following internet address: <https://docs.metasystem.it/>

Italy

Il fabbricante, Meta System S.p.A., dichiara che il tipo di apparecchiatura radio TXBMWMR è conforme alla direttiva 2014/53/UE. Il testo completo della dichiarazione di conformità UE è disponibile al seguente indirizzo Internet: <https://docs.metasystem.it/>

Lithuania

Aš, Meta System S.p.A., patvirtinu, kad radijo įrenginių tipas TXBMWMR atitinka Direktyvą 2014/53/ES. Visas ES atitikties deklaracijos teksto prieinamas šiuo interneto adresu: <https://docs.metasystem.it/>

Luxembourg

Le soussigné, Meta System S.p.A., déclare que l'équipement radioélectrique du type TXBMWMR est conforme à la directive 2014/53/UE. Le texte complet de la déclaration UE de conformité est disponible à l'adresse internet suivante: <https://docs.metasystem.it/>

Latvia

Ar šo Meta System S.p.A. deklarē, ka radioiekārta TXBMWMR atbilst Direktīvai 2014/53/ES. Pilns ES atbilstības deklarācijas teksts ir pieejams šādā interneta vietnē: <https://docs.metasystem.it/>

Malta

B'dan, Meta System S.p.A., niddikjara li dan it-tip ta' tagħmir tar-radju TXBMWMR huwa konformi mad-Direttiva 2014/53/UE. It-test kollu tad-dikjarazzjoni ta' konformità tal-UE huwa disponibbli f'dan l-indirizz tal-Internet li ġej: <https://docs.metasystem.it/>

<https://www.motorcycle-manual.com/>

Netherlands

Hierbij verklaar ik, Meta System S.p.A., dat het type radioapparatuur TXBMWMR conform is met Richtlijn 2014/53/EU.

De volledige tekst van de EU-conformiteitsverklaring kan worden geraadpleegd op het volgende internetadres:
<https://docs.metasystem.it/>

Poland

Meta System S.p.A. niniejszym oświadcza, że typ urządzenia radiowego TXBMWMR jest zgodny z dyrektywą 2014/53/EU.

Pełny tekst deklaracji zgodności UE jest dostępny pod następującym adresem internetowym:
<https://docs.metasystem.it/>

Portugal

O(a) abaixo assinado(a) Meta System S.p.A. declara que o presente tipo de equipamento de rádio TXBMWMR está em conformidade com a Diretiva 2014/53/EU.

O texto integral da declaração de conformidade está disponível no seguinte endereço de Internet:
<https://docs.metasystem.it/>

Romania

Prin prezenta, Meta System S.p.A. declară că tipul de echipamente radio TXBMWMR este în conformitate cu Directiva 2014/53/UE.

Textul integral al declarației UE de conformitate este disponibil la următoarea adresă internet:
<https://docs.metasystem.it/>

Sweden

Härmed försäkrar Meta System S.p.A. att denna typ av radioutrustning TXBMWMR överensstämmer med direktiv 2014/53/EU. Den fullständiga texten till EU-försäkran om överensstämmelse finns på följande webbadress:
<https://docs.metasystem.it/>

Slovenia

Meta System S.p.A. potrjuje, da je tip radijske opreme TXBMWMR skladen z Direktivo 2014/53/EU.

Celotno besedilo izjave EU o skladnosti je na voljo na naslednjem spletnem naslovu:
<https://docs.metasystem.it/>

<https://www.motorcycle-manual.com/>

Slovakia

Meta System S.p.A. týmto vyhlasuje, že rádiové zariadenie typu TXBMWMR je v súlade so smernicou 2014/53/EÚ.

Úplné EÚ vyhlásenie o zhode je k dispozícii na tejto internetovej adrese:

<https://docs.metasystem.it/>

<https://www.motorcycle-manual.com/>

A

Abbreviations and symbols, 8

ABS

Engineering details, 142

Self-diagnosis, 126

Status indicators, 54

Accessories

general notes, 192

Adaptive Headlight, 153

Engineering details, 153

Ambient temperature

Display, 45

Outside temperature

warning, 45

Anti-theft alarm

Indicator light, 28

operating, 86

Warning, 48

ASC

Control, 25

Engineering details, 145

Indicator and warning light, 56

operating, 75

Self-diagnosis, 127

B**Battery**

charging battery when

connected, 182

charging the battery when

disconnected, 183

Indicator light for vehicle

voltage, 46, 47

installing, 183

Maintenance instructions, 181

removing, 183

Technical data, 225

Beam throw

adjusting, 117

Bluetooth, 104

Pairing, 104

Brake fluid

Checking fluid level, front, 162

Checking fluid level, rear, 163

Reservoir, front, 23

Reservoir, rear, 23

Brake pads

checking front, 160

checking rear, 161

Running in, 129

Brakes

ABS Pro in detail, 144

ABS Pro depending on riding

mode, 132

Adjusting brake lever, 118

Checking operation, 160

Safety instructions, 131

Technical data, 222

C**Care**

Chrome, 207

Paintwork preservation, 208

Cases, 193, 195**Chain**

Adjusting sag, 187

Checking sag, 187

Checking wear, 188

Lubricating, 187

Chassis and suspension

Technical data, 221

Check control

Dialogue, 36

Display, 36

Clock

adjusting, 103

- Clutch
 - Adjusting clutch lever, 117
 - Adjusting play, 165
 - Checking operation, 164
 - Checking play, 164
 - Technical data, 220
- Coding plug
 - installing, 81
 - Position on the vehicle, 24
- Coolant
 - Checking fill level, 165
 - Fill-level indicator, 23
 - Indicator light for overheating, 49
 - topping up, 166
- Cruise-control system
 - operating, 83
- Currency, 10
- D**
- Damping
 - Adjuster, 21
- Daytime riding lights
 - automatic daytime riding light, 73
 - manual daytime riding light, 72
- Diagnostic connector
 - disengaging, 186
 - Position on the vehicle, 24
 - securing, 186
- Dimensions
 - Technical data, 227
- DTC
 - Engineering details, 145
 - Indicator and warning light , 56
 - operating, 75
 - Self-diagnosis, 128
- DWA
 - Technical data, 226
- Dynamic Brake Control, 150
 - Engineering details, 150
- Dynamic engine brake
 - control, 146
- Dynamic ESA
 - Control, 25
 - operating, 76
- E**
- Electrical system
 - Technical data, 225
- Emergency call
 - Automatically in the event of a light fall, 69
 - Automatically in the event of a severe fall, 70
 - Language, 68
 - manual, 68
 - Notes, 15
 - operating, 68
- Emergency off switch (kill switch)
 - Control, 26, 27
 - operating, 67
- Engine
 - Indicator light for engine control, 50
 - Indicator light for engine electronics, 50
 - Malfunction indicator lamp, 49
 - starting, 125
 - Technical data, 218, 219

Engine oil
 Checking fill level, 158
 Filler neck, 21
 Oil dipstick, 21
 Technical data, 217
 topping up, 159
Equipment, 9

F

Final drive
 Technical data, 221
Frame
 Technical data, 221
Front-wheel stand
 installing, 157
Fuel
 Fuel grade, 133
 refuelling, 134
 refuelling with Keyless
 Ride, 135, 136
 Technical data, 216, 217
Fuel filler cap emergency
 release, 137, 138
Fuel reserve
 Range, 102
 Warning, 58

Fuses
 Position on the vehicle, 24
 replacing, 184

G

General views
 Indicator and warning lights, 30
 Instrument cluster, 28
 Left multifunction switch, 25
 left side of vehicle, 21
 Multifunction switch, right, 26,
 27
 My vehicle, 107
 right side of vehicle, 23
 TFT display, 31, 33
 Underneath the seat, 24

H

Hazard warning flashers
 Control, 25
 operating, 74

Headlight
 Adjusting headlight beam
 throw, 117
 Headlight beam throw, 116
Headlight courtesy delay
 feature, 71
Heated handlebar grips
 Control, 26, 27
 operating, 89
Horn, 25

I

Ignition
 switching off, 63
 switching on, 62
Immobiliser
 Spare key, 67
Indicator lights, 28
 Overview, 30
Instrument cluster
 Ambient-light brightness
 sensor, 28
 Overview, 28

J

Jump-starting, 180

K

Keyless Ride

- Battery of the radio-operated key is empty or loss of the radio-operated key, 65
- Engaging steering lock, 64
- Fuel filler cap, unlocking, 135, 136
- Switching off ignition, 65
- Switching on ignition, 64
- Warning, 45, 46

Keys, 62, 63

L

Lighting

- Indicator light for faulty bulb, 47
- Replacing auxiliary headlight, 179
- Replacing LED for side light, 179
- Replacing LEDs for brake light and tail light, 179
- Replacing LEDs for low-beam and high-beam headlight, 179
- Technical data, 226
- Turn indicators, 179

Lights

- Adaptive Headlight, 153
- automatic daytime riding light, 73
- Control, 25
- Headlight courtesy delay feature, 71
- Headlight flasher, operating, 71
- High-beam headlight, operating, 71
- Low-beam headlight, 70
- manual daytime riding light, 72
- Parking lights, operating, 71
- Side light, 70

Lowered suspension

- Restrictions, 122

Luggage

- Instructions for loading, 122

M

Maintenance

- Maintenance schedule, 235
- Maintenance confirmations, 236
- Maintenance intervals, 231
- Malfunction indicator lamp, 49

Media

- operating, 112

Menu

- calling up, 98

Mirrors

- adjusting, 116

Mobility services, 231

Motorcycle

- care, 205
- cleaning, 205
- lashing, 138
- laying up, 208
- parking, 133

Multifunction switch

- Overview, left side, 25
- Overview, right side, 26, 27

N

Navigation

- operating, 110

O

On-board computer, 110

On-board voltage

- Warning, 46, 47

Operating focus
change, 99

P

Pairing, 104

Parking, 133

Parking light, 71

Performance figures
Technical data, 228

Phone
operating, 113

Power socket
Notes on use, 192
Position on the vehicle, 21

Pre-Ride-Check, 126

Pure Ride
Overview, 31

R

RDC
Engineering details, 150
Warning indicators, 51

Refuelling, 134
Fuel grade, 133
with Keyless Ride, 135, 136

Remote control
Replacing battery, 66

Rev. counter, 28
Rev. counter, 101

Rider info status line
adjusting, 100, 101

Rider's Manual
Position on the vehicle, 24

Riding mode, 79
Setting up PRO riding
mode, 82

Running in, 128

S

Safety instructions
for brakes, 131
for riding, 122

Screw connections, 214

Seat
installing, 90
Lock, 21
removing, 90

Service, 230
Service history, 230
Service-due indicator, 59

Shift assistant
Engineering details, 152
Gear not taught, 58
Riding, 129

Shift light, 86
adjusting, 86
switching on/off, 86

Shifting gear
Recommendation to
upshift, 102
Shift light, 130

Spark plugs
Technical data, 225

Speed Limit Info
Switching on or off, 101

Speedometer, 28

Spring preload
Adjuster, 23
adjusting, 118

Starting, 125
Control, 26, 27

Steering lock
Locking, 62

T

Technical data

- Anti-theft alarm, 226
- Battery, 225
- Brakes, 222
- Clutch, 220
- Dimensions, 227
- Electrical system, 225
- Engine, 218, 219
- Engine oil, 217
- Final drive, 221
- Frame, 221
- Fuel, 216, 217
- General notes, 9
- Lighting, 226
- Performance figures, 228
- Spark plugs, 225
- Standards, 9
- Suspension, 221
- Transmission, 220
- Weights, 228
- Wheels and tyres, 223

TFT display, 28

- Control, 25
- operating, 98, 99, 100
- Overview, 31, 33
- Selecting display, 95

Toolkit

- Position on the vehicle, 24

Topcase

- operating, 196

Torques, 214

Traction control

- ASC, 145
- DTC, 145

Transmission

- Technical data, 220

Trim panels

- Installing tank cover, 177
- Removing tank cover, 176

Troubleshooting chart, 212

Turn indicators

- Control, 25
- operating, 74

Type plate

- Position on the vehicle, 23

Tyres

- Checking tread depth, 167
- Checking tyre pressure, 166
- Pressures, 224
- Recommendation, 167
- Running in, 129
- Technical data, 223

V

Value

- Display, 36

Vehicle

- restoring to use, 209

Vehicle Identification Number

- Position on the vehicle, 23

W

Warning indicator lights

- ABS, 54
- Anti-theft alarm, 48
- ASC, 56
- Bulb faulty, 47
- Coolant temperature, 49
- DTC, 56
- Engine control unit, 50
- Engine electronics, 50

- Fuel reserve, 58
- Gear not taught, 58
- Malfunction indicator lamp, 49
- Mode of presentation, 36
- My vehicle, 107
- On-board voltage, 46, 47
- Outside temperature
 - warning, 45
- RDC, 51
- Warning lights, 28
 - Overview, 30
- Warnings, overview, 38
- Weights
 - Payload table, 24
 - Technical data, 228
- Wheels
 - Change of size, 168
 - Checking rims, 167
 - Installing front wheel, 170
 - Installing rear wheel, 175
 - Removing front wheel, 168
 - Removing rear wheel, 173
 - Technical data, 223
- Windscreen
 - adjusting, 117

<https://www.motorcycle-manual.com/>

<https://www.motorcycle-manual.com/>

Details described or illustrated in this booklet may differ from the vehicle's actual specification as purchased, the accessories fitted or the national-market specification. No claims will be entertained as a result of such discrepancies.

Dimensions, weights, fuel consumption and performance data are quoted to the customary tolerances.

The right to modify designs, equipment and accessories is reserved.

Errors and omissions excepted.

© 2019 Bayerische Motoren
Werke Aktiengesellschaft
80788 Munich, Germany

Not to be reproduced by any means whatsoever, wholly or in part, without the written permission of BMW Motorrad, After Sales.

Original rider's manual, printed in Germany.

<https://www.motorcycle-manual.com/>

Fuel

Tyre pressure

BMW recommends ADVANTEC
ORIGINAL BMW ENGINE OIL

<https://www.motorcycle-manual.com/>

