

DIAMO® TORINO

PARTS CATALOG

First Edition November 2007



Copyright © 2004-2007 LS MotorSports, LLC. Reproduction without written permission is completely forbidden.

The information and diagrams included in this catalog are the exclusive property of LS MotorSports, LLC and may not be reproduced in any media without the express written consent of LS MotorSports, LLC.

For more information contact:

LS MotorSports, LLC
12505 Reed Rd, Suite 145
Sugar Land, TX 77478
281-277-6140

*Information contained in this publication is subject to change without notice.
For the most up to date information please contact DIAMO USA or an Authorized Dealer*



www.DIAMOUSA.com



Copyright © 2004-2007 LS MotorSports, LLC. Reproduction without written permission is completely forbidden.

CONTENTS

PAGE

4
5
6
7
8
9
10
11
12
13
14
15
16
17
18
19
20
21
22
23
24
25
26


TITLE

DOCUMENTS
HEAD LIGHT
SPEEDOMETER
HANDLEBAR
FRONT COVER & FENDER
REAR COVER & FENDER
FRONT FORK
FRONT WHEEL
REAR WHEEL
SEAT
FUEL TANK
AIR FILTER
EXHAUST
REAR SUSPENSION
FRONT TURN SIGNAL
TAIL LIGHT
ELECTRICAL
FRONT HYDRAULIC BRAKE
REAR HYDRAULIC BRAKE
REAR HYDRAULIC BRAKE, CONT.
COOLING SYSTEM
FRAME ASSEMBLY
TOOLS COMP

Fig. 00 Documents


Ref	Code	Part Number	Description	Qty
1	07-023-0001	06-029-0001	Owners Manual	1
2	07-023-0002	06-029-0002	Parts Catalog CD	1
3	07-023-0003	06-029-0004	Service Manual	1

Fig. 18 Head Light

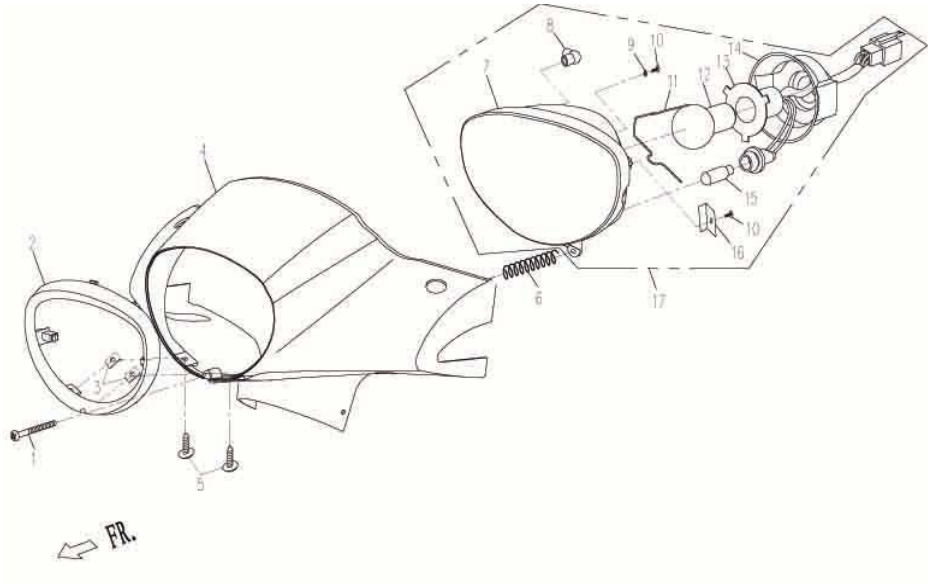


Ref	Code	Part Number	Description	Qty
1	GB818-85-M4×50	07-023-1801	SCREW	1
2	605-04.02.03B	07-023-1802	HEADLIGHT TRIM RING	1
3	CF250T-340007	07-023-1803	CLAMP ST4.2	2
4	605-04.02.03B	07-023-1804	FRONT COVER, HANDLEBAR	1
5	GB845-ST4.2×13	07-023-1805	TAPPING SCREW	2
6	519-16.01.01	07-023-1806	ADJUSTING SPRING	1
7	519-16.01.11	07-023-1807	LENS, HEADLIGHT	1
8	519-16.01.14	07-023-1808	RUBBER PIPE, VENTILATION	1
9	GB95-85 3	07-023-1809	WASHER	1
10	GB845-ST2.9×9.5	07-023-1810	TAPPING SCREW	2
11	519-16.01.16	07-023-1811	CLAMP, HEADLIGHT	1
12	GB15766.1-2000	07-023-1812	HEADLIGHT BULB(12V 35W)	1
13	519-16.01.18	07-023-1813	SOCKET	1
14	519-16.01.17	07-023-1814	ANTI-DUST CAP	1
15	DP-05	07-023-1815	PARKING LIGHT(12V3W)	1
16	519-16.01.15	07-023-1816	CLAMP PIECE, HEADLIGHT	1
17	519-16.01.10	07-023-1817	HEADLIGHT	1

Fig. 19 Speedometer

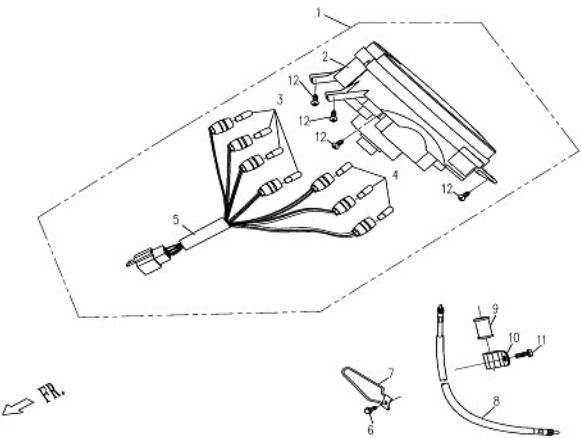


Ref	Code	Part Number	Description	Qty
1	605A-17.01.00	07-023-1901	SPEEDOMETER ASSY	1
2	605A-17.01.10	07-023-1902	SPEEDOMETER HEAD	1
3	12V/3.4W	07-023-1903	INDICATION BULB	4
4	12V/1.7W	07-023-1904	ILLUMINATION BULB	3
5	605-17.01.12	07-023-1905	WIRING HARNESS,SPEEDOMETER	1
6	GB5789 M6×16	07-023-1906	BOLT,M6X16	1
7	519-05.04.00	07-023-1907	CLIP, SPEEDOMETER CABLE	1
8	519-17.01.20	07-023-1908	SPEEDOMETER CABLE	1
9	519-08.01.05	07-023-1909	DIE RUBBER COLLAR	1
10	605-08.02.91	07-023-1910	CLAMP RING, SPEEDOMETER CABLE	1
11	GB5789 M6×12	07-023-1911	BOLT,M6X12	1
12	GB845 ST4.2×13	07-023-1912	TAPPING SCREW,ST4.2X13	4

Fig. 20 Handlebar

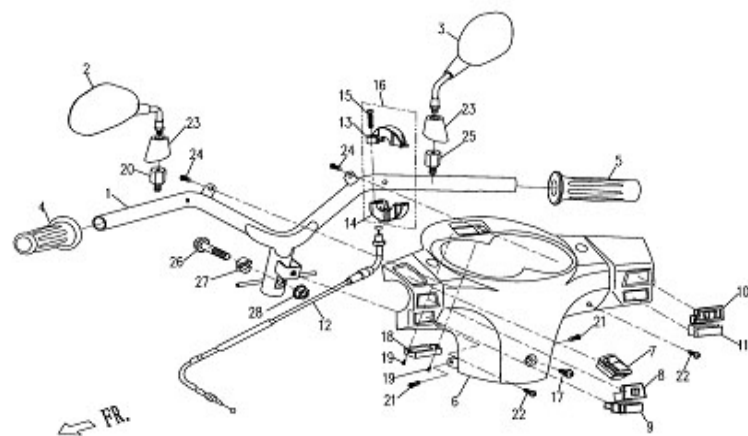


Ref	Code	Part Number	Description	Qty
1	605-10.01.00	07-023-2001	HANDLEBAR	1
2	519-20.02.00	07-023-2002	REAR VIEW MIRROR(LH)	1
3	519-20.03.00	07-023-2003	REAR VIEW MIRROR(RH)	1
4	605-10.00.01	07-023-2004	LEFT GRIP	1
5	605-10.02.00	07-023-2005	RIGHT GRIP	1
6	605-04.02.02B	07-023-2006	REAR COVER, HANDLEBAR	1
7	605-16.06.50	07-023-2007	HI / LO BEAM SWITCH	1
8	605-16.06.40	07-023-2008	TURN SIGNAL SWITCH	1
9	605-16.06.30	07-023-2009	HORN SWITCH	1
10	605-16.06.20	07-023-2010	COMBINATION SWITCH	1
11	605-16.06.10	07-023-2011	START SWITCH	1
12	605-10.05.00	07-023-2012	THROTTLE CABLE	1
13	10910030001	07-023-2013	TOP COVER,THROTTLE SUPPORT	1
14	10910030002	07-023-2014	BOTTOM COVER,THROTTLE SUPPORT	1
15	GB/T818 M5×20	07-023-2015	SCREW, M5X20	1
16	10910030000	07-023-2016	THROTTLE SUPPORT	1
17	GB9074.1 M6×12	07-023-2017	SCREW	1
18	605-17.03.00	07-023-2018	CLOCK	1
19	GB845 ST4.2×13	07-023-2019	TAPPING SCREW, ST4.2X13	2
20	605-20.20.01	07-023-2020	JOINT SEAT,REAR VIEW MIRROR(LH)	1
21	GB9074.1 M5×12	07-023-2021	SCREW	2
22	GB845 ST4.2×16	07-023-2022	TAPPING SCREW ST4.2X16	2
23	605-20.20.02	07-023-2023	PROTECTING CASE, REAR MIRROR	2
24	GB845 ST4.2×16	07-023-2024	TAPPING SCREW, ST4.2X16	2
25	605-20.20.02	07-023-2025	JOINT SEAT,REAR VIEW MIRROR(RH)	1
26	GB5789 M10×1.25×50	07-023-2026	BOLT, M10X1.25X50	1
27	50310000004	07-023-2027	BUSH, HANDLEBAR	1
28	GB6187 M10×1.25	07-023-2028	NUT,M10X1.25	1

Fig. 21 Front Cover and Fender

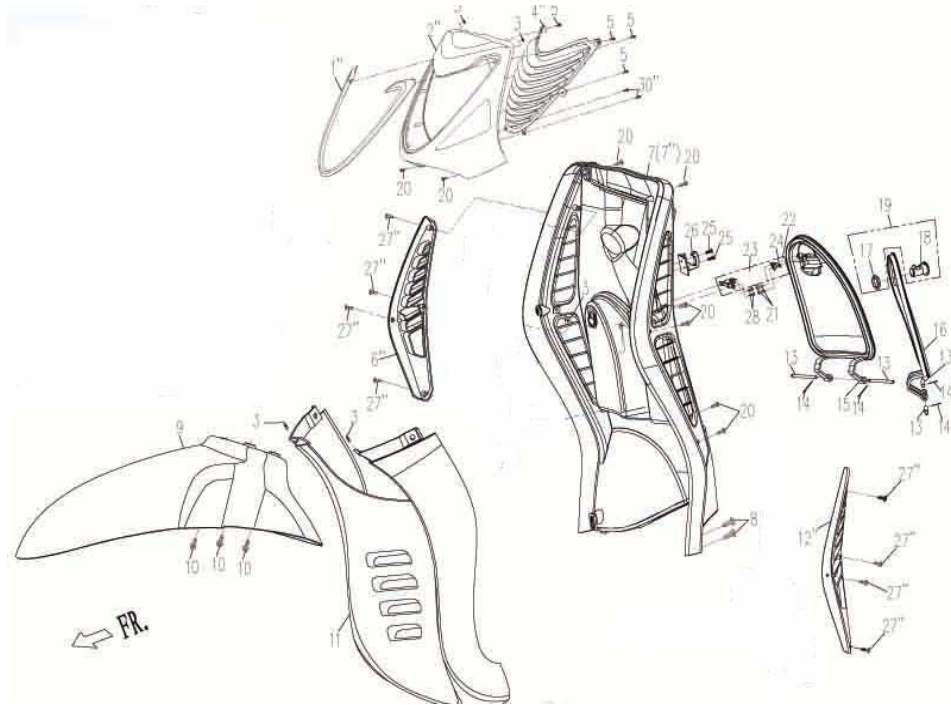


Ref	Code	Part Number	Description	Qty
1	605-04.01.02B	07-023-2101	FRONT AIR INLET PORT	1
2	605-04.01.01B	07-023-2102	FRONT COVER	1
3	CF250T-340007	07-023-2103	CLAMP	8
4	605-04.01.03B	07-023-2104	AIR INLET GRILL (FRONT)	1
5	GB845 ST4.2×13	07-023-2105	TAPPING SCREW,ST4.2X13(dt=8)	4
6	605-04.05.05B	07-023-2106	AIR OUTLET GRILL(RH)	1
7	605-04.05.01B	07-023-2107	FRONT TRUNK	1
8	GB845 ST4.8×22	07-023-2108	TAPPING SCREW,ST4.8X22	2
9	605-04.03.00	07-023-2109	FRONT FENDER	1
10	GB5789 M6×16	07-023-2110	BOLT,M6X16	3
11	605-04.04.00	07-023-2111	FRONT VENTILATION PORT PLATE	1
12	605-04.05.04	07-023-2112	AIR OUTLET GRILL(LH)	1
13	605-04.05.08	07-023-2113	HINGE SHAFT, FRONT TRUNK COVER	4
14	GB91-86 2.0×16	07-023-2114	PIN 2.0X16	4
15	605-04.05.03	07-023-2115	FRONT TRUNK COVER(RH)	1
16	605-04.05.02	07-023-2116	FRONT TRUNK COVER(LH)	1
17	605-01.03.01	07-023-2117	LOCK NUT,FRONT TRUNK(LH)	1
18	605-01.03.20	07-023-2118	LOCK BODY,FRONT TRUNK(LH)	1
19	605-01.03.10	07-023-2119	LOCK, FRONT TRUNK(LH)	1
20	GB845 ST4.2×16	07-023-2120	TAPPING SCREW, ST4.2X16	6
21	GB845-ST3.5×9.5	07-023-2121	TAPPING SCREW, ST3.5X9.5	2
22	605-01.06.00	07-023-2122	LOCK, FRONT TRUNK(RH)	1
23	605-01.06.01	07-023-2123	LOCK TONGUE	1
24	605-01.06.03	07-023-2124	LOCK SUPPORT	1
25	GB818 M5×16	07-023-2125	SCREW, M5X16	2
26	605-04.12.00	07-023-2126	LUGGAGE HOOK COMP.	1
27	GB845 ST2.9×16	07-023-2127	TAPPING SCREW, ST2.9×16	8
28	GB845 ST3.5×13	07-023-2128	TAPPING SCREW, ST3.5X13	2
29		07-023-2129	NA	
30	GB845 ST4.2×9	07-023-2130	TAPPING SCREW,ST4.2X9	2

Fig. 22 Rear Cover and Fender

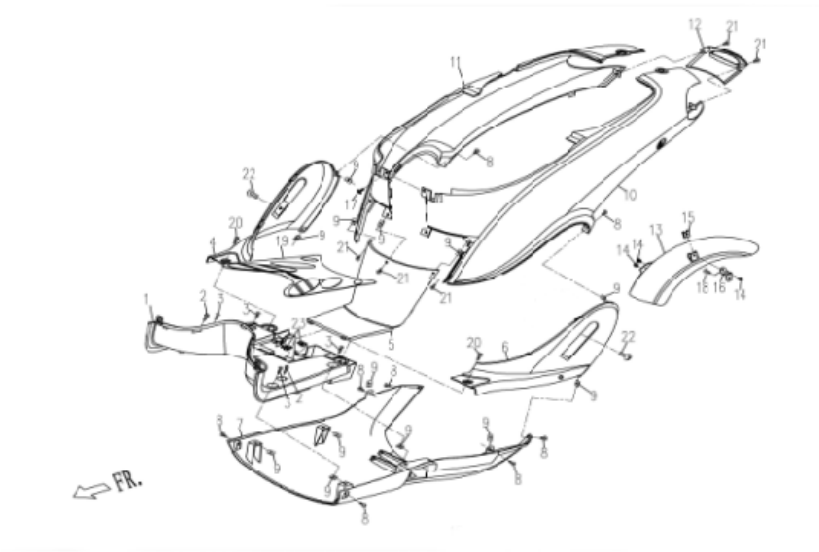


Ref	Code	Part Number	Description	Qty
1	605-04.06.01	07-023-2201	FLOORBOARD	1
2	CF250T-420002	07-023-2202	BOLT, M6X14	2
3	GB845 ST4.2×16	07-023-2203	TAPPING SCREW, ST4.2X16	4
4	605-04.06.03	07-023-2204	FLOORBOARD, RR RGT	1
5	605-04.06.04	07-023-2205	MAINTENANCE COVER	1
6	605-04.06.02	07-023-2206	FLOORBOARD, RR LFT	1
7	605-04.07.00	07-023-2207	LOWER COVER	1
8	GB845 ST4.2×13	07-023-2208	TAPPING SCREW, ST4.2X13	8
9	CF250T-340007	07-023-2209	CLAMP ST4.2	13
10	605-04.09.01	07-023-2210	PROTECTING PLATE(LH)	1
11	605-04.09.02	07-023-2211	PROTECTING PLATE(RH)	1
12	605-04.09.03	07-023-2212	REAR JOINT PLATE	1
13	605-04.11.00	07-023-2213	REAR FENDER	1
14	GB5789 M6×12	07-023-2214	BOLT, M6X12	3
15	CF250T-340008	07-023-2215	CLAMP NUT, M6	2
16	605A-03.00.06	07-023-2216	MOUNTING BRACKET,RR FENDER	1
17	50703030003	07-023-2217	CROSS SCREW, M6X16	1
18	GB845 ST4.8×16	07-023-2218	TAPPING SCREW, ST4.8X16	1
19	605-04.06.05	07-023-2219	FLOORBOARD MAT	1
20	CF250T-500019	07-023-2220	BOLT, M6X17	2
21	GB845 ST4.2×16	07-023-2221	TAPPING SCREW, ST4.2X16	5
22	GB9074.1 M6×12	07-023-2222	SCREW, M6X12	2
23	CF250T-340008	07-023-2223	CLAMP NUT COMP.	2

Fig. 23 Front Fork

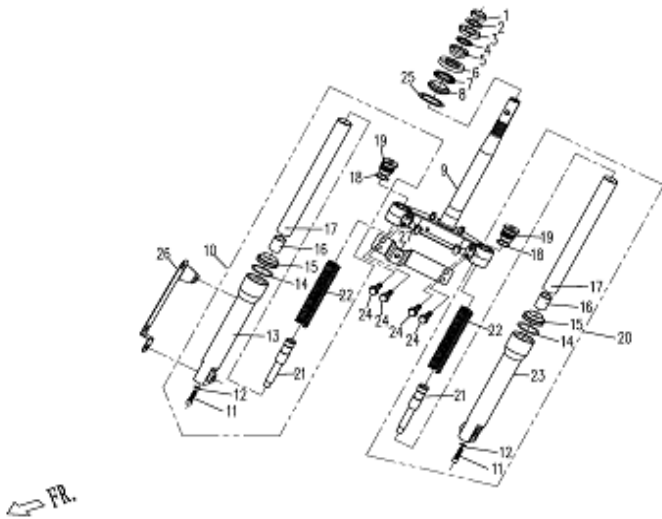


Ref	Code	Part Number	Description	Qty
1	50205010020	07-023-2301	LOCK NUT	1
2	10800000008	07-023-2302	THRUST WASHER	1
3	50205010014	07-023-2303	TOP BALL RETAINER	1
4	GB308	07-023-2304	HOLDER 4.2	1
5	50205010002	07-023-2305	TOP RACE	1
6	605-05.01.13	07-023-2306	BOTTOM BALL RETAINER	1
7	GB308	07-023-2307	HOLDER 5	1
8	605-05.01.03	07-023-2308	BOTTOM RACE	1
9	605-05.01.00	07-023-2309	STEERING STEM	1
10	605A-05.03.00	07-023-2310	FRONT FORK, RGT	1
11	GB70 M10×1.25×30	07-023-2311	SCREW,M10X1.25X30	2
12	GB93 10	07-023-2312	WASHER 10	2
13	519-05.03.01	07-023-2313	TUBE, FRONT FORK RGT	1
14	519-05.03.02	07-023-2314	SPRING, SEAL RING	2
15	519-05.03.03	07-023-2315	SEAL RING	2
16	519-05.03.04	07-023-2316	PISTON	2
17	605A-05.03.05	07-023-2317	INNER TUBE	1
18	519-05.03.06	07-023-2318	TOP SEAL RING	2
19	519-05.03.07	07-023-2319	SEAL COVER	2
20	605A-05.02.00	07-023-2320	FRONT FORK, LFT	1
21	519-05.03.08	07-023-2321	DAMPER ROD	2
22	605A-05.03.09	07-023-2322	MAIN SPRING	2
23	519-05.02.01	07-023-2323	TUBE, FRONT FORK LFT	1
24	GB9074.17 M8×40	07-023-2324	BOLT,M8X40	4
25	605-05.01.02	07-023-2325	DUSTPROOF RING, RACE	1
26	605-05.00.01	07-023-2326	BRACKET,FRONT LICENSE PLATE	1
27	605-03.85.00	07-023-2327	HORN BRACKET	1

Fig. 24 Front Wheel

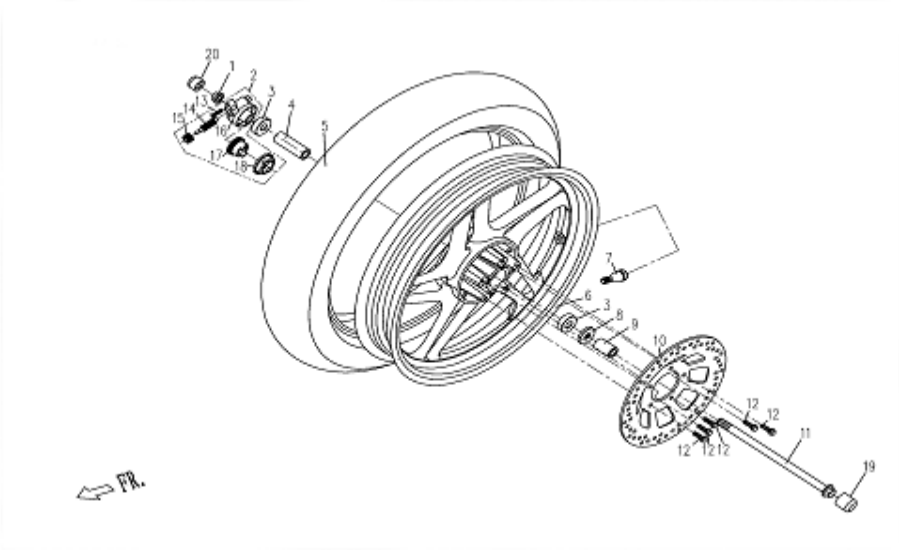


Ref	Code	Part Number	Description	Qty
1	GB6187-86 M12×1.25	07-023-2401	NUT, M12X1.25	1
2	519-07.00.20	07-023-2402	SPEEDOMETER GEAR	1
3	GB278 6201-2Z	07-023-2403	BEARING 6201-2Z	2
4	605-07.00.04	07-023-2404	CENTER SPACER, FRONT WHEEL	1
5	GB/T 2965-1997 100/80-16 50	07-023-2405	TIRE	1
6	605A-07.00.01	07-023-2406	RIM	1
7	519-07.00.30	07-023-2407	TIRE VALVE	1
8	FB 20 30 5 GB9877.1-88	07-023-2408	OIL SEAL	1
9	605-07.00.02	07-023-2409	COLLAR, FRONT WHEEL(LH)	1
10	519-08.01.01	07-023-2410	BRAKE DISC	1
11	CF250T-390001	07-023-2411	FRONT AXLE	1
12	GB5789-M6×25	07-023-2412	BOLT, FR BRAKE DISC M6X25	5
13	GB819-88-M5×10	07-023-2413	SCREW, M5X10	1
14	519-07.00.21	07-023-2414	DRIVEN GEAR	1
15	519-07.00.27	07-023-2415	STUD	1
16	519-07.00.26	07-023-2416	GEAR HOUSE	1
17	519-07.00.24	07-023-2417	DRIVE GEAR	1
18	519-07.00.23	07-023-2418	BRACKET	1
19	605-07.00.08	07-023-2419	COVER LFT, FRONT WHEEL AXLE	1
20	605A-07.00.07	07-023-2420	COVER RGT, FRONT WHEEL AXLE	1

Fig. 25 Rear Wheel

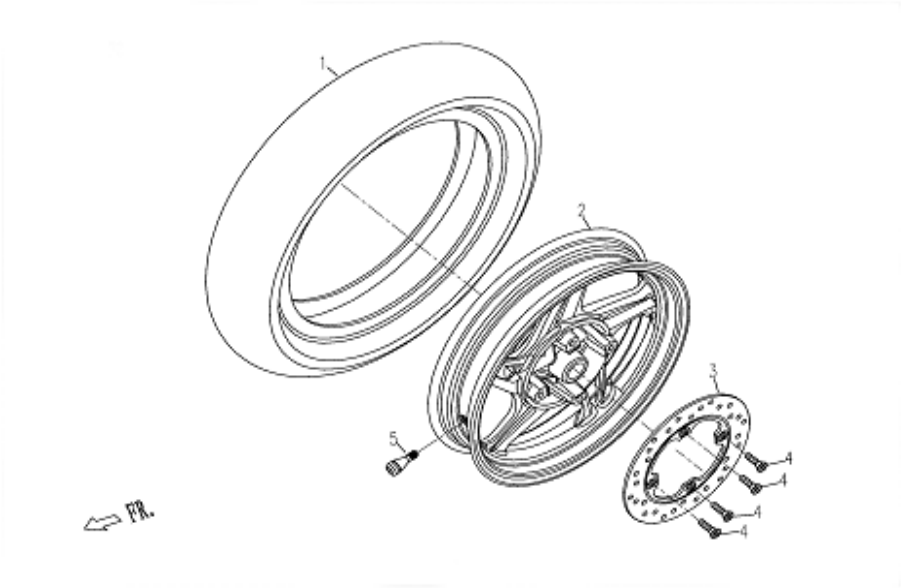


Ref	Code	Part Number	Description	Qty
1	07-023-2501	07-023-2501	TIRE	1
2	605A-11.00.10	07-023-2502	RIM	1
3	605-08.02.01	07-023-2503	BRAKE DISC	1
4	519-08.02.03	07-023-2504	FLANGE BOLT, BRAKE DISC	4
5	519-07.00.30	07-023-2505	TIRE VALVE	1

Fig. 26 Seat

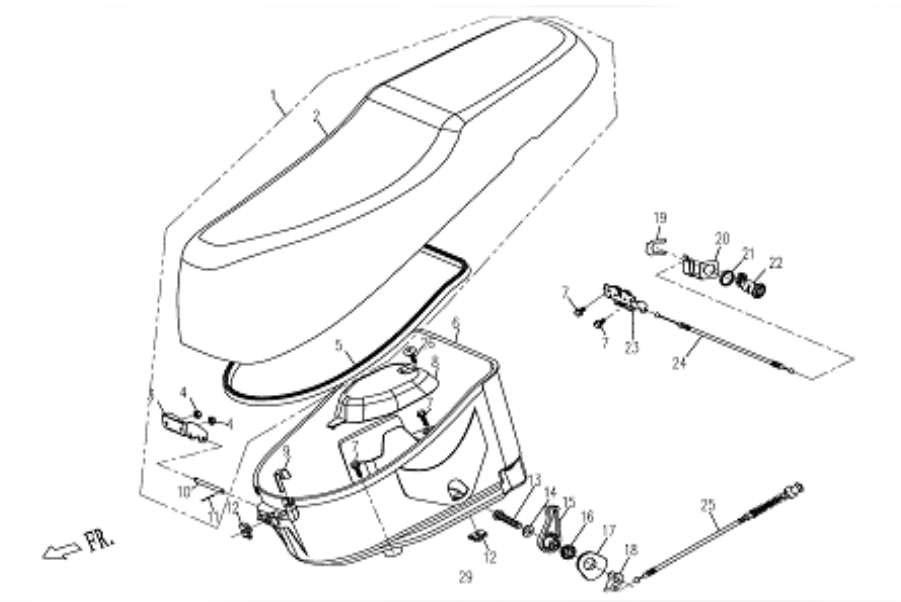


Ref	Code	Part Number	Description	Qty
1	605-13.01.10	07-023-2601	SEAT ASSY	1
2	605-13.01.20	07-023-2602	SEAT CUSHION	1
3	605-13.01.15	07-023-2603	MOUNTING BRACKET, SEAT BASE PLATE	1
4	GB6177- M6	07-023-2604	NUT, M6	2
5	605-13.01.17	07-023-2605	RUBBER SEAL	1
6	605-04.08.01	07-023-2606	STORAGE COMPARTMENT	1
7	GB5789-M6×12	07-023-2607	BOLT, M6X12	6
8	605-04.08.02	07-023-2608	COVER, STORAGE COMPARTMENT	1
9	605-03.00.03	07-023-2609	HELMET HOOK	1
10	605-13.01.16	07-023-2610	HINGE SHAFT, SEAT	1
11	GB91-86 2.0×16	07-023-2611	PIN, 2.0X16	1
12	CF250T-340008	07-023-2612	CLAMP NUT	2
13	GB818-85 M5 ×25	07-023-2613	SCREW, M5X25	1
14	GB96-85 φ5	07-023-2614	WASHER, 5	1
15	605-08.02.71	07-023-2615	PARKING HANDLE	1
16	605-08.02.73	07-023-2616	RING CLAMP	1
17	605-08.02.72	07-023-2617	RUBBER, PARKING HANDLE	1
18	605-08.02.74	07-023-2618	ROCKARM, PARKING HANDLE	1
19	519-01.02.01	07-023-2619	RETAINING CLIP, SEAT LOCK	1
20	519-01.02.11	07-023-2620	BRACKET, SEAT LOCK	1
21	519-01.02.02	07-023-2621	CUSHION RUBBER RING, SEAT LOCK	1
22	519-01.02.10	07-023-2622	SEAT LOCK	1
23	605-01.02.30	07-023-2623	SEAT LATCH	1
24	605-01.02.30	07-023-2624	SEAT LATCH CABLE	1
25	605-08.02.80	07-023-2625	PARKING CABLE	1
26	519-13.01.17	07-023-2626	CROSS SCREW, M6X16	1

Fig. 27 Fuel Tank

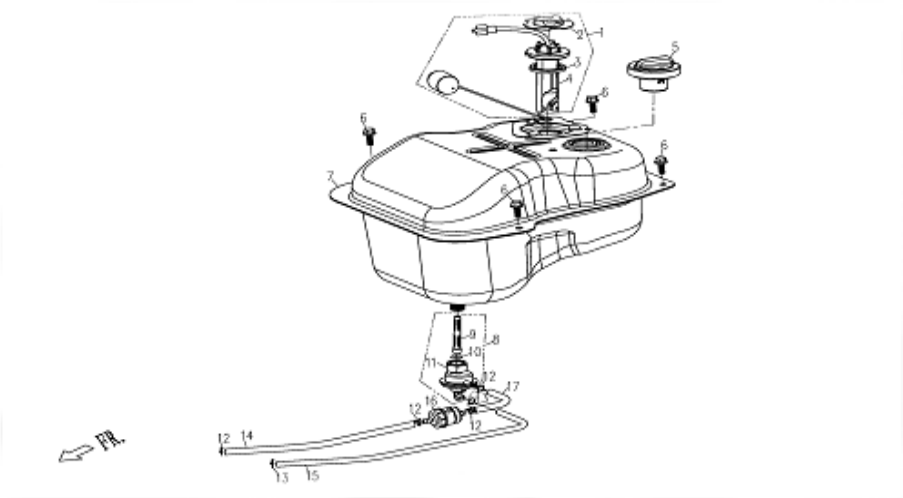


Ref	Code	Part Number	Description	Qty
1	605-17.02.00	07-023-2701	FUEL SENSOR ASSY	1
2	605-17.02.01	07-023-2702	RETAINING RING, FUEL SENSOR	1
3	605-17.02.02	07-023-2703	GASKET, FUEL SENSOR	1
4	605-17.02.10	07-023-2704	FUEL SENSOR	1
5	CF250T-450400	07-023-2705	FUEL CAP	1
6	GB5789-M6×12	07-023-2706	BOLT, M6X12	4
7	605-12.01.001	07-023-2707	FUEL TANK	1
8	50212020000	07-023-2708	FUEL PETCOCK	1
9	50212020001	07-023-2709	SCREEN, FUEL PETCOCK	1
10	50212020002	07-023-2710	GASKET, FUEL PETCOCK	1
11	50212020003	07-023-2711	BODY, FUEL PETCOCK	1
12	QC/T621 A8	07-023-2712	CIRCLIP(8 A TYPE)	4
13	QC/T621 A7	07-023-2713	CIRCLIP(7 A TYPE)	2
14	605-12.00.20	07-023-2714	OIL PIPE	1
15	605-12.00.10	07-023-2715	VACUUM PIPE	1
16	519-12.05.20	07-023-2716	FUEL FILTER	1
17	605-12.00.30	07-023-2717	OIL PIPE	1

Fig. 28 Air Filter

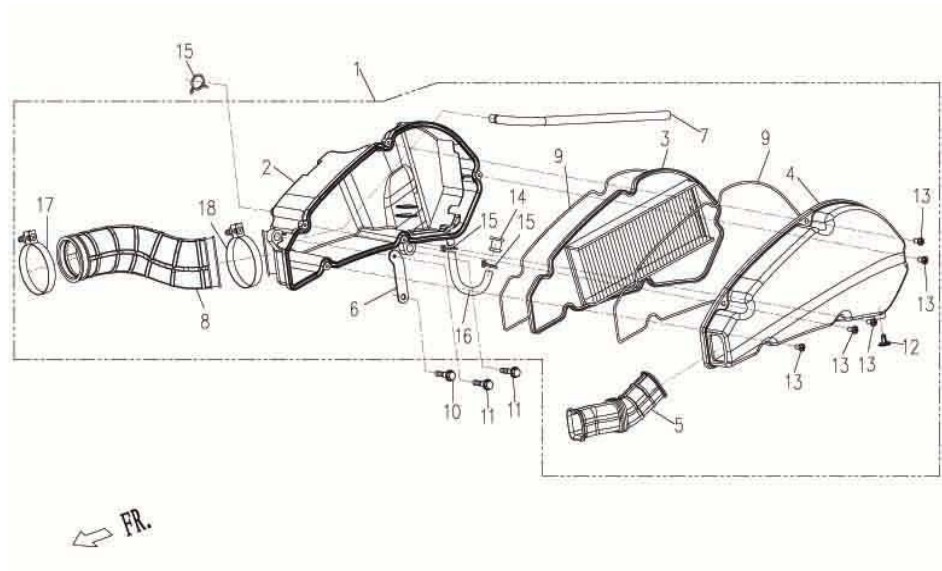


Ref	Code	Part Number	Description	Qty
1	1P52MI-A-111000(1)	07-023-2801	AIR FILTER ASSY	1
2	1P52MI-A-111002(1)	07-023-2802	REAR HOUSING	1
3	1P52MI-A-111100(1)	07-023-2803	FILTER ELEMENT	1
4	1P52MI-A-111001(1)	07-023-2804	FRONT HOUSING	1
5	1P52MI-A-111006(1)	07-023-2805	AIR INLET PIPE	1
6	1P52MI-A-112000(1)	07-023-2806	FRONT BRACKET, AIR CLEANER	1
7	1P52MI-A-111008(1)	07-023-2807	VENT PIPE	1
8	1P52MI-A-111005(1)	07-023-2808	AIR OUTLET PIPE	1
9	1P52MI-A-111009(1)	07-023-2809	SEAL RING	2
10	152MI-023008	07-023-2810	BOLT, M6X18	1
11	152MI-021017	07-023-2811	BOLT, M6X25	2
12	1P52MI-A-111004(1)	07-023-2812	DUST PLUG	1
13	GB/T845-1985	07-023-2813	TAPPING SCREW, ST4.8X20-F-H	5
14	1P52MI-A-111009	07-023-2814	STUD	1
15	QC/T621-1999	07-023-2815	STEEL WIRE CIRCLIP A12	3
16	1P52MI-A-111003(1)	07-023-2816	OVERFLOW PIPE	1
17	1P52MI-A-111300	07-023-2817	CLAMP	1
18	1P52MI-A-111200(1)	07-023-2818	CLAMP 62	1

Fig. 29 Exhaust

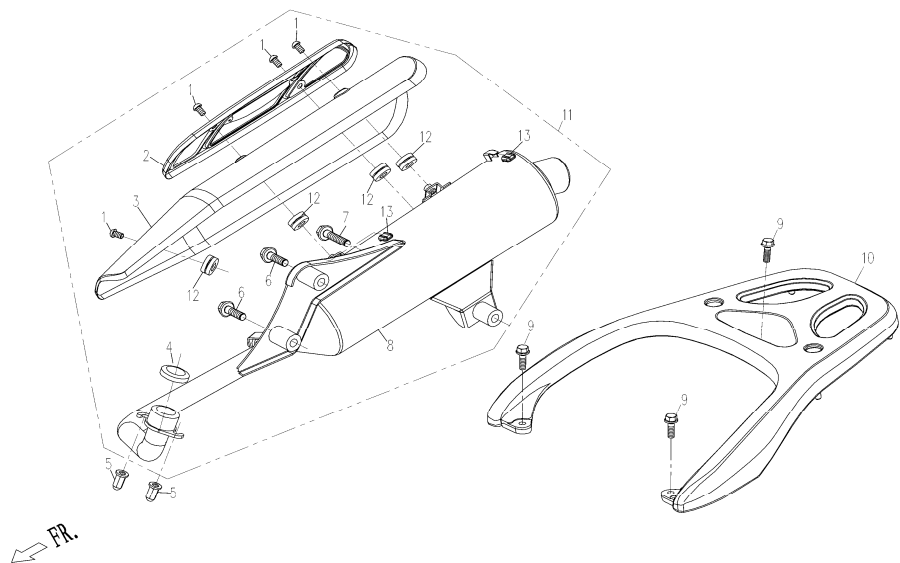


Ref	Code	Part Number	Description	Qty
1	GB9074.4-M6×12	07-023-2901	SCREW, M6X12	4
2	605-02.01.20	07-023-2902	DECORATION COVER, EXHAUST	1
3	605-02.01.01	07-023-2903	HEAT SHIELD, EXHAUST	1
4	50202000001	07-023-2904	GASKET, EXHAUST PORT	1
5	CF250T-440001	07-023-2905	JOINT NUT M8, EXHAUST	2
6	GB5789-M10×1.25×40	07-023-2906	BOLT, M10X1.25X40	2
7	GB5789-M10×1.25×50	07-023-2907	BOLT, M10X1.25X50	1
8	605-02.01.10	07-023-2908	MUFFLER	1
9	GB5789-M8×25	07-023-2909	BOLT, M8X25	3
10	605-14.00.01	07-023-2910	REAR CARRIER RACK	1
11	605-02.01.00	07-023-2911	EXHAUST ASSY	1
12	605-02.01.04	07-023-2912	DAMPING RING, EXHAUST MUFFLER	1
13	605-02.01.06	07-023-2913	DAMPING COLLAR, EXHAUST MUFFLER	4

Fig. 30 Rear Suspension

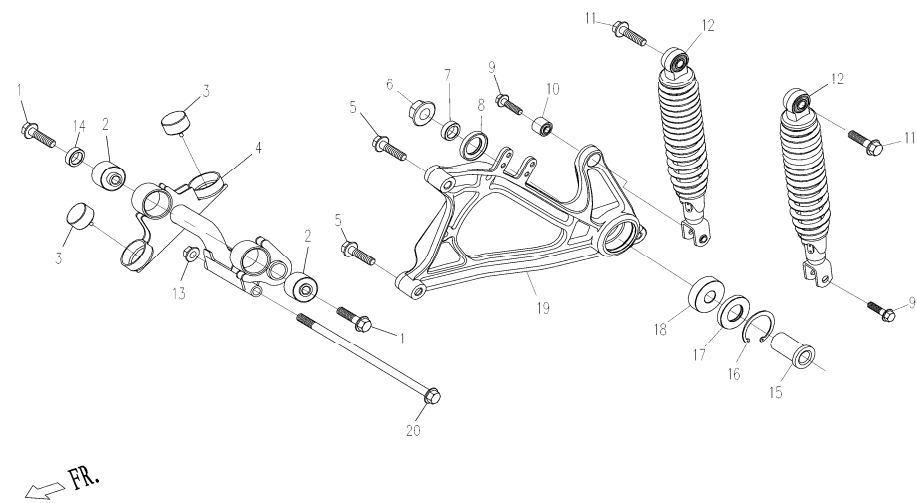


Ref	Code	Part Number	Description	Qty
1	GB5789-M10×1.25×55	07-023-3001	BOLT, M10X1.25X55	2
2	519-06.01.10	07-023-3002	BUSHING, ENGINE MOUNT	2
3	519-06.01.02	07-023-3003	CUSHION, ENGINE MOUNT	2
4	605A-06.01.20	07-023-3004	ENGINE MOUNT	1
5	GB5789-M10×1.25×60	07-023-3005	BOLT, M10X1.25X50	2
6	GB6187-M16×1.5	07-023-3006	NUT, M16X1.5	1
7	519-11.00.03	07-023-3007	OUTER COLLAR, REAR SWINGARM	1
8	FB 40 25 7 GB9877.1-88	07-023-3008	OIL SEAL	1
9	GB5789-M8×35	07-023-3009	BOLT, M8X35	2
10	152MI-011500	07-023-3010	BUSHING., REAR SHOCK	1
11	GB5789-M10×1.25×40	07-023-3011	BOLT, M10X1.25X40	2
12	605A-06.03.00	07-023-3012	REAR SHOCK ABSORBER	2
13	GB6187-M10×1.25	07-023-3013	NUT, M10X1.25	1
14	519-06.01.01	07-023-3014	MOUNTING BUSHING, ENGINE MOUNT	1
15	519-11.00.02	07-023-3015	INNER COLLAR, REAR SWINGARM	1
16	GB893.1 47	07-023-3016	RETAINER	1
17	CF250T-385002	07-023-3017	OIL SEAL, 25X47X5	1
18	GB278-6303-2Z	07-023-3018	BEARING, 6303-2Z	1
19	605-06.02.01	07-023-3019	REAR SWINGARM	1
20	519-06.01.03	07-023-3020	ENGINE MOUNT SHAFT	1

Fig. 31 Front Turn Signal

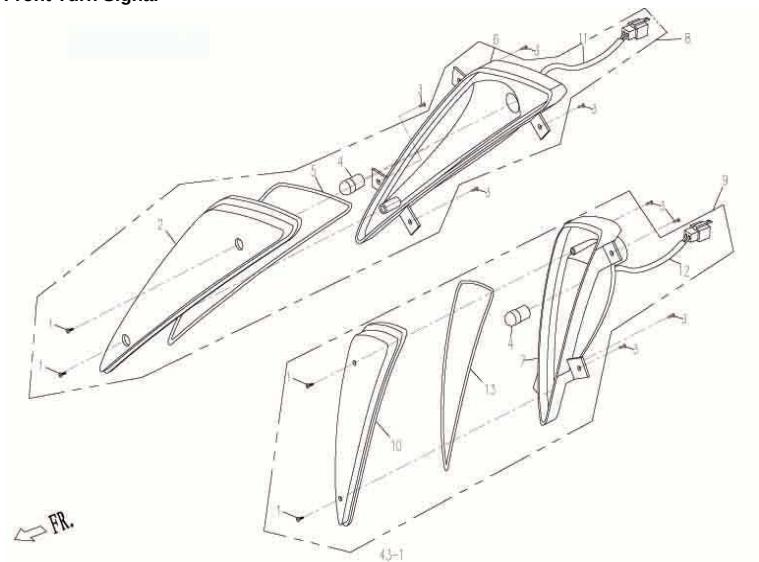

Ref	Code	Part Number	Description	Qty
1	GB845 ST2.9×23	07-023-3101	TAPPING SCREW, ST2.9X23	4
2	605-16.03.21B	07-023-3102	LENS, FR RGT TURN SIGNAL	1
3	GB845 ST4.2×13	07-023-3103	TAPPING SCREW, ST4.2X13	6
4	GB15766.1-2000	07-023-3104	BULB 12V 10W	2
5	605-16.03.16B	07-023-3105	GASKET, FR RGT TURN SIGNAL LENS	2
6	605-16.03.22B	07-023-3106	TURN SIGNAL HOUSING, FR RGT	1
7	605-16.03.12B	07-023-3107	TURN SIGNAL HOUSING, FR LFT	1
8	605-16.03.20B	07-023-3108	TURN SIGNAL ASSY, FR RGT	1
9	605-16.03.10B	07-023-3109	TURN SIGNAL ASSY, FR LFT	1
10	605-16.03.11B	07-023-3110	LENS, FR LFT TURN SIGNAL	1
11	605-16.03.25B	07-023-3111	WIRING HARNESS, FR RGT TURN SIGNAL	1
12	605-16.03.15B	07-023-3112	WIRING HARNESS, FR LFT TURN SIGNAL	1
13	605-16.03.23B	07-023-3113	GASKET, FR LFT TURN SIGNAL LENS	1

Fig. 32 Tail Light

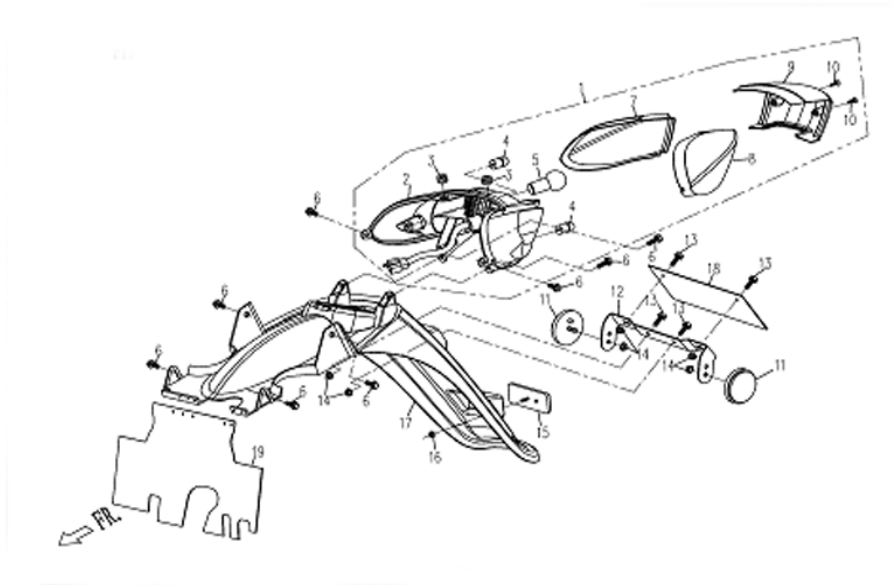


Ref	Code	Part Number	Description	Qty
1	605-16.02.00	07-023-3201	TAIL LIGHT ASSY	1
2	605-16.02.14	07-023-3202	HOUSING, TAIL LIGHT	1
3	605-16.02.41	07-023-3203	MOUNTING RUBBER RING	2
4	GB15766.1-2000	07-023-3204	BULB 12V 10W	2
5	GB15766.1-2000	07-023-3205	BULB 12V 21/5W	1
6	GB5789 M6×12	07-023-3206	BOLT, M6X12	8
7	605-16.02.17	07-023-3207	LENS, RR RGT TURN SIGNAL	1
8	605-16.02.18	07-023-3208	LENS, RR LFT TURN SIGNAL	1
9	605-16.02.12	07-023-3209	LENS, TAIL LIGHT	1
10	GB845 ST4.2×16	07-023-3210	TAPPING SCREW, ST4.2X16	2
11	519-16.02.20	07-023-3211	SIDE REFLECTOR	2
12	519-16.02.01	07-023-3212	BRACKET, REAR LICENSE PLATE	1
13	GB5789 M6×16	07-023-3213	BOLT, M6X16	4
14	GB6177 M6	07-023-3214	NUT, M6	6
15	519-16.02.30	07-023-3215	REAR REFLECTOR	1
16	GB6177-M5	07-023-3216	NUT, M5	1
17	605-04.10.00	07-023-3217	REAR FENDER	1
18		07-023-3218	NA	1
19	605-20.00.01	07-023-3219	RUBBER SPLASH SHIELD	1

This diagram illustrates the components of a vehicle wiring harness, numbered 1 through 30. The central element is a large, curved main harness (7) with multiple branches. Key components include:

- 1, 2, 3, 4:** A cluster of connectors and a switch assembly at the top left.
- 5, 6, 23, 25, 26:** Various cables and connectors on the left side.
- 10, 11, 12, 13:** A fuse block assembly in the center.
- 14, 15, 16, 27, 28, 29, 30:** A series of connectors and cables on the right side.
- 17, 18, 19:** A battery terminal block and associated wiring.
- 20, 21, 22:** A battery unit at the bottom right and two long cables.
- 8, 9:** Two cylindrical components, possibly relays or sensors.


Ref	Code	Part Number	Description	Qty
1	GB 819 M6×12	07-023-3301	SCREW, M6X12	2
2	605-01.05.10	07-023-3302	KEY	2
3	605-01.01.00	07-023-3303	IGNITION SWITCH LOCK	1
4	605-03.81.00	07-023-3304	BATTERY HOLD DOWN	1
5	CF250T-470008	07-023-3305	TIE BAND	20
6	GB819 M5×10	07-023-3306	SCREW, M5X10	1
7	605-15.01.00	07-023-3307	WIRING HARNESS, MAIN	1
8	50215090000	07-023-3308	TURN SIGNAL FLASHER	1
9	10915050001	07-023-3309	JACKET, TURN SIGNAL FLASHER	1
10	CF250T-468000	07-023-3310	FUSE BOX W/FUSES	1
11	CF250T-468010	07-023-3311	FUSE(5A)	2
12	CF250T-468020	07-023-3312	FUSE(10A)	2
13	CF250T-468030	07-023-3313	FUSE BOX	1
14	605-15.04.00	07-023-3314	STARTER RELAY	1
15	1P52MI-A-035000	07-023-3315	IGNITION COIL	1
16	GB818-M5×20	07-023-3316	SCREW, M5X20	1
17	519-15.05.00	07-023-3317	VOLTAGE REGULATOR	1
18	1P52MI-A-034000	07-023-3318	CDI	1
19	GB5789-M6×16	07-023-3319	BOLT, M6X16	2
20	12V8Ah	07-023-3320	BATTERY	1
21	519-15.03.00	07-023-3321	BRAKE LIGHT SWITCH WIRING HARNESS	2
22	50215070000	07-023-3322	HORN	1
23	605-15.02.00	07-023-3323	BATTERY CABLE	1
24	GB5789-M8×14	07-023-3324	BOLT, M8X14	1
25	GB5789-M6×12	07-023-3325	BOLT, M6X12	3
26	GB6177 M6	07-023-3326	NUT, M6	1
27	605-16.04.00	07-023-3327	PARKING SWITCH	1
28	GB818 M5×12	07-023-3328	SCREW, M5X12	2
29	CF250T-332000	07-023-3329	KILL SWITCH, SIDE STAND	1
30	CF250T-332001	07-023-3330	FLANGE BOLT, M6X16	1

Fig. 34 Front Hydraulic Brake

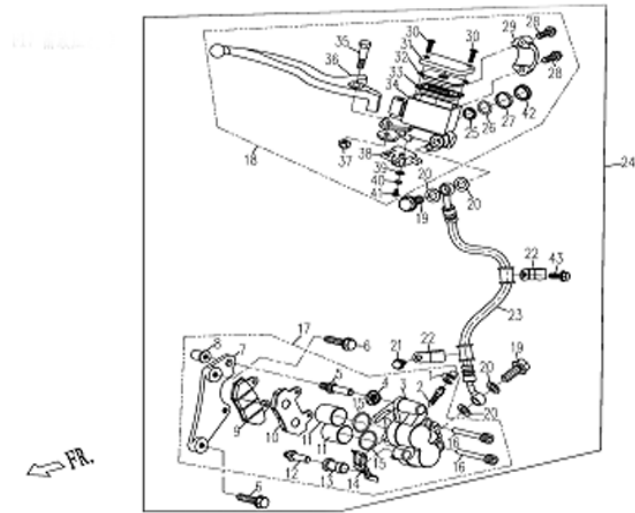


Ref	Code	Part Number	Description	Qty
1	519-08.01.66	07-023-3401	COVER, BLEED SCREW	1
2	519-08.01.65	07-023-3402	BLEED SCREW	1
3	605-08.01.52	07-023-3403	CALIPER BODY, FR BRAKE	1
4	519-08.02.62	07-023-3404	RUBBER COLLAR, MAIN SLIDING SHAFT	1
5	519-08.02.63	07-023-3405	MAIN SLIDING SHAFT	1
6	GB5789 M8×32	07-023-3406	BOLT, M8X32	2
7	605-08.01.70	07-023-3407	MOUNTING BRACKET	1
8	519-08.02.64	07-023-3408	GUIDE ROD, OUTER BRAKE PAD	1
9	605-08.01.80	07-023-3409	OUTER BRAKE PAD	1
10	519-08.02.56	07-023-3410	INNER BRAKE PAD	1
10A		07-023-3410A	BRAKE PAD SET	1
11	519-08.02.57	07-023-3411	BRAKE CALIPER PISTON, FR	2
12	519-08.02.59	07-023-3412	SECONDARY SLIDING SHAFT	1
13	519-08.02.64	07-023-3413	RUBBER COLLAR, SEC. SLIDING SHAFT	1
14	519-08.02.54	07-023-3414	BRAKE PAD TONGUE	1
15	519-08.02.51	07-023-3415	RECTANGULAR SEAL RING	2
16	519-08.02.53	07-023-3416	GUIDE ROD	2
17	519-08.01.50	07-023-3417	BRAKE CALIPER, FR	1
18	519-08.01.10	07-023-3418	MASTER CYLINDER, FR	1
19	519-08.01.08	07-023-3419	BOLT, FR BRAKE LINE	2
20	519-08.01.09	07-023-3420	COPPER GASKET	4
21	GB5789 M6×16	07-023-3421	BOLT, M6X16	1
22	605-08.01.03	07-023-3422	CLAMP	2
23	519-08.01.30	07-023-3423	HOSE, FRONT BRAKE	1
24	605-08.01.00	07-023-3424	FRONT HYDRAULIC BRAKE ASSY	1
25	519-08.01.29	07-023-3425	SUPPORT RING	1
26	519-08.01.16	07-023-3426	O-RING	1
27	519-08.01.28	07-023-3427	GASKET, BRAKE FLUID INSPECTION	1
28	519-08.01.27	07-023-3428	BOLT	2
29	519-08.01.26	07-023-3429	BRACKET, MASTER CYLINDER	1
30	GB819 M4×12	07-023-3430	SCREW, M4X12	2
31	519-08.01.11	07-023-3431	COVER, MASTER CYLINDER	1
32	519-08.01.12	07-023-3432	PAD, MASTER CYLINDER	1
33	519-08.01.13	07-023-3433	GASKET, MASTER CYLINDER	1
34	519-08.01.14	07-023-3434	BODY, MASTER CYLINDER	1
35	519-08.01.24	07-023-3435	BOLT, FR BRAKE LEVER	1
36	519-08.01.23	07-023-3436	BRAKE LEVER, FR	1
37	GB6187 M6	07-023-3437	NUT, M6	1
38	519-08.01.25	07-023-3438	BRAKE LIGHT SWITCH, FR	1
39	GB95 4	07-023-3439	WASHER 4	1
40	GB93 4	07-023-3440	WASHER 4	1
41	GB818 M4×10	07-023-3441	SCREW, M4X10	1
42	519-08.01.15	07-023-3442	LENS, BRAKE FLUID INSPECTION	1
43	GB5789 M6×12	07-023-3443	BOLT, M6X12	1

Fig. 35 Rear Hydraulic Brake

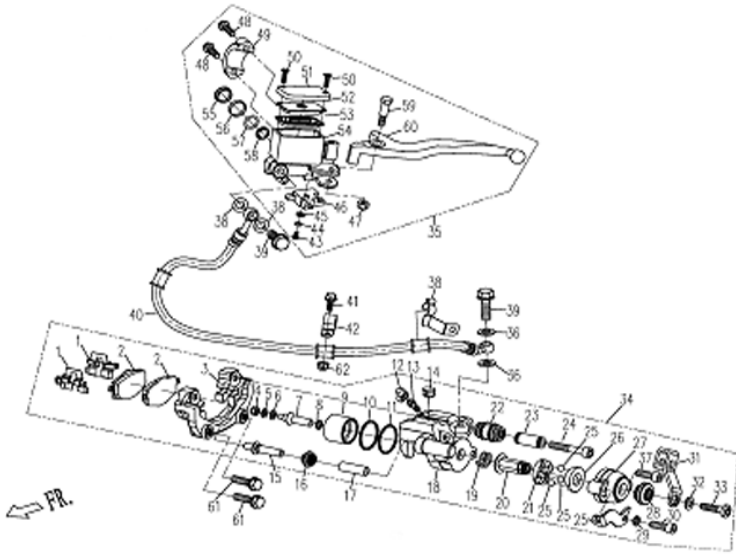

Ref	Code	Part Number	Description	Qty
1	605-08.02.71	07-023-3501	CUSHION	2
2	605-08.02.90	07-023-3502	BRAKE PAD	2
3	605-08.02.69	07-023-3503	MOUNTING BRACKET	1
4	GB6172-86 M6	07-023-3504	NUT, M6	1
5	GB859 6	07-023-3505	WASHER 6	1
6	GB848 6	07-023-3506	WASHER 6	1
7	605-08.02.56	07-023-3507	ADJUSTING ROD	1
8	605-08.02.65	07-023-3508	O-RING	1
9	605-08.02.63	07-023-3509	BRAKE CALIPER PISTON, RR	1
10	605-08.02.65	07-023-3510	RECTANGULAR SEAL RING	1
11	519-08.02.51	07-023-3511	RECTANGULAR SEAL RING	1
12	519-08.01.55	07-023-3512	COVER, BLEED SCREW	1
13	519-08.01.54	07-023-3513	BLEED SCREW	1
14	605-08.02.66	07-023-3514	DUST PLUG	1
15	605-08.02.72	07-023-3515	MAIN SLIDING SHAFT	1
16	605-08.02.73	07-023-3516	RUBBER COLLAR, MAIN SLIDING SHAFT	1
17	605-08.02.68	07-023-3517	COLLAR	1
18	605-08.02.61	07-023-3518	CALIPER BODY, RR BRAKE	1
19	605-08.02.64	07-023-3519	SPRING	1
20	605-08.02.59	07-023-3520	PARKING PISTON C	1
21	605-08.02.58	07-023-3521	PARKING PISTON B	1
22	605-08.02.74	07-023-3522	RUBBER COLLAR, SEC. SLIDING SHAFT	1
23	605-08.02.75	07-023-3523	SECONDARY SLIDING SHAFT	1
24	GB5789 M8×50	07-023-3524	BOLT, M8X50	1
25	605-08.02.74	07-023-3525	BALL	3
26	605-08.02.57	07-023-3526	PARKING PISTON A	1
27	605-08.02.62	07-023-3527	SUB-PUMP BODY, REAR BRAKE	1
28	605-08.02.55	07-023-3528	SEALING COLLAR	1
29	GB859 8	07-023-3529	WASHER 8	1
30	GB70 M8×35	07-023-3530	SCREW, M8X35	1
31	605-08.02.53	07-023-3531	PARKING ROCKARM	1
32	605-08.02.52	07-023-3532	WASHER	1
33	605-08.02.51	07-023-3533	HEXAGONAL SCREW	1
34	605-08.02.50	07-023-3534	RR BRAKE CALIPER ASSY	1
35	605-08.02.10	07-023-3535	MASTER CYLINDER, RR	1
36	519-08.01.09	07-023-3536	COPPER GASKET	1
37	GB70 M8×40	07-023-3537	SCREW, M8X40	1


Fig. 35 Rear Hydraulic Brake, cont

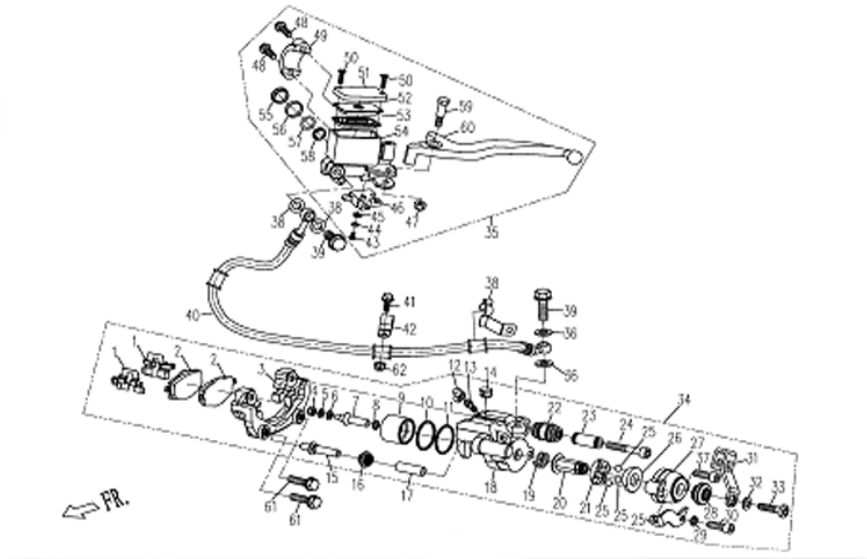

Ref	Code	Part Number	Description	Qty
38	605-08.00.05	07-023-3538	PIPE CLIP	1
39	519-08.01.08	07-023-3539	FILLING BOLT	4
40	605-08.02.30	07-023-3540	RR BRAKE HOSE	1
41	GB5789 M6×25	07-023-3541	BOLT, M6X25	1
42	605-08.01.03	07-023-3542	CLAMP	1
43	GB818 M4×10	07-023-3543	SCREW, M4X10	1
44	GB93 4	07-023-3544	WASHER 4	1
45	GB95 4	07-023-3545	WASHER 4	1
46	519-08.02.25	07-023-3546	BRAKE LIGHT SWITCH, RR	1
47	GB6187 M6	07-023-3547	NUT, M6	1
48	519-08.01.27	07-023-3548	BOLT	2
49	519-08.01.26	07-023-3549	BRACKET, MASTER CYLINDER	1
50	GB819 M4×12	07-023-3550	SCREW, M4X12	2
51	605-08.02.11	07-023-3551	COVER, MASTER CYLINDER	1
52	605-08.02.12	07-023-3552	PAD, MASTER CYLINDER	1
53	605-08.02.13	07-023-3553	GASKET, MASTER CYLINDER	1
54	605-08.02.14	07-023-3554	BRAKE PUMP BODY.	1
55	519-08.01.15	07-023-3555	LENS, BRAKE FLUID INSPECTION	1
56	519-08.01.28	07-023-3556	GASKET, BRAKE FLUID INSPECTION	1
57	519-08.01.16	07-023-3557	O-RING	1
58	519-08.01.29	07-023-3558	SUPPORT RING	1
59	519-08.01.24	07-023-3559	BOLT, RR BRAKE LEVER	1
60	605-08. 01.23	07-023-3560	BRAKE LEVER, RR	1
61	GB5789-M8×35	07-023-3561	BOLT, M8X35	2
62	GB6177 M6	07-023-3562	NUT, M6	1
63	605-08.02.00	07-023-3563	RR HYDRAULIC BRAKE SYSTEM	1


Ref	Code	Part Number	Description	Qty
1	QC/T621-1999	07-023-3601	CIRCLIP 22, B-TYPE	10
2	50218000005	07-023-3602	PROTECTIVE COVER, WATER PIPE	2
3	605-18.00.14	07-023-3603	WATER OUTLET PIPE	1
4	605-18.00.15	07-023-3604	WATER INLET PIPE	1
5	605-18.09.00	07-023-3605	STEEL WATER PIPE	1
6	605-18.00.13	07-023-3606	COUPLING HOSE	2
7	605-18.08.00	07-023-3607	STEEL WATER PIPE I	1
8	605-18.07.00	07-023-3608	STEEL WATER PIPE II	1
9	605-18.00.11A	07-023-3609	WATER INLET HOSE, RADIATOR	1
10	605-18.00.12A	07-023-3610	WATER OUTLET HOSE, RADIATOR	1
11	605-18.01.00A	07-023-3611	RADIATOR	1
12	605-18.04.00	07-023-3612	RADIATOR CAP	1
13	605-18.02.00	07-023-3613	COOLING FAN	1
14	1P52MI-135000	07-023-3614	THERMOSWITCH ASSY	1
15	1P52MI-135010	07-023-3615	NA	1
16	1P52MI-130004	07-023-3616	O-RING 13.5X1.4	1
17	QC/T621 A 10.5	07-023-3617	CIRCLIP 10.5, A-TYPE	2
18	QC/T621A 6.5	07-023-3618	CIRCLIP 6.5, A-TYPE	2
19	605-18.00.10	07-023-3619	SMALL CYCLE WATER PIPE	1
20	605-18.00.07	07-023-3620	WATER PIPE, OVERFLOW RESERVOIR	1
21		07-023-3621	WATER SUCTION PIPE	1
22		07-023-3622	CAP, OVERFLOW RESERVOIR	1
23	GB5789 M6×12	07-023-3623	BOLT, M6X12	13
24	605-18.03.01	07-023-3624	OVERFLOW RESERVOIR TANK	1
25	CF250T-340008	07-023-3625	CLAMP NUT M6	1
26	605-18.06.00	07-023-3626	STEEL COOLANT PIPE	1
27	QC/T621-1999	07-023-3627	CIRCLIP 20, B TYPE	2
28	GB6177 M6	07-023-3628	NUT, M6	1

Fig. 37 Frame Assembly

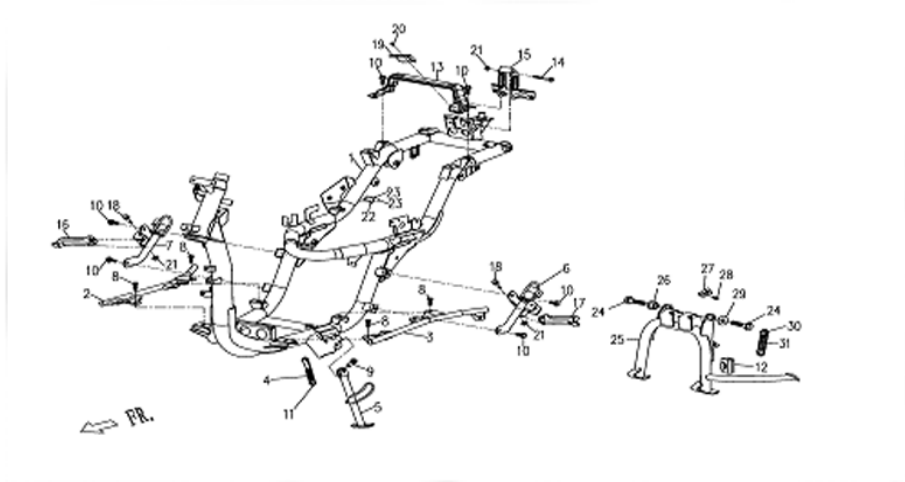

Ref	Code	Part Number	Description	Qty
1	605-03.01.00	07-023-3701	FRAME	1
2	605-03.77.00	07-023-3702	SIDE TUBE,FOOTREST DECK RGT	1
3	605-03.76.00	07-023-3703	SIDE TUBE, FOOTREST DECK LFT	1
4	519-03.00.17	07-023-3704	SPRING, SIDE STAND	1
5	605A-03.72.00	07-023-3705	SIDE STAND	1
6	605-03.74.00	07-023-3706	BRACKET, FOOT PEDAL LFT	1
7	605-03.75.00	07-023-3707	BRACKET, FOOT PEDAL RGT	1
8	GB/T70.2 M8×20	07-023-3708	BOLT, M8X20	4
9	605-03.00.04	07-023-3709	BOLT, SIDE STAND	1
10	GB5789 M8×20	07-023-3710	BOLT, M8X20	6
11	519-03.00.18	07-023-3711	SMALL SPRING, SIDE STAND	1
12	519-00.10.03	07-023-3712	RUBBER CUSHION, MAIN STAND	1
13	605-03.82.00	07-023-3713	TOP HOLDER, SEAT	1
14	GB5789 M6×50	07-023-3714	BOLT, M6X50	1
15	605-03.83.00	07-023-3715	BRACKET, TAIL LIGHT	1
16	605-03.79.10	07-023-3716	RR FOOT PEG, RGT	1
17	605-03.78.10	07-023-3717	RR FOOT PEG, LFT	1
18	519-03.00.13	07-023-3718	FLANGE BOLT M6, FOOT PEG	2
19	605-03.00.01	07-023-3719	BRACKET, ANTITHEFTLOCK	1
20	GB818 M5×12	07-023-3720	CROSS SCREW	1
21	GB6177 M6	07-023-3721	NUT, M6	3
22	519-03.00.14	07-023-3722	NAMEPLATE	1
23	GB 12618 4×8	07-023-3723	RIVET	2
24	GB5789 M10×35	07-023-3724	BOLT, M10X35	2
25	605A-00.10.10	07-023-3725	MAIN STAND	1
26	519-00.10.01	07-023-3726	RIGHT BUSH, MAIN STAND	1
27		07-023-3727	SPRING HANGER, MAIN STAND	1
28	GB70 M6×12	07-023-3728	SCREW, M6X12	1
29	519-00.10.02	07-023-3729	LEFT BUSH, MAIN STAND	1
30	519-00.10.05	07-023-3730	SMALL SPRING, MAIN STAND	1
31	519-00.10.04	07-023-3731	SPRING, MAIN STAND	1

Fig, 38 Tools Comp

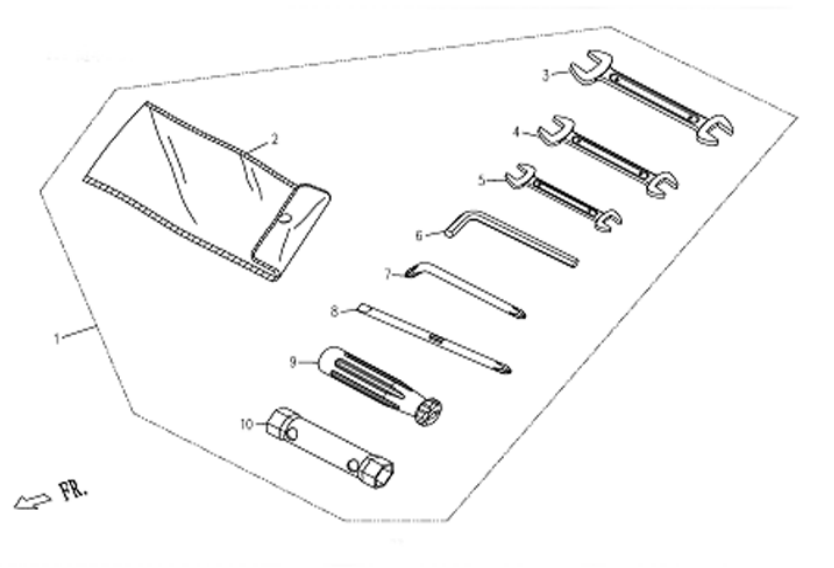

Ref	Code	Part Number	Description	Qty
1	519-20.30.00	07-023-3801	TOOL KIT	1
2	519-20.30.09	07-023-3802	TOOLS BAG	1
3	519-20.30.08	07-023-3803	DOUBLE-END SPANNER14×17	1
4	519-20.30.07	07-023-3804	DOUBLE-END SPANNER 10×12	1
5	519-20.30.06	07-023-3805	DOUBLE-END SPANNER 8×10	1
6	519-20.30.05	07-023-3806	INNER HEXAGONAL SPANNER	1
7	519-20.30.04	07-023-3807	BENT SCREWDRIVER	1
8	519-20.30.03	07-023-3808	DOUBLE-END SCREWDRIVER	1
9	519-20.30.02	07-023-3809	DOUBLE-END SCREWDRIVER HANDLE	1
10	519-20.30.01	07-023-3810	SOCKET WRENCH 18×16	1