

DIAMO® Storm

PARTS CATALOG

First Edition January 2007



The information and diagrams included in this catalog are the exclusive property of LS MotorSports, LLC and may not be reproduced in any media without the express written consent of LS MotorSports, LLC.

For more information contact:

LS MotorSports, LLC
10215 S Sam Houston Parkway W, Suite 100
Houston, TX 77071
281-277-6140

*Information contained in this publication is subject to change without notice.
For the most up to date information please contact DIAMO USA or an Authorized Dealer*



www.DIAMOUSA.com

CONTENTS

PAGE

4
5
6
7
8
9
10
11
12
13
14
15
16
17
18
19
20
21
22
23
24
25
26
27
28
29
30
31
32


TITLE

Documents
Cylinder Head
Cylinder
Crankcase
Crankcase Covers
Crankshaft and Piston
Starter Clutch
Crankshaft
Camshaft
Cam Chain and Adjuster
Oil Pump
Clutch
Transmission
Shift Linkage
Starter Motor
Magneto
Frame and Rear Suspension
Steering Stem
Front Suspension, Brake and Wheel
Rear Wheel and Brake
Footrest and Shift Arm
Rear Axle
Carburetor and Air Filter
Exhaust
Fuel Tank
Handle Bar
Electrical and Cables
Seat
Body

Fig. 00 Documents


Ref	Code	Part Number	Description	
0-1		07-031-0001	Owners Manual	
0-2		07-031-0002	Parts Catalog CD	
0-3		07-031-0003	Service Manual	

Fig. 01 Cylinder Head

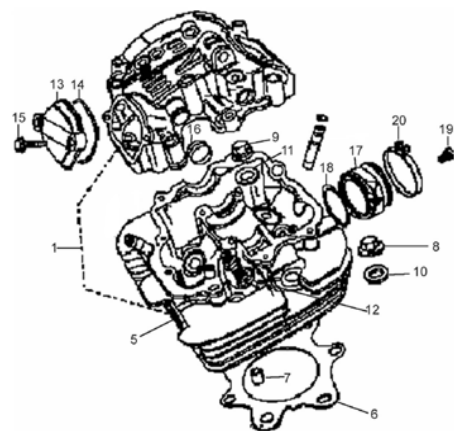


Ref	Code	Part Number	Description	
1-1	LX11111-38204	07-031-0101	Cylinder Head Assy	
1-5	LX09206-08001	07-031-0105	Pin	
1-6	LX11141-38201	07-031-0106	Gasket, Cylinder Head	
1-7	LX04211-13189	07-031-0107	Pin	
1-8	LX09519-10026	07-031-0108	Nut	
1-9	LX09159-10069	07-031-0109	Nut	
1-10	LX09160-10039	07-031-0110	Washer	
1-11	LX09168-10017	07-031-0111	Washer	
1-12	LX09428-00399	07-031-0112	Spark Plug	
1-13	LX11175-38202	07-031-0113	Cover, Valve Inspection	
1-14	LX09280-55003	07-031-0114	Oring	
1-15	LX01550-06257	07-031-0115	Bolt	
1-17	LX13110-38200	07-031-0117	Intake Manifold	
1-18	LX09280-40003	07-031-0118	Oring	
1-19	LX02112-36163	07-031-0119	Bolt	

Fig. 02 Cylinder

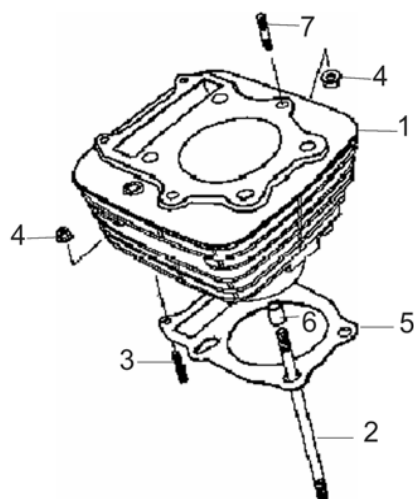


Ref	Code	Part Number	Description	
2-1	LX11210-38204	07-031-0201	Cylinder	
2-2	LX09108-10030	07-031-0202	Stud bolt	
2-3	LX09108-06002	07-031-0203	Stud bolt M6x25	
2-4	LX08316-10067	07-031-0204	Nut M6	
2-5	LX11241-38301	07-031-0205	Gasket, Cylinder Base	
2-6	LX04211-13189	07-031-0206	Pin $\Phi 13 \times 18$	
2-7	LX01421-06308	07-031-0207	Stud bolt M6x30	

Fig. 03 Crankcase

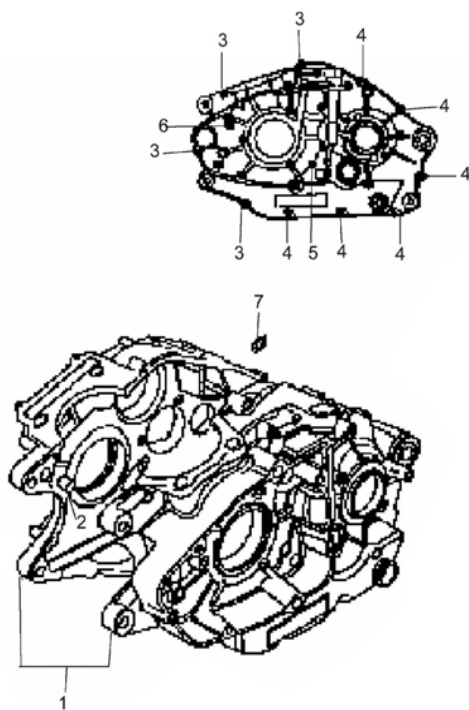


Ref	Code	Part Number	Description	
3-1	LX11300-38302	07-031-0301	Crankcase Assy	
3-2	LX04211-13189	07-031-0302	Pin $\Phi 13 \times 18$	
3-3	LX01547-06357	07-031-0303	Bolt M6x35	
3-4	LX01547-06457	07-031-0304	Bolt M6x45	
3-5	LX01547-06553	07-031-0305	Bolt M6x55	
3-6	LX01547-06603	07-031-0306	Bolt M6x60	
3-7	LX09280-10015	07-031-0307	O-ring	

Fig. 04 Crankcase Covers

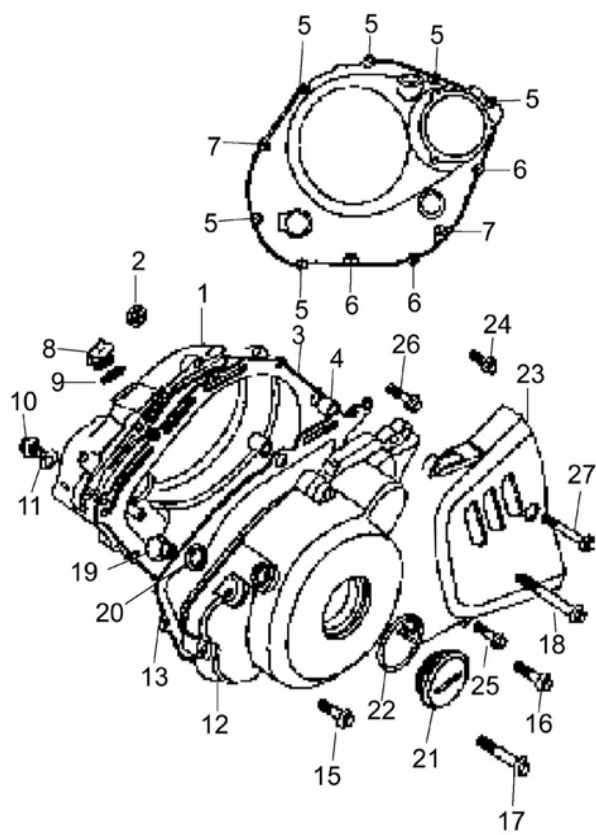


Ref	Code	Part Number	Description	
4-1	LX11341-38302	07-031-0401	Cover, Clutch	
4-2	LX11971-42010	07-031-0402	Lens, Oil Level	
4-3	LX11482-38311	07-031-0403	Gasket Clutch Cover	
4-4	LX04211-13189	07-031-0404	Pin $\Phi 13 \times 18$	
4-5	LX01547-06257	07-031-0405	Bolt M6x25	
4-6	LX01547-06357	07-031-0406	Bolt M6x35	
4-7	LX01547-06457	07-031-0407	Bolt M6x45	
4-8	LX09259-20007	07-031-0408	Plug, Oil fill	
4-9	LX09280-17003	07-031-0409	O-ring	
4-10	LX09247-14012	07-031-0410	Plug, Oil Check	
4-11	LX09168-14002	07-031-0411	Gasket	
4-12	LX011351-38300	07-031-0412	Cover, Magneto	
4-13	LX011483-37D00	07-031-0413	Gasket	
4-15	LX01547-06257	07-031-0415	Bolt M6x25	
4-16	LX01547-06357	07-031-0416	Bolt M6x35	
4-17	LX01547-06507	07-031-0417	Bolt M6x50	
4-18	LX01547-06607	07-031-0418	Bolt M6x60	
4-19	LX09247-12104	07-031-0419	Plug, Top Dead Center	
4-20	LX09168-12002	07-031-0420	Gasket	
4-21	LX09259-36011	07-031-0421	Cap	
4-22	LX09280-33004	07-031-0422	O-ring	
4-23	LX11361-38300	07-031-0423	Chain cover	
4-24	LX01547-05207	07-031-0424	Bolt	
4-25	LX01547-05257	07-031-0425	Bolt	
4-26	LX01547-05307	07-031-0426	Bolt	
4-27	LX01547-05457	07-031-0427	Bolt	

Fig. 05 Crankshaft & Piston

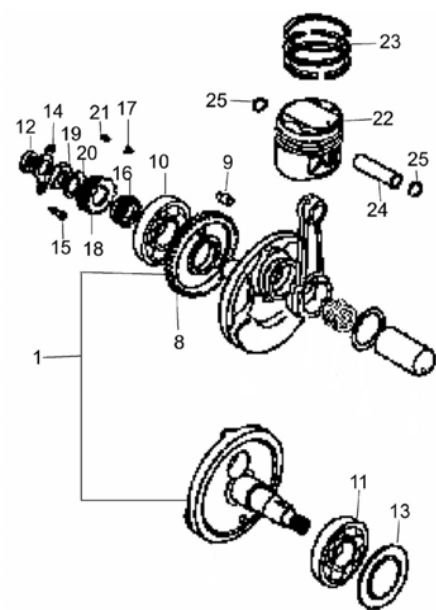


Ref	Code	Part Number	Description	
5-1	LX12901-38311	07-031-0501	Crankshaft assy	
5-8	LX12661-38202	07-031-0508	Drive,gear balancer	
5-9	LX09209-12006	07-031-0509	Pin	
5-10	LX09262-30070	07-031-0510	Bearing RH(30x72x19)	
5-11	LX09262-35028	07-031-0511	Bearing LH(35x80x21)	
5-12	LX09282-14001	07-031-0512	Oil seal RH(14x26x6)	
5-13	LX12521-38300	07-031-0513	Washer	
5-14	LX12548-38200	07-031-0514	Plate,RH	
5-15	LX02122-05103	07-031-0515	Screw	
5-16	LX12731-38200	07-031-0516	Sprocket drive	
5-17	LX12749-32400	07-031-0517	Key,sprocket	
5-18	LX21111-38200	07-031-0518	Primary drive gear	
5-19	LX09140-20008	07-031-0519	Nut	
5-20	LX09164-20003	07-031-0520	Washer	
5-21	LX09421-07002	07-031-0521	Key,gear	
5-22	LX12111-38201	07-031-0522	Piston	
5-23	LX12141-49221	07-031-0523	Ring set,piston assy	
5-24	LX12151-15501	07-031-0524	Pin	
5-25	LX09381-18002	07-031-0525	Circlip	

Fig. 06 Starter Clutch

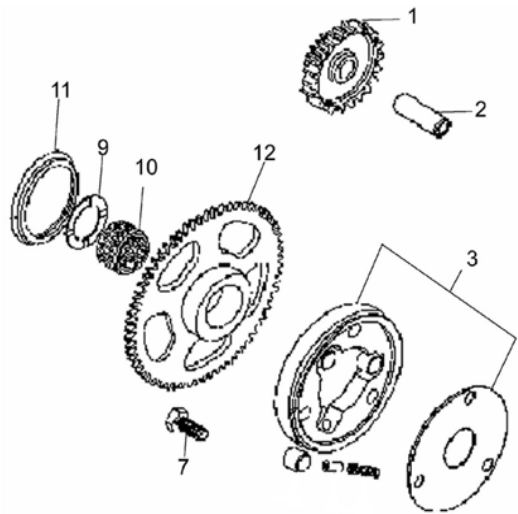


Ref	Code	Part Number	Description	
6-1	LX12611-38300	07-031-0601	Gear,starter idle(NT:51x19)	
6-2	LX09206-13007	07-031-0602	Pin(13x40)	
6-3	LX12600-38303	07-031-0603	Clutch set starter	
6-7	LX09100-08299	07-031-0607	Bolt M8x20	
6-9	LX09160-27005	07-031-0609	Washer	
6-10	LX09263-27004	07-031-0610	Bearing(27x32x21.8)	
6-11	LX09289-52002	07-031-0611	Oil seal	
6-12	LX12620-38301	07-031-0612	Gear,clutch(NT:67)	

Fig. 07 Crankshaft

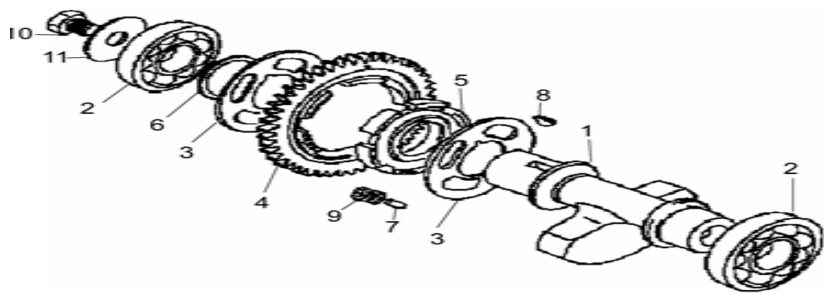


Ref	Code	Part Number	Description	
7-1	LX12651-38202	07-031-0701	Crankshaft balancer	
7-2	LX09262-25047	07-031-0702	Bearing(25x62x17)	
7-3	LX12663-38200	07-031-0703	Washer Driven gear	
7-4	LX12666-38200	07-031-0704	Gear driven(NT:46)	
7-5	LX12669-38200	07-031-0705	Inner race driven gear	
7-6	LX09181-25186	07-031-0706	Washer	
7-7	LX09202-04017	07-031-0707	Pin	
7-8	LX08341-31049	07-031-0708	Woodruff key	
7-9	LX09440-09015	07-031-0709	Spring	
7-10	LX01500-12163	07-031-0710	Bolt M12x16	
7-11	LX09160-12034	07-031-0711	Washer 12x40x2.5	

Fig. 08 Camshaft

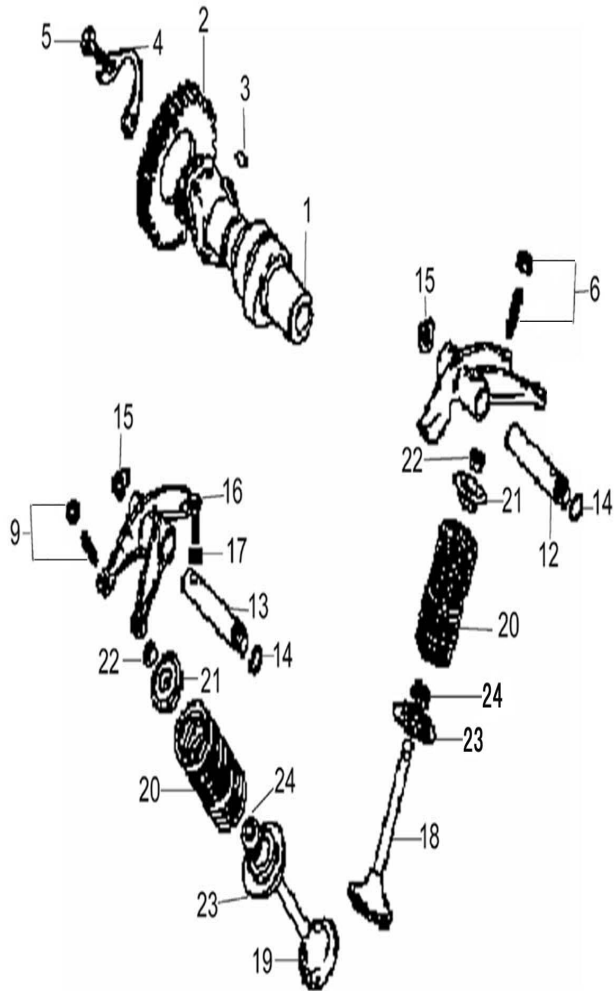


Ref	Code	Part Number	Description	
8-1	LX12711-38202	07-031-0801	Camshaft	
8-2	LX12741-37400	07-031-0802	Sprocket	
8-3	LX04221-05109	07-031-0803	Pin	
8-4	LX12747-44000	07-031-0804	Washer	
8-5	LX09111-06027	07-031-0805	Bolt	
8-6	LX12840-38201	07-031-0806	Arm valve rocker, intake	
8-9	LX12850-38201	07-031-0809	Arm valve rocker, exhaust	
8-12	LX12861-38200	07-031-0812	Shaft, Rocker Arm Intake	
8-13	LX12871-38200	07-031-0813	Shaft,Rocker Arm exhaust	
8-14	LX09280-09005	07-031-0814	O-ring 8.6x1.9	
8-15	LX09164-12018	07-031-0815	Washer	
8-16	SA0630-HZ	07-031-0816	Rocker Arm	
8-17	104425-M200-00001	07-031-0817	Nut	
8-18	LX12911-38200	07-031-0818	Valve, Intake	
8-19	LX12912-38201	07-031-0819	Valve, Exhaust	
8-20	LX12921-38211	07-031-0820	Spring, Valve	
8-21	LX12931-49200	07-031-0821	Seat, Valve Spring	
8-22	LX12932-49200	07-031-0822	Cotter, Valve	
8-23	LX12933-38200	07-031-0823	Seat, Valve Spring	
8-24	LX09289-05006	07-031-0824	Oil seal 5.5x11x8.2	

Fig. 09 Cam Chain and Adjuster

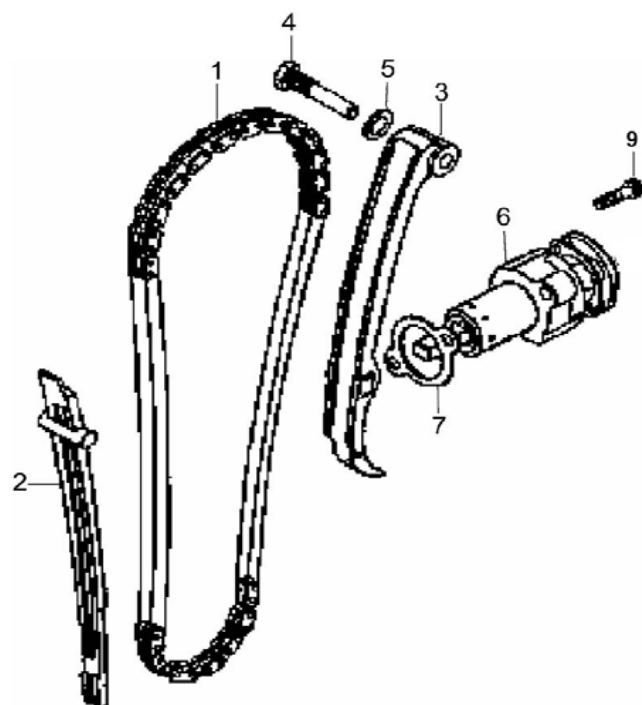


Ref	Code	Part Number	Description	
9-1	LX12760-13F00	07-031-0901	Chain, Cam	
9-2	LX12771-38200	07-031-0902	Guide Cam Chain	
9-3	LX12811-38200	07-031-0903	Tensioner Rail,Cam Chain	
9-4	LX12812-32400	07-031-0904	Bolt	
9-5	LX09168-08008	07-031-0905	Washer(8.2x14x1)	
9-6	LX12830-38201	07-031-0906	Adjuster, Tensioner	
9-7	LX12837-24A10	07-031-0907	Gasket	
9-9	LX07130-06257	07-031-0908	Bolt M6x25	

Fig. 10 Oil Pump

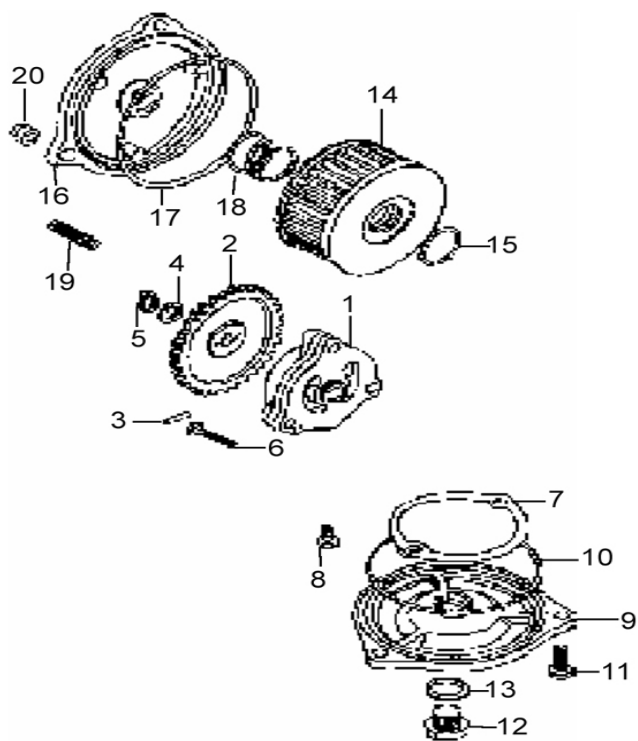


Ref	Code	Part Number	Description	
10-1	LX16400-38200	07-031-1001	Oil pump assy	
10-2	LX16331-38200	07-031-1002	Gear driven(NT:33)	
10-3	LX09261-04009	07-031-1003	Pin	
10-4	LX09181-10158	07-031-1004	Washer 10x18x0.5	
10-5	LX08331-31109	07-031-1005	Circlip	
10-6	LX02112-06235	07-031-1006	Screw	
10-7	LX16520-37400	07-031-1007	Strainer,Engine Oil	
10-8	LX02112-75123	07-031-1008	Screw	
10-9	LX16523-38200	07-031-1009	Cap,Strainer	
10-10	LX09280-82001	07-031-1010	O-ring(82x2.4)	
10-11	LX01547-06203	07-031-1011	Bolt M6x20	
10-12	LX09247-14011	07-031-1012	Oil Drain Bolt M14x12	
10-13	LX09168-14002	07-031-1013	Gasket	
10-14	LX16510-38240	07-031-1014	Filter,Engine Oil	
10-15	LX09280-15007	07-031-1015	O-ring	
10-16	LX16512-38220	07-031-1016	Cap,Oil Filter	
10-17	LX09280-72001	07-031-1017	O-ring(73.8x2.4)	
10-18	LX09440-21006	07-031-1018	Spring	
10-19	LX09108-06128	07-031-1019	Stud bolt	
10-20	LX08313-10067	07-031-1020	Nut M6x10x9.5	

Fig. 11 Clutch

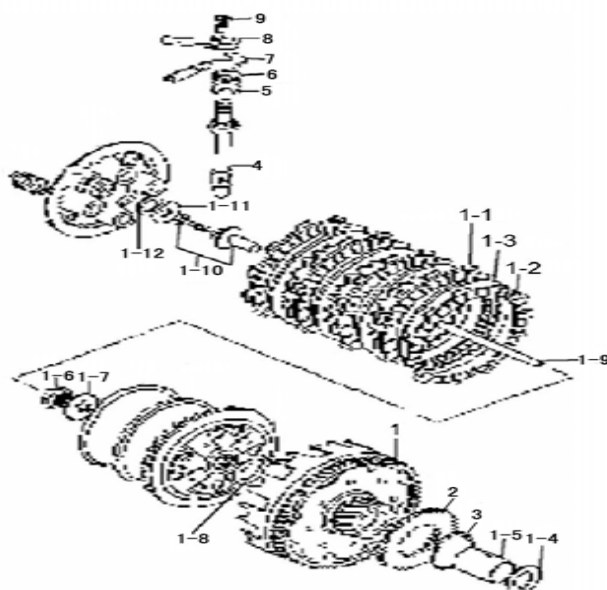


Ref	Code	Part Number	Description	
A	LX106000-13AB-00	07-031-110A	Primary Clutch	
11-1-1	LX21441-37400	07-031-1101A	Drive Disc 1	
11-1-2	LX21442-37401	07-031-1101B	Drive Disc 2	
11-1-3	LX21451-37400	07-031-1101C	Drive Disc 3	
11-1-4	LX08211-22363	07-031-1101D	Washer 22x36x2	
11-1-5	LX09180-22024	07-031-1101E	Spacer	
11-1-6	LX09140-22005	07-031-1101F	Nut	
11-1-7	LX09167-22010	07-031-1101G	Lock Washer	
11-1-8	LX08211-22363	07-031-1101H	Washer(22x36x2)	
11-1-9	LX23110-38201	07-031-1101I	Rod,Push	
11-1-10	LX23109-38201	07-031-1101J	Seat, Bearing	
11-1-11	LX09263-15003	07-031-1101K	Thrust Bearing	
11-1-12	LX09160-15045	07-031-1101L	Washer	
11-2	LX16321-38200	07-031-1102	Drive Gear Oil Pump	
11-3	LX09380-50001	07-031-1103	Circlip A	
11-4	LX23122-38200	07-031-1104	Cam Shaft	
11-5	LX09160-14054	07-031-1105	Washer	
11-6	LX09285-12002	07-031-1106	Oil Seal	
11-7	106397-M200-00001	07-031-1107	Circlip,Oil Seal	
11-8	LX23271-12D10	07-031-1108	Arm Rocker	
11-9	LX01500-06207	07-031-1109	Bolt(M6x20)	

Fig. 12 Transmission

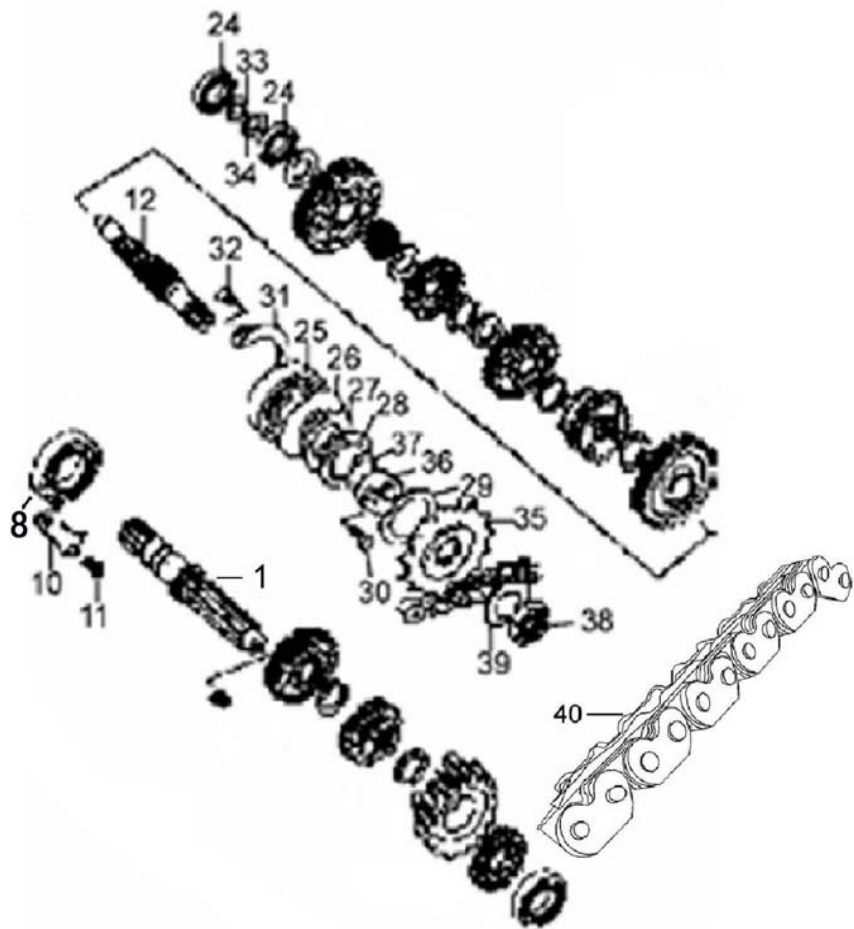


Ref	Code	Part Number	Description	
12-1	LX107100-13AB-00	07-031-1201	Drive Axle	
12-8	107195-M200-00001	07-031-1208	Bearing	
12-10	LX24741-38200	07-031-1210	Holder, Bearing	
12-11	LX09125-16110	07-031-1211	Screw	
12-12	107200-13AB-00	07-031-1212	Driven Axle	
12-24	LX09264-17001	07-031-1224	Bearing,RH(ϕ 17x36x12), Driven Axle	
12-25	LX09262-22013	07-031-1225	Bearing,LH(ϕ 22x56x16), Driven Axle	
12-26	LX09160-35007	07-031-1226	Washer	
12-27	LX09282-30004	07-031-1227	Oil Seal(1)	
12-28	LX09282-30041	07-031-1228	Oil Seal(2)	
12-29	LX24751-38201	07-031-1229	Civclip Oil Seal	
12-30	LX01500-06123	07-031-1230	Bolt M6x12	
12-31	LX24752-32400	07-031-1231	Holder, Bearing	
12-32	LX02122-06123	07-031-1232	Screw M6x12	
12-33	LX08331-31179	07-031-1233	Circlip	
12-34	LX09181-17139	07-031-1234	Washer 17x24x1	
12-35	LX27511-32401	07-031-1235	Sprocket NT 15	
12-36	LX27531-38300	07-031-1236	Spacer	
12-37	LX09280-21008	07-031-1237	O-Ring 21x2.5	
12-38	LX09140-18008	07-031-1238	Nut	
12-39	LX09167-22012	07-031-1239	Washer	
12-40	107317-13AB-00001	07-031-1240	Chain wheel	

Fig. 13 Shift Linkage

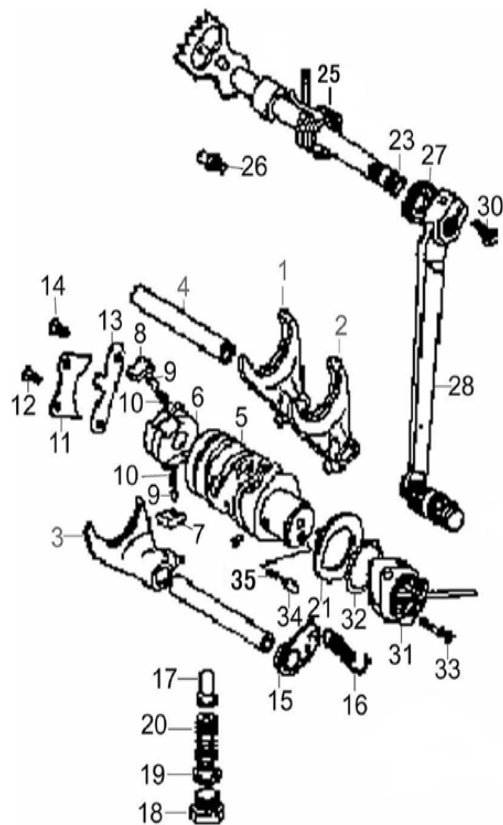


Ref	Code	Part Number	Description	
13-1	LX25211-32400	07-031-1301	Shift Fork 1	
13-2	LX108132-13AB-00	07-031-1302	Shift Fork 2	
13-3	LX108133-13AB-00	07-031-1303	Shift Fork 3	
13-4	LX25411-14331	07-031-1304	Shaft, Shift Fork	
13-5	LX25310-38200	07-031-1305	Shift Cam	
13-6	LX108121-13AB-00	07-031-1306	Driven Gear, Shift Cam	
13-7	LX25323-34201	07-031-1307	Pawl 1	
13-8	LX25314-34201	07-031-1308	Pawl 2	
13-9	LX09261-05003	07-031-1309	Pin	
13-10	LX09440-04003	07-031-1310	Spring	
13-11	LX25331-38201	07-031-1311	Lifter panel	
13-12	LX02122-06123	07-031-1312	Screw	
13-13	LX25341-38200	07-031-1313	Guide, Shift Cam	
13-14	LX02122-06123	07-031-1314	Screw	
13-15	LX25230-34000	07-031-1315	Stopper	
13-16	LX09443-08026	07-031-1316	Spring	
13-17		07-031-1317	A	
13-18	LX09247-14011	07-031-1318	Plug, Pin	
13-19	LX09168-14002	07-031-1319	Washer	
13-20	108184-M200-00001	07-031-1320	B	
13-21	LX25381-45400	07-031-1321	Plate, stopper	
13-22	LX04221-04069	07-031-1322	Pin	
13-23	LX25510-38200	07-031-1323	Shaft, gear shifting	
13-25	108215-M200-00001	07-031-1325	Spring	
13-26	LX25671-01011	07-031-1326	Screw	
13-27	LX09285-12002	07-031-1327	Oil Seal	
13-28	LX25600-05371	07-031-1328	Lever, Gear Shifting	
13-30	LX01500-06203	07-031-1330	Bolt	
13-31	LX37720-33200	07-031-1331	Gear Switch Assy	
13-32	LX09280-26003	07-031-1332	O-Ring	
13-33	LX02112-75203	07-031-1333	Screw	
13-34	LX09209-05011	07-031-1334	Contact	
13-35	LX09440-04010	07-031-1335	Spring	

Fig. 14

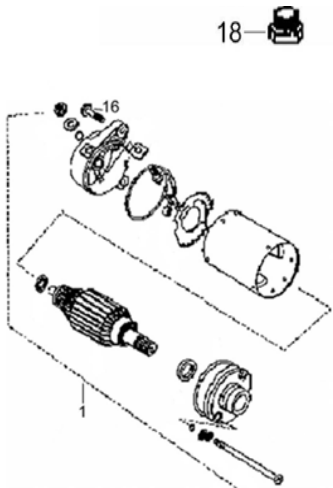


Ref	Code	Part Number	Description	
14-1	LX31100-38300	07-031-1401	Starter Motor	
14-16	LX01550-06257	07-031-1416	Bolt	

Fig. 15 Magneto

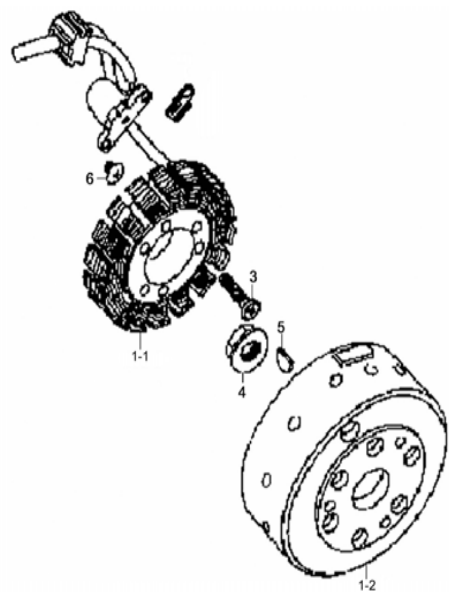


Ref	Code	Part Number	Description	
A	LX32100-38304	07-031-150A	Magneto Assy	
15-1-1	LX32101-38302	07-031-1501A	Stator Assy	
15-1-2	LX32102-38303	07-031-1501B	Rotor	
15-3	LX02112-06253	07-031-1503	Screw	
15-4	LX31792-49200	07-031-1504	Nut	
15-5	LX08341-31039	07-031-1505	Woodruff Key	
15-6	LX07130-05123	07-031-1506	Screw(M5x12)	

Fig. 16 Frame, Rear Suspension

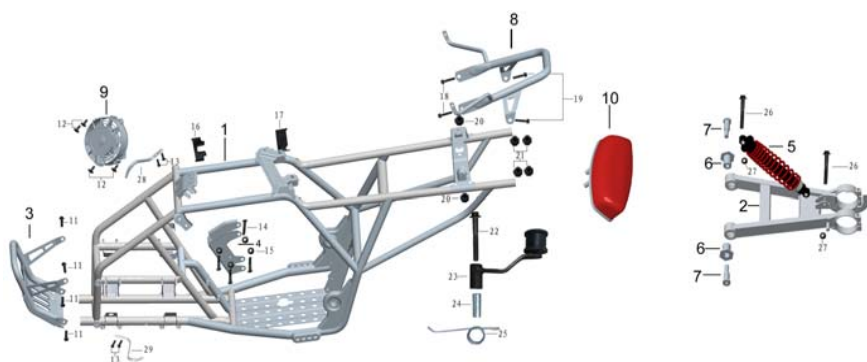


Ref	Code	Part Number	Description	
16-1	501100-0150010	07-031-1601	Frame	
16-2	508000-0100010	07-031-1602	Swing Arm	
16-3	519100-0070010	07-031-1603	Front Bumper	
16-4	5010010-0030010	07-031-1604	Engine Suspension	
16-5	506100-0120010	07-031-1605	Rear Shock Absorber	
16-6	508053-0020010	07-031-1606	Swing Arm Nut	
16-7	508054-0020010	07-031-1607	Swing Arm Bolt	
16-8	706000-0010010	07-031-1608	Rear Armrest	
16-9	343000-0020010	07-031-1609	Cooling Fan	
16-10	315000-0080010	07-031-1610	Rear Light	
16-10-1		07-031-1610A	Bulb	
16-11		07-031-1611	Bolt GB5787.M8*16	
16-12		07-031-1612	Bolt GB5787.M6*12	
16-13		07-031-1613	Bolt GB5787.M6*20	
16-14		07-031-1614	Bolt GB5787.M6*65	
16-15		07-031-1615	Bolt GB6187.8	
16-16	801083-0030010	07-031-1616	Fuel Tank Cushion (front)	
16-17	801083-0030020	07-031-1617	Fuel Tank Cushion (rear)	
16-18		07-031-1618	Bolt GB5787.M8*20	
16-19		07-031-1619	Bolt GB5787.M10*16	
16-20	314072-0020010	07-031-1620	Shock Washer	
16-21	315008-0020010	07-031-1621	Rear Light Washer	
16-22		07-031-1622	Bolt GB5787.M8*60	
16-23		07-031-1623	Chain Tensioner	
16-24	912246-0020010	07-031-1624	Chain Tensioner Bushing	
16-25		07-031-1625	Chain Tensioner Sping	
16-26		07-031-1626	Bolt GB5782.M12*55	
16-27		07-031-1627	Bolt GB6187.M12	
16-28	806089-0040010	07-031-1628	Front Cover Frame (left)	
16-29	806090-0030010	07-031-1629	Front Cover Frame (right)	

Fig. 17 Steering Stem

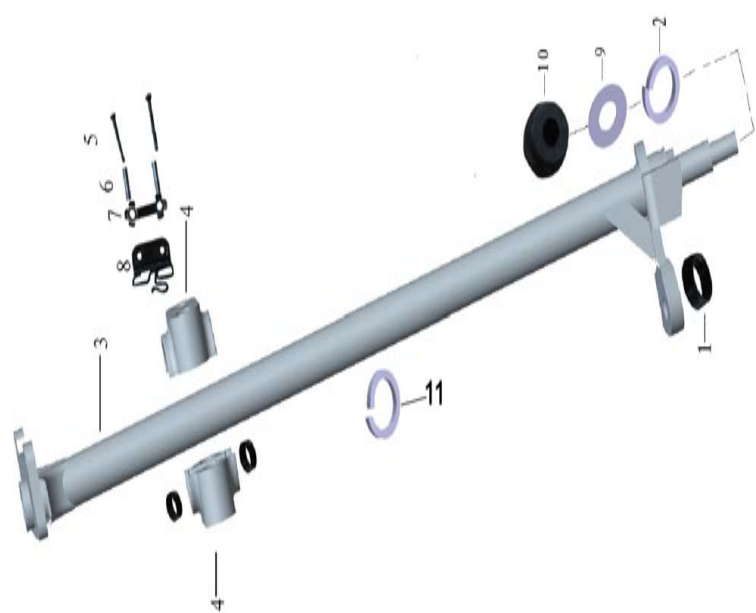


Ref	Code	Part Number	Description	
17-1	611014-0020010	07-031-1701	Steering Vertical Pole Dust Washer	
17-2		07-031-1702	Spring Shim GB93Φ12	
17-3	611000-0100010	07-031-1703	Steering Vertical Pole	
17-4	611018-0030010	07-031-1704	Steering Vertical Pole Clip	
17-5		07-031-1705	Bolt GB5782.M8*75	
17-6	611021-0030010	07-031-1706	Steering Clip Bushing	
17-7	611020-0020010	07-031-1707	Locking Shim	
17-8	611181-0010010	07-031-1708	Steering Vertical Pole Board	
17-9		07-031-1709	Shim GB96 Φ12	
17-10		07-031-1710	Nut GB6187.M12	
17-11	611019-0030010	07-031-1711	Steering Vertical Pole Ring	

Fig. 18 Front Suspension, Brake and Wheel

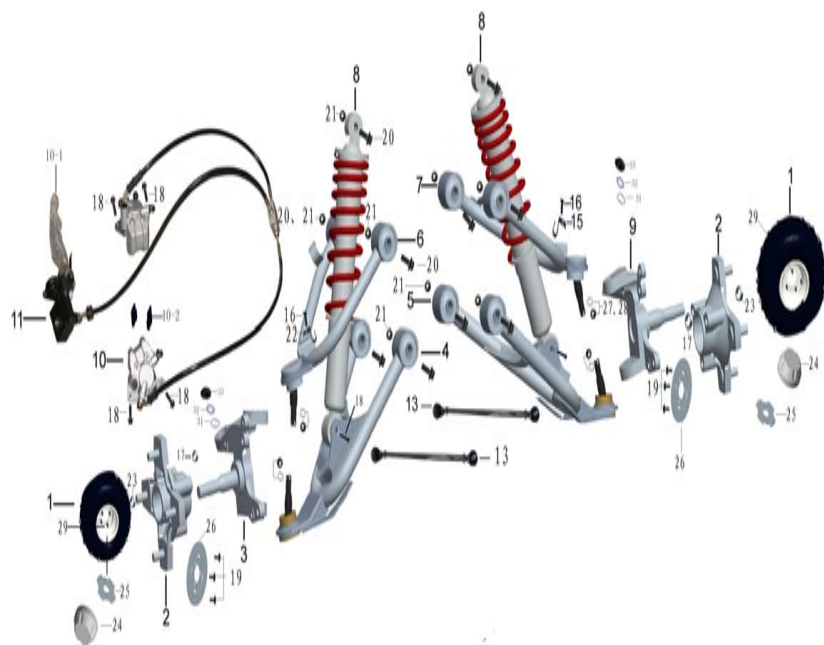


Ref	Code	Part Number	Description	
18-1	4020010-0040010	07-031-1801	Front Tire	
18-2	401072-0010010	07-031-1802	Connecting Plate of Front wheel	
18-3	525500-0050010	07-031-1803	Right Slewing Journal	
18-4	525302-0050010	07-031-1804	Under of Front Right Wheel Fork	
18-5	525205-0050010	07-031-1805	Under of Front left Wheel Fork	
18-6	525301-0020010	07-031-1806	Up of Front Right Wheel Fork	
18-7	525204-0040010	07-031-1807	Up of Front left Wheel Fork	
18-8	505100-0100010	07-031-1808	Front Shock Absorber	
18-9	525400-0050010	07-031-1809	Left Slewing Journal	
18-10	409A00-0060010	07-031-1810	Front dis brake	
18-10-1		07-031-1810A	Brake Handle	
18-10-2		07-031-1810B	disc brake pad	
18-13	611500-0050010	07-031-1813	Steering Tension Rod Assy	
18-14		07-031-1814	Dis Brake Plate Cover	
18-15	818307-0030020	07-031-1815	Right Block Line	
18-16		07-031-1816	Bolt GB5789.M6*12	
18-17	525471-2126010	07-031-1817	Bushing	
18-18		07-031-1818	Bolt GB5789.M8*16	
18-19		07-031-1819	Internal Hexagonal Step Bolt M8*20	
18-20		07-031-1820	Bolt GB5787.M10*40	
18-21		07-031-1821	Bolt GB6187.M10	
18-22	818307-0030010	07-031-1822	Left Block Line	
18-23	525471-1521010	07-031-1823	Bushing	
18-24	401107-0040010	07-031-1824	Front wheel Dust Cover	
18-25	912227-1950018	07-031-1825	Front wheel Dust Cover shim	
18-26	409001-0050010	07-031-1826	Front Dis Brake Plate	
18-27		07-031-1827	Spring Shim GB93Φ10	
18-28		07-031-1828	Nut GB6187.M10*1	
18-29	401100-0040010	07-031-1829	Front wheel Ring	
18-30		07-031-1830	Nut	

Fig. 19 Rear Wheel and Brake

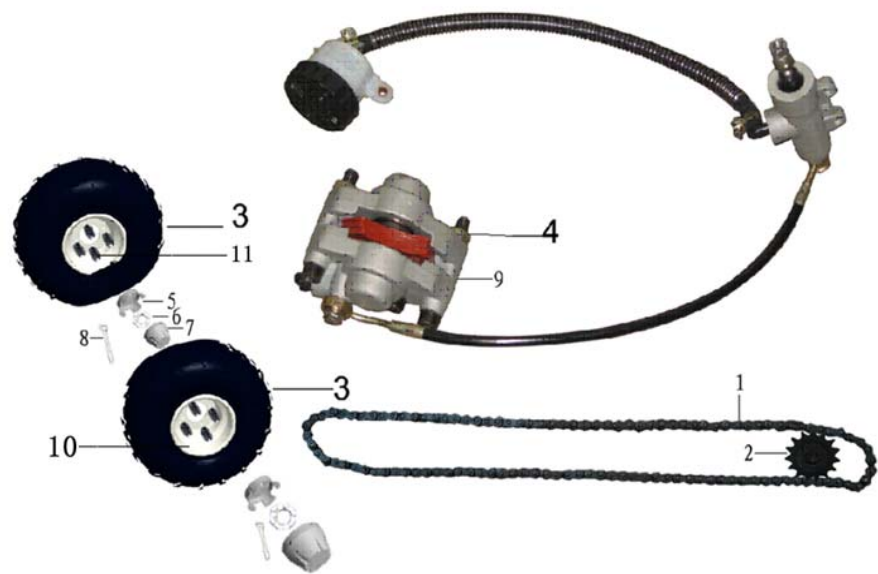


Ref	Code	Part Number	Description	
19-1	203100-0060010	07-031-1901	Chain	
19-2		07-031-1902	Chain Ring	
19-3	101001-0040010	07-031-1903	Rear Wheel Tire	
19-4		07-031-1904	Internal Hexagonal Bolt 10*90	
19-5	403107-0020010	07-031-1905	Rear Wheel Dust Cover shim	
19-6		07-031-1906	Notch Nut M16*1.25	
19-7	403107-0020010	07-031-1907	Rear Wheel Dust Cover	
19-8		07-031-1908	Cotter Pin Φ3X30	
19-9	411A00-0080010	07-031-1909	Rear Dis Brake Assy	
19-9-1		07-031-1909A	disc brake pad	
19-10		07-031-1910	rear hub	
19-11		07-031-1911	nut	

Fig. 20 Footrest and Shift Arm

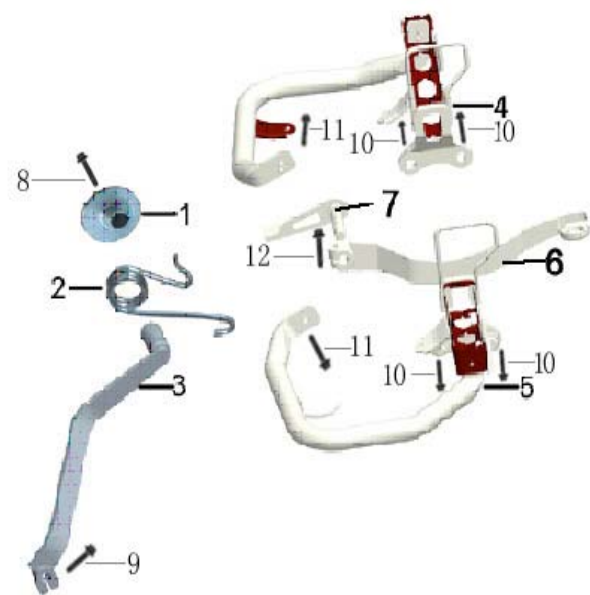


Ref	Code	Part Number	Description	
20-1		07-031-2001	Bushing, Brake Return Spring	
20-2		07-031-2002	Brake Return Spring	
20-3	201100-0070010	07-031-2003	Shift Lever	
20-4	511000-0060010	07-031-2004	Left Footrest Assy	
20-5	512000-0060010	07-031-2005	Right Footrest Assy	
20-6	408201-0090010	07-031-2006	Rear Brake Lever	
20-7	408101-0070010	07-031-2007	Rear Brake Linkage	
20-8		07-031-2008	Bolt	
20-9		07-031-2009	Bolt	
20-10		07-031-2010	Bolt	
20-11		07-031-2011	Bolt	
20-12		07-031-2012	Bolt	

Fig, 21 Rear Axle

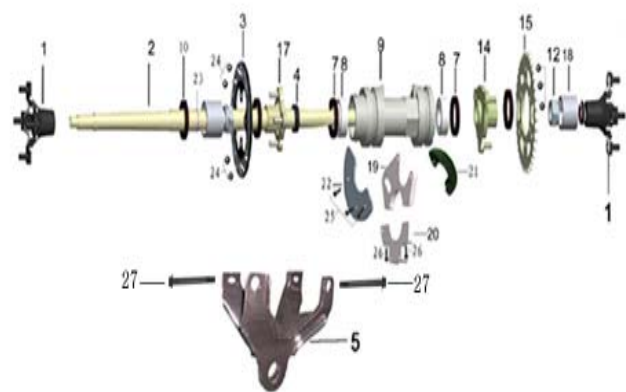


Ref	Code	Part Number	Description	
21-1	403071-0060010	07-031-2101	Rear Wheel Connecting Plate	
21-2	204204-0070010	07-031-2102	Rear Bridge Axis	
21-3	411001-0060010	07-031-2103	Rear Dis Brake Plate	
21-4	204216-0020010	07-031-2104	Washer	
21-5		07-031-2105	Fork of Trail Ball	
21-7		07-031-2107	Oil Seal	
21-8		07-031-2108	Bearing3307	
21-9	206101-0070010	07-031-2109	Rear Bridge Rind	
21-12	204225-0020010	07-031-2112	Rear Wheel Axis Nut	
21-14	405101-0070010	07-031-2114	Seat of Chain Plate	
21-15	405201-0070010	07-031-2115	Chain Plate	
21-17	411074-0060010	07-031-2117	Seat of Dis Brake Plate	
21-18	508050-0030010	07-031-2118	Nut of Stop Back Cover	
21-19	411072-0050010	07-031-2119	Upper Seat of Dis Brake	
21-20	411072-0050020	07-031-2120	Down Seat of Dis Brake	
21-21	405271-0010010	07-031-2121	Protect Rack of Chain Wheel	
21-22	411075-0020010	07-031-2122	Protect Rack of Dis Brake	
21-23	GB/T895.2 32	07-031-2123	Lock Circle	
21-24		07-031-2124	Nut GB6187.M10	
21-25		07-031-2125	Internal Hexagonal Bolt M8*20	
21-26		07-031-2126	Bolt GB5787.M8X60	
21-27		07-031-2127	Bolt	

Fig. 22 Carburetor and Air Filter

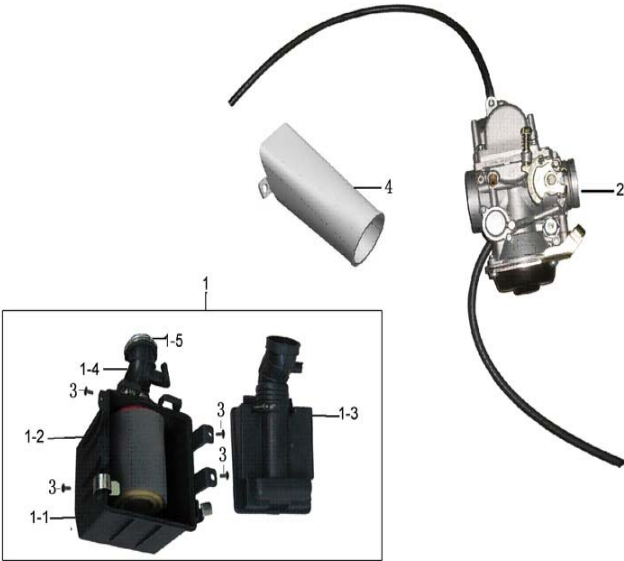


Ref	Code	Part Number	Description	
22-1	115000-0130010	07-031-2201	Air Filter Assy	
22-1-1		07-031-2201A	Air Filter Body	
22-1-2		07-031-2201B	Filter Element	
22-1-3		07-031-2201C	Air Filter Cover	
22-1-4		07-031-2201D	Air Filter Exhaust Pipe	
22-1-5		07-031-2201E	Clamp	
22-2	113100-0140010	07-031-2202	Carburetor	
22-3		07-031-2203	Internal Hexagonal Bolt M6*16	
22-4	115005-0060010	07-031-2204	Intake Pipe	

Fig. 23 Exhaust

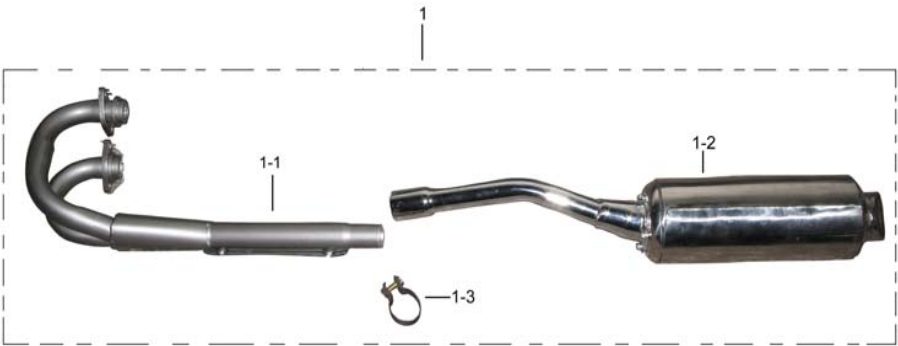

Ref	Code	Part Number	Description	
23-1		07-031-2301	Exhaust Assy	
23-1-1	118200-0010010	07-031-2301A	Header Pipe	
23-1-2	117300-0070010	07-031-2301B	Muffler Assy	
23-1-3	117500-0040010	07-031-2301C	Clamp	

Fig. 24 Fuel Tank

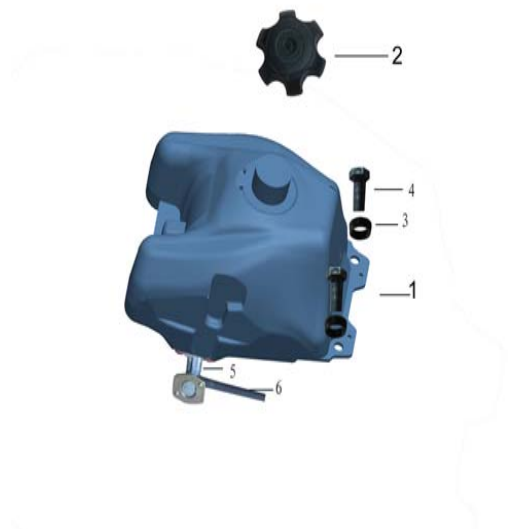


Ref	Code	Part Number	Description	
24-1	801500-0110010	07-031-2401	Fuel Tank Assy	
24-2	804000-0100010	07-031-2402	Cap, Fuel Tank	
24-3		07-031-2403	Bushing	
24-4		07-031-2404	Bolt GB5787.M6X30	
24-5	803000-0100010	07-031-2405	Fuel Petcock	
24-6		07-031-2406	Fuel Line	

Fig. 25 Handle Bar



Ref	Code	Part Number	Description	
25-1	603000-0080010	07-031-2501	Clutch Lever	
25-2	324200-0100010	07-031-2502	Switch Assy	
25-3	812491-0020010	07-031-2503	Rack of Desk Cover	
25-4	602100-0070010	07-031-2504	Grip	
25-5	6010010-0080010	07-031-2505	Handle Bar	
25-6	611001-0060010	07-031-2506	Handle Bar Clamp	
25-7	324330-0070010	07-031-2507	Throttle Lever Assy	
25-8		07-031-2508	Bolt	

Fig. 26 Electrical & Cables

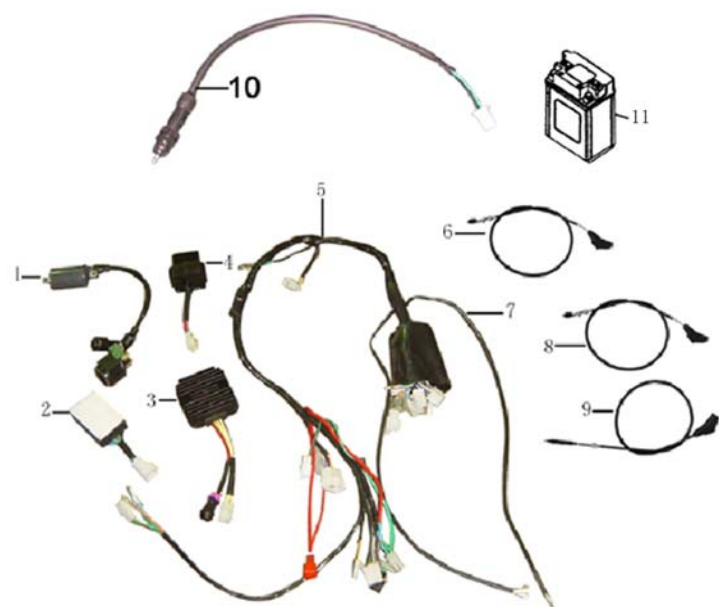


Ref	Code	Part Number	Description	
26-1	305000-0130010	07-031-2601	Coil	
26-2	306000-0110010	07-031-2602	PEI Ignition unit	
26-3	302000-0090010	07-031-2603	Voltage Regulator	
26-4	301000-0020010	07-031-2604	Starter Relay	
26-5	307000-0270010	07-031-2605	Main Cable	
26-6	606000-0050010	07-031-2606	Clutch Cable	
26-7		07-031-2607	Clutch Switch Cable	
26-8	607000-0140010	07-031-2608	Throttle Lever	
26-9	608000-0060010	07-031-2609	Choke Lever	
26-10		07-031-2610	Brake Switch	
26-11		07-031-2611	Battery	

Fig. 27 Seat



Ref	Code	Part Number	Description	
27-1		07-031-2701	Seat	

Fig. 28 Body

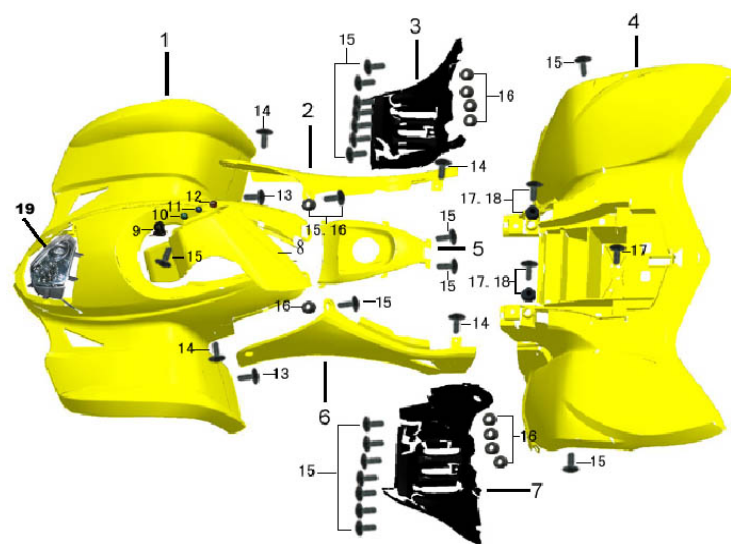

Ref	Code	Part Number	Description	
28-1	806100-0090010	07-031-2801	Front Cover	
28-2	801303-0030010	07-031-2802	Right Oil Tank Cover	
28-3	807055-0020010	07-031-2803	Right Protecting Plate of Rear Cover	
28-4	807000-0090010	07-031-2804	Rear Cover	
28-5	801303-0030010	07-031-2805	Oil Tank Plate	
28-6	801302-0030010	07-031-2806	Left Oil Tank Cover	
28-7	807054-0020010	07-031-2807	Left Protecting Plate of Rear Cover	
28-8	812490-0030010	07-031-2808	Desk Cover	
28-9	324100-0020010	07-031-2809	Ignition Switch	
28-10	307082-0020010	07-031-2810	Neutral Indicator Lens	
28-11	307085-0020010	07-031-2811	Reverse Indicator Lens	
28-12	307088-0020010	07-031-2812	High Beam Indicator Lens	
28-13		07-031-2813	Fender Bolt M6*16	
28-14		07-031-2814	Expansion Screw	
28-15		07-031-2815	Fender Bolt M6*12	
28-16		07-031-2816	Nut GB6177.M6	
28-17		07-031-2817	Fender Bolt M8*20	
28-18	807083-0010010	07-031-2818	Shock Washer	
28-19		07-031-2819	Headlight	