



BMW Motorrad

bmw-motorrad.com



The Ultimate
Riding Machine

Rider's Manual

R 1200 GS

<https://www.motorcycle-manual.com/>

Vehicle data/dealership details

Vehicle data

Model

Vehicle Identification Number

Colour code

Date of first registration

Registration number

Dealership details

Person to contact in Service department

Ms/Mr

Phone number

Dealership address/phone number (company stamp)

<https://www.motorcycle-manual.com/>

Welcome to BMW

We congratulate you on your choice of a vehicle from BMW Motorrad and welcome you to the community of BMW riders. Familiarise yourself with your new vehicle so that you can ride it safely and confidently in all traffic situations.

About this Rider's Manual

Please read this Rider's Manual carefully before starting to use your new BMW. It contains important information on how to operate the controls and how to make the best possible use of all your BMW's technical features. In addition, it contains information on maintenance and care to help you maintain your vehicle's reliability and safety, as well as its value.

This record of the maintenance work you have had performed on

your vehicle is a precondition for generous treatment of goodwill claims.

If the time comes to sell your BMW, please remember to hand over this Rider's Manual to the new owner. It is an important part of the vehicle.

Suggestions and criticism

If you have questions concerning your vehicle, your authorised BMW Motorrad dealer will gladly provide advice and assistance.

We hope you will enjoy riding your BMW and that all your journeys will be pleasant and safe

BMW Motorrad.

01 40 8 358 051

<https://www.motorcycle-manual.com/>



Table of Contents

1 General instructions	5	Service-due indicator	40	Electronic Suspension Ad-	
Overview	6	Fuel reserve	41	justment (ESA)	66
Abbreviations and		Oil level	41	Riding mode	68
symbols	6	Ambient temperature.....	42	Cruise-control system	72
Equipment	7	Tyre pressure	42	Anti-theft alarm (DWA)	74
Technical data	7	Recommendation to up-		Heated handlebar grips	76
Actuality	7	shift	43	Front and rear seats.....	76
2 General views	9	4 Operation.....	45	5 Adjustment.....	81
General view, left side	11	Ignition switch/steering		Mirrors	82
General view, right side	13	lock	46	Headlight	82
Underneath the seat	14	Ignition with Key-		Windscreen	83
Multifunction switch, left	15	less Ride	48	Clutch	84
Multifunction switch,		Emergency off switch (kill		Brakes	84
right	17	switch)	52	Handlebars	85
Instrument panel	18	Lights	53	Spring preload	85
3 Status indicators	19	Daytime riding light.....	54	Damping	86
Telltale and warning		Hazard warning lights sys-		6 Riding.....	89
lights	20	tem	56	Safety instructions	90
Multifunction display	22	Turn indicators	57	Comply with checklist	93
Warning symbols in the		Multifunction display	57	Always before riding off:....	93
display	24	Anti-lock brake system		Every 3rd refuelling stop	93
Warnings	25	(ABS).....	64	Starting.....	93
		Automatic Stability Control		Running in	95

Off-roading	96	Brake system	123	Laying up the motor-	
Shifting gear	98	Clutch	128	cycle	174
Brakes	98	Coolant.....	128	Restoring motorcycle to	
Parking your motor-		Tyres.....	129	use	174
cycle	100	Rims and tyres	130	11 Technical data	175
Refuelling	101	Wheels	131	Troubleshooting chart.....	176
Securing motorcycle for		Air filter.....	138	Threaded fasteners	177
transportation	105	Light source.....	139	Fuel	179
7 Engineering		Jump-starting	144	Engine oil	180
details	107	Battery	145	Engine	180
General instructions	108	Fuses	149	Clutch	181
Anti-lock brake system		Diagnostic connector.....	151	Transmission.....	181
(ABS).....	108	9 Accessories	153	Final drive	182
Automatic Stability Control		General instructions	154	Frame	183
(ASC)	111	Power sockets	154	Chassis and	
Riding mode	113	Cases	155	suspension	183
Tyre pressure monitoring		Topcase.....	158	Brakes	184
(RDC)	115	Navigation system.....	164	Wheels and tyres.....	185
Shift assistant	116	10 Care	171	Electrical system	187
8 Maintenance	119	Care products.....	172	Anti-theft alarm.....	188
General instructions	120	Washing the vehicle.....	172	Dimensions	189
Standard toolkit	120	Cleaning easily damaged		Weights	190
Service toolkit	120	components.....	173	Riding specifications	190
Front-wheel stand.....	121	Paint care	174		
Engine oil	122	Protective wax coating	174		

12 Service	191
BMW Motorrad Service ...	192
BMW Motorrad Mobility services	192
Maintenance work.....	192
BMW Service	193
Maintenance schedule	195
Confirmation of mainten- ance work	196
Confirmation of service....	210
13 Appendix.....	213
Certificate for electronic immobiliser	214
Certificate for Key- less Ride	216
Certificate for tyre pressure monitoring (tyre pressure control, RDC).....	218
14 Index	219

General instructions

Overview	6
Abbreviations and symbols	6
Equipment	7
Technical data	7
Actuality	7

<https://www.motorcycle-manual.com/>

Overview

An important aspect of this Rider's Manual is that it can be used for quick and easy reference. Consulting the extensive index at the end of this Rider's Manual is the fastest way to find information on a particular topic or item. To first read an overview of your motorcycle, please go to Chapter 2. All maintenance and servicing work on the vehicle is documented in Chapter 11. This record of the maintenance work you have had performed on your vehicle is a precondition for generous treatment of goodwill claims. When the time comes to sell your BMW, please remember to hand over this Rider's Manual; it is an important part of the motorcycle.

Abbreviations and symbols



CAUTION Low-risk hazard. Non-avoidance can lead to slight or moderate injury.



WARNING Medium-risk hazard. Non-avoidance can lead to fatal or severe injury.



DANGER High-risk hazard. Non-avoidance leads to fatal or severe injury.







ATTENTION Special notes and precautionary measures. Non-compliance can lead to damage to the vehicle or accessory and, consequently, to voiding of the warranty.



NOTICE Specific instructions on how to operate, control, adjust or look after items of equipment on the vehicle.



Indicates the end of an item of information.

- Instruction.
- » Result of an activity.
-  Reference to a page with more detailed information.
-  Indicates the end of a passage relating to specific accessories or items of equipment.
-  Tightening torque.
-  Technical data.
- OE Optional extras.
The vehicles are assembled complete with all the BMW Motorrad optional extras originally ordered.

<https://www.motorcycle-manual.com/>

OA	Optional accessories. You can obtain BMW Motorrad optional accessories through your authorised BMW Motorrad dealer; optional accessories have to be retrofitted to the vehicle.
EWS	Electronic immobiliser.
DWA	Anti-theft alarm.
ABS	Anti-lock brake system.
ASC	Automatic Stability Control.
ESA	Electronic Suspension Adjustment.
RDC	Tyre pressure monitoring.

Equipment

When you purchased your BMW motorcycle, you chose a model with individual equipment. This Rider's Manual describes the optional extras (OE) offered by BMW and selected optional accessories (OA). This explains why the manual may also contain equipment specifications which you have not ordered. Please note, too, that your motorcycle might not be exactly as illustrated in this manual on account of country-specific differences. If your motorcycle contains equipment that has not been described, its description can be found in a separate manual.

Technical data

All dimensions, weights and power ratings stated in the Rider's Manual are quoted to the standards and comply with the

tolerance requirements of the Deutsches Institut für Normung e.V. (DIN). Versions for individual countries may differ.

Actuality

The high safety and quality level of BMW motorcycles is ensured by continuous development work on design, equipment and accessories. Because of this, your motorcycle may differ from the information supplied in the Rider's Manual. Nor can BMW Motorrad entirely rule out errors and omissions. Consequently no claims can be derived from the information, graphics or descriptions.

<https://www.motorcycle-manual.com/>

<https://www.motorcycle-manual.com/>





General views

General view, left side.....	11
General view, right side	13
Underneath the seat	14
Multifunction switch, left	15
Multifunction switch, right.....	17
Instrument panel.....	18



<https://www.motorcycle-manual.com/>

General view, left side

- 1** – with daytime running
light^{OE}
Daytime riding light
( 54).
- 2** Fuel filler neck ( 102)
- 3** Seat lock ( 76)
- 4** Setting the rear damping
(down at the spring strut)
( 86)



<https://www.motorcycle-manual.com/>


General view, right side


- 1** – without Dynamic ESA^{OE}
Adjuster for spring preload,
rear (■ 85).
- 2** Air filter (underneath the
centre trim panel) (■ 138)
- 3** Brake-fluid tank, front
(■ 126)
- 4** Height adjustment of the
windscreen (■ 83)
- 5** Power socket (■ 154)
- 6** VIN (on steering-head
bearing)
Type plate (on the frame,
front right)
- 7** Coolant-level indicator
(■ 128)
Coolant reservoir (■ 128)
- 8** Oil filler neck (■ 123)
- 9** Engine oil level indicator
(■ 122)
- 10** Behind the side trim panel:
Battery (■ 145)
Battery-positive connection
point (■ 144)
Diagnostic connector
(■ 151)
- 11** Brake-fluid reservoir, rear
(■ 127)

<https://www.motorcycle-manual.com/>

Underneath the seat

- 1 Standard toolkit (➡ 120)
- 2 Rider's Manual
- 3 Tyre pressure table
- 4 Payload table
- 5 Adjusting the front seat height (➡ 78)
- 6 Fuses (➡ 149)

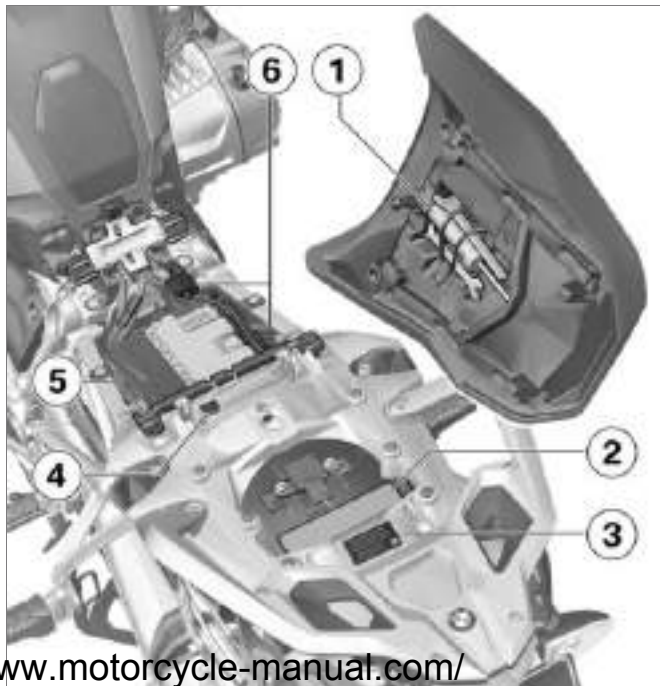

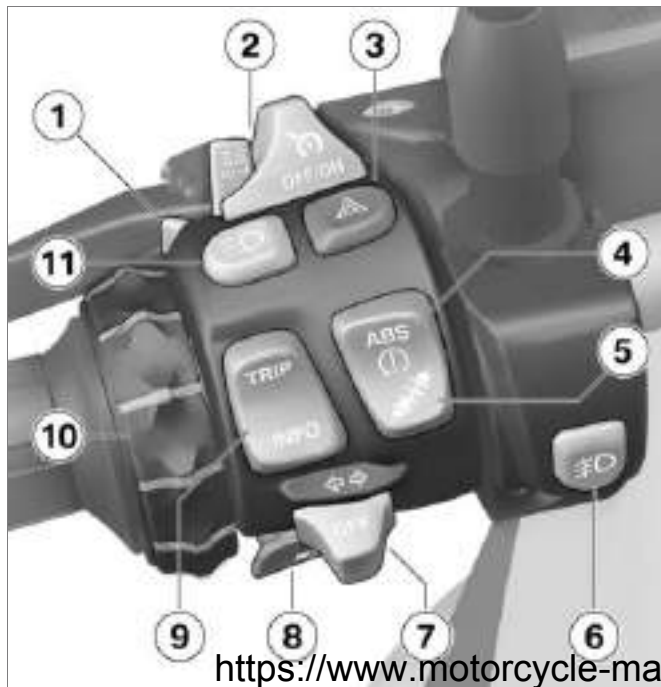

Multifunction switch, left

- 1** High-beam headlight and headlight flasher (➡ 53)
- 2** – with cruise control^{OE}
Cruise-control system (➡ 72).
- 3** Hazard warning lights system (➡ 56)
- 4** ABS (➡ 64)
ASC (➡ 65)
- 5** – with Dynamic ESA^{OE}
Dynamic ESA Possible settings (➡ 66)
- 6** – with LED auxiliary headlights^{OA}
Auxiliary headlights (➡ 54).
- 7** Turn indicators (➡ 57)
- 8** Horn
- 9** Multifunction display (➡ 57)

- 10** – with preparation for navigation system^{OE}

Operating navigation system (■ 166)

Multi-Controller

- 11** – with daytime running light^{OE}

Daytime riding light (■ 54).

Multifunction switch, right


- 1 – with heated handlebar grips^{OE}
Heated handlebar grips (➡ 76).
- 2 Riding mode (➡ 68)
- 3 Emergency off switch (kill switch) (➡ 52)
- 4 Starter button
Start engine (➡ 93).



<https://www.motorcycle-manual.com/>

Instrument panel

- 1 Speedometer
- 2 Engine speed display
- 3 Photosensor (for adapting the brightness of the instrument lighting)
– with alarm system (DWA)^{OE}
Alarm system LED
– with Keyless Ride^{OE}
Telltale light for the radio-operated key
Switching on ignition (49).
- 4 Telltale and warning lights (20)
- 5 Multifunction display (22)

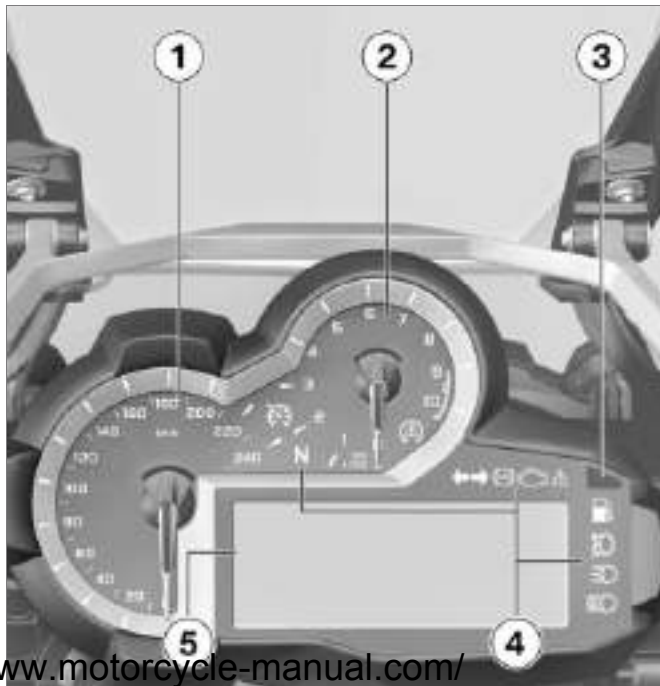







Status indicators

Telltale and warning lights	20
Multifunction display	22
Warning symbols in the display	24
Warnings	25
Service-due indicator	40
Fuel reserve	41
Oil level	41
Ambient temperature	42
Tyre pressure	42
Recommendation to upshift	43

Telltale and warning lights

- 1 – with cruise control^{OE}
Cruise-control system (➡ 72).
- 2 Neutral
- 3 ASC (➡ 65)
- 4 Turn indicators
- 5 ABS (➡ 64)
- 6 - with EU markets export^{NV}
Malfunction indicator lamp
Emissions warning (➡ 32)
- 7 General warning light (in combination with warning symbols on the display) (➡ 25)



- 8** – with alarm system
(DWA)^{OE}
Alarm signal ( 74)
– with Keyless Ride^{OE}
Telltale light for the radio-
operated key
Switching on ignition
( 49).
- 9** High-beam headlight
( 53)
- 10** – with daytime running
light^{OE}
Daytime riding light
( 54).
- 11** – with LED auxiliary head-
lights^{OA}
Auxiliary headlights
( 54).
- 12** Fuel reserve ( 41)

**NOTICE**

The ABS symbol might differ,
depending on the specifics of
national regulations.◀

<https://www.motorcycle-manual.com/>

Multifunction display

- 1 Fuel level
- 2 Recommendation to up-shift (⇨ 43)
- 3 Gear indicator; "N" indicates neutral
- 4 – with daytime running light^{OE}
Automatic daytime riding light (⇨ 55).
- 5 – with heated handlebar grips^{OE}
Heated handlebar grips (⇨ 76).
- 6 Odometer (⇨ 57)
- 7 Service-due indicator (maintenance interval) (⇨ 192)
- 8 Warning symbols (⇨ 25)
- 9 On-board computer
- 10 – with Dynamic ESA^{OE}
Dynamic ESA Possible settings (⇨ 66)
- 11 Riding mode (⇨ 68)
- 12 Clock (⇨ 60)



- 13** Outside temperature warning (42)

<https://www.motorcycle-manual.com/>

Warning symbols in the display

- 1 – with tyre pressure monitoring (RDC)^{OE}
Tyre pressure (➡ 42)
- 2 EWS (➡ 30)
- 3 Coolant temperature (➡ 31)
- 4 Engine oil level (➡ 39)
- 5 Engine electronics (➡ 31)
- 6 Battery charge (➡ 146)
- 7 Warnings (➡ 25)



Warnings

Mode of presentation

Warnings are indicated by the corresponding warning lights.



Warnings that do not have warning lights of their own are indicated by 'General' warning light **1** showing in combination with a warning symbol at **2** or a text warning at **3**. The 'general' warning light shows yellow or red, depending on the urgency of the warning.

The status of the 'General' warning light matches the most urgent warning.

The possible warnings are listed on the next pages.













<https://www.motorcycle-manual.com/>

Warnings, overview

Telltale and warning lights

Warning symbols in the display









Meaning

		appears on the display	Outside temperature warning (➡ 30)	
	lights up yellow		appears on the display	Electronic immobiliser active (➡ 30)
	lights up yellow		appears on the display	Radio-operated key out of range (➡ 30)
	lights up yellow			Replace the battery of the radio-operated key (➡ 31)
	lights up red		appears on the display	Coolant temperature too high (➡ 31)
	lights up yellow		appears on the display	Engine in emergency-operation mode (➡ 31)
	The malfunction indicator lamp lights up.			Emissions warning (➡ 32)








Telltale and warning lights










Warning symbols in the display

Meaning

	lights up yellow	! LAMP appears on the display	Bulb faulty (➡ 32)
		! LAMPF appears on the display	
		DWALO ! appears on the display	Anti-theft alarm battery weak (➡ 33)
	lights up yellow	DWA ! appears on the display	Anti-theft alarm battery flat (➡ 33)
	lights up yellow	 is displayed with one or two arrows and the critical tyre pressure reading also flashes	Tyre pressure close to limit of permitted tolerance (➡ 33)
	flashes red	 is displayed with one or two arrows and the critical tyre pressure reading also flashes	Tyre pressure outside permitted tolerance (➡ 34)
	lights up yellow	 is displayed with one or two arrows	Sensor defective or system error (➡ 35)

<https://www.motorcycle-manual.com/>

Telltale and warning lights		Warning symbols in the display	Meaning
		"--" or "-- --" is displayed	Signal transmission disrupted (➡ 35)
	lights up yellow	RDC ! appears on the display	Battery of tyre-pressure sensor weak (➡ 36)
	flashes		ABS self-diagnosis not completed (➡ 36)
	lights up		ABS fault (➡ 36)
	lights up		ABS deactivated (➡ 36)
	quick-flashes		ASC intervention (➡ 37)
	slow-flashes		ASC self-diagnosis not completed (➡ 37)
	lights up		ASC deactivated (➡ 37)

Telltale and warning lights	Warning symbols in the display	Meaning
 lights up		ASC fault (➡ 37)
 lights up yellow	ESA ! appears on the display	ESA fault (➡ 38)
	 The gear indicator flashes.	Gear not trained (➡ 38)
 lights up		Fuel down to reserve (➡ 38)
 flashes yellow	 flashes	Severe fault in the engine control unit (➡ 39)
	 appears on the display	Engine-oil level too low (➡ 39)
	OILLVL CHECK appears on the display	
 lights up red	 appears on the display	Battery charge voltage insufficient (➡ 39)

Outside temperature warning



The ice-crystal symbol appears on the display.

Possible cause:



The air temperature measured at the vehicle is lower than:

approx. 3 °C



WARNING

Risk of black ice also applicable at over 3 °C

Risk of accident

- Always take extra care when temperatures are low; remember that there is particular danger of black ice forming on bridges and where the road is in shade.◀
- Ride carefully and think well ahead.

Electronic immobiliser active



The "General" warning light shows yellow.



The warning symbol for the electronic immobiliser appears on the display.

Possible cause:

The key being used is not authorised for starting, or communication between key and engine electronics is disrupted.

- Remove all other vehicle keys from the same ring as the ignition key.
- Use the emergency key.
- Have the defective key replaced, preferably by an authorised BMW Motorrad dealer.

Radio-operated key out of range

– with Keyless Ride^{OE}



The "General" warning light shows yellow.



appears on the display.

Possible cause:

Communication between R/C key and engine electronics is disrupted.

- Check the battery in the radio-operated key.
- with Keyless Ride^{OE}
- Replace the battery of the radio-operated key (➡ 51).
- Use the reserve key to continue your journey.
- with Keyless Ride^{OE}
- Battery of the radio-operated key is empty or loss of the radio-operated key (➡ 51).
- Remain calm if the warning symbol appears while you are

riding. You can continue your journey, the engine will not switch off.

- Have the defective radio-operated key replaced by an authorised BMW Motorrad dealer.

Replace the battery of the radio-operated key



The "General" warning light shows yellow.



The battery symbol appears on the display.

Possible cause:

- The integral battery in the radio-operated key has lost a significant proportion of its original capacity. There is no assurance of how long the R/C key can remain operational.
- with Keyless Ride^{OE}
- Replace the battery of the radio-operated key (➡ 51).

Coolant temperature too high



The "General" warning light shows red.



Temperature symbol appears on the display.



ATTENTION

Riding with overheated engine

Engine damage

- Compliance with the information set out below is essential. ◀

Possible cause:

The coolant level is too low.

- Check coolant level (➡ 128).

If the coolant level is too low:

- Top up the coolant and have the coolant system checked by a specialist workshop, preferably by an authorised BMW Motorrad dealer.

Possible cause:

The coolant temperature is too high.

- If possible, ride in the part-load range to cool down the engine.
- If the coolant temperature is frequently too high, have the fault rectified as soon as possible by a specialist workshop, preferably an authorised BMW Motorrad dealer.

Engine in emergency-operation mode



The "General" warning light shows yellow.



The engine symbol appears on the display.

**WARNING****Unusual ride characteristics when engine running in emergency-operation mode**

Risk of accident

- Adapt your style of riding accordingly: avoid accelerating sharply and overtaking.◀

Possible cause:

The engine control unit has diagnosed a fault. In exceptional cases, the engine stops and refuses to start. Otherwise, the engine runs in emergency operating mode.

- You can continue to ride, but bear in mind that the usual engine performance might not be available.
- Have the fault rectified as quickly as possible by a specialist workshop, preferably an authorised BMW Motorrad dealer.

Emissions warning

The malfunction indicator lamp lights up.

Possible cause:

The engine control unit has diagnosed a fault which affects the pollutant emissions.

- Have the fault rectified by a specialist workshop, preferably an authorised BMW Motorrad dealer.
- » You can continue riding; pollutant emissions are higher than the threshold values.

Bulb faulty

The "General" warning light shows yellow.

! LAMP _ appears on the display.

- ! LAMP R: brake light, rear light, indicator light rear or license plate light faulty.
- ! LAMP F: low-beam headlight, high-beam headlight, parking

light or front turn indicator defective.

- ! LAMP S: several bulbs defective.
- with daytime running light^{OE}
- ! LAMP F: additionally: daytime riding light faulty.◀

**WARNING****Overlooking the vehicle in traffic as a result of failed light sources on the vehicle**

Safety risk

- Replace defective bulbs as soon as possible; always carry a complete set of spare bulbs if possible.◀

Possible cause:

One or more bulbs defective.

- Identify defective bulb or bulbs by visual check.

- Replacing bulbs for low-beam and high-beam headlight (➡ 139).
- Replacing bulb for parking light (➡ 141).
- Replacing LED headlight (➡ 144).
- Replacing bulbs for front and rear turn indicators (➡ 142).
- Replacing LED rear light (➡ 143).
- with LED turn indicators^{OE}
- Replacing LED turn indicators (➡ 143).

Anti-theft alarm battery weak

- with alarm system (DWA)^{OE}

DWA!O ! appears on the display.



NOTICE

This error message shows briefly only after the Pre-Ride-Check completes.◀

Possible cause:

The integral battery in the anti-theft alarm has lost a significant proportion of its original capacity. There is no assurance of how long the anti-theft alarm can remain operational if the vehicle's battery is disconnected.

- Seek the advice of a specialist workshop, preferably an authorised BMW Motorrad dealer.

Anti-theft alarm battery flat

- with alarm system (DWA)^{OE}



The "General" warning light shows yellow.

DWA ! appears on the display.



NOTICE

This error message shows briefly only after the Pre-Ride-Check completes.◀

Possible cause:

The integral battery in the anti-theft alarm has lost its entire original capacity. There is no assurance that the anti-theft alarm will be operational if the vehicle's battery is disconnected.

- Seek the advice of a specialist workshop, preferably an authorised BMW Motorrad dealer.

Tyre pressure close to limit of permitted tolerance

- with tyre pressure monitoring (RDC)^{OE}



The "General" warning light shows yellow.



The tyre symbol with one or two arrows appears on the display. The critical tyre pressure reading flashes

The up arrow indicates a front-tyre pressure problem, the down

arrow indicates a rear-tyre pressure problem.

Possible cause:

Measured tyre pressure is close to the limit of permitted tolerance.

- Correct the tyre pressure as stated on the inside cover of the Rider's Manual.



NOTICE

Before you adjust tyre pressure, read the information on temperature compensation and adjusting pressure in the section entitled "Engineering details".◀

Tyre pressure outside permitted tolerance

– with tyre pressure monitoring (RDC)^{OE}



The "General" warning light flashes red.



The tyre symbol with one or two arrows appears on the display. The critical tyre pressure reading flashes



WARNING

Tyre pressure outside permitted tolerance.

Impairment of the vehicle's handling characteristics.

- Adapt your style of riding accordingly.◀

The up arrow indicates a front-tyre pressure problem, the down arrow indicates a rear-tyre pressure problem.

Possible cause:

Measured tyre pressure is outside permitted tolerance.

- Check the tyre for damage and to ascertain whether the vehicle can be ridden with the tyre in its present condition.

If the vehicle can be ridden with

the tyre in its present condition:

- Correct the tyre pressure at the earliest possible opportunity.



NOTICE

Before you adjust tyre pressure, read the information on temperature compensation and adjusting pressure in the section entitled "Engineering details".◀



NOTICE

You can deactivate RDC warnings for riding in off-road mode.◀

- Have the tyre checked for damage by a specialist workshop, preferably an authorised BMW Motorrad dealer.

If you are unsure whether the vehicle can be ridden with the tyre in its present condition:

- Do not continue your journey.
- Notify the breakdown service.

<https://www.motorcycle-manual.com/>

Sensor defective or system error

- with tyre pressure monitoring (RDC)^{OE}



The "General" warning light shows yellow.



The tyre symbol with one or two arrows appears on the display.

Possible cause:

Vehicle is fitted with wheels not equipped with RDC sensors.

- Fit wheels and tyres equipped with RDC sensors.

Possible cause:

1 or 2 RDC sensors have failed or a system error has occurred.

- Have the fault rectified by a specialist workshop, preferably an authorised BMW Motorrad dealer.

Signal transmission disrupted

- with tyre pressure monitoring (RDC)^{OE}

"—" or "-- --" is displayed
Possible cause:

The vehicle did not reach the minimum required speed (115).



RDC sensor is not active

min 30 km/h (The RDC sensor does not transmit its signal to the vehicle until a certain minimum speed has been reached.)

- Increase speed above this threshold and observe the RDC readings. Assume that a permanent fault has not occurred unless the 'General' warning light comes on to accompany

the symptoms. Under these circumstances:

- Have the fault rectified by a specialist workshop, preferably an authorised BMW Motorrad dealer.

Possible cause:

Wireless communication with the RDC sensors has been disrupted. Possible causes include radio-communication systems operating in the vicinity and interfering with the link between the RDC control unit and the sensors.

- Move to another location and observe the RDC readings. Assume that a permanent fault has not occurred unless the 'General' warning light comes on to accompany the symptoms. Under these circumstances:
- Have the fault rectified by a specialist workshop, preferably

<https://www.motorcycle-manual.com/>

an authorised BMW Motorrad dealer.

Battery of tyre-pressure sensor weak

- with tyre pressure monitoring (RDC)^{OE}



The "General" warning light shows yellow.

RDC ! appears on the display



NOTICE

This error message shows briefly only after the Pre-Ride-Check completes. ◀

Possible cause:

The integral battery in the tyre-pressure sensor has lost a significant proportion of its original capacity. There is no assurance of how long the tyre pressure control system can remain operational.

- Seek the advice of a specialist workshop, preferably an authorised BMW Motorrad dealer.

ABS self-diagnosis not completed



ABS telltale and warning light flashes.

Possible cause:



ABS self-diagnosis not completed

The ABS function is not available, because self-diagnosis did not complete. (The motorcycle has to reach a defined minimum speed for the wheel speed sensors to be checked: 5 km/h)

- Pull away slowly. Bear in mind that the ABS function is not available until self-diagnosis has completed.

ABS fault



ABS telltale and warning light shows.

Possible cause:

The ABS control unit has detected a fault. The ABS function is not available.

- You can continue to ride. Bear in mind the more detailed information on situations that can lead to an ABS fault message (➡ 109).
- Have the fault rectified as quickly as possible by a specialist workshop, preferably an authorised BMW Motorrad dealer.

ABS deactivated



ABS telltale and warning light shows.

Possible cause:

The rider has switched off the ABS system.

- Activate the ABS function.

ASC intervention



The ASC telltale and warning light flashes quickly. The ASC has detected a degree of instability at the rear wheel and has intervened to reduce torque. The warning light flashes for longer than the ASC intervention lasts. This affords the rider visual feedback on control intervention even after the critical situation has been dealt with.

ASC self-diagnosis not completed



The ASC telltale and warning light flashes slowly.

Possible cause:



ASC self-diagnosis not completed

The ASC function is not available, because self-diagnosis did not complete. (The motorcycle has to reach a defined minimum speed for the wheel sensors to be checked: min 5 km/h)

- Pull away slowly. The ASC warning light must go out within a few metres.
- If the ASC warning light continues to flash:
- Seek the advice of a specialist workshop, preferably an authorised BMW Motorrad dealer.

ASC deactivated



The ASC telltale and warning light lights up.

Possible cause:

The rider has switched off the ASC system.

- Switch on the ASC function.

ASC fault



The ASC telltale and warning light lights up.

Possible cause:

The ASC control unit has detected a fault. The ASC function is not available.

- You can continue to ride. Bear in mind that the ASC function is not available. Bear in mind the more detailed information on situations that can lead to an ASC fault (112).
- Have the fault rectified as quickly as possible by a specialist workshop, preferably an authorised BMW Motorrad dealer.

ESA fault



The "General" warning light shows yellow.

ESA ! appears on the display.

Possible cause:

The ESA control unit has detected a fault. In this condition, the motorcycle has too much damping and is uncomfortable to drive, especially on roads in poor condition.

- Have the fault rectified as quickly as possible by a specialist workshop, preferably an authorised BMW Motorrad dealer.

Gear not trained

– with Pro shift assistant^{OE}



The gear indicator flashes. The Pro shift assistant is not available.

Possible cause:

– with Pro shift assistant^{OE}

The gearbox sensor is not fully trained.

- Engage neutral gear N and, with the vehicle at a standstill, let the engine run for at least 10 seconds to train the idle gear.
- Engage all gears with clutch actuation and ride at least 10 seconds with the engaged gear.
 - » The gear indicator starts to flash when the gearbox sensor has been trained successfully.
- When the gearbox sensor is fully trained, the Pro shift assistant functions as described (116).
- If the training process was not successful, have the fault rectified by a specialist workshop, preferably an authorised BMW Motorrad dealer.

Fuel down to reserve



Warning light for fuel down to reserve shows.



WARNING

Irregular engine operation or engine shutdown due to lack of fuel

Risk of accident, damage to catalytic converter

- Do not run the fuel tank dry. ◀

Possible cause:

The fuel tank contains no more than the reserve quantity of fuel.



Reserve fuel

approx. 4 l

- Refuelling (102).

Severe fault in the engine control unit



General warning light flashes yellow.



The engine symbol flashes.



WARNING

Engine damage when running in emergency-operation mode

Risk of accident

- Adapt your style of riding accordingly: ride slowly, avoid sharp accelerating and overtaking.
- If possible, have the vehicle brought in and the fault rectified by a specialist workshop, preferably an authorised BMW Motorrad dealer. ◀

Possible cause:

The engine control unit has diagnosed a fault which may cause severe secondary faults. The engine is in emergency-operation mode.

- It is possible to continue to ride but not recommended.
- Avoid high load and rpm ranges if possible.
- Have the fault rectified as quickly as possible by a specialist workshop, preferably an authorised BMW Motorrad dealer.

Engine-oil level too low



The oil-can symbol appears on the display.

OILLVL CHECK appears on the display.

Possible cause:

The electronic oil-level sensor has registered an excessively low oil level. The next time you stop for fuel:

- Check engine oil level (➡ 122).
- If the oil level is too low:
- Top up the engine oil (➡ 123).
- If the oil level is correct:
- Seek the advice of a specialist workshop, preferably an authorised BMW Motorrad dealer.

Battery charge voltage insufficient



The "General" warning light shows red.



The battery symbol appears on the display.



WARNING

Discharged battery causes various motorcycle systems to fail, such as lighting, engine or ABS

Risk of accident

- Do not continue your journey.◀

Battery is not being charged. If you continue to ride the vehicle the on-board electronics will drain the battery.



NOTICE

If the 12 V battery is not correctly installed or if the polarity of the terminals is reversed (e.g. in an attempt to jump-start the vehicle), this can cause the fuse for the alternator regulator to blow.◀

Possible cause:

Alternator or alternator drive faulty or fuse for alternator regulator has blown.

- Have the fault rectified as quickly as possible by a specialist workshop, preferably an authorised BMW Motorrad dealer.

Service-due indicator



If the time remaining to the next service is less than a month or if the next service falls due within 1000 km, service due date **1** and countdown distance **2** show

briefly after the Pre-Ride-Check completes.



If service is overdue, the due date or the odometer reading at which service was due is accompanied by the 'General' warning light showing yellow. The word "Service" remains permanently visible.



NOTICE

If the service-due indicator appears more than a month before the service date, the date saved in the instrument cluster must be adjusted. This situation can occur if the battery was disconnected for a prolonged period of time.

If you want to have the date set consult a specialist workshop, preferably an authorised BMW Motorrad dealer.◀

<https://www.motorcycle-manual.com/>

Fuel reserve

The amount of fuel present in the fuel tank when the fuel warning light is switched on is dependent on vehicle dynamics. The more the fuel moves inside the tank (due to regularly changing angles of heel, frequent braking and acceleration), the more difficult it becomes to determine the reserve volume. For this reason, the fuel reserve volume cannot be displayed exactly.



After the fuel warning light has switched on, the range is displayed automatically. The distance that can still be travelled using the reserve volume depends on the style of driving (usage) and the amount of fuel remaining at the time the light came on (see explanation above).

The odometer for the fuel reserve is reset when the amount of fuel after refuelling is greater than the reserve volume.

Oil level



The oil-level indicator **1** gives you an indication of the engine oil level. You can call up this reading only when the vehicle is at a standstill.

The preconditions for the oil level check are as follows:

- Engine at operating temperature.
- Engine idling for at least ten seconds.
- Side stand retracted.
- Motorcycle standing upright on a smooth, level surface.

The readings mean:

OK: Oil level is correct.

CHECK: Check the oil level the next time you stop for fuel.

---: Oil level cannot be measured (conditions as stated above not satisfied).



If the oil level needs to be checked, the symbol **2** is displayed until the oil level is detected as being correct again.

<https://www.motorcycle-manual.com/>

Ambient temperature

When the motorcycle is at a standstill, the heat of the engine can falsify the ambient-temperature reading. If the effect of the engine's heat becomes excessive, -- temporarily appears on the display.



At ambient temperatures below 3 °C, there is a risk of ice forming. When this temperature threshold is undershot for the first time, there will be an automatic switchover to the ambient temperature display **1**, irrespective

of the actual display setting; the displayed value flashes.



In addition, the ice crystal symbol **2** is shown.



WARNING

Risk of black ice also applicable at over 3 °C

Risk of accident

- Always take extra care when temperatures are low; remember that there is particular danger of black ice forming on bridges and where the road is in shade.◀

Tyre pressure

- with tyre pressure monitoring (RDC)◊E



The front tyre pressure is on the left **1**; the reading on the right **2** is the rear tyre pressure. "-- --" appears directly after the ignition is switched on. The sensors do not transmit tyre pressures until the first time the vehicle accelerates to more than 30 km/h. The reference tyre-air temperature for these tyre-pressure readings is always 20 °C.



If the symbol **3** also shows, this is a warning. The critical tyre pressure flashes.



If the value in question is close to the limit of the permissible tolerance range, the reading is accompanied by the 'General' warning light showing yellow. If the tyre pressure registered by the sensor is outside the permissible tolerance range, the 'General' warning light flashes red.

The detailed description of BMW Motorrad RDC starts on page (115).

Recommendation to upshift

The upshift recommendation must be activated in the display settings (59).



The upshift recommendation **1** signals the economically best point in time for upshift.

<https://www.motorcycle-manual.com/>

<https://www.motorcycle-manual.com/>

Operation

Ignition switch/steering lock	46	Anti-theft alarm (DWA)	74
Ignition with Keyless Ride	48	Heated handlebar grips	76
Emergency off switch (kill switch)	52	Front and rear seats	76
Lights	53		
Daytime riding light	54		
Hazard warning lights system	56		
Turn indicators	57		
Multifunction display	57		
Anti-lock brake system (ABS)	64		
Automatic Stability Control (ASC)	65		
Electronic Suspension Adjustment (ESA)	66		
Riding mode	68		
Cruise-control system	72		

<https://www.motorcycle-manual.com/>

Ignition switch/steering lock

Keys

You receive 2 ignition keys. Please consult the information on the electronic immobiliser (EWS) if a key is lost or mislaid (➡ 47). Ignition switch/steering lock, fuel filler cap lock and seat lock are all operated with the same key.

- with cases^{OA}
- with topcase^{OA}

If you wish you can arrange to have the cases and the top-case fitted with locks that can be opened with the ignition key as well. Consult a specialist workshop, preferably an authorised BMW Motorrad dealer.

Lock the handlebars

- Turn the handlebars all the way to left.



- Turn the key to position **1**, while moving the handlebars slightly.
 - » Ignition, lights and all function circuits switched off.
 - » Handlebars are locked.
 - » Key can be removed.

Switching on ignition



- Insert the key in the ignition switch and turn to position **1**.
 - » Side lights and all function circuits are switched on.
 - » Pre-Ride-Check is performed (➡ 94)
 - » ABS self-diagnosis is performed (➡ 94)
 - » ASC self-diagnosis is performed (➡ 95)

Welcome lights

- Switch on the ignition.
 - » The side lights briefly light up.

- with daytime running light^{OE}
 - » The daytime riding lights briefly light up.<
- with LED headlights^{OE}
 - » The LED auxiliary headlights briefly light up.<

Switching off ignition



- Turn the ignition key to position **1**.
- » When the ignition is switched off, the instrument cluster remains switched on for a short time and displays any existing fault messages.
- » Handlebars not locked.

- » Electrically powered accessories remain operational for a limited period of time.
- » The battery can be recharged via the socket.
- » Key can be removed.

- with daytime running light^{OE}
- with LED headlights^{OE}
 - The daytime running light goes out soon after the ignition is switched off.<
- with LED auxiliary headlights^{OA}
 - The LED auxiliary headlights go out soon after the ignition is switched off.<

Electronic immobiliser EWS

The electronic design of the motorcycle allows it to access data stored in the ignition key by means of a ring antenna located in the ignition switch/steering lock. The engine control unit

will not permit the engine to be started unless the key is identified as “authorised”.



NOTICE

A spare key attached to the same ring as the ignition key used to start the engine could “irritate” the electronics, in which case the enabling signal for starting is not issued. The warning with the key symbol appears in the multifunction display.

Always keep the spare key separately from the ignition key.◀

If you lose your key, you can have it barred by your authorised BMW Motorrad dealer. If you wish to do this, you will need to bring all other keys for the motorcycle with you. The engine cannot be started by a barred key, but a key that has

<https://www.motorcycle-manual.com/>

been barred can subsequently be reactivated.

You can obtain emergency/extra keys only through an authorised BMW Motorrad dealer. The keys are part of an integrated security system, so the dealer is under an obligation to check the legitimacy of all applications for replacement/extra keys.

Ignition with Keyless Ride

– with Keyless Ride^{OE}

Keys



NOTICE

The telltale light for the radio-operated key flashes while the search for the radio-operated key is in progress.

The telltale light goes out as soon as the radio-operated key or the emergency key is found.

The telltale light goes out briefly if the search times out without the radio-operated key or the emergency key being found.◀

You receive one radio-operated key and one emergency key. Please consult the information on the electronic immobiliser (EWS) if a key is lost or mislaid (47). Ignition, fuel filler cap and anti-theft alarm system all work with the radio-operated key. Seat lock, topcase and cases can be locked and unlocked manually.



NOTICE

The vehicle cannot be started or the central locking system locked or unlocked if the radio-operated key is not within range (e.g. key inside one of the cases or the topcase).

If the key is taken out of range the ignition is switched off after approximately 1.5 minutes, but

the central locking system is **not** locked.

It is advisable to keep the radio-operated key on your person (e.g. in a jacket pocket) and to have the emergency key with you as an alternative.◀



Range of the Keyless Ride radio-operated key

– with Keyless Ride^{OE}

approx. 1 m◀

Lock the handlebars Requirement

The handlebars are turned all the way to left. Radio-operated key is within range.



- Press and hold down button **1**.
 - » The steering lock engages with an audible click.
 - » Ignition, lights and all function circuits switched off.
- Short-press button **1** to disengage the steering lock.

Switching on ignition

Requirement

Radio-operated key is within range.



- There are **two** ways of activating the ignition.

Version 1:

- Short-press button **1**.
 - » Side lights and all function circuits are switched on.
 - with daytime running light^{OE}
 - » Daytime riding light is switched on.<
 - with LED headlights^{OE}
 - » LED auxiliary headlights are switched on.<
 - » Pre-Ride-Check is performed (94)
 - » ABS self-diagnosis is performed (94)

- » ASC self-diagnosis is performed (95)

Version 2:

- Steering lock is engaged; press and hold down button **1**.
 - » The steering lock disengages.
 - » Parking lights and all function circuits switched on.
 - » Pre-Ride-Check is performed (94)
 - » ABS self-diagnosis is performed (94)
 - » ASC self-diagnosis is performed (95)

Switching off ignition Requirement

Radio-operated key is within range.



- There are **two** ways of deactivating the ignition.

Version 1:

- Short-press button **1**.
 - » Light is switched off.
 - » Handlebars (steering lock) are not locked.

Version 2:

- Turn the handlebars all the way to left.
- Press and hold down button **1**.
 - » Light is switched off.
 - » The steering lock engages.

Electronic immobiliser EWS

The on-board electronics access the data saved in the radio-operated key via a ring aerial in the R/C ignition lock. The ignition is not enabled for starting until the engine control unit has recognised the radio-operated key as "authorised" for your motorcycle.



NOTICE

A spare vehicle key attached to the same ring as the radio-operated key used to start the engine could "irritate" the electronics, in which case the enabling signal for starting is not issued. The warning with the key symbol appears in the multifunction display. Always keep the spare key separately from the radio-operated key. ◀

If you mislay a radio-operated key you can have the key in question barred by your authorised BMW Motorrad dealer. In order to have a key barred you must bring along all the other keys belonging to the motorcycle.

The engine cannot be started by a barred radio-operated key, but a radio-operated key that has been barred can subsequently be reactivated.

You can obtain emergency/extra keys only through an authorised BMW Motorrad dealer. The radio-operated keys are part of an integrated security system, so the dealer is under an obligation to check the legitimacy of all applications for replacement/extra keys.

Battery of the radio-operated key is empty or loss of the radio-operated key



- Please consult the information on the electronic immobiliser (**EWS**) if a key is lost or mislaid.
- If you happen to lose or mislay the radio-operated key while on a journey, you can start the vehicle with the emergency key.
- If the battery of the radio-operated key is empty, touching the radio-operated key against the

rear-wheel cover will start the engine.

- Hold emergency key **1** or radio-operated key with empty battery **2** at the rear-wheel cover level with aerial **3**.



NOTICE

The emergency key or the radio-operated key with the empty battery must be **in contact with** the rear-wheel cover.◀



Time during which the engine has to be started. The unlocking procedure has to be repeated if this time is allowed to expire.

30 s

- » Pre-ride check is performed.
- Key has been recognised.
- Engine can be started.
- Start engine (93).

Replace the battery of the radio-operated key


If the radio-operated key does not react when you short-press or long-press a button:

- The integral battery in the radio-operated key has lost a significant proportion of its original capacity.

» Change the battery.



The battery symbol appears on the display.

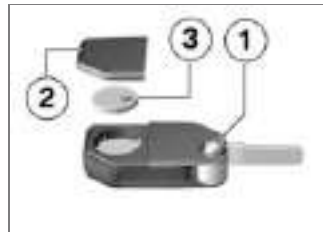

- Press button **1**.
- » Key bit flips out.
- Push up battery cover **2**.

- Remove battery **3**.
- Dispose of the old battery in accordance with all applicable laws and regulations; do not attempt to dispose of batteries as domestic waste.



ATTENTION

Unsuitable or incorrectly inserted batteries

Component damage

- Use a battery compliant with the manufacturer's specifications.
- When inserting the battery, always make sure polarity is correct. ◀
- Insert the new battery with the positive terminal up.



Battery type

for Keyless Ride-radio-operated key



Battery type

CR 2032

- Install battery cover **2**.
- » Red LED on the instrument panel flashes.
- » The radio-operated key is ready for use again.

Emergency off switch (kill switch)



- 1** Emergency off switch (kill switch)




WARNING

Operation of the kill switch while riding

Risk of fall due to rear wheel locking

- Do not operate the kill switch when riding. ◀

The emergency off switch is a kill switch for switching off the engine quickly and easily.

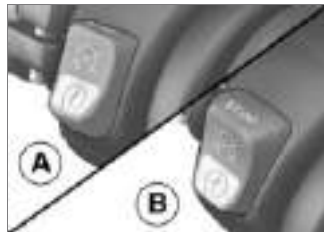

- A** Engine switched off
B Normal operating position (run)

Lights

Low-beam headlight and sidelights

The side lights switch on automatically when the ignition is switched on.



NOTICE

The side lights place a strain on the battery. Do not switch the ignition on for longer than absolutely necessary. ◀

The low-beam headlight switches on automatically when the engine is switched on.

– with daytime running light^{OE}

In daytime the daytime riding lights can be switched on as an alternative to the low-beam headlight.

High-beam headlight and headlight flasher

- Switching on ignition (☛ 46).



- Push switch **1** forward to switch on the high-beam headlight.
- Pull switch **1** back to operate the headlight flasher.

Headlight courtesy delay feature


- Switch off the ignition.



- Immediately after switching off the ignition, push button **1** to the back and hold it in this position until the headlight courtesy delay feature comes on.
 - » The vehicle lighting lights for one minute and is automatically switched back off.
- This can be used after parking the vehicle, for example, to light the way to the house door.

Parking lights

- Switching off ignition (☛ 47).

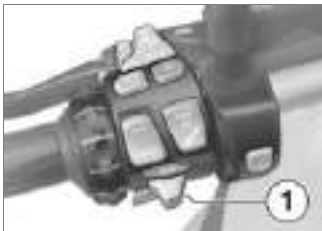

- Immediately after switching off the ignition, push button **1** to the left and hold it in this position until the parking lights come on.
- Switch the ignition on and off again to switch off the parking lights.

Auxiliary headlights

– with LED auxiliary headlights^{OA}

Requirement

The LED auxiliary headlights are active only when the low-beam headlight is active; if the daytime riding light is switched on, the

LED auxiliary headlights cannot be switched on.



NOTICE

The auxiliary headlights have approval as fog lights and their use is permissible in bad weather conditions only. Always comply with the road traffic regulations in force in the country in which the vehicle is used.◀

- Start engine (93).



- Press button **1** to switch on the auxiliary headlights.



The indicator light for the auxiliary headlight illuminates.

- Press button **1** again to switch off the auxiliary headlights.

Daytime riding light

– with daytime running light^{OE}

Manual daytime riding light

Requirement

Automatic daytime riding light is switched off.



WARNING

Activation of daytime riding light in the dark.

Poorer vision and oncoming traffic dazzled.

- Do not use the daytime running light when it is dark.◀



NOTICE

By comparison with the low-beam headlight, the daytime running light makes the vehicle more visible to oncoming traffic. This improves daytime visibility.◀

- Start engine (93).
- In the display's **SETUP** menu, go to the **DLIGHT** menu item and set the automatic daytime riding light to **OFF**.



The indicator light for the daytime riding light illuminates.

- » The low-beam headlight, the front side lights and the auxiliary headlight are switched off.
- In the dark or in tunnels: Press button **1** again to switch off the daytime riding light and switch on the low-beam headlight. The auxiliary headlight is also switched on again.



NOTICE

If the high beam headlight is switched on whilst the daytime riding light is switched on, the daytime riding light will be switched off after approx. 2 seconds, and the high beam headlight, low beam headlight, front side lights and, if applicable, the auxiliary headlights will be switched on.

If the high beam headlight is switched off again, the daytime riding light is not automatically reactivated, but must be switched on again if required.◀

Automatic daytime riding light



NOTICE

The changeover between daytime riding light and low beam headlight incl. front side lights can be effected automatically.◀



- Press button **1** to switch on the daytime riding light.

<https://www.motorcycle-manual.com/>



WARNING

The automatic riding light control system cannot replace your personal assessment of lighting conditions, particularly in foggy or misty weather.

Safety risk

- Manually switch on the low-beam headlight in poor lighting conditions. ◀
- In the SETUP menu of the display, at the menu item DLIGHT set the automatic daytime riding light to ON.



The indicator light for the automatic daytime riding light illuminates.

- » If the ambient brightness decreases below a certain value, the low beam headlight is automatically switched on (e. B. in a tunnel). If a sufficient ambient brightness is detected, the

daytime riding light is switched on again. If the daytime riding light is active, the daytime riding light symbol is displayed in the multifunction display.

Manual operation of the light when the automatic system is switched on

- If you press the button for the daytime running light the daytime running light is switched off and the low-beam headlight and front side lights are switched on (e. g. when you ride into a tunnel, and the response of the automatic daytime running light to the change in ambient brightness is delayed). The auxiliary headlight switches on again when the daytime running light is switched off.
- If you press the button again the daytime riding light is re-activated, in other words the

daytime riding light is switched on again when ambient light is bright enough.

Hazard warning lights system

Operating hazard warning flashers

- Switching on ignition (➡ 46).



NOTICE

The hazard warning flashers place a strain on the battery. Do not use the hazard warning flashers for longer than absolutely necessary. ◀



- Press button **1** to switch on the hazard warning flashers.
» Ignition can be switched off.
- To switch off the hazard warning flashers, switch on the ignition if necessary and press button **1** again.

Turn indicators

Operating the turn indicators

- Switching on ignition (🔑 46).



- Push button **1** to the left to switch on the left turn indicators.
- Push button **1** to the right to switch on the right turn indicators.
- Operate centre button **1** to cancel the turn indicators.



Turn-indicator cancellation

The turn indicators are cancelled automatically after the defined time and distance.

Multifunction display

Select display

- Switching on ignition (🔑 46).



- Briefly press button **1** in order to select the display in the top display line **2**.

In the standard equipment the following values can be displayed and selected at the press of a button:

- Total distance travelled (ODO)
- Tripmeter 1 (TRIP I)
- Tripmeter 2 (TRIP II)
- Range (RANGE)

<https://www.motorcycle-manual.com/>

– SETUP-menu (SETUP), only when stationary

– with Pro onboard computer^{OE}

The following information is additionally displayed by means of the on-board computer Pro:

- Automatic tripmeter (TRIP A)
- Current consumption (CONS C)
- Current speed (SPEED)<



- Briefly press button **1** in order to select the display in the bottom display line **2**.

In the standard equipment the following values can be displayed

and selected at the press of a button:

- Ambient temperature (EXTMP)
- Engine temperature (ENGTMP)
- Average consumption 1 (CONS 1)
- Average consumption 2 (CONS 2)
- Average speed (Ø SPEED)

- with tyre pressure monitoring (RDC)^{OE}
- Tyre pressures (RDC)<

- Date (DATE)
- Oil-level reminder (OILLVL)

- with Pro onboard computer^{OE}
- Vehicle circuit voltage (VOLTGE)<

- with Pro onboard computer^{OE}
- Stopwatch total time (ALTIME)<

- with Pro onboard computer^{OE}
- Stop watch driving time (RDTIME)<

Resetting trip distance recorder

- Switching on ignition (➡ 46).



- Repeatedly press button **1** briefly until the tripmeter to be reset is indicated in the top display line **2**.
- Press and hold down button **1** until the value shown is reset.

Resetting the average values

- Switching on ignition (🔑 46).



- Repeatedly press button **1** briefly until the average value to be reset is indicated in the bottom display line **2**.
- Press and hold down button **1** until the value shown is reset.

Configuring functions

- Switching on ignition (🔑 46).



- Repeatedly press button **1** briefly until the top display line displays **2** SETUP ENTER.
- Press and hold button **1** to start the SETUP menu.
 - » The following indication in the display depends on the equipment selected.



- Press button **1** briefly in order to go to the next menu item.
 - » The top display line **2** shows the menu item.
 - » The bottom display line **3** shows the preset value.
 - Press button **4** briefly in order to change the set value.
- The following menu items can be selected:
- with alarm system (DWA)^{OE}
 - DWA: Switch alarm system ON or OFF<

- with preparation for navigation system^{OE}
- GPS TM: Navigation system installed: Accept GPS time and GPS date (ON) or do not accept (OFF)◀
- CLOCK: Setting the clock
- DATE: Setting the date
- ECOSFT: Show upshift recommendation on the display (ON) or not (OFF)
- BRIGHT: Set display brightness, from normal (0) to bright (5)
- with daytime running light^{OE}
- DLIGHT: Switch daytime riding light ON or OFF◀
- EXIT: Exit SETUP menu
- with Pro onboard computer^{OE}
- BC CUSTOM: Start individualisation of the display.◀



- In order to exit the SETUP menu, at the menu item SETUP EXIT press and hold button **1**.
- In order to cancel the SETUP menu at any point, press button **2** and hold.

Setting the clock

- Switching on ignition (🔑 46).



WARNING

Adjusting the clock when riding

Risk of accident

- Set the clock only when the motorcycle is stationary.◀
- In the SETUP menu, select the menu item SETUP CLOCK.



- Keep button **2** pressed until the hours in the bottom display line **3** start to flash.



NOTICE

If "-- : --" is displayed instead of the time, the voltage supply of the instrument cluster has been interrupted (e.g. by disconnecting the battery).▶

- Press button **1** to increase the flashing value or button **2** to reduce the same.
- Keep button **2** pressed until the minutes in the bottom display line **3** start to flash.
- Press button **1** to increase the flashing value or button **2** to reduce the same.
- Keep button **2** pressed until the minutes no longer flash.
- » Setting is complete.
- In order to cancel the setting at any point, keep button **1** pressed until the initial value is shown again.



NOTICE

If you drive off before the setting has been completed, the setting will be cancelled.◀

Setting the date

- Switching on ignition (⚡ 46).

- In the SETUP menu, select the menu item SETUP DATE.



- Keep button **2** pressed until the day in the bottom display line **3** starts to flash.



NOTICE

If "-- . -- . --" is displayed instead of the date, the voltage supply of the instrument cluster has been interrupted (e.g. by disconnecting the battery).◀

- Press button **1** to increase the flashing value or button **2** to reduce the same.
- Keep button **2** pressed until the month in the bottom display line **3** starts to flash.
- Press button **1** to increase the flashing value or button **2** to reduce the same.
- Keep button **2** pressed until the year in the bottom display line **3** starts to flash.
- Press button **1** to increase the flashing value or button **2** to reduce the same.
- Keep button **2** pressed until the year no longer flashes.
- » Setting is complete.
- In order to cancel the setting at any point, keep button **1** pressed until the initial value is shown again.



NOTICE

If you drive off before the setting has been completed, the setting will be cancelled.◀

Customising the display

– with Pro onboard computer^{OE}

- Switching on ignition (➡ 46). In the customisation menu, it is possible to set which information is to be displayed in which display line.
- In the SETUP menu, select the menu item SETUP BC BASIC.



- Briefly press button **1** to start the customisation menu.
 - » SETUP BC CUSTOM appears on the display.
- Briefly press button **1** again to exit the customisation menu.



NOTICE

If SETUP BC BASIC is selected, then the factory setting will be active again. The customisation CUSTOM remains stored.◀



- Press button **1** for a long period in order to display the first menu item.
 - » SETUP BC ODO appears on the display.



- Press button **2** briefly in order to go to the next menu item.
- » The top display line **3** shows the menu item.
- » The bottom display line **4** shows the preset value. The following values can be set.
- TOP: The value is displayed in the top display line.
- BELOW: The value is displayed in the bottom display line.
- BOTH: The value is displayed in both display lines.
- OFF: The value is not displayed.

- Press button **1** briefly in order to change the set value.

The following menu items can be selected, the works setting is shown in brackets. Some menu items will only be selected if the relevant special equipment (OE) is actually present.

- ODO: Total mileage counter (TOP, the setting OFF is not possible)
- TRIP 1: Tripmeter 1 (TOP)
- TRIP 2: Tripmeter 2 (TOP)
- TRIP A: Automatic tripmeter (TOP)
- EXTEMP: Ambient temperature (BELOW)
- ENGTEMP: Engine temperature (BELOW)
- RANGE: Range (TOP)
- CONS R: Average consumption for range calculation (OFF)
- CONS 1: Average consumption 1 (BELOW)

- CONS 2: Average consumption 2 (BELOW)
- CONS C: Current consumption (TOP)
- ØSPEED: Average speed (BELOW)
- SPEED: Current speed (TOP)
- RDC: Tyre pressures (BELOW)
- VOLTGE: Vehicle circuit voltage (BELOW)
- ALTIME: Stopwatch total time (BELOW)
- RDTIME: Stopwatch driving time (BELOW)
- DATE: Date (BELOW)
- SERV T: Date of the next service (OFF)
- SERV D: Countdown distance to next service (OFF)
- OILLVL: Oil level note (BELOW)
- EXIT: Exit customisation menu

<https://www.motorcycle-manual.com/>



- When the menu item **SETUP EXIT** is displayed, press and hold button **1** to exit the customisation menu.
- In order to exit the customisation menu at any point, press and hold button **2**.
- » All settings made until then will be saved.

Anti-lock brake system (ABS)

Deactivating the ABS function

- Switching on ignition (➡ 46).



- Press and hold down button **1** until the ABS warning light changes status.
- » Initially, the ASC symbol changes status. Press and hold down button **1** until the ABS warning light responds. Under these circumstances, there is no change in the ASC setting.



ABS telltale and warning light shows.

- Release button **1** within two seconds.



ABS telltale and warning light remains on.

» The ABS function is deactivated, but the integral function remains active.

Activating the ABS function



- Press and hold down button **1** until the ABS warning light changes status.



ABS telltale and warning light goes out; if self-diagnosis has not completed, it starts flashing.

- Release button **1** within two seconds.



ABS telltale and warning light remains off or continues to flash.

- » The ABS function is activated.
- You also have the option of switching the ignition off and then on again.



NOTICE

An ABS fault has occurred if the ABS telltale and warning light shows when the motorcycle accelerates to a speed in excess of 5 km/h after the ignition was switched off and then on again.◀



NOTICE

See the section entitled "Engineering details" for more information on brake systems with BMW Motorrad Integral ABS.◀

Automatic Stability Control (ASC)

Deactivating the ASC function

- Switching on ignition (➡ 46).



- Press and hold down button **1** until the ASC warning light changes status.



NOTICE

You have the option of deactivating the ASC function while the motorcycle is on the move.◀



The ASC telltale and warning light lights up.

- Release button **1** within two seconds.



The ASC telltale and warning light remains lit.

- » The ASC function is deactivated.

Activating the ASC function



- Press and hold down button **1** until the ASC warning light changes status.

<https://www.motorcycle-manual.com/>



The ASC telltale and warning light goes out; if self-diagnosis has not completed, the warning light starts to flash.

- Release button **1** within two seconds.



The ASC telltale and warning light still does not light or continues to flash.

- » The ASC function is activated.
- You also have the option of switching the ignition off and then on again.



NOTICE

An ASC fault has occurred if the ASC telltale and warning light shows when the motorcycle accelerates to a speed in excess of 5 km/h after the ignition was switched off and then on again.◀



NOTICE

See the section entitled "Engineering details" for more information on BMW Motorrad Automatic Stability Control (ASC).◀

Electronic Suspension Adjustment (ESA)

– with Dynamic ESA^{OE}

Dynamic ESA Possible settings

Using the electronic chassis adjustment Dynamic ESA you can comfortably adapt your motorcycle to the actual vehicle load. Via ride height sensors, Dynamic ESA detects the movements in the chassis and suspension and responds to the same by adjusting the damper valves. The chassis and suspension will thus be adapted to the characteristics of the terrain.

Starting from the basic setting NORMAL, the damping can be made harder (HARD) or softer (SOFT).

The ESA calibrates at regular intervals at a standstill with the engine running to ensure the system is functioning properly. Chassis adjustment is not possible during this calibration.

– with Pro riding modes^{OE}

The setting of the chassis and suspension and the number of the selectable damping variants depend on the riding mode selected. The damping defined by the riding mode can be changed by the rider.

If the coding plug is not fitted, the basic setting specified by the riding mode will be set after each mode change. If the coding plug is fitted, the driver's adjustments are retained for all modes.

Viewing suspension settings

- Switching on ignition (🔑 46).



- Press button **1** briefly to view the current setting.



In the multifunction display, the damping is shown in area **1**, the spring preload in area **2**.

» The setting shows briefly, then disappears automatically.

Adjusting the chassis and suspension

- Switching on ignition (🔑 46).



- Press button **1** briefly to view the current setting.

To adjust damping:

- Repeatedly press button **1** until the setting you want to use appears on the display.



NOTICE

You can adjust the damping characteristic while the motorcycle is on the move.◀

The following settings are available:

- SOFT: Comfortable damping characteristic

<https://www.motorcycle-manual.com/>

- NORMAL: Normal damping characteristic
- HARD: Sporty damping characteristic

– with Pro riding modes^{OE}

In the Enduro and Enduro Pro modes, only two settings are possible:

- SOFT: Comfortable damping characteristic
- HARD: Sporty damping characteristic

To adjust spring preload:

- Start engine (93).
- Repeatedly press button **1** and hold until the setting you want to use appears on the display.



NOTICE

You cannot adjust spring preload while the motorcycle is on the move.◀

The following settings are available:



One-up



One-up with luggage



Two-up (with luggage)

- Wait for the mechanism to complete all adjustments before you ride off.
- » The settings for damping and spring preload shown on the display are automatically accepted if you allow a certain length of time to pass without pressing button **1**. The ESA indicator flashes while adjustment is in progress.
- If the temperature is very low, take the weight off the motorcycle before increasing spring preload; if applicable, have your passenger dismount.

- » The ESA indicator disappears from the display as soon as adjustment completes.

Riding mode

Using the riding modes

BMW Motorrad has developed 5 operational scenarios for your motorcycle from which you can select the scenario suitable for your situation:

- Riding on a rain-wet road surface.
- Riding on a dry road surface.

– with Pro riding modes^{OE}

- Sporty riding on a dry road surface.
- Riding in easy off-road terrain.
- Sporty off-roading.

The interplay of engine torque, throttle response ABS/ASC control is optimised for each of these 5 scenarios.

– with Dynamic ESA^{OE}

The chassis adjustment also adapts to the selected scenario.

Setting riding mode

- Switching on ignition (➡ 46).



- Press button **1**.



NOTICE

See the section entitled "Engineering details" for more information on the various ride modes that can be selected.◀



The selection arrow **1** and the first selectable riding mode **2** are displayed.



ATTENTION

Activation of the off-road mode (Enduro and Enduro Pro) when riding on-road

Risk of crash due to lack of stability when the vehicle brakes or accelerates in the control range of ABS or ASC.

- Activate off-road mode (Enduro and Enduro Pro) only for off-road riding.◀
- Press button **1** as often as necessary until the required riding mode is indicated next to the selection arrow.

<https://www.motorcycle-manual.com/>



NOTICE

When the Enduro PRO mode is selected: Note that ABS control for the rear wheel is restricted (see the section entitled "Engineering details").◀

The following ride modes can be selected:

- RAIN: For riding on a rain-wet road surface.
- ROAD: For riding on a dry road surface.
- with Pro riding modes^{OE}
 - » The following riding modes are additionally available for selection:
 - DYNA: For dynamic riding on a dry road surface.
 - Enduro: For off-riding.
 - Enduro PRO: For sporty off-road riding (with fitted coding plug only).◀

- » With the motorcycle at a standstill, the selected mode is activated after approximately two seconds.
- » The newly selected riding mode is activated as you ride only when the following preconditions are satisfied:
 - Throttle twistgrip is in idle position.
 - The clutch lever is operated.
- » Following activation of the new riding mode the clock is displayed again.
- » The mode selected in this way is retained with the engine-characteristic, ABS, ASC and Dynamic ESA adaptation settings even after the ignition has been switched off.

Deactivate the RDC for off-riding

- with Pro riding modes^{OE}

Requirement

You can deactivate RDC warnings for the Enduro and Enduro Pro riding modes when you want to lower the tyre pressures for off-riding.

- Switching on ignition (➡ 46).



- Repeatedly press button **1** briefly until the top display line displays **2** SETUP ENTER.

- Press and hold button **1** to start the **SETUP** menu.



- Press button **1** briefly to go to the next menu item RDC.
 - » In the top display line **2**, RDC is displayed.
 - » The bottom display line **3** shows the preset value.
- Press button **4** briefly in order to change the set value.
 - » The following settings are available:
- ON: The RDC warning symbol in the display does not show. An out-of-tolerance tyre pres-

sure is displayed in the Enduro and Enduro Pro riding modes.

- OFF: The RDC warning symbol in the display shows and an out-of-tolerance tyre pressure is displayed in the Enduro and Enduro Pro riding modes.

Installing encoding plug

- with Pro riding modes^{OE}

- Switching off ignition (➡ 47).
- Remove front seat (➡ 77).



ATTENTION

Dirt and damp penetrating inside open connectors

Malfunctions

- Reinstall the protective cap after removing the coding plug. ◀
- Remove cap of plug **1**.

<https://www.motorcycle-manual.com/>



- To do so, press in latch **1** and remove the cap.
- Install the coding plug.
- Switch on the ignition.



The symbol **1** for the coding plug is shown in the display. The

riding mode **2** Enduro PRO is selectable.

- Installing front seat (79).


Cruise-control system

– with cruise control^{OE}

Switching on cruise control

Requirement

Cruise control is not available until the Enduro or Enduro Pro riding mode has been deactivated.

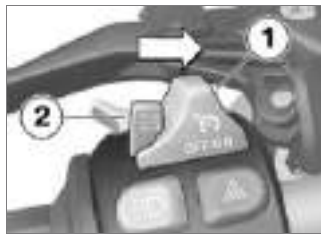

- Slide switch **1** to the right.

» Button **2** is enabled for operation.

Saving road speed



- Briefly push button **1** forward.

 Adjustment range for speed control

30...210 km/h

 Telltale light for cruise control shows.

» The motorcycle maintains your current cruising speed and the setting is saved.

Accelerating



- Briefly push button **1** forward.
 - » The speed is increased by 2 km/h each time the button is pushed.
- Push button **1** forward and hold it in this position.
 - » The motorcycle accelerates steplessly.
 - » The current speed is maintained and saved if button **1** is not pushed again.

Decelerating



- Briefly push button **1** back.
 - » The speed is reduced by 2 km/h each time you push the button.
- Push button **1** back and hold it in this position.
 - » The motorcycle decelerates steplessly.
 - » The current speed is maintained and saved if button **1** is not pushed again.

Deactivate cruise control

- Brake, pull the clutch lever or turn the throttle twistgrip (close the throttle) by turning

the twistgrip back past the idle position) to deactivate the cruise-control system.

- » Telltale light for cruise control goes out.

Resuming former cruising speed



- Briefly push button **1** back to return to the speed saved beforehand.



NOTICE

Opening the throttle does not deactivate the cruise-control system. If you release the twistgrip

the motorcycle will decelerate only to the cruising speed saved in memory, even though you might have intended slowing to a lower speed. ◀



Telltale light for cruise control shows.

Switching off cruise control



- Slide switch **1** to the left.
 - » The system is deactivated.
 - » Button **2** is disabled.

Anti-theft alarm (DWA)

- with alarm system (DWA)^{OE}

Activation

- Switching on ignition (➡ 46).
- Customising anti-theft alarm settings (➡ 75).
- Switch off the ignition.
 - » If the alarm system is activated, then the alarm system will be automatically activated when the ignition is switched off.
 - » Activation takes approximately 30 seconds to complete.
 - » Turn indicators flash twice.
 - » Confirmation tone sounds twice (if programmed).
 - » Anti-theft alarm is active.

Alarm signal

A DWA alarm can be triggered by:

- motion sensor
- an attempt to use an unauthorised vehicle key to switch on the ignition.
- disconnection of the DWA anti-theft alarm from the motorcycle's battery (DWA internal battery in the anti-theft alarm provides power - alarm tone only, the turn indicators do not flash)

All functions are sustained even if the internal battery of the DWA anti-theft alarm system is flat; the only difference is that an alarm cannot be triggered if the system is disconnected from the motorcycle's battery.

An alarm lasts for approximately 26 seconds. While an alarm is in progress an alarm tone sounds and the turn indicators flash. The type of alarm tone can be set by

an authorised BMW Motorrad dealer.

If an alarm was triggered while the motorcycle was unattended, the rider is notified accordingly by an alarm tone sounding once when the ignition is switched on. The DWA LED then indicates the reason for the alarm for one minute.

Light signals issued by the DWA LED:

- Flashes 1x: Motion sensor 1
- Flashes 2x: Motion sensor 2
- Flashes 3x: Ignition switched on with unauthorised vehicle key
- Flashes 4x: Disconnection of the anti-theft alarm from the motorcycle's battery
- Flashes 5x: Motion sensor 3

Deactivation

- Kill switch in operating position (run).

- Switch on the ignition.
 - » Turn indicators flash once.
 - » Confirmation tone sounds once (if programmed).
 - » Anti-theft alarm is deactivated.

Customising anti-theft alarm settings

- Switching on ignition (➡ 46).



- Repeatedly press button **1** briefly until the top display line displays **2** SETUP ENTER.
- Press and hold button **1** to start the SETUP menu.



- Press button **1** briefly to go to the next menu item DWA.
 - » In the top display line **2**, DWA is indicated.
 - » The bottom display line **3** shows the preset value.
- Press button **4** briefly in order to change the set value.

The following settings are available:

- On: The alarm system has been activated or will be activated automatically when the ignition is switched.
- Off: Alarm system is deactivated.

<https://www.motorcycle-manual.com/>

Heated handlebar grips

– with heated handlebar grips^{OE}

Operating the heated handlebar grips



NOTICE


The heating in the heated handlebar grips can be activated only when the engine is running.◀



NOTICE

The increase in power consumption caused by having the heated handlebar grips switched on can drain the battery if you are riding at low engine speeds. If the charge level is low, the heated handlebar grips are switched off to ensure the battery's starting capability.◀

- Start engine (93).

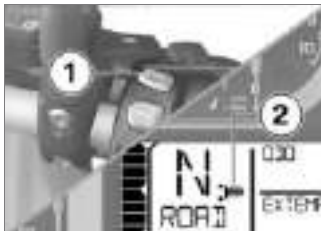

- Repeatedly press button **1** until desired heating stage **2** appears on the display.

The handlebar grips have two-stage heating.



50% heating power



100% heating power

- » Stage 2 is for heating the grips quickly: it is advisable to switch back to stage 1 as soon as the grips are warm.

- » The selected heating stage will be saved if you allow a certain

length of time to pass without making further changes.

- In order to switch off the heated handlebar grips, repeatedly press button **1** until the heated handlebar grip symbol **2** is no longer shown on the display.

Front and rear seats

Removing rear seat

- Make sure the ground is level and firm and place the motorcycle on its stand.



Install the rear seat



- Turn the key clockwise in seat lock **1** and hold it in this position while pressing down the rear part of rear seat **2**.
- Lift the rear seat at the front and release the key.
- Remove the rear seat and place it, upholstered side down, on a clean surface.

- The rear seat can be set to either of 2 different positions.
- Bear in mind the position of the rider's seat with regard to the direction for adjustment of the passenger seat:
- Centre both lugs **1** on the rear seat in the mounts.
 - Rear seat position: Push passenger seat toward the rear **A**.
 - Front seat position: Push passenger seat forward **B**.
- » Lugs **1** of the rear seat are correctly located.



- Firmly press down on front seat **1** at the front.
 - » The rear seat engages with an audible click.

Removing front seat

- Removing rear seat (➡ 76).


<https://www.motorcycle-manual.com/>




- Use vehicle key to turn seat lock **1** to the left and hold, supportingly press down the rider's seat in the rear area **2**.
- Lift the front seat at the rear and release the key.
- Remove the front seat and place it, upholstered side down, on a clean surface.

Adjusting height and angle of tilt of front seat

- Remove front seat (➡ 77).

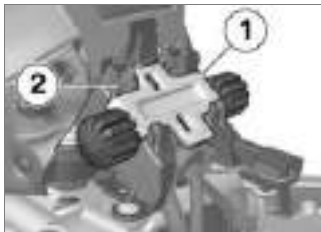

- In order to remove the front height adjustment **1**, press down locking mechanism **2** and remove height adjustment in an upward direction.

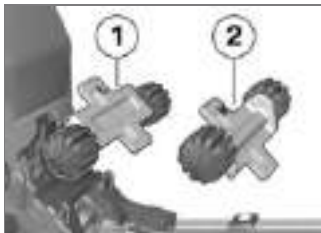


- In order to set the low seat position, install front height ad-

justment in the alignment **1** (identification L).

- In order to set the high seat position, install front height adjustment in the direction **2** (identification H).



- Initially push front height adjustment under the mountings **1**, subsequently press into the locking mechanism **2** until the same engages.

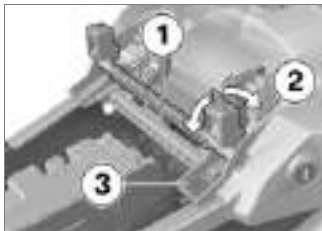

- In order to set the low seat position, swivel rear height adjustment **1** into position **3** (identification L).
 - In order to set the high seat position, swivel rear height adjustment **1** into position **2** (identification H).
- If the seat tilt is to be changed:
- Position front and rear height adjustment differently.
- Set rider's seat into the mountings **1** left and right, and place loosely on the motorcycle.
 - Press the rider's seat slightly forward in its rear area and then firmly down until the locking mechanism engages.

Installing front seat

- Removing rear seat (76).
- Adjust the height and angle of tilt of front seat (78).

<https://www.motorcycle-manual.com/>

<https://www.motorcycle-manual.com/>

Adjustment

Mirrors	82
Headlight	82
Windscreen	83
Clutch	84
Brakes	84
Handlebars	85
Spring preload	85
Damping	86


Mirrors

Adjusting mirrors



- Turn the mirror to the correct position.

Adjusting mirror arm

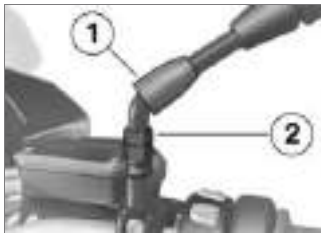

- Push protective cap **1** up over the threaded fastener on the mirror arm.
- Slacken nut **2**.
- Turn the mirror arm to the appropriate position.
- Tighten the nut to the specified tightening torque, while holding the mirror arm to ensure that it does not move out of position.



Mirror (locknut) to adapter

22 Nm (Left-hand thread)

- Push protective cap **1** over the threaded fastener.

Headlight

Headlight beam throw and spring preload

Headlight beam throw is generally kept constant when spring preload is adjusted to suit load. Spring preload adjustment might not suffice only if the motorcycle is very heavily loaded. Under these circumstances, headlight beam throw has to be adjusted to suit the weight carried by the motorcycle.



NOTICE

If there are doubts about the correct headlight beam throw, have the setting checked by a specialist workshop, preferably an authorised BMW Motorrad dealer. ◀

Adjusting headlight beam throw



If, for a high load, the adjustment of the spring pre-load is no longer sufficient not to dazzle oncoming traffic:

- Turn adjuster knob **1** counter-clockwise in order to lower the headlight beam again.

When the motorcycle is again ridden with a lower load:

- Have the basic settings of the headlight restored by a specialist workshop, best of all by a BMW Motorrad dealer.


– with LED headlights^{OE}



- The headlight beam-throw is adjusted via an engage pivot lever.
- **A** Neutral position
- **B** Position for heavy load◀

Windscreen

Adjusting windscreen

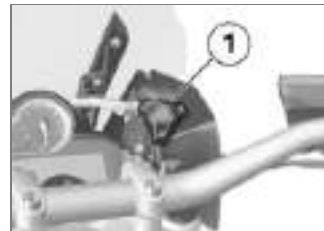

WARNING

Adjusting the windscreen while riding.

Risk of falling

- Do not attempt to adjust the windscreen unless the motorcycle is at a standstill.◀
- Turn knob **1** clockwise to lower the windscreen.
- Turn knob **1** counter-clockwise to raise the windscreen.

<https://www.motorcycle-manual.com/>

Clutch

Adjusting the clutch lever




WARNING

Adjusting the clutch lever during the journey

Risk of accident

- Do not attempt to adjust the clutch lever unless the motorcycle is at a standstill. ◀

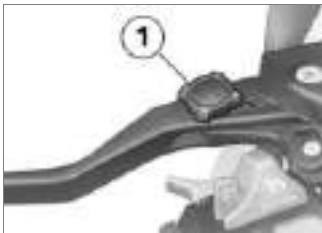

- Turn knob **1** to the desired position.



NOTICE

The adjuster is easier to turn if you push the clutch lever forward. ◀

- » Four settings are possible:
- Position 1: smallest span between handlebar grip and clutch lever
 - Position 4: largest span between handlebar grip and clutch lever

Brakes

Adjusting the front brake lever



WARNING

Adjusting the brake lever during the journey

Risk of accident

- Do not attempt to adjust the brake lever unless the motorcycle is at a standstill. ◀



- Turn knob **1** to the desired position.



NOTICE

The adjuster is easier to turn if you push the brake lever forward. ◀

- » Four settings are possible:
- Position 1: smallest span between handlebar grip and brake lever
 - Position 4: largest span between handlebar grip and brake lever

Handlebars

Adjustable handlebars



The motor cycle handlebars can be adjusted in their tilt within the ranges of marking **1**. If you want to have the handlebars adjusted consult a specialist workshop, preferably an authorised BMW Motorrad dealer.

Spring preload

– without Dynamic ESA^{OE}

Adjustment

It is essential to set the spring preload of the rear suspension to suit the load carried by the motorcycle. Increase the spring preload when the vehicle is heavily loaded and reduce the spring preload accordingly when the vehicle is lightly loaded.

Adjusting spring preload for rear wheel



WARNING

Adjusting spring preload while riding.

Risk of accident

- Do not attempt to adjust spring preload unless the motorcycle is at a standstill.◀
- Place the motorcycle on its stand on firm, even ground.



WARNING

Spring preload setting and spring-strut damping setting not matched.

Impaired handling.

- Adjust spring-strut damping to suit spring preload.◀
- To increase the spring preload, turn the adjuster knob **1** in the direction indicated by the HIGH arrow.
- To reduce the spring preload, turn the adjuster knob **1** in the direction indicated by the LOW arrow.

<https://www.motorcycle-manual.com/>



Basic setting of spring preload, rear

Turn the knob as far as it will go in the LOW direction. (One-up without luggage)

Turn the adjuster knob as far as it will go in the LOW direction, then 15 turns in the HIGH direction. (One-up with luggage)

Turn the adjuster knob as far as it will go in the LOW direction, then 30 turns in the HIGH direction. (Two-up with luggage)

- An uneven surface requires softer damping than a smooth surface.
- An increase in spring preload requires firmer damping, a reduction in spring preload requires softer damping.

Adjust the damping for rear wheel

- Make sure the ground is level and firm and place the motorcycle on its stand.
- Work on the left-hand side of the vehicle when adjusting the damping.



- If you want to increase damping, turn adjusting screw **1** clockwise.
- If you want to reduce damping, turn adjusting screw **1** counter-clockwise.

Damping

Setting

Damping must be adapted to suit the surface on which the motorcycle is ridden and to suit spring preload.

<https://www.motorcycle-manual.com/>



Basic setting of rear-suspension damping characteristic

– without Dynamic ESA^{OE}

Turn the adjuster knob as far as it will go in the clockwise direction, then back it off 8 clicks in the counter-clockwise direction. (One-up without luggage)

Turn the adjuster knob as far as it will go in the clockwise direction, then back it off 2 clicks in the counter-clockwise direction. (One-up with luggage)

Turn the adjuster knob as far as it will go in the clockwise direction, then back it off 2 clicks in the counter-clockwise direction. (Two-up with luggage)◁

<https://www.motorcycle-manual.com/>

Riding

Safety instructions	90
Comply with checklist.....	93
Always before riding off:	93
Every 3rd refuelling stop	93
Starting	93
Running in	95
Off-roading	96
Shifting gear	98
Brakes	98
Parking your motorcycle	100
Refuelling	101
Securing motorcycle for transporta- tion	105

<https://www.motorcycle-manual.com/>

Safety instructions

Rider's equipment

Do not ride without the correct clothing! Always wear:

- Helmet
- Motorcycling jacket and trousers
- Gloves
- Boots

This applies even to short journeys, and to every season of the year. Your authorised BMW Motorrad dealer will be glad to advise you on the correct clothing for every purpose.

Restricted angle of heel

- with lowered suspension^{OE}

A motorcycle with lowered suspension has less ground clearance and cannot corner at angles of heel as extreme as those achievable by a

counterpart motorcycle with standard-height suspension.



WARNING

When a motorcycle with lowered suspension is cornering, certain components can come into contact with the surface at a bank angle less than that to which the rider is accustomed.

Risk of falling

- Carefully try out the limits of the motorcycle's bank angle and adapt your style of riding accordingly.◀

Test your motorcycle's angle of heel in situations that do not involve risk. When riding over kerbs and similar obstacles, bear in mind that your motorcycle's ground clearance is limited.

Lowering the motorcycle's suspension shortens suspension travel (see the section entitled "Technical Data"). Ride comfort might be restricted as a result. Be sure to adjust spring preload accordingly, particularly for riding two-up.

Loading



WARNING

Handling adversely affected by overloading and imbalanced loads


Risk of falling

- Do not exceed the permissible gross weight and be sure to comply with the instructions on loading.◀
- Adjusting spring preload setting and damping to the total weight.

<https://www.motorcycle-manual.com/>

- with cases^{OA}
- Ensure that the case volumes on the left and right are equal.
- Make sure that the weight is uniformly distributed between right and left.
- Pack heavy items at the bottom and toward the inboard side.
- Note the maximum permissible payload and the speed limit for riding with cases fitted, as stated on the label inside the case (see also the section entitled "Accessories").<
- with topcase^{OA}
- Note the maximum permissible payload and the speed limit for riding with topcase fitted, as stated on the label inside the case (see also the section entitled "Accessories").<

- with tank rucksack^{OA}
- Note the maximum permissible payload of the tank rucksack.



Speed

If you ride at high speed, always bear in mind that various boundary conditions can adversely affect the handling of your motorcycle:

- Settings of the spring-strut and shock-absorber system
- Imbalanced load
- Loose clothing
- Insufficient tyre pressure
- Poor tyre tread
- Etc.

Maximum speed with knobbly tyres or winter tyres



DANGER

Maximum speed of the motorcycle is higher than the permissible maximum rated speed of the tyres

Risk of accident due to tyre damage at high speed

- Comply with the tyre-specific speed restrictions.<

Always bear the maximum permissible speed of the tyres in mind when riding a motorcycle fitted with knobbly tyres or winter tyres.

Affix a label stating the maximum permissible speed to the instrument panel in the rider's field of vision.

<https://www.motorcycle-manual.com/>

Risk of poisoning

Exhaust fumes contain carbon monoxide, which is colourless and odourless but highly toxic.



WARNING

Exhaust gases adversely affecting health

Risk of asphyxiation

- Do not inhale exhaust fumes.
- Do not run the engine in an enclosed space.◀

Risk of burn injury



CAUTION

Engine and exhaust system become very hot when the vehicle is in use

Risk of burn injury

- When you park the vehicle make sure that no-one and no objects can come into contact with the hot engine and exhaust system.◀

Catalytic converter

If misfiring causes unburned fuel to enter the catalytic converter, there is a danger of overheating and damage.

The following guidelines must be observed:

- Do not run the fuel tank dry.
- Do not attempt to start or run the engine with a spark-plug cap disconnected.
- Stop the engine immediately if it misfires.
- Use only unleaded fuel.
- Comply with all specified maintenance intervals.



ATTENTION

Unburned fuel in catalytic converter

Damage to catalytic converter

- Note the points listed for protection of the catalytic converter.◀

Risk of overheating



ATTENTION

Engine running for prolonged period with vehicle at standstill

Overheating due to insufficient cooling; in extreme cases vehicle fire

- Do not allow the engine to idle unnecessarily.
- Ride away immediately after starting the engine.◀

Tampering



ATTENTION

Tampering with the motorcycle (e.g. engine management ECU, throttle valves, clutch)

Damage to the affected parts, failure of safety-relevant functions, voiding of warranty

<https://www.motorcycle-manual.com/>

- Do not tamper with the vehicle in any way that could result in tuned performance.◀

Comply with checklist

- At regular intervals, use the checklist below to check your motorcycle.

Always before riding off:

- Check operation of the brake system.
- Check operation of the lights and signalling equipment.
- Checking clutch function (➡ 128).
- Checking tyre tread depth (➡ 130).
- Checking tyre pressure (➡ 129).
- Check security of cases and luggage.

Every 3rd refuelling stop

- without Dynamic ESA^{OE}
 - Adjuster for spring preload, rear (➡ 85).
 - Adjust the damping for rear wheel (➡ 86).◀
- with Dynamic ESA^{OE}
 - Adjusting the chassis and suspension (➡ 67).◀
 - Check engine oil level (➡ 122).
 - Checking front brake pad thickness (➡ 124).
 - Check the rear brake pad thickness (➡ 125).
 - Check brake-fluid level, front brakes (➡ 126).
 - Check the brake-fluid level, rear brakes (➡ 127).
 - Check coolant level (➡ 128).

Starting

Start engine

- Switch on the ignition.
 - » Pre-Ride-Check is performed (➡ 94)
 - » ABS self-diagnosis is performed (➡ 94)
 - » ASC self-diagnosis is performed (➡ 95)
- Select neutral or, if a gear is engaged, pull the clutch lever.



NOTICE

You cannot start the motorcycle with the side stand extended and a gear engaged. The engine will switch itself off if you start it with the gearbox in neutral and then engage a gear before retracting the side stand.◀

- For a cold engine start and low temperatures: pull clutch.

<https://www.motorcycle-manual.com/>



- Press starter button **1**.



NOTICE

The start attempt is automatically interrupted if battery voltage is too low. Recharge the battery before you start the engine, or use jump leads and a donor battery to start.

See the subsection on jump starting in "Maintenance" for more details. ◀

- » The engine starts.
- » If the engine refuses to start, consult the troubleshooting

chart in the section entitled "Technical data". (▶ 176)

Pre-Ride-Check

When the ignition is switched on, the instrument cluster runs a test of the telltale lights and the warning lights. This test is known as the "Pre-Ride-Check". The test is aborted if you start the engine before it completes.

Phase 1

All telltale and warning lights are switched on.

Phase 2

The 'General' warning light changes from red to yellow.

Phase 3

All the telltale and warning lights switched on in the initial phase are switched off in reverse sequence.

The malfunction indicator lamp only goes out after 15 seconds.

If one of the telltale and warning lights did not switch on:

- Have the fault rectified as quickly as possible by a specialist workshop, preferably an authorised BMW Motorrad dealer.

ABS self-diagnosis

BMW Motorrad Integral ABS performs self-diagnosis to ensure its operability. Self-diagnosis is performed automatically when you switch on the ignition. The motorcycle has to move forward a few metres at a speed of at least 5 km/h for the wheel-speed sensors to be tested.

Phase 1

- » Test of the diagnosable system components with the vehicle at a standstill.

<https://www.motorcycle-manual.com/>



ABS telltale and warning light flashes.

Phase 2

- » Test of the wheel-speed sensors as the vehicle pulls away from rest.



ABS telltale and warning light flashes.

ABS self-diagnosis completed

- » The ABS warning light goes out.
 - Check all the telltale and warning lights.
- After the ABS self-diagnosis completes, an indicator showing an ABS fault will appear.
- You can continue to ride. Bear in mind that neither the ABS function nor the integral braking function is available.
 - Have the fault rectified as quickly as possible by a

specialist workshop, preferably an authorised BMW Motorrad dealer.

ASC self-diagnosis

BMW Motorrad ASC performs self-diagnosis to ensure its operability. Self-diagnosis is performed automatically when you switch on the ignition.

Phase 1

- » Test of the diagnosable system components with the vehicle at a standstill.



The ASC telltale and warning light flashes slowly.

Phase 2

- » Test of the diagnosis-capable system components while the motorcycle is on the move (speed at least 5 km/h).



The ASC telltale and warning light flashes slowly.

ASC self-diagnosis completed

- » The ASC telltale and warning light goes out.

- Check all the telltale and warning lights.

After completion of ASC self-diagnosis, an indicator showing an ASC fault is displayed:

- You can continue to ride. Bear in mind that the ASC function is not available.
- Have the fault rectified as quickly as possible by a specialist workshop, preferably an authorised BMW Motorrad dealer.

Running in Engine

- Until the first running-in check, vary the throttle opening and engine-speed range frequently;

<https://www.motorcycle-manual.com/>

avoid riding at constant engine rpm for prolonged periods.

- Try to do most of your riding during this initial period on twisting, fairly hilly roads.
- Comply with the rpm limits for running in.



Running-in speeds

<5000 min⁻¹ (Odometer reading 0...1000 km)

no full throttle (Odometer reading 0...1000 km)

- Note the mileage after which the running-in check should be carried out.



Mileage until the running-in check

500...1200 km

Brake pads

New brake pads have to bed down before they can achieve their optimum friction levels. You can compensate for this initial reduction in braking efficiency by exerting greater pressure on the levers.



WARNING

New brake pads

Longer stopping distance, risk of accident

- Apply the brakes in good time. ◀

Tyres

New tyres have a smooth surface. This must be roughened by riding in a restrained manner at various heel angles until the tyres are run in. This running in procedure is essential if the tyres are to achieve maximum grip.



WARNING

New tyres losing grip on wet roads and at extreme bank angles

Risk of accident

- Ride carefully and avoid extremely sharp inclines. ◀

Off-riding

For off-riding Rims



ATTENTION

Off-riding more severe than riding on unsurfaced tracks

Damage to standard cast-aluminium rims

- Use the cross-spoked wheels available as optional extras for severe off-riding. ◀

After off-roading

BMW Motorrad recommends checking the following after riding the motorcycle off-road:

Tyre pressure



WARNING

Lowering the tyre pressure for off-roading during operation on road.

Risk of accident due to impaired handling characteristics.

- Always check that the tyre pressures are correct.◀

Brakes



WARNING

Riding on unsurfaced roads or dirty road surfaces.

Delayed braking effect due to dirty brake discs and brake pads.

- Apply the brakes in good time until the brakes have been cleaned.◀



ATTENTION

Riding on unsurfaced or dirty roads

Increased brake pad wear

- Check the thickness of the brake pads more frequently and replace the brake pads in good time.◀

Spring preload and shock-absorber settings



WARNING

Changed values for spring preload and spring-strut damping for riding off-road.

Impaired handling characteristics on surfaced roads.

- If you have been off-roading, be sure to correct spring preload and spring-strut damping

characteristics before you return to surfaced roads.◀

Rims

BMW Motorrad recommends checking the rims for damage after off-roading.

Air filter element



ATTENTION

Dirty air filter element

Engine damage

- If you ride in dusty terrain check the air filter element for clogging at shorter intervals; clean or replace as necessary.◀

Operation in very dusty conditions (desert, steppes, or the like) necessitates the use of air filter elements specially designed for conditions of this nature.

<https://www.motorcycle-manual.com/>

Shifting gear

– with Pro shift assistant^{OE}

Shift assistant Pro Requirement

The shift assistant assists upshifts and downshifts without the rider having to pull the clutch or close the throttle. This is not an automatic-shift system. The rider is the most important part of the system and decides when to shift gears.



NOTICE

See the section entitled "Engineering details" for more information on the Pro shift assistant. ◀



NOTICE

Whenever the Pro shift assistant shifts gears, cruise control is automatically disengaged for safety reasons. ◀



- You select the gear in the usual way by means of the foot-operated shift lever.
- » Sensor **1** on the selector shaft registers the shift request and triggers shift assistance.
- » When riding at a steady speed in a low gear at high engine rpm, an attempt to shift gear without pulling the clutch can cause a severe load-change reaction. BMW Motorrad recommends disengaging the clutch for shifts in these circumstances. It is advisable to avoid using the Pro shift assistant if the clutch is not fully closed.

the limits at which the governor cuts in to limit engine rpm.

- » Shift assistance is not available in the following situations:
 - With clutch lever pulled.
 - Shift lever not in its initial position
 - Upshifts with the throttle valve closed (coasting) and when slowing.
 - After a gearshift, the shift lever has to be fully released before another gearshift with the Pro shift assistant can take place.

Brakes

How can stopping distance be minimised?

Each time the brakes are applied, a load distribution shift takes place with the load shifting forward from the rear to the front wheel. The sharper the motorcycle decelerates, the more load is shifted to the front wheel. The

higher the wheel load, the more braking force can be transmitted without the wheel locking.

To optimise stopping distance, apply the front brakes rapidly and keep on increasing the force you apply to the brake lever. This makes the best possible use of the dynamic increase in load at the front wheel. Remember to pull the clutch at the same time. In the "panic braking situations" that are trained so frequently braking force is applied as rapidly as possible and with the rider's full force applied to the brake levers; under these circumstances the dynamic shift in load distribution cannot keep pace with the increase in deceleration and the tyres cannot transmit the full braking force to the surface of the road.

BMW Motorrad Integral ABS prevents the front wheel from locking up.

Hazard braking

– with ABS Pro^{OE}

If you brake sharply from a speed in excess of 50 km/h the brake light flashes rapidly as a warning for road users behind you.

If you brake until your speed is less than 15 km/h the hazard warning lights start to flash as well. The hazard warning lights switch off automatically as soon as you start to accelerate and vehicle speed reaches 20 km/h.

Descending mountain passes



WARNING

Braking only with the rear brake on mountain descents

Brake fade, destruction of the brakes due to overheating

- Use both front and rear brakes, and make use of the engine's

braking effect as well.

Wet and dirty brakes

Wetness and dirt on the brake discs and the brake pads diminish braking efficiency.

Delayed braking action or poor braking efficiency must be reckoned with in the following situations:

- Riding in the rain or through puddles of water.
- After the vehicle has been washed.
- Riding on salted or gritted roads.
- After work has been carried on the brakes, due to traces of oil or grease.
- Riding on dirt-covered surfaces or off-road.

<https://www.motorcycle-manual.com/>

**WARNING****Wetness and dirt result in diminished braking efficiency**

Risk of accident

- Apply the brakes lightly while riding to remove wetness and dirt, or dismount and clean the brakes.
- Think ahead and brake in good time until full braking efficiency is restored. ◀

ABS Pro

– with ABS Pro^{OE}

Physical limits applicable to motorcycling**WARNING****Braking when cornering**

Risk of crash despite ABS Pro

- Invariably, it remains the rider's responsibility to adapt riding style to riding conditions.

- Do not take risks that would negate the additional safety offered by this system. ◀

ABS Pro is available in all riding modes except Enduro Pro.

Possibility of a fall not precluded

Although ABS Pro provides the rider with valuable assistance and constitutes a huge advance in safety for braking with the motorcycle banked for cornering, it cannot under any circumstances be considered as redefining the physical limits that apply to motorcycling. It is still possible for these limits to be overshoot due to misjudgement or rider error. In extreme cases this can result in a crash.

Use on public roads

ABS Pro helps make the motorcycle even safer for riding on

are applied because of an unforeseen hazard when the motorcycle is banked for cornering, within the physical limits that apply to motorcycling the system prevents the wheels from locking and skidding away.

**NOTICE**

ABS Pro was not developed to enhance individual braking performance with the motorcycle banked into corners in situations approaching the limits of performance. ◀

Parking your motorcycle**Side stand**

- Switch off the engine.

**ATTENTION****Poor ground underneath the stand**

<https://www.motorcycle-manual.com/>

Risk of damage to parts if vehicle topples

- Always check that the ground under the stand is level and firm.◀



ATTENTION

Additional weight placing strain on the side stand

Risk of damage to parts if vehicle topples

- Do not sit or lean on the vehicle while it is propped on the side stand.◀
- Extend the side stand and prop the motorcycle on the stand.
- Turn the handlebars all the way to left.
- On a gradient, the motorcycle should always face uphill; select 1st gear.

Centre stand

- Switch off the engine.



ATTENTION

Poor ground underneath the stand

Risk of damage to parts if vehicle topples

- Always check that the ground under the stand is level and firm.◀



ATTENTION

Centre stand folds in due to sharp movements

Risk of damage to parts if vehicle topples

- Do not lean or sit on the vehicle with the centre stand extended.◀
- Extend the centre stand and lift the motorcycle onto the stand.
- On a gradient, the motorcycle should always face uphill; select 1st gear.

Refuelling

Fuel grade Requirement

For optimum fuel consumption, fuel should be sulphur-free or as low-sulphur as possible.



ATTENTION

Engine operation with leaded fuel

Damage to catalytic converter

- Do not attempt to run the vehicle on leaded fuel or fuel with metallic additives (e.g. manganese or iron).◀
- You can run the engine on fuel with a maximum ethanol content of 10%, i.e. E10.



Recommended fuel grade

Super unleaded (max. 10 % ethanol, E10)
95 ROZ/RON
89 AKI



Alternative fuel grade

Regular unleaded (Power- and consumption-related restrictions. If e.g. the engine is to be operated in countries with low fuel grades at 91 research octane number, then the motorcycle must first be programmed appropriately at your authorised BMW motorcycle dealer.) (max. 10 % ethanol, E10)
91 ROZ/RON
87 AKI

Refuelling



WARNING

Fuel is highly flammable

Risk of fire and explosion

- Do not smoke. Never bring a naked flame near the fuel tank. ◀



WARNING

Escape of fuel due to heat-induced expansion if fuel tank is overfilled

Risk of falling

- Do not overfill the fuel tank. ◀



ATTENTION

Wetting of plastic surfaces by fuel

Damage to the surfaces (surfaces become unsightly or dull)

- Clean plastic surfaces immediately after contact with fuel. ◀

- Make sure the ground is level and firm and place the motorcycle on its centre stand.



- Open the protective cap **2**.
- Use ignition key **1** to unlock fuel filler cap by turning it clockwise, and flip the cap open.



- Do not fill the tank past the bottom edge of the filler neck.



NOTICE

When refuelling after running on reserve, make sure that you top up the tank to a level above reserve, as otherwise the new level will not be registered and the fuel warning light indicating that the level is down to reserve will not be switched off.◀



NOTICE

The "usable fuel capacity" specified in the technical data is the

quantity that the fuel tank could hold if refilled after it had been run dry and the engine had cut out due to a lack of fuel.◀



Usable fuel capacity

approx. 20 l



Reserve fuel

approx. 4 l

- Press the fuel tank cap down firmly to close.
- Remove the ignition key and close the protective cap.

Refuelling

– with Keyless Ride^{OE}

Requirement

The steering lock is disengaged.



WARNING

Fuel is highly flammable

Risk of fire and explosion

- Do not smoke. Never bring a naked flame near the fuel tank.◀



WARNING

Escape of fuel due to heat-induced expansion if fuel tank is overfilled

Risk of falling

- Do not overfill the fuel tank.◀



ATTENTION

Wetting of plastic surfaces by fuel

Damage to the surfaces (surfaces become unsightly or dull)

- Clean plastic surfaces immediately after contact with fuel.◀

- Make sure the ground is level and firm and place the motorcycle on its centre stand.
- with Keyless Ride^{OE}
- Switching off ignition (➡ 49).



NOTICE

The fuel filler cap can be opened within the defined waiting time after the ignition has been switched off, without the radio-operated key being within range.◀



Waiting time for opening fuel filler cap

2 min

- » There are **two variant ways** of opening the fuel filler cap:
 - Within the waiting time.
 - After the waiting time has expired.

Version 1

– with Keyless Ride^{OE}

Requirement

Within the waiting time



- Pull up tab **1** of the fuel filler cap slowly.
- » Fuel filler cap unlocks.
- Fully open the fuel filler cap.

Version 2

– with Keyless Ride^{OE}

Requirement

After the waiting time has expired

- Bring the radio-operated key into range.
- Slowly pull tab **1** up.
- » The telltale light for the radio-operated key flashes while the search for the radio-operated key is in progress.
- Again slowly pull up tab **1** of the fuel filler cap.
- » Fuel filler cap unlocks.
- Fully open the fuel filler cap.



- Refuel with fuel of the grade stated above; do not fill the tank past the bottom edge of the filler neck.



NOTICE

When refuelling after running on reserve, make sure that you top up the tank to a level above reserve, as otherwise the new level will not be registered and the fuel warning light indicating that the level is down to reserve will not be switched off.◀



NOTICE

The "usable fuel capacity" specified in the technical data is the quantity that the fuel tank could hold if refilled after it had been run dry and the engine had cut out due to a lack of fuel.◀



Usable fuel capacity

approx. 20 l



Reserve fuel

approx. 4 l

- Press down firmly on the filler cap of the fuel tank.
 - » The fuel filler cap engages with an audible click.
 - » The fuel filler cap locks automatically when the waiting time expires.
 - » The engaged fuel filler cap locks immediately when you secure the steering lock or switch on the ignition.

Securing motorcycle for transportation

- Make sure that all components that might come into contact with straps used to secure the motorcycle are adequately protected against scratching. Use

adhesive tape or soft cloths, for example, for this purpose.



ATTENTION

Vehicle topples to side when being lifted on to stand

Risk of damage to parts if vehicle topples

- Secure the vehicle to prevent it toppling, preferably with the assistance of a second person.◀
- Push the motorcycle onto the transportation flat and hold it in position: do not place it on the side stand or centre stand.

<https://www.motorcycle-manual.com/>

**ATTENTION****Trapping of components**

Component damage

- Do not trap components such as brake lines or cable legs.◀
- At the front, secure the straps to the handlebars on both sides.
- Pass the straps through the leading link and tighten the straps.

- At the rear, secure the straps to the rear footrests on both sides and tighten the straps.
- Tighten all the straps uniformly; the motorcycle's suspension should be compressed as tightly as possible front and rear.

<https://www.motorcycle-manual.com/>

Engineering details

General instructions.....	108
Anti-lock brake system (ABS)	108
Automatic Stability Control (ASC)	111
Riding mode	113
Tyre pressure monitoring (RDC)	115
Shift assistant.....	116

<https://www.motorcycle-manual.com/>

General instructions

To find out more about engineering, go to:

bmw-motorrad.com/technology

Anti-lock brake system (ABS)

Partially integral brakes

Your motorcycle is equipped with partially integral brakes. Both front and rear brakes are applied when you pull the handbrake lever. The footbrake lever acts only on the rear brake.

While the brakes are slowing the motorcycle with ABS actively intervening, the BMW Motorrad Integral ABS adapts braking-force distribution between front and rear brakes to suit the load on the motorcycle.



ATTENTION

Attempted burn-out despite Integral braking function

Damage to rear brake and clutch

- Do not burn out tyres.◀

How does ABS work?

The amount of braking force that can be transferred to the road depends on factors that include the coefficient of friction of the road surface. Loose stones, ice and snow or a wet road all have much lower coefficients of friction than a clean and dry asphalt surface. The lower the coefficient of friction, the longer the braking distance.

If the rider increases braking pressure to the extent that braking force exceeds the maximum transferable limit, the wheels start to lock and the vehicle loses its directional stability; a fall is im-

curs the ABS will be activated and the brake pressure adapted to the maximally transferable braking force. The wheels continue to turn and the driving stability is retained irrespective of the road condition.

What are the effects of surface irregularities?

Humps and surface irregularities can cause the wheels to lose contact temporarily with the road surface; if this happens the braking force that can be transmitted to the road can drop to zero. If the brakes are applied under these circumstances the ABS has to reduce braking force to ensure that directional stability is maintained when the wheels regain contact with the road surface. At this instant the BMW Motorrad Integral ABS must assume an extremely low coefficient of friction, so that the

<https://www.motorcycle-manual.com/>

wheels will continue to rotate under all imaginable circumstances, because this is the precondition for ensuring directional stability. As soon as it registers the actual circumstances, the system reacts instantly and adjusts braking force accordingly to achieve optimum braking.

What feedback does the rider receive from the BMW Motorrad Integral ABS?

If the ABS system has to reduce braking force on account of the circumstances described above, vibration is perceptible through the handbrake lever.

When the handbrake lever is pulled, brake pressure is also built up at the rear wheel by the integral function. If the brake pedal is depressed after the handbrake lever is pulled, the brake pressure built up

beforehand is perceptible as counter-pressure sooner than is the case when the brake pedal is depressed either before or at the same time as the brake lever is pulled.

Rear wheel lift

Under very severe and sudden deceleration, however, under certain circumstances it is possible that the BMW Motorrad Integral ABS will be unable to prevent the rear wheel from lifting clear of the ground. If this happens the outcome can be a highsiding situation in which the motorcycle can flip over.



WARNING

Rear wheel lift due to severe braking

Risk of falling

- When you brake sharply, bear in mind that ABS control cannot

prevent the rear wheel from lifting clear of the ground. ◀

What is the design baseline for BMW Motorrad Integral ABS?

Within the limits imposed by physics, the BMW Motorrad Integral ABS ensures directional stability on any surface. The system is not optimised for special requirements that apply under extreme competitive situations off-road or on the track. The driving behaviour should be adapted to actual driving skills and the road conditions.

Special situations

The speeds of the front and rear wheels are compared as one means of detecting a wheel's incipient tendency to lock. If the system registers implausible values for a lengthy period

the ABS function is deactivated for safety reasons and an ABS fault message is issued. Self-diagnosis has to complete before fault messages can be issued.

In addition to problems with the BMW Motorrad ABS, exceptional riding conditions can also cause a fault message to be issued:

- Heating up with the motorcycle on the centre stand or an auxiliary stand, engine idling or with a gear engaged.
- Rear wheel locked by the engine brake for a lengthy period, for example while descending on a loose or slippery surface.

If a fault message is issued on account of exceptional riding conditions, you can reactivate the ABS function by switching the ignition off and on again.

What significance devolves on regular maintenance?



WARNING

Brake system not regularly serviced.

Risk of accident

- In order to ensure that the ABS is always maintained in optimum condition, it is essential for you to comply strictly with the specified inspection intervals. ◀

Reserves for safety

The potentially shorter braking distances which BMW Motorrad Integral ABS permits must not be used as an excuse for careless riding. ABS is primarily a means of ensuring a safety margin in genuine emergencies.



WARNING

Braking when cornering

Risk of accident despite ABS

- Invariably, the rider bears responsibility for assessing road and traffic conditions and adopting his or her style of riding accordingly.
- Do not take risks that would negate the additional margin of safety offered by this system. ◀

Evolution of ABS to ABS Pro

– with ABS Pro^{OE}

Until now, the BMW Motorrad ABS helped ensure a very high degree of safety for braking with the motorcycle upright and travelling in a straight line. Now ABS Pro offers enhanced safety for braking in corners as well. ABS Pro prevents the wheels from locking even under

sharp braking. ABS Pro reduces abrupt changes in steering force, particularly in panic-braking situations, counteracting the vehicle's otherwise natural but undesirable tendency to straighten up.

ABS intervention

Technically speaking, depending on the riding situation ABS Pro adapts ABS intervention to the motorcycle's bank angle. Signals for rate of roll and rate of yaw and lateral acceleration are used to calculate bank angle. As the motorcycle is heeled over more and more as it banks into a corner, an increasingly strict limit is imposed on the brake-pressure gradient for the start of brake application. This slows the build-up of brake pressure to a corresponding degree. Additionally, pressure modulation is more

uniform across the range of ABS intervention.

Advantages for the rider

The advantages of ABS Pro for the rider are sensitive response and high braking and directional stability combined with best-case deceleration of the motorcycle, even when cornering.

Automatic Stability Control (ASC)

How does ASC work?

BMW Motorrad ASC compares the speed of rotation of the front wheel and the rear wheel. The differential is used to compute slip as a measure of the reserves of stability available at the rear wheel. If slip exceeds a certain limit, the engine control intervenes and adapts the engine torque accordingly.

What is the design baseline for BMW Motorrad ASC?

BMW Motorrad ASC is designed as an assistant system for the rider and for use on public roads. The extent to which the rider affects ASC control can be considerable (weight shifts when cornering, items of luggage loose on the motorcycle), especially when the style of riding takes rider and machine close to the limits imposed by physics.

Activate the Enduro mode for off-roading. This mode delays ASC intervention slightly in order to permit controlled drifting. The system is not optimised for special requirements that apply under extreme competitive situations off-road or on the track. The BMW Motorrad ASC can be deactivated in these cases.

<https://www.motorcycle-manual.com/>



WARNING

Risky riding

Risk of accident despite ASC

- Invariably, the rider bears responsibility for assessing road and traffic conditions and adopting his or her style of riding accordingly.
- Do not take risks that would negate the additional safety offered by this system. ◀

Special situations

In accordance with the laws of physics, the ability to accelerate is restricted more and more as the angle of heel increases. Consequently, there can be a perceptible lag in acceleration out of very tight bends.

The speeds of the front and rear wheels are compared as one means of detecting the rear wheel's incipient tendency to

spin or slip sideways. If the system registers implausible values for a lengthy period the ASC function is deactivated for safety reasons and an ASC fault message is issued. Self-diagnosis has to complete before fault messages can be issued.

The following exceptional riding conditions can lead to an automatic shutdown of the BMW Motorrad ASC:

- Riding for a lengthy period with the front wheel lifted off the ground (wheelie) with ASC deactivated.
- Rear wheel rotating with the vehicle held stationary by applying the front brake (burn-out).
- Heating up with the motorcycle on the centre stand or an auxiliary stand, engine idling or with a gear engaged.

Switch the ignition off and on and then ride at a speed over 10 km/h to reactivate the ASC.

Slip can be increased by very-heavy-duty massive-bar tyres, with the result that ASC intervention occurs before optimum forward acceleration is achieved. Under these circumstances, BMW Motorrad ASC should be deactivated.

If the front wheel lifts clear of the ground under severe acceleration, ASC reduces engine torque until the front wheel regains contact with the ground.

Under these circumstances, BMW Motorrad recommends rolling the throttle slightly closed so as to restore stability with the least possible delay.

When riding on a slippery surface, never snap the throttle twistgrip fully closed without pulling the clutch at the same time. Engine braking torque can cause the rear wheel to lock, with a corresponding loss of stability. The BMW Motorrad ASC is unable to control a situation of this nature.

Riding mode

Selection

There is a choice of 5 riding modes for adapting the motorcycle to riding-surface condition:

- RAIN
- ROAD (Standard mode)
- with Pro riding modes^{OE}
- DYNAMIC
- Enduro
- Enduro Pro (only if coding plug fitted)

For each of the 5 riding modes there is a matching setting for the ABS and ASC systems and for throttle response.

- with Dynamic ESA^{OE}

The adjustment of the Dynamic ESA also depends on the riding mode selected.

ABS and/or ASC can be switched off in each riding mode; the explanations below invariably apply to the behaviour of the motorcycle with these systems active.

Throttle response

- In the RAIN and Enduro riding modes: Restrained
- In the ROAD and Enduro Pro riding modes: Direct
- In the DYNAMIC riding mode: Dynamic

ABS

- The rear wheel lift assistant is active in all riding modes.
- In the RAIN, ROAD and DYNAMIC riding modes, the ABS is set up for road riding.
- In Enduro riding mode the ABS is set to off-road mode with road tyres.
- In the Enduro Pro riding mode, there will be no ABS control at the rear wheel when the foot-brake lever is operated. The ABS has been adjusted to off-road operation using studded tyres.
- with ABS Pro^{OE}
- In the RAIN and ROAD riding modes, ABS Pro is fully available. The tendency of the motorcycle to straighten up when the brakes are applied with the machine banked for cornering is reduced to a minimum.

<https://www.motorcycle-manual.com/>

- In the DYNAMIC riding mode, ABS Pro is only available with good friction coefficients. Assistance is less than in the ROAD riding mode and designed for maximum braking effect instead.
- In the Enduro riding mode, ABS Pro is available only to a restricted extent and also only with good friction coefficients.
- In the Enduro Pro riding mode, ABS Pro is inactive.

ASC

- The front wheel lift assistant is active in all riding modes.
- In the RAIN, ROAD and DYNAMIC riding modes, the ASC is set up for road riding.
- In the Enduro and Enduro Pro riding modes, ASC is set up for off-road riding.

- with Dynamic ESA^{OE}

Dynamic ESA

- In the RAIN, ROAD and DYNAMIC riding modes, the damping variants HARD, NORMAL and SOFT can be selected.
- Basic setting RAIN: SOFT
- Basic setting ROAD: NORMAL
- Basic setting DYNAMIC: HARD
- In the Enduro and Enduro Pro riding modes, the damping variants HARD and SOFT can be selected.
- Basic setting Enduro: SOFT
- Basic setting Enduro Pro: HARD

Mode changes

- with Pro riding modes^{OE}

When riding, you can change riding modes only when the following preconditions are satisfied:

- No drive torque on the rear wheel.
- No brake pressure in the brake system.

This is the status of the motorcycle when it is at a standstill with the ignition switched on. Under other circumstances, you must proceed as follows:

- Close the throttle twistgrip.
- Release the brake levers.
- Disengage the clutch.

The desired riding mode is initially preselected. The mode change does not take place until the systems in question are all in the appropriate state.

The selection menu does not disappear from the display until the mode change has taken place.

Tyre pressure monitoring (RDC)

- with tyre pressure monitoring (RDC)^{OE}

Function

A sensor integrated into each tyre measures the air temperature and the air pressure inside the tyre and transmits this information to the control unit. Each sensor has a centrifugal-force tripswitch that does not enable transmission of the measured values until the motorcycle has accelerated to above approximately 30 km/h for the first time. The display shows – for each tyre until the tyre-pressure signal is received for the first time. The sensors continue to transmit the measured-value signals for approximately 15 minutes after the vehicle comes to a stop.

An error message is issued if wheels without sensors are in-

ted to a vehicle equipped with an RDC control unit.

Tyre-pressure ranges

The RDC control unit differentiates between three tyre-pressure ranges, all of which are parameterised for the motorcycle:

- Tyre pressure within permitted tolerance.
- Tyre pressure close to limit of permitted tolerance.
- Tyre pressure outside permitted tolerance.

Temperature compensation

Tyre pressure is a temperature-sensitive variable: pressure increases as tyre temperature rises and decreases as tyre temperature drops. Tyre temperature depends on ambient temperature as well as on the style of riding and the duration of the ride.

The tyre-pressure readings shown by the multifunction display are temperature-compensated; the reference tyre temperature for these readings is always 20 °C. The air lines available to the public in petrol stations and motorway service areas have gauges that do not compensate for temperature; the reading shown by a gauge of this nature is the temperature-dependent tyre pressure. In most instances, therefore, these gauge readings will not tally with the pressures shown by the multifunction display.

Pressure adaptation

Compare the RDC readings on the multifunction display with the value in the table on the back cover of the Rider's Manual. Then use the air line at a service station to compensate for the dif-

<https://www.motorcycle-manual.com/>

ference between the RDC reading and the value in the table.

Example: According to the Rider's Manual, the tyre pressure should be 36.3 psi (2.5 bar), but the reading in the multifunction display is 33.4 psi (2.3 bar), so pressure is low by 2.9 psi (0.2 bar). The tester at the filling station shows 34.8 psi (2.4 bar). You must now increase the tyre pressure by 2.9 psi (0.2 bar) to 37.70 psi (2.6 bar) to establish the correct tyre inflation pressure.

Shift assistant

– with Pro shift assistant^{OE}

Shift assistant Pro

Your vehicle is equipped with a Pro shift assistant, a system originally developed for racing and now adapted for the touring sector. It permits upshifts and downshifts without de

closing the throttle in virtually all load and rpm ranges.

Advantages

- 70-80 % of all gearshifts on a trip can be done without using the clutch.
- Less relative movement between rider and passenger because the shift pauses are shorter.
- It is not necessary to close the throttle valve when shifting under acceleration.
- When braking and downshifting (throttle valve closed), engine speed is adjusted by blipping the throttle.
- Shift time is shorter than a gearshift with clutch actuation.

In order for the system to identify a request for a gearshift, the rider has to move the shift lever from its idle position in the desired direction against the force of the

spring through a certain "over-travel" at ordinary speed or rapidly and keep the shift lever in this position until the gearshift is completed. It is not necessary to increase the force applied to the shift lever while shifting is in progress. Once the gearshift has completed the shift lever has to be fully released before another gearshift with the Pro shift assistant can take place. When shifting gears with the Pro shift assistant, the rider has to keep the load state (throttle twistgrip position) constant before and during the gearshift. A change in the position of the throttle twistgrip during a gearshift can cause the function to abort and/or lead to a missed shift. The Pro shift assistant provides no assistance for the gearshift if the rider de-clutches.

Downshifting

- Downshifting is assisted until maximum rpm for the target gear to be selected is reached. This prevents overrevving.



Maximum engine speed

max 9000 min⁻¹

Upshifting

- Upshifting is assisted until idle rpm for the target gear to be selected is reached.
- This prevents the engine from dropping below idle speed.



Idle speed

1150 min⁻¹ (Engine at regular operating temperature)

<https://www.motorcycle-manual.com/>

<https://www.motorcycle-manual.com/>

Maintenance

General instructions.....	120
Standard toolkit	120
Service toolkit.....	120
Front-wheel stand	121
Engine oil	122
Brake system	123
Clutch	128
Coolant	128
Tyres	129
Rims and tyres.....	130
Wheels	131
Air filter	138
Light source	139
Jump-starting.....	144
Battery.....	145

Fuses	149
Diagnostic connector	151

<https://www.motorcycle-manual.com/>

General instructions

The "Maintenance" chapter describes straightforward procedures for checking and replacing certain wear parts.

Special tightening torques are listed as applicable. The tightening torques for the threaded fasteners on your vehicle are listed in the section entitled "Technical data".

Further information on maintenance and repair work is available from your BMW Motorrad authorised dealer in the form of a DVD.

Some of the work requires special tools and a thorough knowledge of the technology involved. If you are in doubt, consult a specialist workshop, preferably your authorised BMW Motorrad dealer.

Standard toolkit



- 1** Screwdriver handle
 - Use with screwdriver insert.
 - Top up the engine oil (⇒ 123).
- 2** Reversible screwdriver blade
 - Phillips PH1 and Torx T25
 - Removing bulbs for front and rear turn indicators (⇒ 142).
 - Removing battery cover (⇒ 147).
- 3** Open-ended spanner
 - Width across flats 8/10

- 3** – Removing battery (⇒ 147).
- 4** Open-ended spanner
 - Width across flats 14
 - Adjusting mirror arm (⇒ 82).

Service toolkit

– with service toolkit^{OA}



BMW Motorrad has assembled a service toolkit that is ideal for carrying out extended service work (e.g. removing and installing wheels) on this motorcycle. You can obtain the tools set from

<https://www.motorcycle-manual.com/>

your authorised BMW Motorrad dealer.

parts are available from your BMW Motorrad dealer.

Front-wheel stand

Install the front-wheel stand




ATTENTION

Use of the BMW Motorrad front wheel stand without accompanying use of centre stand or auxiliary stand

Risk of damage to parts if vehicle topples

- Place the motorcycle on its centre stand or another auxiliary stand before lifting the front wheel with the BMW Motorrad front-wheel stand.◀
- Make sure the ground is level and firm and place the motorcycle on its centre stand.
- Use basic stand with front-wheel adapter. The basic stand and its accessories

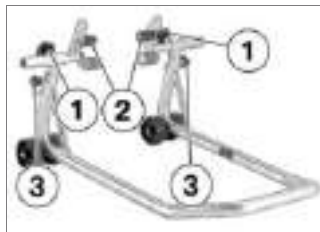

- Remove screws **1**.
- Push the two adapters **2** apart until the front forks fit between them.
- Use locating pins **3** to set the front-wheel stand to the desired height.
- Centre the front-wheel stand relative to the front wheel and push it against the front axle.



- Align the two adapters **2** so that the front forks are securely seated.
- Tighten screws **1**.

<https://www.motorcycle-manual.com/>



ATTENTION

Centre stand retracts if motorcycle is lifted too high

Risk of damage to parts if vehicle topples

- When raising the vehicle, make sure that the centre stand remains on the ground.◀
- Apply uniform pressure to push the front-wheel stand down and raise the motorcycle.

Engine oil

Check engine oil level



ATTENTION

Misinterpretation of oil level reading, because oil level is temperature-dependent (the higher the temperature, the higher the oil level)

Engine damage

- Check the oil level only after a lengthy ride or when the engine is at operating temperature.◀
- Switch off the engine when it is at operating temperature.
- Make sure the ground is level and firm and place the motorcycle on its centre stand.
- Wait five minutes for the oil to drain into the oil pan.



- Check the oil level in oil-level indicator **1**.



Engine oil, specified level

between MIN and MAX marks

<https://www.motorcycle-manual.com/>

If the oil level is below the MIN mark:


- Top up the engine oil (➡ 123).

If the oil level is above the MAX mark:

- Have the oil level corrected by a specialist workshop, preferably an authorised BMW Motorrad dealer.

Top up the engine oil

- Make sure the ground is level and firm and place the motorcycle on its stand.

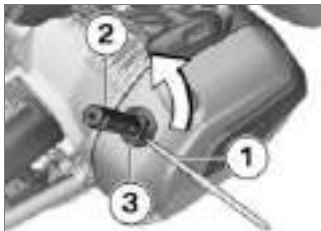

- Wipe the area around the oil filler neck clean.
- Insert Torx end of reversible screwdriver insert **1** into screwdriver handle **2** (on-board tool-kit) for additional leverage.
- Engage this tool in cap **3** of the oil filler neck and turn counter-clockwise to remove.
- Check engine oil level (➡ 122).



ATTENTION

**Use of insufficient engine oil
or too much engine oil**

Engine damage

- Always make sure that the oil level is correct.◀
- Top up the engine oil to the specified level.



Engine oil, quantity for topping up

max 0.95 l (Difference between MIN and MAX)

- Check engine oil level (➡ 122).
- Install cap **3** of the oil filler neck.

Brake system

Check operation of brakes

- Pull the front brake lever.
 - » The pressure point must be clearly perceptible.
- Press the footbrake lever.
 - » The pressure point must be clearly perceptible.

If pressure points are not clearly perceptible:



ATTENTION

Work on brake system not in compliance with correct procedure

Risk to operational reliability of the brake system

- Have all work on the brake system undertaken by trained and qualified specialists.◀
 - Have the brakes checked by a specialist workshop, preferably an authorised BMW Motorrad dealer.
- Visually inspect the left and right brake pads to ascertain their thickness. Viewing direction: between wheel and front suspension toward brake pads **1**.



Brake-pad wear limit, front

1.0 mm (Friction pad only, without backing plate. The wear indicators (grooves) must be clearly visible.)

If the wear indicating marks are no longer clearly visible:

Checking front brake pad thickness

- Make sure the ground is level and firm and place the motorcycle on its stand.



WARNING

Brake-pad thickness less than permissible minimum

Diminished braking effect, damage to the brakes

- In order to ensure the dependability of the brake system, do not permit the brake pads to wear past the minimum permissible thickness. ◀
- Have the brake pads replaced by a specialist workshop, preferably an authorised BMW Motorrad dealer.


Check the rear brake pad thickness

- Make sure the ground is level and firm and place the motorcycle on its stand.



- Visually inspect the brake pads to ascertain their thickness. Viewing direction: between spray guard and rear wheel toward brake pads **1**.



 Brake-pad wear limit, rear

1.0 mm (Friction pad only, without backing plate.)

If the wear limit has been reached:

<https://www.motorcycle-manual.com/>



WARNING

Brake-pad thickness less than permissible minimum

Diminished braking effect, damage to the brakes

- In order to ensure the dependability of the brake system, do not permit the brake pads to wear past the minimum permissible thickness. ◀
- Have the brake pads replaced by a specialist workshop, preferably an authorised BMW Motorrad dealer.

Check brake-fluid level, front brakes



WARNING

Not enough brake fluid in brake fluid reservoir

Considerably reduced braking power due to air in the brake system

- Check the brake-fluid level at regular intervals. ◀
- Make sure the ground is level and firm and place the motorcycle on its centre stand.
- Move the handlebars to the straight-ahead position.



- Check the brake fluid level in front reservoir **1**.



NOTICE

Wear of the brake pads causes the brake fluid level in the reservoir to sink. ◀



Brake fluid level, front

Brake fluid, DOT4

It is impermissible for the brake fluid level to drop below the MIN mark. (Brake-fluid reservoir horizontal, motorcycle upright)

If the brake fluid level drops below the permitted level:

- Have the defect rectified as quickly as possible by a specialist workshop, preferably an authorised BMW Motorrad dealer.

Check the brake-fluid level, rear brakes



WARNING

Not enough brake fluid in brake fluid reservoir

Considerably reduced braking power due to air in the brake system

- Check the brake-fluid level at regular intervals.◀
- Make sure the ground is level and firm and place the motorcycle on its centre stand.



- Check the brake fluid level in rear reservoir **1**.



NOTICE

Wear of the brake pads causes the brake fluid level in the reservoir to sink.◀



Brake fluid level, rear

Brake fluid, DOT4

It is impermissible for the brake fluid level to drop below the MIN mark. (Brake-fluid reservoir horizontal, motorcycle upright)

If the brake fluid level drops below the permitted level:

- Have the defect rectified as quickly as possible by a specialist workshop, preferably an authorised BMW Motorrad dealer.

<https://www.motorcycle-manual.com/>

Clutch

Checking clutch function

- Pull the clutch lever.
 - » The pressure point must be clearly perceptible.
- If the pressure point is not clearly perceptible:

- Have the clutch checked by a specialist workshop, preferably an authorised BMW Motorrad dealer.

Coolant

Check coolant level

- Make sure the ground is level and firm and place the motorcycle on its stand.




Hot engine

Risk of burn injury

- Keep ell clear of all hot engine components.
 - Do not touch hot engine components.◀
 - Check the coolant level in expansion tank **1**.
- If the coolant drops below the permitted level:
- Top up the coolant.

Topping up coolant

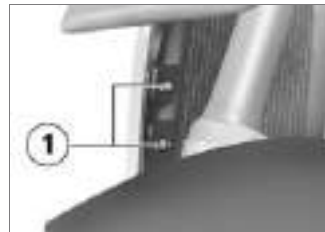

- Remove screws **1**.



- Remove body-bound rivet **1**.
- Remove screws **2**.

- Pull the side panel at positions **3** and **4** to disengage it from the holders.




- Open cap **1** of the coolant expansion tank and top up the coolant to the specified level.
- Check coolant level (128).
- Close the cap of the coolant expansion tank.



- Seat the side panel in mounts **1**.



- Install screws **1**.
- Install body-bound rivet **2**.

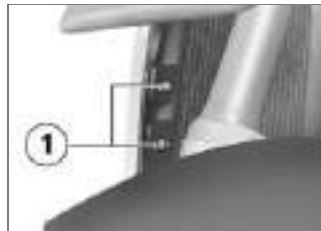

- Install screws **1**.

Tyres

Checking tyre pressure



Incorrect tyre pressure

Impaired handling characteristics of the motorcycle, shorter useful tyre life

- Always check that the tyre pressures are correct.◀

<https://www.motorcycle-manual.com/>

**WARNING**

Tendency of valve inserts installed vertically top open by themselves at high riding speeds.

Sudden loss of tyre pressure.

- Install valve caps fitted with rubber sealing rings and tighten firmly. ◀
- Make sure the ground is level and firm and place the motorcycle on its stand.
- Check tyre pressures against the data below.



Tyre pressure, front

2.5 bar (tyre cold)



Tyre pressure, rear

2.9 bar (tyre cold)

If tyre pressure is too low:

- Correct tyre pressure.

Rims and tyres

Checking rims

- Make sure the ground is level and firm and place the motorcycle on its stand.
- Visually inspect the rims for defects.
- Have any damaged rims inspected by a specialist workshop and replaced if necessary, preferably by an authorised BMW Motorrad dealer.

Checking tyre tread depth

**WARNING**

Riding with badly worn tyres

Risk of accident due to impaired handling

- If applicable, have the tyres changed in good time before

they wear to the minimum tread depth permitted by law. ◀

- Make sure the ground is level and firm and place the motorcycle on its stand.
- Measure the tyre tread depth in the main tread grooves with wear marks.

**NOTICE**

Wear indicators are built into the main profile grooves on each tyre. The tyre is worn out when the tyre tread has worn down to the level of the marks. The locations of the marks are indicated on the edge of the tyre, e.g. by the letters TI, TWI or by an arrow. ◀

If the tyre tread is worn to minimum:

- Replace tyre or tyres, as applicable.

<https://www.motorcycle-manual.com/>

Check spokes

– with cross-spoked wheels^{OE}

- Make sure the ground is level and firm and place the motorcycle on its stand.
- Draw the handle of a screwdriver or a similar instrument across the spokes and listen to the notes of the individual spokes.

If the notes vary:

- Have the spokes checked by a specialist workshop, preferably an authorised BMW Motorrad dealer.

Wheels

Tyre recommendation

For each size of tyre, BMW Motorrad tests and classifies as roadworthy certain makes. BMW Motorrad cannot assess the suitability or provide

any guarantee of road safety for other tyres.

BMW Motorrad recommends using only tyres tested by BMW Motorrad.

It is absolutely essential to observe the maximum permissible speed and load-capacity ratings (see "Technical data").

Comply with the instructions regarding maximum speed for riding with knobbly tyres or winter tyres fitted (91).

Detailed information is available from your authorised BMW Motorrad dealer or in the internet at:

bmw-motorrad.com

Effect of wheel size on chassis and suspension control systems

Wheel size is very important as a parameter for the chassis and suspension control sys-

tem, the diameter and the width of a vehicle's wheels are programmed into the control unit and are fundamental to all calculations. Any change in these influencing variables, caused for example by a switch to wheels other than those installed ex-works, can have serious effects on the performance of the control systems.

The sensor rings are essential for correct road-speed calculation, and they too must match the motorcycle's control systems and consequently cannot be changed.


If you decide that you would like to fit non-standard wheels to your motorcycle, it is very important to consult a specialist workshop beforehand, preferably an authorised BMW Motorrad dealer. In some cases, the data programmed into the control

<https://www.motorcycle-manual.com/>

units can be changed to suit the new wheel sizes.

RDC label

- with tyre pressure monitoring (RDC)^{OE}

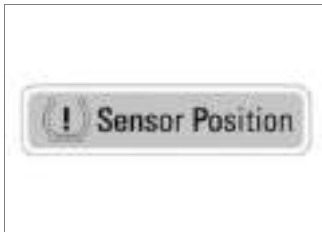

ATTENTION

Tyre removal not in compliance with correct procedure

Damage to RDC sensors

- Be sure to explain to the specialist workshop or authorised BMW Motorrad dealer that the wheel is fitted with an RDC sensor. ◀

If the motorcycle is equipped with RDC, each wheel rim bears an adhesive label indicating the position of the RDC sensor. When changing the tyre, take care not to damage the RDC sensor. Be sure to draw the attention of the authorised BMW Motorrad dealer or specialist workshop to the fact that the wheel is fitted with an RDC sensor.

Removing front wheel

- Make sure the ground is level and firm and place the motorcycle on its centre stand.



- Disengage the cable for the wheel-speed sensor from retaining clips **1** and **2**.
- Remove screw **3** and remove the wheel-speed sensor from its bore.
- Mask off the parts of the wheel rim that could be scratched in the process of removing the brake calipers.



ATTENTION

Unwanted inward movement of the brake pads

Component damage on attempt to install the brake caliper or be-

cause brake pads have to be forced apart

- Do not operate the brakes with a brake caliper not correctly secured.◀
- Remove securing screws **4** of the left and right brake calipers.



- Force the brake pads **1** slightly apart by rotational movement of the brake caliper **2** against brake disc **3**.
- Carefully pull the brake calipers back and out until clear of the brake discs.

- Lift the front of the motorcycle until the front wheel is clear of the ground, preferably using a BMW Motorrad front-wheel stand.
- Install the front-wheel stand (➡ 121).



- Remove right-hand axle clamping screw **1**.



- Remove screw **1**.
- Remove left-hand axle clamping screw **2**.
- Press quick-release axle slightly toward the inside, so as to be better able to grip it on the right-hand side.

<https://www.motorcycle-manual.com/>



- Withdraw quick-release axle **1**, support the front wheel when doing this.
- Set down front wheel and roll forwards out of the front suspension.



- Remove spacer bush **1** from the wheel hub.

Installing front wheel



WARNING

Use of a non-standard wheel

Malfunction as part of ABS and ASC control interventions

- See the information on the effect of wheel size on the ABS and ASC systems at the start of this chapter.◀



ATTENTION

Tightening threaded fasteners to incorrect tightening torque

Damage, or threaded fasteners work loose

- Always have the security of the fasteners checked by a specialist workshop, preferably an authorised BMW Motorrad dealer.◀



- Slip spacing bushing **1** into the wheel hub on the left-hand side.

<https://www.motorcycle-manual.com/>



ATTENTION

Front wheel installed wrong way round

Risk of accident

- Note direction-of-rotation arrows on tyre or rim. ◀
- Roll the front wheel into position between the front forks.



- Lift front wheel and fit quick-release axle **1**.
- Remove front-wheel stand and firmly compress front forks several times. Do not operate front brake lever

- Install the front-wheel stand (121).



- Install screw **1** and tighten to specified torque. Counter-hold quick-release axle on the right-hand side.



Quick-release axle in telescopic forks

30 Nm

- Tighten left-hand axle clamping screw **2** to the specified torque.



Clamping screw for quick-release axle in telescopic fork

19 Nm



- Tighten right axle clamping screw **1** to the specified torque.



Clamping screw for quick-release axle in telescopic fork

19 Nm

- Removing the front-wheel stand.

<https://www.motorcycle-manual.com/>

- Position left and right brake calipers on the brake discs.



- Install securing screws **4** on left and right and tighten to specified tightening torque.



Brake caliper on telescopic fork

38 Nm

- Remove the adhesive tape from the wheel rim.



WARNING

Brake pads not lying against the brake disc

Risk of accident due to delayed braking effect.

- Before driving, check that the brakes respond without delay.◀
- Operate the brake several times until the brake pads are bedded.
- Seat the cable for the wheel-speed sensor in retaining clips **1** and **2**.
- Insert the wheel-speed sensor into the bore and install screw **3**.



Wheel-speed sensor to fork leg

Joining compound: Micro-encapsulated or medium-strength thread-locking compound

8 Nm

Removing rear wheel

- Make sure the ground is level and firm and place the motorcycle on its centre stand.
- Engage first gear.



CAUTION

Hot exhaust system

Risk of burn injury

- Do not touch a hot exhaust system.◀
- Allow rear silencer to cool down.

<https://www.motorcycle-manual.com/>



- Remove studs **1** from the rear wheel, while supporting the wheel.
- Roll the rear wheel out toward the rear.

Install the rear wheel



WARNING

Use of a non-standard wheel

Malfunction as part of ABS and ASC control interventions

- See the information on the effect of wheel size on the ABS and ASC systems at the start of this chapter. ◀



ATTENTION

Tightening threaded fasteners to incorrect tightening torque

Damage, or threaded fasteners work loose

- Always have the security of the fasteners checked by a specialist workshop, preferably an authorised BMW Motorrad dealer. ◀
- Seat the rear wheel on the rear-wheel adapter.



- Install wheel studs **1** and tighten to specified torque.



Rear wheel to wheel flange

Tightening sequence: tighten in diagonally opposite sequence

60 Nm

<https://www.motorcycle-manual.com/>

Air filter

Replacing air-filter element



- Remove front seat (77).
- Remove screws **1** and screws **2**.
- Remove the centre trim panel.



- Remove screws **1**.
- Remove the air filter cover.




- Remove frame **1**.
- Remove air filter element **2**.



- Clean or, as necessary, replace air filter element **2**.
- Insert air filter element **2** and frame **1**.



- Install the air filter cover.
- Install screws **1**.

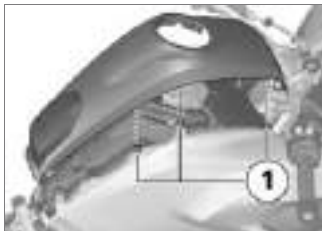

- Place centre trim panel in position, paying attention to the connections **1** to the side panels.



- Fit screws **1** and screws **2**.
- Installing front seat (79).

Light source

Replacing bulbs for low-beam and high-beam headlight

– without LED headlights^{OE}



NOTICE

The positions of the plug, the spring wire retainer and the bulb might not be as illustrated below.◀

- Make sure the ground is level and firm and place the motorcycle on its stand.
- Switch off the ignition.



- Remove cover **1** by turning it counter-clockwise to replace the bulb for the low-beam headlight.



- Remove cover **1** by turning it counter-clockwise to replace

the bulb for the high-beam headlight.



- Disconnect plug **1**.



- Disengage spring clip **1** and swing it aside.
- Remove bulb **2**.

- Replace the defective bulb.



Bulbs for the low-beam headlight

H7 / 12 V / 55 W

– with LED headlights^{OE}

LED<



Bulb for high-beam headlight

H7 / 12 V / 55 W

– with LED headlights^{OE}

LED<

- Hold the bulb by the base only, in order to keep the glass free of foreign matter.



- Insert bulb **2**, making sure that tab **3** is correctly positioned.



NOTICE

The bulb might face in a direction other than that shown here.◀

- Engage spring clip **1** in the catch.

<https://www.motorcycle-manual.com/>



- Connect plug **1**.
- Place cover in position and fit by turning clockwise.



- Remove cover **1** by turning it counter-clockwise.



- Remove bulb **1** from the socket.
- Replace the defective bulb.


Replacing bulb for parking light

– without LED headlights^{OE}

- Make sure the ground is level and firm and place the motorcycle on its stand.
- Switch off the ignition.



- Pull socket **1** out of the headlight housing.

 Bulb for parking light

W5W / 12 V / 5 W

– with LED headlights^{OE}

LED<

- Use a clean, dry cloth to hold the bulb in order to keep the glass free of foreign matter.

<https://www.motorcycle-manual.com/>



- Insert bulb **1** into the socket.



- Install socket **1** in the headlight housing.
- Place cover in position and fit by turning clockwise.

Replacing bulbs for front and rear turn indicators

– without LED turn indicators^{OE}

- Place the motorcycle on its stand on firm, even ground.
- Switch off the ignition.



- Remove screw **1**.



- Pull the glass out of the light housing at the threaded-fastener side.



- Turn bulb **1** counter-clockwise and remove it from the light housing.◁

- Replace the defective bulb.



Bulbs for flashing turn indicators, front

RY10W / 12 V / 10 W

– with LED turn indicators^{OE}

LED<



Bulbs for flashing turn indicators, rear

RY10W / 12 V / 10 W

– with LED turn indicators^{OE}

LED<

- Use a clean, dry cloth to hold the bulb in order to keep the glass free of foreign matter.



- Turn bulb **1** clockwise to install it in the light housing.



- Working from the inboard side, insert the glass into the light housing and close the housing.



- Install screw **1**.

Replacing LED rear light

The LED rear light can be replaced only as a complete unit.

- Consult a specialist workshop, preferably an authorised BMW Motorrad dealer.

Replacing LED turn indicators

– with LED turn indicators^{OE}

- The LED turn indicators can be replaced only as a complete unit. Consult a specialist work-

<https://www.motorcycle-manual.com/>

shop, preferably an authorised BMW Motorrad dealer.

Replacing LED headlight

- with LED headlights^{OE}
- LED headlights can be replaced only as a complete unit. Consult a specialist workshop, preferably an authorised BMW Motorrad dealer.<1

Replacing LED auxiliary headlights

- with LED auxiliary headlights^{OA}

The LED auxiliary headlights can only be replaced as a unit; it is not possible to replace individual LEDs.

Consult a specialist workshop, preferably an authorised BMW Motorrad dealer.

Jump-starting



ATTENTION

Excessive current flowing when the motorcycle is jump-started

Wiring smoulders/ignites or damage to the on-board electronics

- If the motorcycle has to be jump-started connect the leads to the battery terminals; never attempt to jump-start the engine by connecting leads to the on-board socket.<1



ATTENTION

Contact between crocodile clips of jump leads and vehicle

Risk of short-circuit

- Use jump leads fitted with fully insulated crocodile clips at both ends.<1



ATTENTION

Jump-start with a voltage in excess of 12 V

Damage to the on-board electronics

- Make sure that the battery of the donor vehicle has a voltage rating of 12 V.<1
- Place the motorcycle on its stand on firm, even ground.
- Removing battery cover (147).
- When jump-starting the engine, do not disconnect the battery from the on-board electrical system.

<https://www.motorcycle-manual.com/>



- Remove the protective cap **1**.
- Use the red jumper cable to connect the positive battery connection point **2** of the discharged battery to the positive terminal of the donor battery.
- Then connect one end of the black jump lead to the negative terminal of the donor battery and the other end to negative terminal **3** of the discharged battery.
- Run the engine of the donor vehicle during jump-starting.
- Start the engine of the vehicle with the discharged battery in the usual way; if the en-

gine does not start, wait a few minutes before repeating the attempt in order to protect the starter motor and the donor battery.

- Allow both engines to idle for a few minutes before disconnecting the jump leads.
- Disconnect the jump lead from the negative terminals first, then disconnect the second lead from the positive terminals.



NOTICE

Do not use proprietary start-assist sprays or other products to start the engine.◀

- Install the protective cap.
- Fitting battery cover (➡ 149).

Battery

Maintenance instructions

Correct upkeep, recharging and storage will prolong the life of the battery and are essential if warranty claims are to be considered.

Compliance with the points below is important in order to maximise battery life:

- Keep the surface of the battery clean and dry.
- Do not open the battery.
- Do not top up with water.
- Be sure to read and comply with the instructions for charging the battery on the following pages.
- Do not turn the battery upside down.

<https://www.motorcycle-manual.com/>

**ATTENTION****On-board electronics (e.g. clock) draining connected battery**

Battery is deep-discharged; this voids the guarantee

- Connect a float charger to the battery if the motorcycle is to remain out of use for more than four weeks. ◀

**NOTICE**

BMW Motorrad has developed a float charger specially designed for compatibility with the electronics of your motorcycle. Using this charger, you can keep the battery charged during long periods of disuse, without having to disconnect the battery from the motorcycle's on-board systems. You can obtain additional information from your authorised BMW Motorrad dealer.

Charge battery when connected**ATTENTION****Charging the battery connected to the vehicle using the battery terminals**

Damage to the on-board electronics

- Disconnect the battery at the battery terminals before charging. ◀

**ATTENTION****Charging a fully discharged battery using the socket or extra socket**

Damage to the on-board electronics

- If a battery has discharged to the extent that it is completely flat (battery voltage less than 9 V, status-indicator lights and multifunction display remain off when the ignition is switched on) it has to be disconnected from the on-board circuits and re-charged with the charger connected directly to the battery posts. ◀

on) it has to be disconnected from the on-board circuits and re-charged with the charger connected directly to the battery posts. ◀

**ATTENTION****Unsuitable chargers that are connected to a socket**

Damage to charger and vehicle electronics

- Use suitable BMW chargers. The suitable charger is available from your authorised BMW Motorrad dealer. ◀
- Charge via the charging socket, with the battery connected to the motorcycle's on-board electrical system.

**NOTICE**

The motorcycle's on-board electronics know when the battery is fully charged. The on-board

socket is switched off when this happens.◀

- Comply with the operating instructions of the charger.



NOTICE

If you are unable to charge the battery through the on-board socket, you may be using a charger that is not compatible with your motorcycle's electronics. In this case, directly charge the battery at the terminals of the battery that has been disconnected from the vehicle.◀

Charging battery when disconnected

- Charge the battery using a suitable charger.
- Comply with the operating instructions of the charger.
- Once the battery is fully charged, disconnect the

charger's terminal clips from the battery terminals.



NOTICE

The battery has to be recharged at regular intervals in the course of a lengthy period of disuse. See the instructions for caring for your battery. Always fully recharge the battery before restoring it to use.◀

Removing battery



- Switch off the ignition.
- Remove screw **1**.

- Each battery cover slightly forward at the top at positions **2**.
- In order not to damage the battery cover or the mount, work the battery cover up at position **3** to remove.

– with alarm system (DWA)^{OE}

- If applicable, switch off the anti-theft alarm.◀



- Disconnect battery negative lead **1** and disengage rubber strap **2**.

<https://www.motorcycle-manual.com/>



- Pull retaining plate in position **1** outwards and remove in an upward direction.
- Slightly lift battery and remove from the mounting to such an extent that the battery positive terminal becomes accessible.



- Disconnect battery negative lead **1** and remove the battery.




- Secure battery positive lead **1**.
- Push battery into the mounting.

Installing battery



NOTICE

If the 12 V battery is not correctly installed or if the polarity of the terminals is reversed (e.g. in an attempt to jump-start the vehicle), this can cause the fuse for the alternator regulator to blow.◀

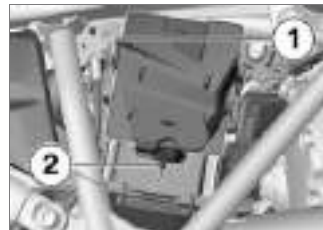

- First insert retaining plate into the mountings **1** and then push under the battery in position **2**.



- Secure battery negative lead **1**.
- Secure the battery with rubber strap **2**.



- Install screw **1**.
- Setting the clock (⌚ 60).
- Setting the date (📅 61).



- Place the battery cover into the mounting **1** and press into the mounting **2**.

Fuses

Replacing fuses



- Switch off the ignition.
- Remove front seat (🛋 77).
- Disconnect plug **1**.



ATTENTION

Jumping of blown fuses

Risk of short-circuit and fire

- Never attempt to jumper a blown fuse.
- Always replace a defective fuse with a new fuse of the same amperage. ◀


<https://www.motorcycle-manual.com/>

- Replace faulty fuse in accordance with the fuse allocation diagram.


**NOTICE**

If fuse defects recur frequently have the electric circuits checked by a specialist workshop, preferably an authorised BMW Motorrad dealer.◀

- Install plug **1**.
- Installing front seat (➡ 79).

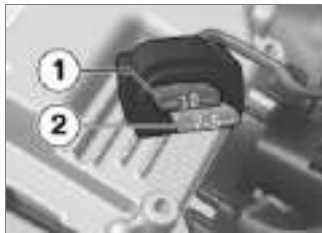Fuse assignment

- | | |
|----------|--|
| 1 | 10 A
Instrument panel
Anti-theft alarm (DWA)
Ignition switch
Diagnostic socket |
| 2 | 7.5 A
Multifunction switch, left
Tyre pressure monitoring (RDC) |

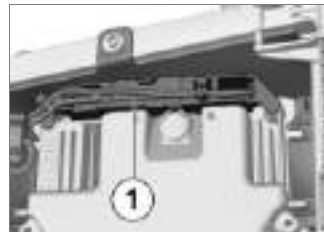Fuse for the alternator regulator

- | | |
|----------|------------------------------|
| 1 | 50 A
Alternator regulator |
|----------|------------------------------|

Diagnostic connector

Disengaging diagnostic connector



Incorrect procedure followed when loosening the diagnostic connector for the on-board diagnosis

Motorcycle experiences malfunctions

- Only have the diagnostic connector loosened by a specialist workshop or other authorised persons during your next BMW Service appointment.
- Have the work performed by appropriately trained staff.
- Refer to the vehicle manufacturer specifications.◀
- Removing battery cover (147).



- Press the hook **1** and pull the diagnostic connector **2** out upwards.




- Press the latches **3** on both sides.

- Disengage diagnostic connector **2** from holder **4**.
 - » The interface to the diagnosis and information system can be connected to diagnostic connector **2**.

Securing the diagnostic connector

- Disconnect the interface for the diagnosis and information system.

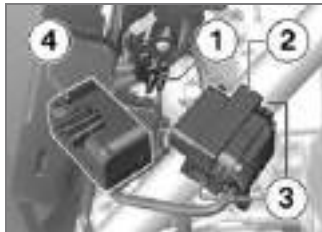

- Seat diagnostic connector **2** in bracket **4**.
 - » The locks **3** engage on both

<https://www.motorcycle-manual.com/>

- Seat the bracket **4** on the mounting **1**.



- Make sure the hook **5** has engaged.
- Fitting battery cover (➡ 149).

Accessories

General instructions.....	154
Power sockets	154
Cases.....	155
Topcase	158
Navigation system	164

General instructions



CAUTION

Use of other-make products

Safety risk

- BMW Motorrad cannot examine or test each product of outside origin to ensure that it can be used on or in connection with BMW vehicles without constituting a safety hazard. Country-specific official authorisation does not suffice as assurance. Tests conducted by these instances cannot make provision for all operating conditions experienced by BMW vehicles and, consequently, they are not sufficient in some circumstances.
- Use only parts and accessories approved by BMW for your vehicle. ◀

BMW has conducted extensive testing of the parts and ac-

cessory products to establish that they are safe, functional and suitable. Consequently, BMW accepts product liability. BMW accepts no liability whatsoever for parts and accessories that it has not approved.

Whenever you are planning modifications, comply with all the legal requirements. Make sure that the vehicle does not infringe the national road-vehicle construction and use regulations applicable in your country. Your BMW Motorrad dealer can offer expert advice on the choice of genuine BMW parts, accessories and other products. To find out more about accessories go to:

**[bmw-motorrad.com/
accessories](https://www.bmw-motorrad.com/accessories)**

Power sockets

Connection of electrical devices

- You can start using electrical devices connected to the motorcycle's sockets only when the ignition is switched on.

Cable routing

- The cables from the power sockets to the auxiliary devices must be routed in such a way that they do not impede the rider.
- The cable routing should not restrict the steering angle or obstruct handling.
- The cables must not be trapped.

Automatic shutdown

- The sockets will be automatically switched off during the start procedure.

<https://www.motorcycle-manual.com/>

- The power supply to the sockets is switched off no more than 15 minutes after the ignition is switched off, in order to prevent overloading of the on-board electrics. Low-wattage electrical accessories might not be recognised by the vehicle's electronics. In such cases, power sockets are switched off very shortly after the ignition is turned off.
- If the battery charge state is too low to maintain the motorcycle's start capability, the power sockets are switched off.
- The power sockets are also switched off when the maximum load capability as stated in the technical data is exceeded.

Cases

Opening cases

- with cases^{OA}



- Turn key **1** clockwise.
- Keep the yellow latch **2** held and fold out the carry handle **3**.



- Push yellow button **1** down and at the same time open the lid of the case.

Adjusting case volume

- with cases^{OA}
- Open the case and remove all its contents.




- Engage pivot lever **1** at the top limit position to set the case to minimum volume.
- Engage pivot lever **1** at the bottom limit position to set the case to maximum volume.
- Close the case.

Closing cases

– with cases^{OA}

- Turn the lock with the key until it is at right angles to the forward direction of travel.
- Close the case lid.

» The lid engages with an audible click.

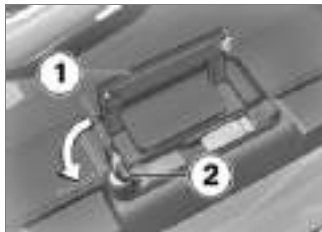

ATTENTION

Closure of carrying handle with case lock latched

Damage to locking tab

- Make sure that the case lock is at right angles to the forward direction of travel when you close the carry handle. ◀
- Close carry handle **1**.
- Turn key **2** counter-clockwise and remove.

Removing cases

– with cases^{OA}



- Turn key **1** clockwise.
- Keep the yellow latch **2** held and fold out the carry handle **3**.

<https://www.motorcycle-manual.com/>



- Pull red release lever **1** up.
» Latching flap **2** pops up.
- Fully open the latching flap.
- Take a firm grip of the handle and lift the case out of the holder.

Mounting cases

– with cases^{OA}



- Pull red release lever **1** up.
» Latching flap **2** pops up.
- Fully open the latching flap.




- Press latching flap **1** down until resistance is felt.
- Then simultaneously press down latching flap and red release lever **2**.
» The latching flap engages.



- Place box from the top into the mountings **1** and **2**.

<https://www.motorcycle-manual.com/>

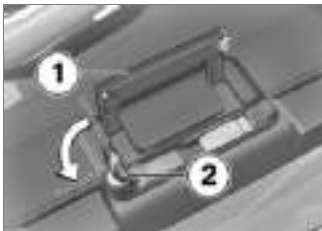**ATTENTION****Closure of carrying handle with case lock latched**

Damage to locking tab

- Make sure that the case lock is at right angles to the forward direction of travel when you close the carry handle. ◀
- Close carry handle **1**.
- Turn key **2** counter-clockwise and remove.

Maximum payload and maximum permissible speed

Note the maximum permissible payload and the speed limit for riding with cases fitted, as stated on the label inside the case. Contact your authorised BMW Motorrad dealer if you cannot find your combination of vehicle and cases on the label. The values for the combination described here are as follows:



Maximum permissible speed for riding with Vario cases fitted to the motorcycle

max 180 km/h



Payload per Vario case

max 10 kg

Topcase**Opening topcase**

– with topcase^{OA}



- Turn key **1** clockwise.
- Keep the yellow latch **2** held and fold out the carry handle **3**.

<https://www.motorcycle-manual.com/>



- Push yellow button **1** forward and at the same time open the lid of the topcase.

Adjusting topcase volume

– with topcase^{OA}

- Open the topcase and remove all its contents.




- Engage pivot lever **1** at the front limit position to set the case to maximum volume.
- Engage pivot lever **1** at the rear limit position to set the case to minimum volume.
- Close the topcase.

Closing topcase

– with topcase^{OA}

- Press down firmly on the topcase lid to close.

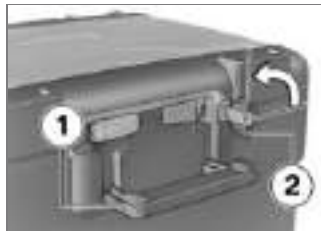

ATTENTION

Closure of carrying handle with case lock latched

Damage to locking tab

- Make sure that the topcase lock is vertical when you close the carry handle.◀
- Close carry handle **1**.
» The handle engages with an audible click.
- Turn key **2** counter-clockwise and remove.

<https://www.motorcycle-manual.com/>

Removing the topcase

– with topcase^{OA}



- Turn key **1** clockwise.
- Keep the yellow latch **2** held and fold out the carry handle **3**.



- Pull red lever **1** back as far as it will go.
- » Latching flap **2** pops up.
- Fully open the latching flap.
- Take a firm grip of the handle and lift the topcase out of the holder.



- Pull red lever **1** back as far as it will go.
- » Latching flap **2** pops up.
- Fully open the latching flap.

Mounting topcase


– with topcase^{OA}



- Engage the topcase in front holders **1** of the topcase carrier plate.
- Press the topcase onto the topcase carrier plate at the rear.



- Press latching flap **1** forward until resistance is felt.
- Next simultaneously press down latching flap and red release lever **2**.
 - » The latching flap engages.

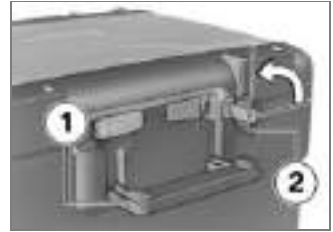

ATTENTION

Closure of carrying handle with case lock latched

Damage to locking tab

- Make sure that the topcase lock is vertical when you close the carry handle.◀
- Close carry handle **1**.
 - » The handle engages with an audible click.
- Turn key **2** counter-clockwise and remove.

<https://www.motorcycle-manual.com/>

Maximum payload and maximum permissible speed

Note the maximum permissible payload and the speed limit for riding with topcase fitted, as stated on the label inside the topcase.

Contact your authorised BMW Motorrad dealer if you cannot find your combination of vehicle and topcase on the label. The values for the combination described here are as follows:



Maximum permissible speed for riding with Vario topcase fitted to the motorcycle

max 180 km/h



Payload of Vario topcase

max 5 kg

Installing topcase

– topcase 2 large, 49 l^{OA}



WARNING


Topcase not properly secured

Driving safety is impaired

- The topcase must not wobble and must be secured free from play. ◀



- Pull handle **1** up as far as it will go.

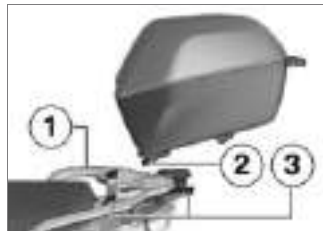

- Hook the topcase into the luggage carrier **1**. Make sure that the hooks **2** fit securely into the corresponding mountings **3**.
- Push the handle down until it engages.

<https://www.motorcycle-manual.com/>



Opening topcase

– topcase 2 large, 49 l^{OA}



- Turn the key in the topcase lock to position **1**.



- Push lock barrel **1** forward.

» Lever **2** pops up.

- Pull the release lever all the way up.
- » The lid of the topcase opens.

Closing topcase

– topcase 2 large, 49 l^{OA}



- Pull release lever **1** all the way up.
- Close the lid of the topcase and hold it down. Check that nothing is trapped between the lid and the case.

- Turn the key in the topcase lock to position **1** and remove the key from the lock.



Maximum speed
for riding with
topcase 2 large, 49 l

max 180 km/h



Payload of top-
case 2 large, 49 l

max 5 kg

- Do not exceed the values for maximum speed and payload.

<https://www.motorcycle-manual.com/>



NOTICE

The topcase can also be locked by turning the lock to the LOCK position. In this case, ensure that the vehicle key is not left in the topcase.◀



- Push release lever **1** down until it engages.
- Turn key **2** in the topcase lock to the **LOCK** position and remove the key from the lock.

Removing the topcase

– topcase 2 large, 49 l^{OA}



- Turn the key in the topcase lock to position **1**.
» The handle pops out.



- Pull handle **1** up as far as it will go.
- Lift the topcase at the rear and remove it from the luggage carrier.

Navigation system

– with preparation for navigation system^{OE}

Securing navigation device



NOTICE

The navigation preparation option is compatible with the


BMW Motorrad Navigator IV and the BMW Motorrad Navigator V.◀



NOTICE


The latching system of the Mount Cradle is not designed to protect against theft.

Always remove the navigation system and stow it away safely as soon as you finish your ride.◀

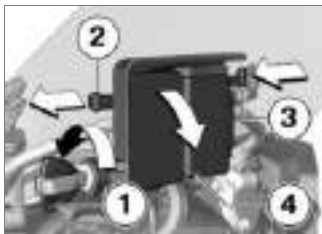

- Turn ignition key **1** counter-clockwise.
- Pull retainer **2** to the **left**.
- Press in lock **3**.

» The Mount Cradle is released and cover **4** can be pivoted forward and removed.

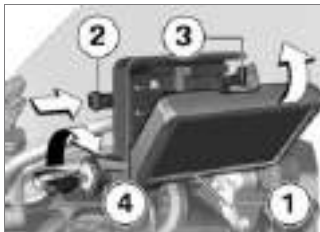

- Insert navigation device **1** at bottom and pivot it toward the rear.
- » The navigation device engages with an audible click.
- Push retainer **2** fully to the **right**.
- » Lock **3** is engaged.
- Turn ignition key **4** clockwise.
- » The navigation device is secured and the ignition key can be removed.

Removing navigation device and installing cover




ATTENTION

Dust and dirt on the Mount Cradle contacts

Damaged contacts


- Always reinstall the cover as soon as you finish your ride.◀

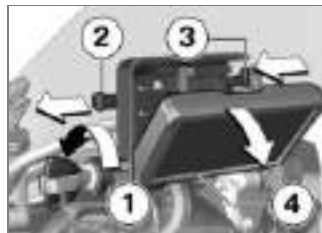

- Turn vehicle key **1** counter-clockwise.
- Pull retainer **2** fully to the **left**.
- » Lock **3** is disengaged.
- Push lock **3** fully to the **left**.

<https://www.motorcycle-manual.com/>

- » Navigation device **4** is unlocked.
- Tilt navigation device **4** and work it downward to remove.

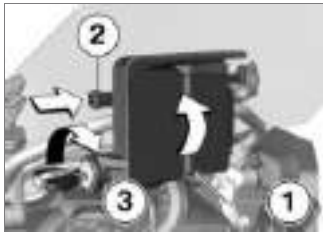

- Insert cover **1** at bottom and pivot it up.
- » The cover engages with an audible click.
- Push retainer **2** to the **right**.
- Turn vehicle key **3** clockwise.
- » Cover **1** is secured.

Operating navigation system



NOTICE

The description below is based on the Navigator V. The Navigator IV does not support all the possibilities described here.◀



NOTICE

Only the latest version of the BMW Motorrad communication system is supported. A software update of the BMW Motorrad communication system may be necessary. If this is the case, consult your authorised BMW Motorrad dealer.◀

If the BMW Motorrad Navigator is fitted, some of its functions can be controlled directly from the handlebars using the Multi-Controller.



The Multi-Controller is operated by means of six movements:

- Turning upwards and downwards.
- Short operation to the left and right.
- Extended operation to the left and right.

Turning the Multi-Controller with the Compass or Mediaplayer page open increases or decreases the volume of a BMW Motorrad communication system connected via Bluetooth.

<https://www.motorcycle-manual.com/>

In the BMW special menu, the menu items are selected by turning the Multi-Controller.

Short operation of the Multi-Controller to the left or right changes between the main pages of the Navigator:

- Map view
- Compass
- Mediaplayer
- BMW special menu
- My Motorcycle page

Long-pushing the Multi-Controller corresponds to activating certain functions on the Navigator display. An arrow to the right or to the left above the corresponding button area on the display indicates a function that can be activated in this way.



Long-push to the right to activate this function.



Long-push to the left to activate this function.

In detail, the following functions can be controlled:

Map view

- Turn up: Zoom in.
- Turn down: Zoom out.

Compass page

- Turning increases or decreases the volume of a BMW Motorrad communication system connected via Bluetooth.

BMW special menu

- Speak: Repeat most recent navigation announcement.
- Waypoint: Save current location as a favourite.
- Home: Starts navigation to home address (greyed if no home address has been defined).

- Mute: Switch automatic navigation announcements off or on (off: a crossed-out lips symbol appears in the top line of the display). "Speak" will still activate navigation announcements. All other acoustic outputs remain switched on.
- Switch off display: Deactivate the display.
- Dial home number: Dials the home phone number saved in the Navigator (not shown unless a telephone is connected).
- Diversion: Activates the diversion function (not shown unless a route is active).
- Skip: Skips the next waypoint (not shown unless the route has waypoints).

My Motorcycle

- Turn: Changes the number of data shown.

<https://www.motorcycle-manual.com/>

- Touch a data field on the display to open the menu for selecting data.
- The values available from selection depend on the optional extras installed on the vehicle.



NOTICE

The Mediaplayer function is available only with a Bluetooth device supporting the A2DP standard, for example a BMW Motorrad communication system.◀

Mediaplayer

- Long-push to the left: Play preceding track.
- Long-push to the right: Play next track.
- Turning increases or decreases the volume of a BMW Motorrad communication system connected via Bluetooth.

Warnings and status messages



Warning and status messages from the motorcycle are indicated by a symbol **1** appearing at the top left in the map view.



NOTICE

If a BMW Motorrad communication system is connected, warnings are accompanied by an acoustic signal.◀

If there are two or more active warnings the number appears below the warning triangle.

Touching the warning triangle when more than one warning is active opens a list of all the warnings. Additional information appears as soon as a message is selected.



NOTICE

Detailed information cannot be displayed for all warnings.◀

Special functions

Integration of the BMW Motorrad Navigator has produced a number of deviations from the descriptions in the operating instructions for the Navigator.

Reserve fuel level warning

The settings for the fuel gauge are not available, because the reserve fuel level warning is sent by the vehicle to the Navigator. Touch the message when it is active to view the locations of the nearest filling stations.

Time and date

The Navigator sends the time and date to the motorcycle. The transfer of these data into the instrument cluster must be activated in the **SETUP** menu of the instrument cluster.

Security settings

The BMW Motorrad Navigator V can be secured against unauthorised use with a four-digit PIN (Garmin Lock). If this function is activated, while the Navigator is cradled on the motorcycle and the ignition is switched on you are prompted to add the motorcycle to the list of secured vehicles. If you answer "Yes" at this prompt the Navigator saves the VIN of this vehicle in its internal memory.

A maximum of five VINs can be saved in this way.

Subsequently, the PIN does not have to be entered when the

Navigator is switched on by ignition ON while cradled in any of these vehicles.

If the Navigator is removed from the vehicle while switched on, a security prompt asking for the PIN to be entered is issued.

Screen brightness

Screen brightness is adjusted by the motorcycle while the unit is cradled. No manual input is necessary.

If you prefer, you can switch off automatic adjustment in the Navigator display settings.

<https://www.motorcycle-manual.com/>

<https://www.motorcycle-manual.com/>

Care

Care products	172
Washing the vehicle	172
Cleaning easily damaged components.....	173
Paint care	174
Protective wax coating	174
Laying up the motorcycle	174
Restoring motorcycle to use	174

<https://www.motorcycle-manual.com/>

Care products

BMW Motorrad recommends that you use the cleaning and care products you can obtain from your authorised BMW Motorrad dealer.

The substances in BMW CareProducts have been tested in laboratories and in practice; they provide optimised care and protection for the materials used in your vehicle.



ATTENTION

Use of unsuitable cleaning and care products

Damage to vehicle parts

- Do not use solvents such as cellulose thinners, cold cleaners, fuel or the like, and do not use cleaning products that contain alcohol.◀

Washing the vehicle

BMW Motorrad recommends that you use BMW insect remover to soften and wash off insects and stubborn dirt on painted parts prior to washing the vehicle.

To prevent stains, do not wash the vehicle immediately after it has been exposed to strong sunlight and do not wash it in the sun.

Make sure that the vehicle is washed frequently, especially during the winter months.

To remove road salt, clean the motorcycle with cold water immediately after every trip.



WARNING

Wet brake discs and brake pads after vehicle wash, after riding through water and in rainy conditions

Diminished braking effect, risk of accident

- Apply the brakes in good time to allow the friction and heat to dry the brake discs and brake pads.◀



ATTENTION

Effect of road salt intensified by warm water

Corrosion

- Use only cold water to wash off road salt.◀



ATTENTION

Damage due to high water pressure from high pressure cleaners or steam cleaners

Corrosion or short-circuit, damage to seals, to the hydraulic brake system, to the electrics and the seat

<https://www.motorcycle-manual.com/>

- Exercise restraint when using a steam jet or high-pressure cleaning equipment.◀

Cleaning easily damaged components

Plastics



ATTENTION

Use of unsuitable cleaning agents

Damage to plastic surfaces

- Do not use cleaning agents that contain alcohol, solvents or abrasives.
- Do not use insect-remover pads or cleaning pads with hard, scouring surfaces.◀

Body panels

Clean the trim panels with water and BMW plastic care emulsion.

Windscreens and lenses made of plastic

Clean off dirt and insects with a soft sponge and plenty of water.



NOTICE

Soften stubborn dirt and insects by covering the affected areas with a wet cloth.◀



Clean with water and sponge only.



Do not use any chemical cleaning agents.

Chrome

Use plenty of water and BMW shampoo to clean chrome, particularly if it has been exposed to road salt. Use chrome polish for additional treatment.

Radiator

Clean the radiator regularly to prevent overheating of the engine due to inadequate cooling. For example, use a garden hose with low water pressure.



ATTENTION

Bending of radiator fins

Damage to radiator fins

- Take care not to bend the radiator fins when cleaning.◀

Rubber components

Treat rubber components with water or BMW rubber-care products.



ATTENTION

Application of silicone sprays to rubber seals

Damage to the rubber seals

- Do not use silicone sprays or care products that contain

<https://www.motorcycle-manual.com/>

Paint care

Washing the vehicle regularly will help counteract the long-term effects of substances that damage the paint, especially if your vehicle is ridden in areas with high air pollution or natural sources of dirt, for example tree resin or pollen.

Remove particularly aggressive substances immediately, however, as otherwise the paint can be affected or become discoloured. Substances of this nature include spilt fuel, oil, grease, brake fluid and bird droppings. We recommend BMW vehicle polish or BMW paint cleaner for this purpose.

Marks on the paintwork are particularly easy to see after the vehicle has been washed. Remove stains of this kind immediately, using cleaning-grade benzine or petroleum spirit on a clean cloth or ball of cotton.

BMW Motorrad recommends using BMW tar remover for removing specks of tar. Remember to wax the parts treated in this way.

Protective wax coating

If water is no longer forming beads on the paint surface, it must be waxed.

BMW Motorrad recommends applying only BMW car wax or products containing carnauba wax or synthetic wax.

Laying up the motorcycle

- Clean the motorcycle.
- Fill the motorcycle's fuel tank with fuel.
- Removing battery (➡ 147).
- Spray the brake and clutch lever pivots and the main and side stand pivots with a suitable lubricant.

- Coat bright metal and chrome-plated parts with an acid-free grease (e.g. Vaseline).
- Stand the motorcycle in a dry room in such a way that there is no load on either wheel (preferably using the front-wheel and rear-wheel stands from BMW Motorrad).

Restoring motorcycle to use

- Remove the protective wax coating.
- Clean the motorcycle.
- Installing battery (➡ 148).
- Comply with checklist (➡ 93).

<https://www.motorcycle-manual.com/>

Technical data

Troubleshooting chart	176
Threaded fasteners	177
Fuel.....	179
Engine oil	180
Engine	180
Clutch	181
Transmission	181
Final drive.....	182
Frame	183
Chassis and suspension	183
Brakes	184
Wheels and tyres	185
Electrical system.....	187
Anti-theft alarm	188
Dimensions	189

Weights.....	190
--------------	-----

Riding specifications	190
-----------------------------	-----

Troubleshooting chart

The engine does not start.

Possible cause	Rectification
Side stand extended and gear engaged	Retract the side stand.
Gear engaged and clutch not disengaged	Select neutral or pull the clutch lever.
No fuel in tank	Refuelling (102).
Battery flat	Charge battery when connected (146).
Overheating protection for starter motor has been activated. Starter motor can only be operated for a limited period of time.	Allow the starter motor to cool down for approx. 1 minute before using it again.

Threaded fasteners

Front wheel	Value	Valid
Quick-release axle in telescopic forks		
M12 x 20	30 Nm	
Clamping screw for quick-release axle in telescopic fork		
M8 x 35	19 Nm	
Brake caliper on telescopic fork		
M10 x 65	38 Nm	
Wheel-speed sensor to fork leg		
M6 x 16 Micro-encapsulated or medium-strength thread-locking compound	8 Nm	
Rear wheel	Value	Valid
Rear wheel to wheel flange		
M10 x 1.25 x 40	tighten in diagonally opposite sequence	
	60 Nm	

<https://www.motorcycle-manual.com/>

Mirrors		Value	Valid
Mirror (locknut) to adapter			
M10 x 1.25		Left-hand thread, 22 Nm	
Adapter to clamping block			
M10 x 14 - 4.8		25 Nm	
Handlebars		Value	Valid
Clamping block (handlebar clamp) on fork bridge			
M8 x 35		Tighten in riding direction at the front of the block	
		19 Nm	

Fuel

Recommended fuel grade	Super unleaded (max. 10 % ethanol, E10) 95 ROZ/RON 89 AKI
Alternative fuel grade	Regular unleaded (Power- and consumption-related restrictions. If e.g. the engine is to be operated in countries with low fuel grades at 91 research octane number, then the motorcycle must first be programmed appropriately at your authorised BMW motorcycle dealer.) (max. 10 % ethanol, E10) 91 ROZ/RON 87 AKI
Usable fuel capacity	approx. 20 l
Reserve fuel	approx. 4 l
Exhaust emissions standard	EU 4

Engine oil

Engine oil, capacity	max 4 l, with filter change
Specification	SAE 5W-40, API SL / JASO MA2, Additives (e.g. molybdenum-based) are not permissible because they can attack coated components of the engine, BMW Motorrad recommends BMW Motorrad ADVANTEC Ultimate oil.
Engine oil, quantity for topping up	max 0.95 l, Difference between MIN and MAX

BMW recommends **ADVANTEC**
ORIGINAL BMW ENGINE OIL

Engine

Location of engine number	Crankcase, bottom right, below starter motor
Engine type	122EN
Engine design	Air-/liquid-cooled two-cylinder four-stroke opposed-twin engine with two overhead spur-gear-driven camshafts and one balancing shaft
Displacement	1170 cm ³
Cylinder bore	101 mm
Piston stroke	73 mm
Compression ratio	12.5:1

<https://www.motorcycle-manual.com/>

Nominal output	92 kW, at engine speed: 7750 min ⁻¹
– with power reduction ^{OE}	79 kW, at engine speed: 7750 min ⁻¹
Torque	125 Nm, at engine speed: 6500 min ⁻¹
– with power reduction ^{OE}	122 Nm, at engine speed: 5250 min ⁻¹
Maximum engine speed	max 9000 min ⁻¹
Idle speed	1150 min ⁻¹ , Engine at regular operating temperature

Clutch

Clutch type	Multiplate oil-bath clutch, anti-hopping
-------------	--

Transmission

Gearbox type	Claw-shift 6-speed gearbox with helical gearing
--------------	---

<https://www.motorcycle-manual.com/>

Gearbox transmission ratios	1.000 (60:60 teeth), Primary transmission ratio 1.650 (33:20 teeth), Transmission input ratio 2.438 (39:16 teeth), 1st gear 1.714 (36:21 teeth), 2nd gear 1.296 (35:27 teeth), 3rd gear 1.059 (36:34 teeth), 4th gear 0.943 (33:35 teeth), 5th gear 0.848 (28:33 teeth), 6th gear 1.061 (35:33 teeth), Transmission output ratio
-----------------------------	--

Final drive

Type of final drive	Shaft drive with bevel gears
Type of rear suspension	Cast aluminium single swinging arm with BMW Motorrad paralever
Gear ratio of final drive	2.91 (32/11 teeth)

Frame

Frame type	Tubular steel frame with supporting drive unit, steel pipe rear frames
Type plate location	Frame, front right (beside spring strut)
Position of the Vehicle Identification Number	Frame, front right, on steering head

Chassis and suspension

Front wheel

Type of front suspension	BMW Telelever, with anti-dive top fork bridge, leading link pivot-mounted on engine and telescopic forks, central spring strut supported by leading link and frame
Design of front wheel suspension	Central shock absorber with helical spring
– with Dynamic ESA ^{OE}	Central shock absorber complete with torsion spring and header tank, electrically adjustable decompression and compression-stage damping
Spring travel, front	190 mm, at wheel
– with lowered suspension ^{OE}	160 mm, at wheel

Rear wheel

Type of rear suspension	Cast aluminium single swinging arm with BMW Motorrad paralever
Type of rear suspension	Central spring strut with coil spring, adjustable rebound stage damping and spring preload
– with Dynamic ESA ^{OE}	Central spring strut with coil spring and reservoir, electrically adjustable rebound-stage and compression-stage damping, electrically adjustable spring preload
Spring travel at rear wheel	200 mm
– with lowered suspension ^{OE}	170 mm

Brakes**Front wheel**

Type of front brake	Hydraulically actuated twin-disc brake with 4-piston radial monobloc calipers and floating brake discs
Brake-pad material, front	Sintered metal
Brake disc thickness, front	min 4 mm, Wear limit
Play of brake controls (Front brake)	approx. 1.85 mm, at piston

<https://www.motorcycle-manual.com/>

Rear wheel

Type of rear brake	Hydraulically actuated disc brake with 2-piston floating caliper and fixed disc
Brake-pad material, rear	Organic material
Brake disc thickness, rear	min 4.5 mm, Wear limit
Blow-by clearance of the footbrake lever	1 mm, between frame and footbrake lever

Wheels and tyres

Recommended tyre sets	Your authorised BMW Motorrad dealer will be happy to supply an up-to-date list of the approved wheel/tyre combinations, or you can check the information posted on the bmw-motorrad.com web-site.
Speed category, front/rear tyres	V, required at least: 240 km/h

<https://www.motorcycle-manual.com/>

Front wheel

Front wheel type	Aluminium cast wheel
– with cross-spoked wheels ^{OE}	Cross-spoked wheel
Front wheel rim size	3.0"x19"
Tyre designation, front	120/70 - 19
Load index, front tyre	min. 52
Permissible front-wheel imbalance	max 5 g

Rear wheel

Rear-wheel type	Aluminium cast wheel
– with cross-spoked wheels ^{OE}	Cross-spoked wheel
Rear wheel rim size	4.50"x17"
Tyre designation, rear	170/60 - 17
Load index, rear tyre	min. 70
Permissible rear-wheel imbalance	max 45 g

Tyre pressures

Tyre pressure, front	2.5 bar, tyre cold
Tyre pressure, rear	2.9 bar, tyre cold

Electrical system

Electrical rating of on-board sockets	max 5 A, total for all sockets
Fuse carrier 1	10 A, Slot 1: Instrument cluster, anti-theft alarm (DWA), ignition lock, diagnostic socket 7.5 A, Slot 2: Left multifunction switch, tyre pressure monitoring (RDC)
Fuse holder	50 A, Fuse 1: Voltage regulator

Battery

Battery type	AGM (Absorbent Glass Mat) battery
Battery rated voltage	12 V
Battery rated capacity	12 Ah

Spark plugs

Spark plugs, manufacturer and designation	NGK LMAR8D-J
Electrode gap of spark plug	0.8±0.1 mm, when new 1.0 mm, Wear limit

Lighting

Bulb for high-beam headlight	H7 / 12 V / 55 W
– with LED headlights ^{OE}	LED
Bulbs for the low-beam headlight	H7 / 12 V / 55 W
– with LED headlights ^{OE}	LED

<https://www.motorcycle-manual.com/>

Bulb for parking light	W5W / 12 V / 5 W
– with LED headlights ^{OE}	LED
Bulb for tail light/brake light	LED
Bulbs for flashing turn indicators, front	RY10W / 12 V / 10 W
– with LED turn indicators ^{OE}	LED
Bulbs for flashing turn indicators, rear	RY10W / 12 V / 10 W
– with LED turn indicators ^{OE}	LED

Anti-theft alarm

Activation time on arming	approx. 30 s
Alarm duration	approx. 26 s
Battery type	CR 123 A

<https://www.motorcycle-manual.com/>

Dimensions

Length of motorcycle	2205 mm, over spray guard
Height of motorcycle	1430...1490 mm, over windscreen, at DIN unladen weight
– with lowered suspension ^{OE}	1405...1465 mm, to top of windscreen when lowered, at DIN unladen weight
Width of motorcycle	955 mm, with mirrors
Front-seat height	850...870 mm, without rider at unladen weight
– with front seat, low ^{OE}	820...840 mm, without rider at unladen weight
– with lowered suspension ^{OE}	800...820 mm, without rider at unladen weight
Rider's inside-leg arc, heel to heel	1870...1910 mm, without rider at unladen weight
– with front seat, low ^{OE}	1820...1860 mm, without rider at unladen weight
– with lowered suspension ^{OE}	1790...1830 mm, without rider at unladen weight

<https://www.motorcycle-manual.com/>

Weights

Vehicle kerb weight	244 kg, DIN unladen weight, ready for road 90 % load of fuel, without OE
Permissible gross weight	460 kg
Maximum payload	216 kg

Riding specifications

Starting capability on uphill gradients (at permissible gross weight)	20 %
Top speed	>200 km/h

Service

BMW Motorrad Service	192
BMW Motorrad Mobility services	192
Maintenance work	192
BMW Service	193
Maintenance schedule	195
Confirmation of maintenance work	196
Confirmation of service	210

<https://www.motorcycle-manual.com/>

BMW Motorrad Service

BMW Motorrad has an extensive network of dealerships in place to look after you and your motorcycle in more than 100 countries. Authorised BMW Motorrad dealerships have the technical information and the technical know-how to carry out reliably all maintenance and repair work on your BMW.

You can locate your nearest authorised BMW Motorrad dealership by visiting our website:

bmw-motorrad.com



WARNING

Maintenance and repair work not in compliance with correct procedure

Risk of accident due to consequential damage

- BMW Motorrad recommends having work of this nature carried out on the vehicle by a

specialist workshop, preferably an authorised BMW Motorrad dealer. ◀

In order to help ensure that your BMW is always in optimum condition, BMW Motorrad recommends compliance with the maintenance intervals specified for your motorcycle. Have all maintenance and repair work that is carried out confirmed in the "Service" chapter in this manual. For generous treatment of claims submitted after the warranty period has expired, evidence of regular maintenance is essential.

Your authorised BMW Motorrad dealer can provide information on BMW services and the work undertaken as part of each service.

BMW Motorrad Mobility services

As owner of a new BMW motorcycle, in circumstances in which assistance is required you can benefit from the protection afforded by the various BMW Motorrad mobility services (e.g. Mobile Service, breakdown service, vehicle recovery service). Your authorised BMW Motorrad dealer will be happy provide information about the mobility services available to you.

Maintenance work

BMW Pre-delivery Check

Your authorised BMW Motorrad dealer conducts the BMW pre-delivery check before handing over the vehicle to you.

<https://www.motorcycle-manual.com/>

BMW Running-in Check

The BMW running-in check has to be performed when the motorcycle has covered between 500 km and 1200 km.

BMW Service

The BMW Service is carried out once a year; the extent of servicing can vary, depending on the age of the vehicle and the distance it has covered. Your authorised BMW Motorrad dealer confirms that the service work has been carried out and enters the date when the next service will be due.

Riders who cover long distances in a year might have to bring in their vehicles for service before the next scheduled date. It is to allow for these cases that a maximum odometer reading is entered as well in the confirmation of service. Servicing has to be brought forward if this

meter reading is reached before the next scheduled date for the service.

The service-due indicator in the multifunction display reminds you about one month or 1000 km in advance when the time for a service is approaching, on the basis of the programmed values.

To find out more about service go to:

bmw-motorrad.com/service

The maintenance tasks necessary for your vehicle are set out in the maintenance schedule below:

<https://www.motorcycle-manual.com/>

	500 - 1200 km 300 - 750 mls	10 000 km 6 000 mls	20 000 km 12 000 mls	30 000 km 18 000 mls	40 000 km 24 000 mls	50 000 km 30 000 mls	60 000 km 36 000 mls	70 000 km 42 000 mls	80 000 km 48 000 mls	90 000 km 54 000 mls	100 000 km 60 000 mls	12 months	24 months
①	X												
②												X	
③		X	X	X	X	X	X	X	X	X	X	X ^a	
④			X		X		X		X		X		X ^b
⑤			X		X		X		X		X		
⑥			X		X		X		X		X		
⑦			X		X		X		X		X		
⑧		X	X	X	X	X	X	X	X	X	X	X ^c	
⑨												X ^d	X ^d

<https://www.motorcycle-manual.com/>

Maintenance schedule

- 1** BMW Running-in check
 - 2** BMW Service standard scope
 - 3** Engine-oil change, with filter
 - 4** Oil change in bevel gears
 - 5** Check valve clearance
 - 6** Replace all spark plugs
 - 7** Replace air filter element
 - 8** Check or replace air filter element
 - 9** Change brake fluid, entire system
- ^a annually or every 10000 km (whichever comes first)
- ^b every 2 years or every 20000 km (whichever comes first)
- ^c if vehicle is used off-road, annually or every 10000 km (whichever comes first)

^d for the first time after one year, then every two years

<https://www.motorcycle-manual.com/>

Confirmation of maintenance work

BMW Motorrad Service, standard scope

The activities in the BMW Motorrad Service standard scope are listed below. The actual scope of maintenance work for your vehicle may differ.

- Performing vehicle test with BMW Motorrad diagnostic system
- Visual inspection of hydraulic clutch system
- Visually inspecting brake pipes, brake hoses and connections
- Checking front brake pads and brake discs for wear
- Checking brake-fluid level, front brakes
- Checking rear brake pads and brake disc for wear
- Checking brake-fluid level, rear brakes
- Checking coolant level
- Checking ease of movement of side stand
- Checking ease of movement of centre stand
- Checking tyre tread depth and tyre pressure
- Checking spoke tension, adjusting if necessary
- Check the lights and signalling equipment
- Function test, engine start suppression
- Final inspection and check of roadworthiness
- Setting service-due date and service countdown distance
- Checking battery charge state
- Confirming the BMW service in the on-board literature

<https://www.motorcycle-manual.com/>

BMW Pre-delivery Check

Completed

on _____

Stamp, signature

BMW Running-in Check

Completed

on _____

Odometer reading _____

Next service

at the latest

on _____

or, if reached beforehand

Odometer reading _____

Stamp, signature

BMW Service

Completed

on _____

Odometer reading _____

Next service

at the latest

on _____

or, if reached beforehand

Odometer reading _____

Item

Yes

No

BMW Motorrad Service, standard
scope☐☐

Oil change, engine, with filter

☐☐

Oil change in rear bevel gears

☐☐

Checking valve clearance

☐☐

Renewing all spark plugs

☐☐

Renewing air cleaner insert

☐☐Checking or replacing air filter element
(for maintenance)☐☐

Change brake fluid in entire system

☐☐

Notes

Stamp, signature<https://www.motorcycle-manual.com/>

BMW Service

Completed

on _____

Odometer reading _____

Next service

at the latest

on _____

or, if reached beforehand

Odometer reading _____

Item

Yes

No

BMW Motorrad Service, standard
scope☐☐

Oil change, engine, with filter

☐☐

Oil change in rear bevel gears

☐☐

Checking valve clearance

☐☐

Renewing all spark plugs

☐☐

Renewing air cleaner insert

☐☐Checking or replacing air filter element
(for maintenance)☐☐

Change brake fluid in entire system

☐☐

Notes

Stamp, signature<https://www.motorcycle-manual.com/>

BMW Service

Completed

on _____

Odometer reading _____

Next service

at the latest

on _____

or, if reached beforehand

Odometer reading _____

Item

Yes

No

BMW Motorrad Service, standard
scope☐☐

Oil change, engine, with filter

☐☐

Oil change in rear bevel gears

☐☐

Checking valve clearance

☐☐

Renewing all spark plugs

☐☐

Renewing air cleaner insert

☐☐Checking or replacing air filter element
(for maintenance)☐☐

Change brake fluid in entire system

☐☐

Notes

Stamp, signature<https://www.motorcycle-manual.com/>

BMW Service

Completed

on _____

Odometer reading _____

Next service

at the latest

on _____

or, if reached beforehand

Odometer reading _____

Item

Yes

No

BMW Motorrad Service, standard
scope☐☐

Oil change, engine, with filter

☐☐

Oil change in rear bevel gears

☐☐

Checking valve clearance

☐☐

Renewing all spark plugs

☐☐

Renewing air cleaner insert

☐☐Checking or replacing air filter element
(for maintenance)☐☐

Change brake fluid in entire system

☐☐

Notes

Stamp, signature

BMW Service

Completed

on _____

Odometer reading _____

Next service

at the latest

on _____

or, if reached beforehand

Odometer reading _____

Item

Yes

No

BMW Motorrad Service, standard
scope☐☐

Oil change, engine, with filter

☐☐

Oil change in rear bevel gears

☐☐

Checking valve clearance

☐☐

Renewing all spark plugs

☐☐

Renewing air cleaner insert

☐☐Checking or replacing air filter element
(for maintenance)☐☐

Change brake fluid in entire system

☐☐

Notes

Stamp, signature<https://www.motorcycle-manual.com/>

BMW Service

Completed

on _____

Odometer reading _____

Next service

at the latest

on _____

or, if reached beforehand

Odometer reading _____

Item

Yes

No

BMW Motorrad Service, standard
scope☐☐

Oil change, engine, with filter

☐☐

Oil change in rear bevel gears

☐☐

Checking valve clearance

☐☐

Renewing all spark plugs

☐☐

Renewing air cleaner insert

☐☐Checking or replacing air filter element
(for maintenance)☐☐

Change brake fluid in entire system

☐☐

Notes

Stamp, signature

BMW Service

Completed

on _____

Odometer reading _____

Next service

at the latest

on _____

or, if reached beforehand

Odometer reading _____

Item

Yes

No

BMW Motorrad Service, standard
scope☐☐

Oil change, engine, with filter

☐☐

Oil change in rear bevel gears

☐☐

Checking valve clearance

☐☐

Renewing all spark plugs

☐☐

Renewing air cleaner insert

☐☐Checking or replacing air filter element
(for maintenance)☐☐

Change brake fluid in entire system

☐☐

Notes

Stamp, signature<https://www.motorcycle-manual.com/>

BMW Service

Completed

on _____

Odometer reading _____

Next service

at the latest

on _____

or, if reached beforehand

Odometer reading _____

Item

Yes

No

BMW Motorrad Service, standard
scope☐☐

Oil change, engine, with filter

☐☐

Oil change in rear bevel gears

☐☐

Checking valve clearance

☐☐

Renewing all spark plugs

☐☐

Renewing air cleaner insert

☐☐Checking or replacing air filter element
(for maintenance)☐☐

Change brake fluid in entire system

☐☐

Notes

Stamp, signature

<https://www.motorcycle-manual.com/>

BMW Service

Completed

on _____

Odometer reading _____

Next service

at the latest

on _____

or, if reached beforehand

Odometer reading _____

Item

Yes

No

BMW Motorrad Service, standard
scope☐☐

Oil change, engine, with filter

☐☐

Oil change in rear bevel gears

☐☐

Checking valve clearance

☐☐

Renewing all spark plugs

☐☐

Renewing air cleaner insert

☐☐Checking or replacing air filter element
(for maintenance)☐☐

Change brake fluid in entire system

☐☐

Notes

Stamp, signature<https://www.motorcycle-manual.com/>

BMW Service

Completed

on _____

Odometer reading _____

Next service

at the latest

on _____

or, if reached beforehand

Odometer reading _____

Item

Yes

No

BMW Motorrad Service, standard
scope☐☐

Oil change, engine, with filter

☐☐

Oil change in rear bevel gears

☐☐

Checking valve clearance

☐☐

Renewing all spark plugs

☐☐

Renewing air cleaner insert

☐☐Checking or replacing air filter element
(for maintenance)☐☐

Change brake fluid in entire system

☐☐

Notes

Stamp, signature

BMW Service

Completed

on _____

Odometer reading _____

Next service

at the latest

on _____

or, if reached beforehand

Odometer reading _____

Item

Yes

No

BMW Motorrad Service, standard
scope☐☐

Oil change, engine, with filter

☐☐

Oil change in rear bevel gears

☐☐

Checking valve clearance

☐☐

Renewing all spark plugs

☐☐

Renewing air cleaner insert

☐☐Checking or replacing air filter element
(for maintenance)☐☐

Change brake fluid in entire system

☐☐

Notes

Stamp, signature<https://www.motorcycle-manual.com/>

BMW Service

Completed

on _____

Odometer reading _____

Next service

at the latest

on _____

or, if reached beforehand

Odometer reading _____

Item

Yes

No

BMW Motorrad Service, standard
scope☐☐

Oil change, engine, with filter

☐☐

Oil change in rear bevel gears

☐☐

Checking valve clearance

☐☐

Renewing all spark plugs

☐☐

Renewing air cleaner insert

☐☐Checking or replacing air filter element
(for maintenance)☐☐

Change brake fluid in entire system

☐☐

Notes

Stamp, signature

Confirmation of service

The table is intended as a record of maintenance and repair work, the installation of optional accessories and, if appropriate, special campaign (recall) work.

Item	Odometer reading	Date

<https://www.motorcycle-manual.com/>

Item	Odometer reading	Date

<https://www.motorcycle-manual.com/>

<https://www.motorcycle-manual.com/>

Appendix

Certificate for electronic immobiliser	214
Certificate for Keyless Ride	216
Certificate for tyre pressure monitoring (tyre pressure control, RDC)	218

FCC Approval

Ring aerial in the ignition switch



To verify the authorization of the ignition key, the electronic immobilizer exchanges information with the ignition key via the ring aerial.

This device complies with Part 15 of the FCC rules. Operation is subject to the following two conditions:

- (1) This device may not cause harmful interference, and
- (2) this device must accept any interference received, including interference that may cause undesired operation.



Any changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment. ◀

Approbation de la FCC

Antenne annulaire présente dans le commutateur d'allumage



Pour vérifier l'autorisation de la clé de contact, le système d'immobilisation électronique échange des

informations avec la clé de contact via l'antenne annulaire.

Le présent dispositif est conforme à la partie 15 des règles de la FCC. Son utilisation est soumise aux deux conditions suivantes :

- (1) Le dispositif ne doit pas produire d'interférences nuisibles, et
- (2) le dispositif doit pouvoir accepter toutes les interférences extérieures, y compris celles qui pourraient provoquer une activation inopportune.



Toute modification qui n'aurait pas été approuvée expressément par l'organisme responsable de l'homologation peut annuler l'autorisation accordée à l'utilisateur pour utiliser le dispositif. ◀

Certifications

BMW Keyless Ride ID Device



USA, Canada

Product name: BMW Keyless Ride ID Device
FCC ID: YGOHUF5750
IC: 4008C-HUF5750

Canada:

Operation is subject to the following two conditions:

- (1) This device may not cause harmful interference, and
- (2) this device must accept any interference received, including interference that may cause undesired operation.

USA:

This device complies with Part 15 of the FCC rules. Operation is subject to the following two conditions:

- (1) This device may not cause harmful interference, and
- (2) this device must accept any interference received, including interference that may cause undesired operation.



Any changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

<https://www.motorcycle-manual.com/>

Declaration Of Conformity

We declare under our responsibility that the product

BMW Keyless Ride ID Device (Model: HUF5750)

complies with the appropriate essential requirements of the article 3 of the R&TIE and the other relevant provisions, when used for its intended purpose. Applied Standards:

1. Health and safety requirements contained in article 3 (1) a)
 - EN 60950-1:2006+A11:2009+A1:2010+A12:2011; Information technology equipment- Safety
2. Protection requirements with respect to electromagnetic compatibility article 3 (1) b)
 - EN 301 489-1 (V1.9.2, 09/2011), Electromagnetic compatibility and radio spectrum matters (ERM); Electromagnetic compatibility (EMC) standard for radio equipment and services;
Part 1: Common technical requirements
 - EN 301 489-3 (V1.4.1, 08/2002) Electromagnetic compatibility and radio spectrum matters (ERM); Electromagnetic compatibility (EMC) standard for radio equipment and services; Part 3: Specific conditions for short range devices (SRD) operating on frequencies between 9 kHz and 40 GHz
3. Means of the efficient use of the radio frequency spectrum article 3 (2)
 - EN 300 220-1 & -2 (V2.4.1, 05/2012), electromagnetic compatibility and radio spectrum matters (ERM); Short range devices (SRD); Radio equipment to be used in the 25 MHz to 1000 MHz frequency range with power levels ranging up to 500 mW;
Part 1: Technical characteristics and test methods.
Part 2: Harmonized EN covering essential requirements under article 3.2 of the R&TIE directive

The product is labeled with the CE marking: **CE**

Velbert, October 15th, 2013



Benjamin A. Müller
Product Development Systems
Car Access and Immobilization – Electronics
Huf Hülshock & Furst GmbH & Co. KG
Steege Straße 47, D-42931 Velbert

<https://www.motorcycle-manual.com/>

Certification Tire Pressure Control (TPC)

FCC ID: MRXBC54MA4
IC: 2546A-BC54MA4

FCC ID: MRXBC5A4
IC: 2546A-BC5A4

This device complies with Part 15 of the FCC Rules and with Industry Canada license-exempt RSS standard(s).

Operation is subject to the following two conditions:

- (1) This device may not cause harmful interference, and
- (2) This device must accept any interference received, including interference that may cause undesired operation.

Le présent appareil est conforme aux CNR d'Industrie Canada applicables aux appareils radio exempts de licence. L'exploitation est autorisée aux deux conditions suivantes:

- (1) l'appareil ne doit pas produire de brouillage, et
- (2) l'utilisateur de l'appareil doit accepter tout brouillage radioélectrique subi, même si le brouillage est susceptible d'en compromettre le fonctionnement.

WARNING: Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment. The term "IC:" before the radio certification number only signifies that Industry Canada technical specifications were met.

<https://www.motorcycle-manual.com/>

A

Abbreviations and symbols, 6

ABS

Control, 15

Engineering details, 108

operate, 64

Self-diagnosis, 94

Status indicators, 36

Accessories

General instructions, 154

Actuality, 7**Air filter**

Position on the motorcycle, 13

Replace insert, 138

Ambient temperature

Outside temperature

warning, 30

Reading, 42

Anti-theft alarm

operate, 74

Technical data, 188

Telltale light, 18

Warning, 33

ASC

Control, 15

operate, 65

Reading, 37

Self-diagnosis, 95

Average values

reset, 59

B**Battery**

Charge battery when

connected, 146

Charging battery when

disconnected, 147

Indicator light for battery

charge voltage, 39

Installation, 148

Maintenance instructions, 145

Removal, 147

Technical data, 187

Brake fluid

Checking fluid level, front, 126

Checking fluid level, rear, 127

Reservoir, front, 13

Reservoir, rear, 13

Brake pads

Checking front, 124

Checking rear, 125

Running in, 96

Brakes

ABS Pro in detail, 110

ABS Pro depending on riding
mode, 100

Adjusting handlebar lever, 84

Checking function, 123

Checking operation, 123

Safety instructions, 98

Technical data, 184

C

Cases, 155

Checklist, 93

Clock

Adjusting, 60

Clutch

Adjusting handlebar lever, 84

Checking operation, 128

Technical data, 181

Confirmation of maintenance

work, 196

Coolant
 Checking fill level, 128
 Topping up, 128
 Warning for overtemperature, 31

Cruise-control system
 operate, 72

D

Damping
 Adjuster, rear, 11

Daytime riding lights
 automatic daytime riding light, 55
 Manual daytime riding light, 54
 Position on the vehicle, 11

Diagnostic connector
 Loosen, 151
 secure, 151

Dimensions
 Technical data, 189

E

Electrics
 Technical data, 187

Emergency off switch (kill switch), 17
 Operation, 52

Emissions warning light, 32

Engine

Indicator light for engine control unit, 39
 Malfunction indicator lamp, 32
 starting, 93
 Technical data, 180
 Warning for engine electronics, 31

Engine oil

Checking fill level, 122
 Filling level indicator, 13
 Oil filler opening, 13
 Oil level, 41
 Technical data, 180
 Topping up, 123
 Warning for engine oil level, 39

Equipment, 7

ESA

Control, 15
 operate, 66

F

Frame
 Technical data, 183

Front-wheel stand
 Installing, 121

Fuel

Oil filler opening, 11
 Refuelling, 102
 refuelling with Keyless Ride, 103, 104
 Reserve volume, 41
 Technical data, 179

Fuel reserve

Warning, 38

Fuses

replacing, 149

G

General views

Instrument panel, 18
 Left multifunction switch, 15
 Left side of vehicle, 11
 Multifunction display, 22
 Right multifunction switch, 17
 Right side of vehicle, 13
 Telltale and warning lights, 20

Underneath the seat, 14
Warning symbols, 24

H

Handlebars
Adjusting, 85
Hazard warning flashers
Control, 15, 17
operate, 56

Headlight
Beam throw, 82
Headlight beam-throw
adjustment, 11

Headlight courtesy delay
feature, 46, 53

Heated handlebar grips
Control, 17
operate, 76

Horn, 15

I

Ignition
Switching off, 47
Switching on, 46

Immobiliser
Emergency key, 50
Reserve key, 47
Warning, 30

Instrument panel
Ambient-light brightness
sensor, 18
Overview, 18

J

Jump-start, 144

K

Keyless Ride
Battery of the radio-operated
key is empty or loss of the
radio-operated key, 51
Electronic immobiliser EWS, 50
Fuel filler cap, unlocking, 103,
104
Lock the handlebars, 48
Switching off ignition, 49
Switching on ignition, 49
Warning, 30, 31

Keys, 46, 48

L

Lighting
High-beam headlight, 139
LED headlight, replacing, 144
Low-beam headlight, 139
Replacing LED auxiliary
headlights, 144
Replacing LED rear light, 143
Side light, 141
Technical data, 187
Turn indicators, 142
Warning for faulty bulb, 32

Lights

automatic daytime riding
light, 55
Control, 15
Headlight courtesy delay
feature, 53
Headlight flasher, operating, 53
High-beam headlight,
operating, 53
Low-beam headlight, 53
Manual daytime riding light, 54
Operating additional
headlights, 54

- Parking lights, 53
- Side light, 53
- Lowered suspension
 - Restrictions, 90
- Luggage
 - Instructions for loading, 90

M

- Maintenance
 - General instructions, 120
 - Maintenance schedule, 195
- Maintenance intervals, 192
- Mirrors
 - Adjusting, 82
- Mobility services, 192
- Motorcycle
 - care, 171
 - cleaning, 171
 - Lashing, 105
 - Laying up, 174
 - parking, 100

- Multifunction display, 18
 - Control, 15
 - operate, 57
 - Overview, 22
 - Select display, 57
- Multifunction switch
 - General view, left side , 15
 - General view, right side, 17

O

- Odometer and tripmeters
 - reset, 58
- Off-roading, 96

P

- Parking, 100
- Parking light, 53
- Power socket
 - Notes on use, 154
 - Position on the vehicle, 13
- Pre-Ride-Check, 94

R

- RDC
 - Adhesive label for rim, 132
 - Engineering details, 115
 - Warnings, 33
- Rear-wheel drive
 - Technical data, 182
- Refuelling, 102
 - with Keyless Ride, 103, 104
- Remote control
 - Replacing battery, 51
- Rev. counter, 18
- Rider's Manual
 - Position on the vehicle, 14
- Riding mode
 - Adjusting, 68
 - Control, 17
 - Engineering details, 113
- Riding specifications
 - Technical data, 190
- Running gear
 - Technical data, 183
- Running in, 95

S

Safety instructions

for brakes, 98

for riding, 90

Seat

Position of the height

adjustment, 14

Seats

Adjusting seat height, 78

Lock, 11

Removing and installing, 76

Service, 192

Service-due indicator, 40

Shift assistant

Engineering details, 116

Gear not trained, 38

Riding, 98

Shifting gear

Recommendation to upshift, 43

Spark plugs

Technical data, 187

Speedometer, 18

Spring preload

Adjuster, rear, 13

Adjusting, 85

Starting, 93

Control, 17

Steering lock

Locking, 46

T

Technical data

Anti-theft alarm, 188

Battery, 187

Brakes, 184

Bulbs, 187

Chassis and suspension, 183

Clutch, 181

Dimensions, 189

Electrical system, 187

Engine, 180

Engine oil, 180

Final drive, 182

Frame, 183

Fuel, 179

Riding specifications, 190

Spark plugs, 187

Standards, 7

Transmission, 181

Weights, 190

Wheels and tyres, 185

Telltale lights, 18

Overview, 20

Threaded fasteners, 177

Toolkit

Position on the vehicle, 14

Topcase

operate, 158

Torques, 177

Traction control

ASC, 111

Transmission

Technical data, 181

Troubleshooting chart, 176

Turn indicators

Control, 15

Control, right, 17

operate, 57

Type plate

Position on the vehicle, 13

Tyre pressure monitoring RDC

Reading, 42

<https://www.motorcycle-manual.com/>

Tyres

- Checking inflation pressure, 129
- Checking tread depth, 130
- Pressures, 186
- Recommendation, 131
- Running in, 96
- Table of tyre pressures, 14
- Technical data, 185
- Top speed, 91

V

Vehicle

- Restoring to use, 174

Vehicle Identification Number

- Position on the vehicle, 13

W

Warning lights, 18

- Overview, 20

Warnings

- ABS, 36
- Anti-theft alarm, 33
- ASC, 37
- Battery charge voltage, 39
- Bulb faulty, 32

Coolant temperature, 31

Engine control unit, 39

Engine electronics, 31

Engine oil level, 39

Fuel reserve, 38

Gear not trained, 38

Immobiliser, 30

Malfunction indicator lamp, 32

Mode of presentation, 25

Outside temperature

warning, 30

Overview, 24

RDC, 33

Warnings, overview, 26

Weights

Payload table, 14

Technical data, 190

Wheels

Change of size, 131

Check spokes, 131

Checking rims, 130

Install the rear wheel, 137

Installing front wheel, 134

Removing front wheel, 132

Technical data, 185

Windscreen

Adjusting, 83

Adjusting element, 13

<https://www.motorcycle-manual.com/>

Details described or illustrated in this booklet may differ from the vehicle's actual specification as purchased, the accessories fitted or the national-market specification. No claims will be entertained as a result of such discrepancies.

Dimensions, weights, fuel consumption and performance data are quoted to the customary tolerances.

The right to modify designs, equipment and accessories is reserved.

Errors and omissions excepted.

© 2016 Bayerische Motoren
Werke Aktiengesellschaft
80788 Munich, Germany

Not to be reproduced by any means whatsoever, wholly or in part, without the written permission of BMW Motorrad, After Sales.

Original rider's manual, printed in Germany.

<https://www.motorcycle-manual.com/>

1 2 3 4 5 6 7 8 9 10 11 12 13 14 15 16 17 18 19 20 21 22 23 24 25 26 27 28 29 30 31 32 33 34 35 36 37 38 39 40 41 42 43 44 45 46 47 48 49 50 51 52 53 54 55 56 57 58 59 60 61 62 63 64 65 66 67 68 69 70 71 72 73 74 75 76 77 78 79 80 81 82 83 84 85 86 87 88 89 90 91 92 93 94 95 96 97 98 99 100 101 102 103 104 105 106 107 108 109 110 111 112 113 114 115 116 117 118 119 120 121 122 123 124 125 126 127 128 129 130 131 132 133 134 135 136 137 138 139 140 141 142 143 144 145 146 147 148 149 150 151 152 153 154 155 156 157 158 159 160 161 162 163 164 165 166 167 168 169 170 171 172 173 174 175 176 177 178 179 180 181 182 183 184 185 186 187 188 189 190 191 192 193 194 195 196 197 198 199 200 201 202 203 204 205 206 207 208 209 210 211 212 213 214 215 216 217 218 219 220 221 222 223 224 225 226 227 228 229 230 231 232 233 234 235 236 237 238 239 240 241 242 243 244 245 246 247 248 249 250 251 252 253 254 255 256 257 258 259 260 261 262 263 264 265 266 267 268 269 270 271 272 273 274 275 276 277 278 279 280 281 282 283 284 285 286 287 288 289 290 291 292 293 294 295 296 297 298 299 300 301 302 303 304 305 306 307 308 309 310 311 312 313 314 315 316 317 318 319 320 321 322 323 324 325 326 327 328 329 330 331 332 333 334 335 336 337 338 339 340 341 342 343 344 345 346 347 348 349 350 351 352 353 354 355 356 357 358 359 360 361 362 363 364 365 366 367 368 369 370 371 372 373 374 375 376 377 378 379 380 381 382 383 384 385 386 387 388 389 390 391 392 393 394 395 396 397 398 399 400 401 402 403 404 405 406 407 408 409 410 411 412 413 414 415 416 417 418 419 420 421 422 423 424 425 426 427 428 429 430 431 432 433 434 435 436 437 438 439 440 441 442 443 444 445 446 447 448 449 450 451 452 453 454 455 456 457 458 459 460 461 462 463 464 465 466 467 468 469 470 471 472 473 474 475 476 477 478 479 480 481 482 483 484 485 486 487 488 489 490 491 492 493 494 495 496 497 498 499 500 501 502 503 504 505 506 507 508 509 510 511 512 513 514 515 516 517 518 519 520 521 522 523 524 525 526 527 528 529 530 531 532 533 534 535 536 537 538 539 540 541 542 543 544 545 546 547 548 549 550 551 552 553 554 555 556 557 558 559 560 561 562 563 564 565 566 567 568 569 570 571 572 573 574 575 576 577 578 579 580 581 582 583 584 585 586 587 588 589 590 591 592 593 594 595 596 597 598 599 600 601 602 603 604 605 606 607 608 609 610 611 612 613 614 615 616 617 618 619 620 621 622 623 624 625 626 627 628 629 630 631 632 633 634 635 636 637 638 639 640 641 642 643 644 645 646 647 648 649 650 651 652 653 654 655 656 657 658 659 660 661 662 663 664 665 666 667 668 669 670 671 672 673 674 675 676 677 678 679 680 681 682 683 684 685 686 687 688 689 690 691 692 693 694 695 696 697 698 699 700 701 702 703 704 705 706 707 708 709 710 711 712 713 714 715 716 717 718 719 720 721 722 723 724 725 726 727 728 729 730 731 732 733 734 735 736 737 738 739 740 741 742 743 744 745 746 747 748 749 750 751 752 753 754 755 756 757 758 759 760 761 762 763 764 765 766 767 768 769 770 771 772 773 774 775 776 777 778 779 780 781 782 783 784 785 786 787 788 789 790 791 792 793 794 795 796 797 798 799 800 801 802 803 804 805 806 807 808 809 810 811 812 813 814 815 816 817 818 819 820 821 822 823 824 825 826 827 828 829 830 831 832 833 834 835 836 837 838 839 840 841 842 843 844 845 846 847 848 849 850 851 852 853 854 855 856 857 858 859 860 861 862 863 864 865 866 867 868 869 870 871 872 873 874 875 876 877 878 879 880 881 882 883 884 885 886 887 888 889 890 891 892 893 894 895 896 897 898 899 900 901 902 903 904 905 906 907 908 909 910 911 912 913 914 915 916 917 918 919 920 921 922 923 924 925 926 927 928 929 930 931 932 933 934 935 936 937 938 939 940 941 942 943 944 945 946 947 948 949 950 951 952 953 954 955 956 957 958 959 960 961 962 963 964 965 966 967 968 969 970 971 972 973 974 975 976 977 978 979 980 981 982 983 984 985 986 987 988 989 990 991 992 993 994 995 996 997 998 999 1000 1001 1002 1003 1004 1005 1006 1007 1008 1009 1010 1011 1012 1013 1014 1015 1016 1017 1018 1019 1020 1021 1022 1023 1024 1025 1026 1027 1028 1029 1030 1031 1032 1033 1034 1035 1036 1037 1038 1039 1040 1

