



450 EXC EU
450 EXC AUS
450 EXC SIX DAYS EU
450 XC-W USA
500 EXC EU
500 EXC AUS
500 EXC SIX DAYS EU
500 XC-W USA

Art. no. 3211864en

KTm

Congratulations on your decision to purchase a KTM motorcycle. You are now the owner of a state-of-the-art sports motorcycle that will give you enormous pleasure if you service and maintain it accordingly.

We wish you a lot of enjoyment in riding this vehicle.

Please enter the serial number of your vehicle below.

Chassis number (☛ p. 11)	Stamp of dealer
Engine number (☛ p. 11)	
Key number (all EXC models) (☛ p. 11)	

The Owner's Manual contained the latest information for this model at the time of going to print. Slight deviations resulting from continuing development and design of the motorcycles can, however, not be completely excluded.

All specifications are non-binding. KTM Sportmotorcycle AG specifically reserves the right to modify or delete technical specifications, prices, colors, forms, materials, services, designs, equipment, etc., without prior notice and without specifying reasons, to adapt these to local conditions, as well as to stop production of a particular model without prior notice. KTM accepts no liability for delivery options, deviations from illustrations and descriptions, as well as misprints and other errors. The models portrayed partly contain special equipment that does not belong to the regular scope of delivery.

© 2012 KTM-Sportmotorcycle AG, Mattighofen Austria

All rights reserved

Reproduction, even in part, as well as copying of all kinds, is permitted only with the express written permission of the copyright owner.



ISO 9001(12 100 6061)

According to the international quality management standard ISO 9001, KTM uses quality assurance processes that lead to the maximum possible quality of the products.

Issued by: TÜV Management Service

KTM-Sportmotorcycle AG
5230 Mattighofen, Austria

1	MEANS OF REPRESENTATION	5	6.15.15	Display mode SPEED/A1 (average speed 1) ...	20
1.1	Symbols used	5	6.15.16	Display mode SPEED/A2 (average speed 2) ...	20
1.2	Formats used	5	6.15.17	Display mode SPEED/S1 (stop watch 1)	21
2	SAFETY ADVICE	6	6.15.18	Display mode SPEED/S2 (stop watch 2)	21
2.1	Use definition - intended use	6	6.15.19	Table of functions	21
2.2	Safety advice	6	6.15.20	Table of conditions and menu activation	22
2.3	Degrees of risk and symbols	6	6.16	Opening filler cap	22
2.4	Tampering warning	6	6.17	Closing filler cap	22
2.5	Safe operation	7	6.18	Idle speed adjusting screw	23
2.6	Protective clothing	7	6.19	Shift lever	23
2.7	Work rules	7	6.20	Kick starter	23
2.8	Environment	7	6.21	Foot brake lever	24
2.9	Owner's Manual	7	6.22	Side stand	24
3	IMPORTANT NOTES	8	6.23	Steering lock (all EXC models)	24
3.1	Guarantee, warranty	8	6.24	Locking the steering (all EXC models)	24
3.2	Operating and auxiliary substances	8	6.25	Unlocking the steering (all EXC models)	25
3.3	Spare parts, accessories	8	7	PREPARING FOR USE	26
3.4	Service	8	7.1	Advice on first use	26
3.5	Figures	8	7.2	Running-in the engine	27
3.6	Customer service	8	7.3	Preparing the vehicle for difficult riding conditions	27
4	VIEW OF VEHICLE	9	7.4	Preparing for rides on dry sand	28
4.1	View of vehicle, front left (example)	9	7.5	Preparing for rides on wet sand	28
4.2	View of vehicle, rear right (example)	10	7.6	Preparing for rides on wet and muddy surfaces	29
5	SERIAL NUMBERS	11	7.7	Preparing for rides at high temperature and slow speed	29
5.1	Chassis number	11	7.8	Preparing for rides at low temperature or in snow	29
5.2	Type label	11	8	RIDING INSTRUCTIONS	30
5.3	Key number (all EXC models)	11	8.1	Checks and maintenance work when preparing for use	30
5.4	Engine number	11	8.2	Starting	30
5.5	Fork part number	11	8.3	Starting off	31
5.6	Shock absorber part number	12	8.4	Shifting, riding	31
6	CONTROLS	13	8.5	Braking	31
6.1	Clutch lever	13	8.6	Stopping, parking	32
6.2	Hand brake lever	13	8.7	Transport	32
6.3	Throttle grip	13	8.8	Refueling	33
6.4	Kill switch (all EXC models)	13	9	SERVICE SCHEDULE	34
6.5	Kill switch (all XC-W models)	13	9.1	Service schedule	34
6.6	Horn button (all EXC models)	14	9.2	Service work (as additional order)	35
6.7	Light switch (all EXC models)	14	10	TUNING THE CHASSIS	36
6.8	Light switch (all XC-W models)	14	10.1	Checking the basic suspension setting against the rider's weight	36
6.9	Turn signal switch (all EXC models)	14	10.2	Compression damping of shock absorber	36
6.10	Emergency OFF switch (EXC AUS)	14	10.3	Adjusting the low-speed compression damping of the shock absorber	36
6.11	Electric starter button (EXC AUS)	15	10.4	Adjusting the high-speed compression damping of the shock absorber	37
6.12	Electric starter button (EXC EU, EXC SIX DAYS, XC-W)	15	10.5	Adjusting the rebound damping of the shock absorber	37
6.13	Overview of indicator lamps (all EXC models)	15	10.6	Measuring rear wheel sag unloaded	38
6.14	Overview of indicator lamps (all XC-W models)	15	10.7	Checking the static sag of the shock absorber ...	38
6.15	Speedometer	16	10.8	Checking the riding sag of the shock absorber ...	38
6.15.1	Overview	16	10.9	Adjusting the spring preload of the shock absorber 	39
6.15.2	Activation and test	16	10.10	Adjusting the riding sag 	39
6.15.3	Tripmaster switch	16	10.11	Checking basic setting of fork	40
6.15.4	Setting kilometers or miles	16	10.12	Adjusting the compression damping of the fork	40
6.15.5	Setting the clock	17	10.13	Adjusting the rebound damping of the fork	41
6.15.6	Adjusting the speedometer functions	17			
6.15.7	Querying lap time	18			
6.15.8	Display mode SPEED (speed)	18			
6.15.9	Display mode SPEED/H (operating hours)	18			
6.15.10	Display mode SPEED/CLK (clock)	19			
6.15.11	Display mode SPEED/LAP (lap time)	19			
6.15.12	Display mode SPEED/ODO (odometer)	19			
6.15.13	Display mode SPEED/TR1 (trip master 1)	19			
6.15.14	Display mode SPEED/TR2 (trip master 2)	20			

10.14	Adjusting the spring preload of the fork (EXC EU, EXC AUS, all XC-W models).....	42	11.48	Checking/correcting the fluid level of the hydraulic clutch.....	67
10.15	Handlebar position.....	42	11.49	Changing the hydraulic clutch fluid 	67
10.16	Adjusting handlebar position 	42	11.50	Removing the engine guard (EXC SIX DAYS, EXC AUS).....	68
11	SERVICE WORK ON THE CHASSIS.....	44	11.51	Installing the engine guard (EXC SIX DAYS, EXC AUS).....	68
11.1	Raising the motorcycle with the lift stand.....	44	12	BRAKE SYSTEM.....	69
11.2	Removing the motorcycle from the lift stand.....	44	12.1	Checking free travel of hand brake lever.....	69
11.3	Bleeding fork legs.....	44	12.2	Adjusting free travel of hand brake lever (all EXC models).....	69
11.4	Cleaning the dust boots of the fork legs.....	44	12.3	Adjusting the basic position of the hand brake lever (all XC-W models).....	69
11.5	Loosening the fork protector.....	45	12.4	Checking the brake discs.....	70
11.6	Positioning the fork protection.....	45	12.5	Checking the front brake fluid level.....	70
11.7	Removing the fork legs.....	45	12.6	Adding front brake fluid 	70
11.8	Installing the fork legs 	46	12.7	Checking the front brake linings.....	71
11.9	Removing the fork protector 	47	12.8	Changing the front brake linings 	71
11.10	Installing the fork protector 	47	12.9	Checking the free travel of foot brake lever.....	73
11.11	Removing the lower triple clamp  (EXC EU, EXC AUS, all XC-W models).....	47	12.10	Adjusting the basic position of the foot brake lever 	73
11.12	Removing the lower triple clamp  (EXC SIX DAYS).....	48	12.11	Checking the rear brake fluid level.....	74
11.13	Installing the lower triple clamp  (EXC EU, EXC AUS, all XC-W models).....	49	12.12	Adding brake fluid to the rear brake circuit 	74
11.14	Installing the lower triple clamp  (EXC SIX DAYS).....	51	12.13	Checking the rear brake linings.....	75
11.15	Checking the steering head bearing play.....	52	12.14	Changing the rear brake linings 	76
11.16	Adjusting the play of the steering head bearing  (EXC EU, EXC AUS, all XC-W models).....	53	13	WHEELS, TIRES.....	78
11.17	Adjusting the play of the steering head bearing  (EXC SIX DAYS).....	53	13.1	Removing the front wheel 	78
11.18	Greasing the steering head bearing 	54	13.2	Installing the front wheel 	78
11.19	Removing the front fender.....	54	13.3	Removing the rear wheel 	79
11.20	Installing the front fender.....	54	13.4	Installing the rear wheel 	79
11.21	Removing the shock absorber 	54	13.5	Checking the tire condition.....	80
11.22	Installing the shock absorber 	55	13.6	Checking tire air pressure.....	81
11.23	Removing the seat.....	55	13.7	Checking spoke tension.....	81
11.24	Mounting the seat.....	55	14	ELECTRICAL SYSTEM.....	83
11.25	Removing the air filter box lid.....	55	14.1	Removing the battery 	83
11.26	Installing the air filter box lid.....	56	14.2	Installing the battery 	83
11.27	Removing the air filter 	56	14.3	Charging the battery 	83
11.28	Installing the air filter 	56	14.4	Changing the main fuse.....	84
11.29	Cleaning the air filter and air filter box 	57	14.5	Changing the fuses of individual power consumers.....	85
11.30	Sealing the air filter box 	57	14.6	Changing the fuse of the radiator fan.....	86
11.31	Removing main silencer.....	57	14.7	Removing headlight mask with headlight.....	87
11.32	Installing the main silencer.....	58	14.8	Refitting the headlight mask with the headlight.....	87
11.33	Changing the glass fiber yarn filling of the main silencer 	58	14.9	Changing the headlight bulb.....	87
11.34	Removing the fuel tank 	59	14.10	Changing the turn signal bulb.....	88
11.35	Installing the fuel tank 	60	14.11	Checking the headlight setting.....	89
11.36	Checking for chain dirt accumulation.....	61	14.12	Adjusting the headlight range.....	89
11.37	Cleaning the chain.....	61	14.13	Changing the speedometer battery.....	89
11.38	Checking the chain tension.....	62	15	COOLING SYSTEM.....	91
11.39	Adjusting the chain tension.....	62	15.1	Cooling system.....	91
11.40	Checking the chain, rear sprocket, engine sprocket and chain guide.....	63	15.2	Checking the antifreeze and coolant level.....	91
11.41	Adjusting the chain guide 	65	15.3	Checking the coolant level.....	92
11.42	Checking the frame 	65	15.4	Draining the coolant 	92
11.43	Checking the swingarm 	65	15.5	Refilling coolant 	93
11.44	Checking the throttle cable routing.....	66	16	TUNING THE ENGINE.....	94
11.45	Checking the rubber grip.....	66	16.1	Checking the play in the throttle cable.....	94
11.46	Additionally securing the rubber grip.....	66	16.2	Adjusting the play in the throttle cable 	94
11.47	Adjusting the basic position of the clutch lever.....	67	16.3	Adjusting the idle speed 	95
			16.4	Checking the basic position of the shift lever.....	95

16.5	Adjusting the basic position of the shift lever 	95
17	SERVICE WORK ON THE ENGINE	96
17.1	Changing the fuel screen 	96
17.2	Checking the engine oil level	96
17.3	Changing the engine oil and oil filter, cleaning the oil screens 	97
17.4	Adding engine oil	99
18	CLEANING, CARE	100
18.1	Cleaning the motorcycle	100
18.2	Checks and maintenance steps for winter operation	101
19	STORAGE	102
19.1	Storage	102
19.2	Preparing for use after storage	102
20	TROUBLESHOOTING	103
21	BLINK CODE	105
22	TECHNICAL DATA	107
22.1	Engine	107
22.2	Engine tightening torques	107
22.3	Capacities	109
22.3.1	Capacity - engine oil	109
22.3.2	Capacity - coolant	109
22.3.3	Capacity - fuel	109
22.4	Chassis	109
22.5	Electrical system	110
22.6	Tires	110
22.7	Fork	111
22.7.1	EXC EU, EXC AUS, all XC-W models	111
22.7.2	EXC SIX DAYS	111
22.8	Shock absorber	112
22.9	Chassis tightening torques	112
23	SUBSTANCES	114
24	AUXILIARY SUBSTANCES	116
25	STANDARDS	118
	INDEX	119

1.1 Symbols used

The meaning of specific symbols is described below.



Indicates an expected reaction (e.g. of a work step or a function).



Indicates an unexpected reaction (e.g. of a work step or a function).



All work marked with this symbol requires specialist knowledge and technical understanding. In the interest of your own safety, have these jobs performed by an authorized KTM workshop. There, your motorcycle will be optimally cared for by specially trained experts using the specialist tools required.



Indicates a page reference (more information is provided on the specified page).

1.2 Formats used

The typographical formats used in this document are explained below.

Specific name	Identifies a proprietary name.
----------------------	--------------------------------

Name®	Identifies a protected name.
--------------	------------------------------

Brand™	Identifies a brand available on the open market.
---------------	--

2.1 Use definition - intended use

(all EXC models)

KTM sport motorcycles are designed and built to withstand the normal stresses and strains of competitive use. The motorcycles comply with currently valid regulations and categories of the top international motorsport organizations.



Info

The motorcycle is authorized for public road traffic in the homologous (reduced) version only.
In the derestricted version, the motorcycle must be used only on closed off property remote from public road traffic.
This motorcycle is designed for use in offroad endurance competition and not primarily for use in motocross.

(all XC-W models)

KTM sport motorcycles are designed and built to withstand the normal stresses and strains of competitive use. The motorcycles comply with currently valid regulations and categories of the top international motorsport organizations.



Info

This motorcycle is designed for use in offroad endurance competition and not primarily for use in motocross.

2.2 Safety advice

A number of safety instructions need to be followed to operate the vehicle safely. Therefore, read this manual carefully. The safety instructions are highlighted in the text and are referred to at the relevant passages.



Info

The vehicle has various information and warning labels at prominent locations. Do not remove information/warning labels. If they are missing, you or others may not recognize dangers and may therefore be injured.

2.3 Degrees of risk and symbols



Danger

Identifies a danger that will immediately and invariably lead to fatal or serious permanent injury if the appropriate measures are not taken.



Warning

Identifies a danger that is likely to lead to fatal or serious injury if the appropriate measures are not taken.



Caution

Identifies a danger that may lead to minor injuries if the appropriate measures are not taken.

Note

Identifies a danger that will lead to considerable machine and material damage if the appropriate measures are not taken.



Warning

Identifies a danger that will lead to environmental damage if the appropriate measures are not taken.

2.4 Tampering warning

Tampering with the noise control system is prohibited. Federal law prohibits the following acts or the causing thereof:

- 1 The removal or rendering inoperative by any person other than for purposes of maintenance, repair, or replacement, of any device or element of design incorporated into any new vehicle for the purpose of noise control prior to its sale or delivery to the ultimate purchaser or while it is in use, or
- 2 the use of the vehicle after such device or element of design has been removed or rendered inoperative by any person.

Among those acts presumed to constitute tampering are the acts listed below:

- 1 Removal of, or puncturing the main silencer, baffles, header pipes or any other components which conduct exhaust gases.
- 2 Removal or puncturing of any part of the intake system.
- 3 Lack of proper maintenance.
- 4 Replacing any moving part of the vehicle, or parts of the exhaust or intake system, with parts other than those specified by the manufacturer.

2.5 Safe operation

-  **Danger**
Danger of accidents Danger arising from the rider's judgement being impaired.
- Do not operate the vehicle while under the influence of alcohol, drugs and certain medications or physically or mentally impaired.
-  **Danger**
Danger of poisoning Exhaust gases are toxic and inhaling them may result in unconsciousness and/or death.
- When running the engine, always make sure there is sufficient ventilation, and do not start or run the engine in an enclosed space without an effective exhaust extraction system.
-  **Warning**
Danger of burns Some vehicle components become very hot when the vehicle is operated.
- Do not touch hot components such as exhaust system, radiator, engine, shock absorber, and the brake system. Allow these components to cool down before starting work on them.

Only operate the vehicle when it is in perfect technical condition, in accordance with its intended use, and in a safe and environmentally compatible manner.

An appropriate driver's license is needed to ride the vehicle on public roads.

Have malfunctions that impair safety promptly eliminated by an authorized KTM workshop.

Adhere to the information and warning labels on the vehicle.

2.6 Protective clothing

-  **Warning**
Risk of injury Missing or poor protective clothing presents an increased safety risk.
- Wear protective clothing (helmet, boots, gloves, pants and jacket with protectors) every time you ride the vehicle. Always wear protective clothing that is in good condition and meets the legal requirements.

In the interest of your own safety, KTM recommends that you only operate the vehicle while wearing protective clothing.

2.7 Work rules

Special tools are necessary for certain tasks. The tools are not contained in the vehicle but can be ordered under the number in parentheses. E.g.: bearing puller (15112017000)

During assembly, non-reusable parts (e.g. self-locking screws and nuts, seals and seal rings, O-rings, pins, lock washers) must be replaced by new parts.

In some instances, a thread locker (e.g. **Loctite**®) is required. The manufacturer instructions for use must be followed.

After disassembly, clean the parts that are to be reused and check them for damage and wear. Change damaged or worn parts.

After you complete the repair or service work, check the operating safety of the vehicle.

2.8 Environment

If you use your motorcycle responsibly, you can ensure that problems and conflicts do not occur. To protect the future of the motorcycle sport, make sure that you use your motorcycle legally, display environmental consciousness, and respect the rights of others. When disposing of used oil, other operating and auxiliary fluids, and used components, comply with the laws and regulations of the respective country.

Because motorcycles are not subject to the EU regulations governing the disposal of used vehicles, there are no legal regulations that pertain to the disposal of an end-of-life motorcycle. Your authorized KTM dealer will be glad to advise you.

2.9 Owner's Manual

It is important that you read this Owner's Manual carefully and completely before making your first trip. The Owner's Manual contains useful information and many tips on how to operate, handle, and maintain your motorcycle. Only then will you find out how to customize the vehicle ideally for your own use and how you can protect yourself from injury.

Keep the Owner's Manual in an accessible place to enable you to refer to it as needed.

If you would like to know more about the vehicle or have questions on the material you read, please contact an authorized KTM dealer. The Owner's Manual is an important component of the vehicle and should be handed over to the new owner if the vehicle is sold.

3.1 Guarantee, warranty

The work prescribed in the service schedule must be carried out by an authorized KTM workshop only and confirmed in the customer's service record and in the **KTM dealer.net**; otherwise, all warranty claims will be void. No warranty claims can be considered for damage resulting from manipulations and/or alterations to the vehicle.

Additional information on the guarantee or warranty and the procedures involved can be found in the service record.

3.2 Operating and auxiliary substances



Warning

Environmental hazard Improper handling of fuel is a danger to the environment.

- Do not allow fuel to get into the ground water, the ground, or the sewage system.

Use operating and auxiliary substances (such as fuel and lubricants) as specified in the Owner's Manual.

3.3 Spare parts, accessories

For your own safety, only use spare parts and accessory products that are approved and/or recommended by KTM and have them installed by an authorized KTM workshop. KTM accepts no liability for other products and any resulting damage or loss. Certain spare parts and accessory products are specified in parentheses in the descriptions. Your KTM dealer will be glad to advise you.

The current **KTM PowerParts** for your vehicle can be found on the KTM website.

International KTM Website: <http://www.ktm.com>

3.4 Service

A prerequisite for perfect operation and prevention of premature wear is that the service, care, and tuning work on the engine and chassis is properly carried out as described in the Owner's Manual. Incorrect adjustment and tuning of the engine and chassis can lead to damage and breakage of components.

Use of the vehicle under difficult conditions, such as on sand or on wet and muddy surfaces, can lead to considerably more rapid wear of components such as the drive train, brake system, or suspension components. For this reason, it may be necessary to inspect or replace parts before the next scheduled service.

It is imperative that you adhere to the stipulated run-in times and service intervals. If you observe these exactly, you will ensure a much longer service life for your motorcycle.

3.5 Figures

The figures contained in the manual may depict special equipment.

In the interest of clarity, some components may be shown disassembled or may not be shown at all. It is not always necessary to disassemble the component to perform the activity in question. Please follow the instructions in the text.

3.6 Customer service

Your authorized KTM dealer will be happy to answer any questions you may have on your vehicle and KTM.

A list of authorized KTM dealers can be found on the KTM website.

International KTM Website: <http://www.ktm.com>

4.1 View of vehicle, front left (example)



1	Filler cap
2	Air filter box lid
3	Fork compression adjustment
4	Shift lever (☛ p. 23)
5	Engine number (☛ p. 11)
6	Side stand (☛ p. 24)

4.2 View of vehicle, rear right (example)



1	Kill switch (☛ p. 13)
1	Horn button (☛ p. 14)
1	Light switch (☛ p. 14)
1	Turn signal switch (☛ p. 14)
2	Emergency OFF switch (☛ p. 14)
2	Electric starter button (☛ p. 15)
3	Throttle grip (☛ p. 13)
4	Fork rebound adjustment and spring preload adjustment
5	Shock absorber rebound adjustment
6	Level viewer for brake fluid, rear
7	Shock absorber compression adjustment
8	Level viewer, engine oil
9	Foot brake lever (☛ p. 24)
10	Kick starter (☛ p. 23)


5.1 Chassis number



101289-10

The chassis number ❶ is stamped on the steering head on the right.

5.2 Type label

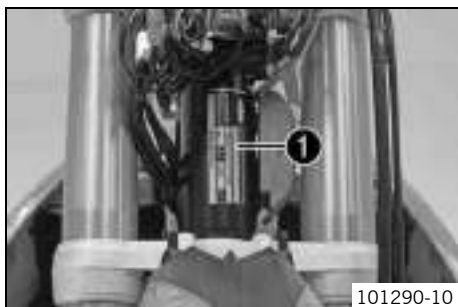

101290-10

The type label ❶ is fixed to the front of the steering head.

5.3 Key number (all EXC models)



500125-10

The key number ❶ for the steering lock is stamped onto the key connector.


5.4 Engine number



601612-10

The engine number ❶ is stamped on the left side of the engine under the engine sprocket.

5.5 Fork part number

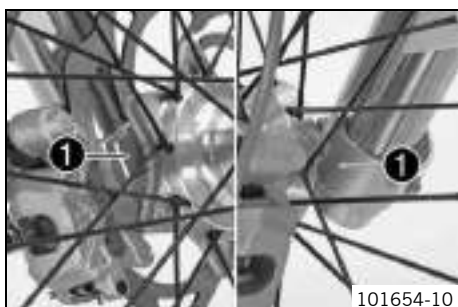

101654-10


The fork part number ❶ is stamped on the inner side of the fork stub.

5.6 Shock absorber part number




The shock absorber part number ❶ is stamped on the top of the shock absorber above the adjusting ring on the engine side.

6.1 Clutch lever

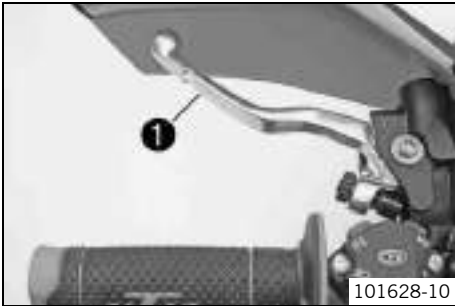


The clutch lever ❶ is fitted on the left side of the handlebar. The clutch is hydraulically operated and self-adjusting.

6.2 Hand brake lever

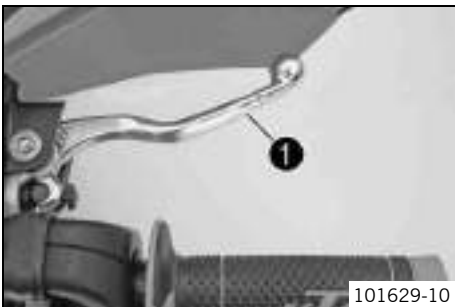


Hand brake lever ❶ is located on the right side of the handlebar. The hand brake lever is used to activate the front brake.

6.3 Throttle grip

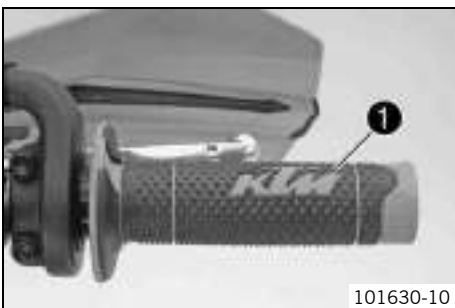

The throttle grip ❶ is fitted on the right side of the handlebar.

6.4 Kill switch (all EXC models)

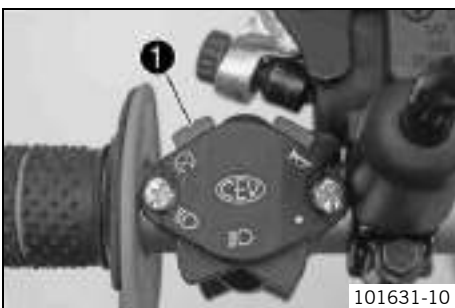

Kill switch ❶ is fitted on the left side of the handlebar.

Possible states

- Kill switch ☒ in basic position – In this position, the ignition circuit is closed and the engine can be started.
- Kill switch ☒ pressed – In this position, the ignition circuit is interrupted, a running engine stops, and a non-running engine will not start.

6.5 Kill switch (all XC-W models)



Kill switch ❶ is fitted on the left side of the handlebar.

Possible states

- Kill switch ☒ in basic position – In this position, the ignition circuit is closed and the engine can be started.
- Kill switch ☒ pressed – In this position, the ignition circuit is interrupted, a running engine stops, and a non-running engine will not start.

6.6 Horn button (all EXC models)



101631-11

The horn button ❶ is fitted on the left side of the handlebar.

Possible states

- Horn button ❶ in neutral position
- Horn button ❶ pressed – The horn is operated in this position.

6.7 Light switch (all EXC models)



101632-10

The light switch ❶ is fitted on the left side of the handlebar.

Possible states

●	Light off – Light switch is turned to the right. In this position, the light is switched off.
☞	Low beam on – Light switch is in the central position. In this position, the low beam and tail light are switched on.
☞☞	High beam on – Light switch is turned to the left. In this position, the high beam and the tail light are switched on.

6.8 Light switch (all XC-W models)



101303-10

The light switch ❶ is on the right of the speedometer.

Possible states

- Light off – Light switch is pressed in up to the stop. In this position, the light is switched off.
- Light on – Light switch is pulled out to the stop. In this position, the low beam and tail light are switched on.

6.9 Turn signal switch (all EXC models)



101633-10

Turn signal switch ❶ is fitted on the left side of the handlebar.

Possible states

	Turn signal light off – Turn signal switch is in the central position.
☞	Turn signal light, left, on – Turn signal switch is turned to the left.
☞☞	Turn signal light, right, on – Turn signal switch is turned to the right.

6.10 Emergency OFF switch (EXC AUS)




101634-10

The emergency OFF switch ❶ is fitted on the right side of the handlebar.

Possible states

⊗	Ignition off – In this position, the ignition circuit is interrupted, a running engine stops, and a non-running engine will not start.
⊙	Ignition on – In this position, the ignition circuit is closed, and the engine can be started.

6.11 Electric starter button (EXC AUS)

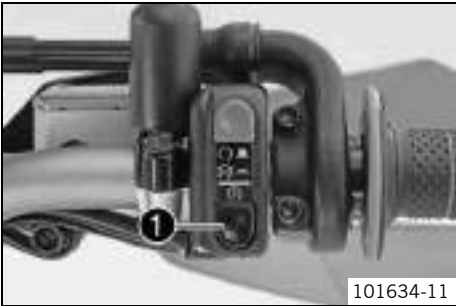


The electric starter button ❶ is fitted on the right side of the handlebar.

Possible states

- Electric starter button ❶ in basic position
- Electric starter button ❶ pressed – In this position, the electric starter is actuated.

6.12 Electric starter button (EXC EU, EXC SIX DAYS, XC-W)

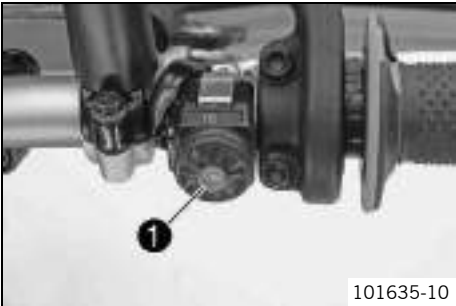

The electric starter button ❶ is fitted on the right side of the handlebar.

Possible states

- Electric starter button ❶ in basic position
- Electric starter button ❶ pressed – In this position, the electric starter is actuated.

6.13 Overview of indicator lamps (all EXC models)



Possible states

	High beam indicator light lights up blue – High beam is switched on.
	FI warning lamp (MIL) lights up/flashes orange – The OBD has detected an emission- or safety-critical fault.
	The fuel level warning lamp lights up orange – The fuel level has reached the reserve mark.
	Turn signal indicator light flashes green – Turn signal is switched on.

6.14 Overview of indicator lamps (all XC-W models)




Possible states

	FI warning lamp (MIL) lights up/flashes orange – The OBD has detected an emission- or safety-critical fault.
	The fuel level warning lamp lights up orange – The fuel level has reached the reserve mark.

6.15 Speedometer


6.15.1 Overview

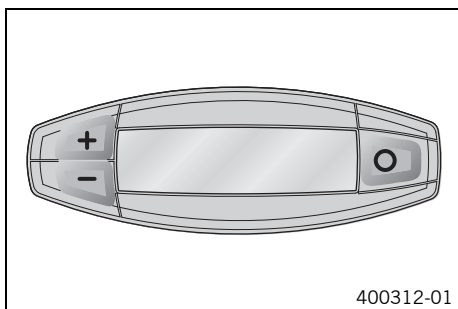

- Press the button to change the display mode or change to one of the Setup menus.
- Press the button to control different functions.
- Press the button to control different functions.

i Info
When the vehicle is delivered, only the **SPEED/H** and **SPEED/ODO** display modes are activated.


6.15.2 Activation and test

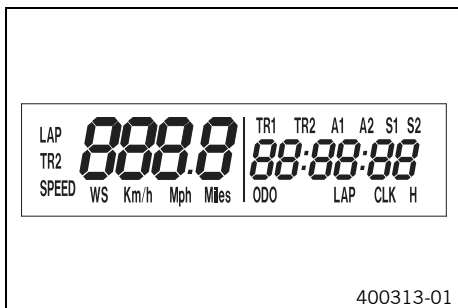**Activating the speedometer**

The speedometer is activated when one of the buttons is pressed or an impulse comes from the wheel speed sensor.

Display test

To enable you to check that the display is functioning properly, all display segments light up briefly.

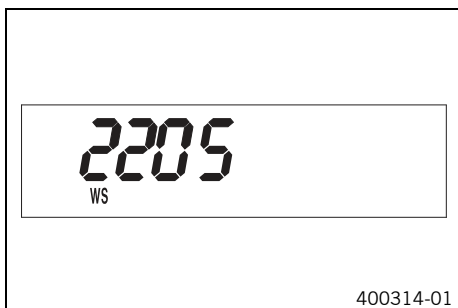**WS (wheel size)**

After the display function check, the wheel size **WS** is displayed briefly.

i Info
The number 2205 equals the circumference of the 21" front wheel with standard tires.

The display then changes to the last selected mode.

6.15.3 Tripmaster switch

(Option: Tripmaster switch)

The tripmaster switch is used to control the functions of the speedometer from the handlebar.

i Info
The trip master is an optional accessory.

6.15.4 Setting kilometers or miles

i Info
If you change the unit of measure, the **ODO** value is retained and converted accordingly. The values **TR1**, **TR2**, **A1**, **A2** and **S1** are cleared when the unit of measure is changed.


Condition

The motorcycle is stationary.

- Press the button briefly and repeatedly until **H** appears at the bottom right of the display.
- Press the button for 3 - 5 seconds.
 - ✓ The Setup menu is displayed and the active functions are shown.
- Press the button repeatedly until the **Km/h/Mph** display flashes.

Adjusting Km/h

- Press the button .

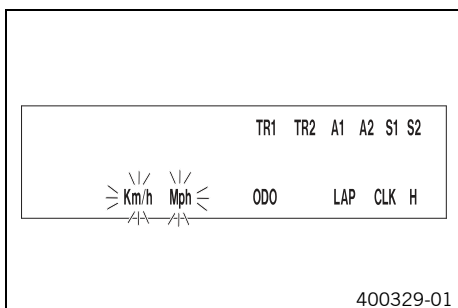


Adjusting Mph

- Press the button .
- Press the button  for 3 - 5 seconds.
- ✓ The settings are stored and the Setup menu is closed.

**Info**

If no button is pressed for 20 seconds, or if no impulse comes from the wheel speed sensor, the settings are automatically saved and the Setup menu is closed.

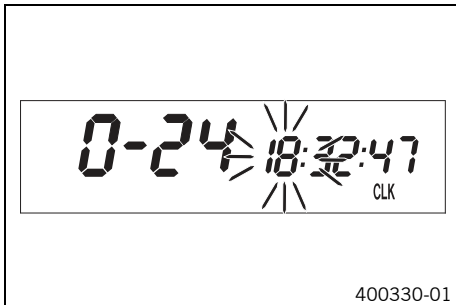6.15.5 Setting the clock**Condition**

The motorcycle is stationary.

- Press the button  briefly and repeatedly until **CLK** appears at the bottom right of the display.
- Press the button  for 3 - 5 seconds.
- ✓ The hour display flashes.
- Set the hour display with the button  and/or button .
- Press the button  briefly.
- ✓ The next segment of the display flashes and can be set.
- You can set the following segments in the same way as the hours by pressing the button  and the button .

**Info**

The seconds can only be set to zero.


- Press the button  for 3 - 5 seconds.
- ✓ The settings are stored and the Setup menu is closed.

**Info**

If no button is pressed for 20 seconds, or if no impulse comes from the wheel speed sensor, the settings are automatically saved and the Setup menu is closed.

6.15.6 Adjusting the speedometer functions**Info**

When the vehicle is delivered, only the **SPEED/H** and **SPEED/ODO** display modes are activated.

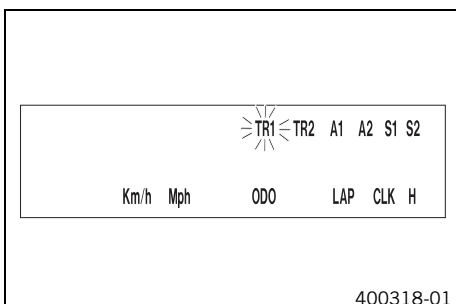**Condition**

The motorcycle is stationary.

- Press the button  briefly and repeatedly until **H** appears at the bottom right of the display.
- Press the button  for 3 - 5 seconds.
- ✓ The Setup menu is displayed and the activated functions are shown.
- Change to the desired function by pressing the button  briefly.
- ✓ The selected function flashes.

Activating a function

- Press the button .
- ✓ The symbol remains on the screen and the display changes to the next function.

Deactivating the function

- Press the button .
- ✓ The symbol on the screen goes out and the display changes to the next function.
- All desired functions are activated or deactivated accordingly.
- Press the button  for 3 - 5 seconds.
- ✓ The settings are stored and the Setup menu is closed.



Info


If no button is pressed for 20 seconds, or if no impulse comes from the wheel speed sensor, the settings are automatically saved and the Setup menu is closed.

6.15.7 Querying lap time



Info

This function can be called up only if lap times are measured.

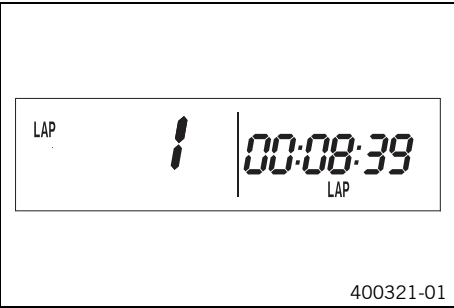

400321-01

Condition

The motorcycle is stationary.


- Press the button  briefly and repeatedly until **LAP** appears at the bottom right of the display.
- Press the button  briefly.
- ✓ **LAP 1** appears on the left side of the display.
- Laps 1-10 can be displayed by pressing the button .
- The button  has no function.
- Press the button  briefly.
- ✓ Next display mode



Info

If an impulse is received from the wheel speed sensor, the left side of the display changes back to the **SPEED** mode.

6.15.8 Display mode SPEED (speed)

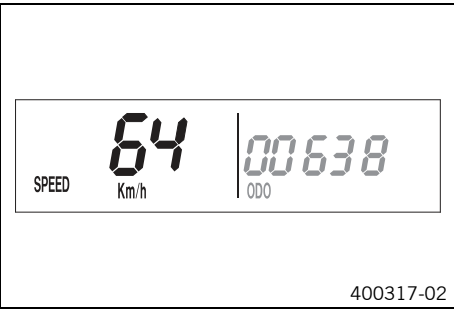

400317-02

- Press the button  briefly and repeatedly until **SPEED** appears on the left side of the display.

The current speed is displayed in the **SPEED** display mode.
The current speed can be displayed in **Km/h** or **Mph**.



Info

Making the setting according to the country.
When an impulse comes from the front wheel, the left side of the speedometer display changes to the **SPEED** mode and the current speed is shown.

6.15.9 Display mode SPEED/H (operating hours)



400316-01

Condition

- The motorcycle is stationary.
- Press the button  briefly and repeatedly until **H** appears at the bottom right of the display.

In display mode **H**, the operating hours of the engine are displayed.
The operating hours counter stores the total traveling time.




Info

The service hour counter is necessary for ensuring that service work is carried out at the right intervals.
If the speedometer is in **H** display mode at the start of the journey, it automatically changes to the **ODO** display mode.
The **H** display mode is suppressed during the journey.

Press the button  .	No function
Press the button  .	No function
Press the button  for 3 - 5 seconds.	The display changes to the Setup menu of the speedometer functions.
Press the button  briefly.	Next display mode

6.15.10 Display mode SPEED/CLK (clock)

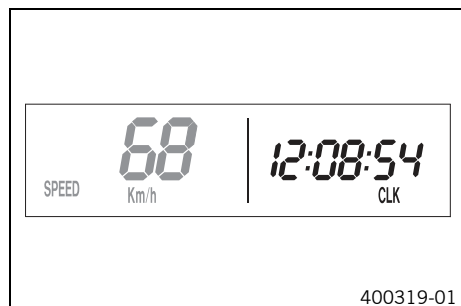


- Press the button briefly and repeatedly until **CLK** appears at the bottom right of the display.

The time is displayed in **CLK** display mode.

Press the button .	No function
Press the button .	No function
Press the button for 3 - 5 seconds.	The display changes to the Setup menu of the clock.
Press the button briefly.	Next display mode

6.15.11 Display mode SPEED/LAP (lap time)

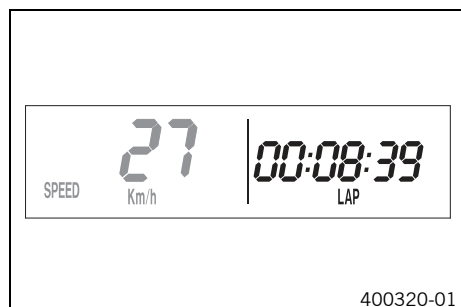


- Press the button briefly and repeatedly until **LAP** appears at the bottom right of the display.

In the **LAP** display mode, up to 10 lap times can be timed with the stop watch.

i Info
If the lap time continues after you press the button , 9 memory locations are already occupied.
Lap 10 must be timed with the button .

Press the button .	Starts or stops the clock.
Press the button .	Stops the current lap time and saves it, and the stop watch starts the next lap.
Press the button for 3 - 5 seconds.	The stop watch and the lap time are reset.
Press the button briefly.	Next display mode

6.15.12 Display mode SPEED/ODO (odometer)

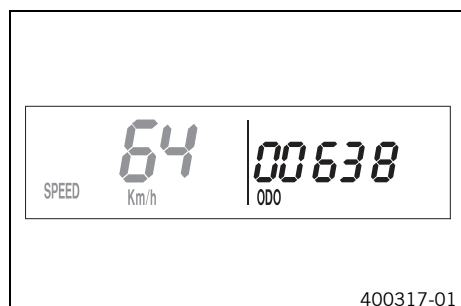


- Press the button briefly and repeatedly until **ODO** appears at the bottom right of the display.

The total distance traveled is displayed in the **ODO** display mode.

Press the button .	No function
Press the button .	No function
Press the button for 3 - 5 seconds.	–
Press the button briefly.	Next display mode

6.15.13 Display mode SPEED/TR1 (trip master 1)

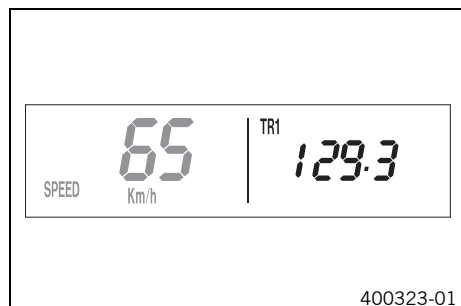

- Press the button briefly and repeatedly until **TR1** appears at the top right of the display.

TR1 (trip master 1) runs constantly and counts to 999.9.


You can use it to measure trips or the distance between refueling stops.

TR1 is coupled with **A1** (average speed 1) and **S1** (stop watch 1).

i Info
If 999.9 is exceeded, the values of **TR1**, **A1** and **S1** are automatically reset to 0.0.

Press the button .	No function
Press the button .	No function
Press the button for 3 - 5 seconds.	The TR1 , A1 and S1 displays are reset to 0.0.
Press the button briefly.	Next display mode

6.15.14 Display mode SPEED/TR2 (trip master 2)

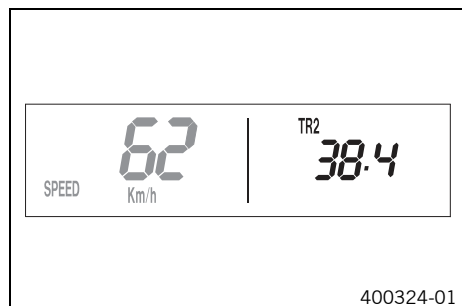

- Press the button  briefly and repeatedly until **TR2** appears at the top right of the display.

TR2 (trip master 2) runs constantly and counts up to 999.9.

The displayed value can be set manually with the button  and the button . This is a very practical function when riding using the road book.


**Info**

The **TR2** value can also be corrected manually during the journey with the button  and the button .

If 999.9 is exceeded, the value of **TR2** is automatically reset to 0.0.

Press the button  .	Increases value of TR2 .
Press the button  .	Reduces value of TR2 .
Press the button  for 3 - 5 seconds.	Deletes value of TR2 .
Press the button  briefly.	Next display mode

6.15.15 Display mode SPEED/A1 (average speed 1)

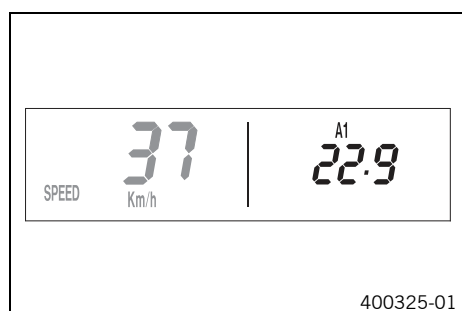


- Press the button  briefly and repeatedly until **A1** appears at the top right of the display.

A1 (average speed 1) shows the average speed calculated on the basis of **TR1** (trip master 1) and **S1** (stop watch 1).

The calculation of this value is activated by the first impulse of the wheel speed sensor and ends 3 seconds after the last impulse.

Press the button  .	No function
Press the button  .	No function
Press the button  for 3 - 5 seconds.	The TR1 , A1 and S1 displays are reset to 0.0.
Press the button  briefly.	Next display mode

6.15.16 Display mode SPEED/A2 (average speed 2)

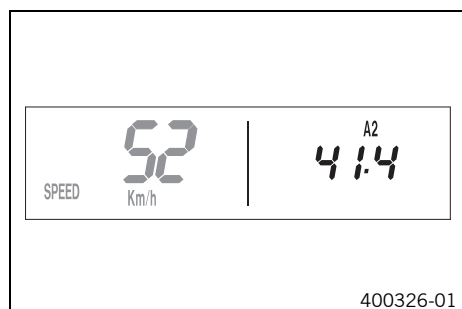

- Press the button  briefly and repeatedly until **A2** appears at the top right of the display.

A2 (average speed 2) shows the average speed on the basis of the current speed if the stop watch **S2** (stop watch 2) is running.

**Info**

The displayed value can differ from the actual average speed if **S2** is not stopped after the ride.

Press the button  .	No function
Press the button  .	No function
Press the button  for 3 - 5 seconds.	–
Press the button  briefly.	Next display mode

6.15.17 Display mode SPEED/S1 (stop watch 1)



- Press the button briefly and repeatedly until **S1** appears at the top right of the display.

S1 (stop watch 1) displays the journey time on the basis of **TR1** and continues when an impulse is received from the wheel speed sensor.

The calculation of this value starts with the first impulse of the wheel speed sensor and ends 3 seconds after the last impulse.

Press the button .	No function
Press the button .	No function
Press the button for 3 - 5 seconds.	Displays of TR1 , A1 and S1 are reset to 0.0.
Press the button briefly.	Next display mode

6.15.18 Display mode SPEED/S2 (stop watch 2)



- Press the button briefly and repeatedly until **S2** appears at the top right of the display.

S2 (stop watch 2) is a manual stop watch.

If **S2** is running in the background, the **S2** display flashes in the speedometer display.

Press the button .	Starts or stops S2 .
Press the button .	No function
Press the button for 3 - 5 seconds.	Displays of S2 and A2 are reset to 0.0.
Press the button briefly.	Next display mode

6.15.19 Table of functions

Display	Press the button .	Press the button .	Press the button for 3 - 5 seconds.	Press the button briefly.
Display mode SPEED/H (operating hours)	No function	No function	The display changes to the Setup menu of the speedometer functions.	Next display mode
Display mode SPEED/CLK (clock)	No function	No function	The display changes to the Setup menu of the clock.	Next display mode
Display mode SPEED/LAP (lap time)	Starts or stops the clock.	Stops the current lap time and saves it, and the stop watch starts the next lap.	The stop watch and the lap time are reset.	Next display mode
Display mode SPEED/ODO (odometer)	No function	No function	–	Next display mode
Display mode SPEED/TR1 (trip master 1)	No function	No function	The TR1 , A1 and S1 displays are reset to 0.0.	Next display mode
Display mode SPEED/TR2 (trip master 2)	Increases value of TR2 .	Reduces value of TR2 .	Deletes value of TR2 .	Next display mode
Display mode SPEED/A1 (average speed 1)	No function	No function	The TR1 , A1 and S1 displays are reset to 0.0.	Next display mode
Display mode SPEED/A2 (average speed 2)	No function	No function	–	Next display mode
Display mode SPEED/S1 (stop watch 1)	No function	No function	Displays of TR1 , A1 and S1 are reset to 0.0.	Next display mode
Display mode SPEED/S2 (stop watch 2)	Starts or stops S2 .	No function	Displays of S2 and A2 are reset to 0.0.	Next display mode

6.15.20 Table of conditions and menu activation

Display	The motorcycle is stationary.	Menu can be activated
Display mode SPEED/H (operating hours)	•	
Display mode SPEED/CLK (clock)		•
Display mode SPEED/LAP (lap time)		•
Display mode SPEED/TR1 (trip master 1)		•
Display mode SPEED/TR2 (trip master 2)		•
Display mode SPEED/A1 (average speed 1)		•
Display mode SPEED/A2 (average speed 2)		•
Display mode SPEED/S1 (stop watch 1)		•
Display mode SPEED/S2 (stop watch 2)		•

6.16 Opening filler cap

**Danger**
Fire hazard Fuel is highly flammable.


- Never refuel the vehicle near open flames or burning cigarettes, and always switch off the engine first. Be careful that no fuel is spilt, especially on hot vehicle components. Clean up spilt fuel immediately.
- Fuel in the fuel tank expands when warm and can escape if the tank is overfilled. See the notes on refueling.

**Warning**
Danger of poisoning Fuel is poisonous and a health hazard.

- Avoid contact between fuel and skin, eyes and clothing. Do not inhale fuel vapors. If fuel gets into your eyes, rinse immediately with water and contact a doctor. Wash affected skin areas immediately with soap and water. If fuel is swallowed, contact a doctor immediately. Change clothing that has come into contact with fuel. Store fuel in a suitable canister according to regulations and keep it out of the reach of children.


**Warning**
Environmental hazard Improper handling of fuel is a danger to the environment.

- Do not allow fuel to get into the ground water, the ground, or the sewage system.

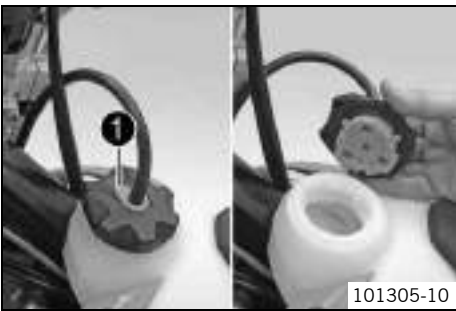

- Press release button ❶, turn filler cap counterclockwise and lift it upwards and remove.

6.17 Closing filler cap

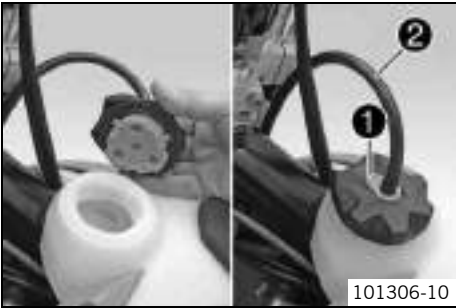


- Replace the filler cap and turn clockwise until the release button ❶ locks in place.

**Info**

Route the fuel tank breather hose ❷ without kinking.

6.18 Idle speed adjusting screw

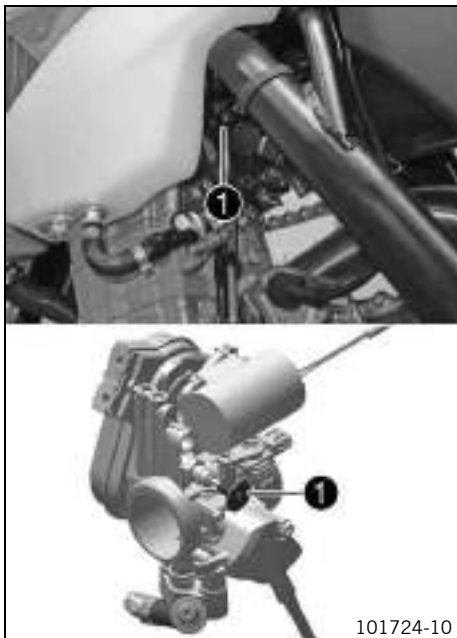


Idle speed adjusting screw ❶ is located on the throttle valve body at the top left. The idle speed adjusting screw has two functions. Turning it controls the idle speed. Pulling it out all the way raises the idle speed during a cold start.

Possible states

- RPM increase activated – Idle speed adjusting screw is pulled out all the way.
- RPM increase deactivated – Idle speed adjusting screw is pushed in all the way.

6.19 Shift lever

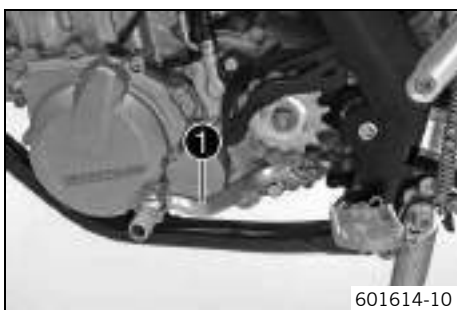

Shift lever ❶ is mounted on the left side of the engine.



The gear positions can be seen in the photograph. The neutral or idle position is between the first and second gears.

6.20 Kick starter



The kick starter ❶ is fitted on the right of the engine. The engine can be started with either the kick starter or the electric starter. The upper part of the kick starter can be swung out.

**Info**


Before riding, swing the upper part of the kick starter inwards towards the engine.

6.21 Foot brake lever




Foot brake lever ❶ is located in front of the right footrest. The foot brake lever is used to activate the rear brake.

6.22 Side stand

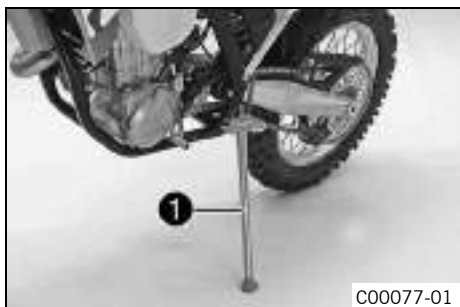

The side stand ❶ is on the left side of the vehicle.

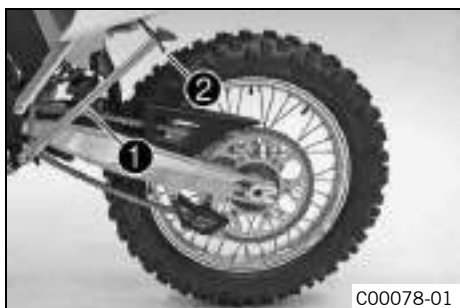

The side stand is used to park the motorcycle.

i Info
When you are riding, the side stand ❶ must be folded up and secured with the rubber band ❷.

6.23 Steering lock (all EXC models)



Steering lock ❶ is fitted on the left side of the steering head. The steering lock is used to lock the steering. Steering, and therefore riding, is no longer possible.

6.24 Locking the steering (all EXC models)

Note

Danger of damage The parked vehicle may roll away or fall over.

- Always place the vehicle on a firm and even surface.




- Park the vehicle.
 - Turn the handlebar as far as possible to the right.
 - Insert the key in the steering lock, turn it to the left, press it in and turn it to the right. Remove the key.
- ✓ Steering is no longer possible.



Info

Never leave the key in the steering lock.

6.25 Unlocking the steering (all EXC models)

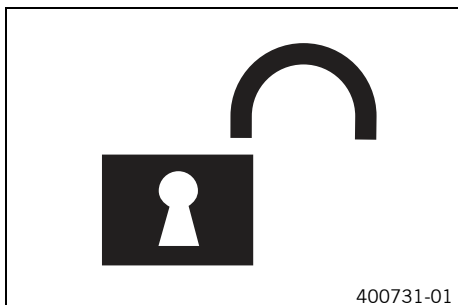

- Insert the key in the steering lock, turn it to the left, pull it out and turn it to the right. Remove the key.
- ✓ You can now steer the bike again.



Info

Never leave the key in the steering lock.

7.1 Advice on first use

**Danger****Danger of accidents** Danger arising from the rider's judgement being impaired.

- Do not operate the vehicle while under the influence of alcohol, drugs and certain medications or physically or mentally impaired.

**Warning****Risk of injury** Missing or poor protective clothing presents an increased safety risk.

- Wear protective clothing (helmet, boots, gloves, pants and jacket with protectors) every time you ride the vehicle. Always wear protective clothing that is in good condition and meets the legal requirements.

**Warning****Danger of crashing** Poor vehicle handling due to different tire tread patterns on front and rear wheels.

- The front and rear wheels must be fitted with tires with similar tread patterns to prevent loss of control over the vehicle.

**Warning****Danger of accidents** Critical riding behavior due to inappropriate riding.

- Adapt your riding speed to the road conditions and your riding ability.

**Warning****Danger of accidents** Accident risk caused by presence of a passenger.

- Your vehicle is not designed to carry passengers. Do not ride with a passenger.

**Warning****Danger of accidents** Failure of brake system.

- If the foot brake lever is not released, the brake linings drag continuously. The rear brake may fail due to overheating. Take your foot off the foot brake lever when you are not braking.

**Warning****Danger of accidents** Unstable riding behavior.

- Do not exceed the maximum permissible weight and axle loads.

**Warning****Risk of misappropriation** Usage by unauthorized persons.

- Never leave the vehicle while the engine is running. Secure the vehicle against use by unauthorized persons.

**Info**

When using your motorcycle, remember that others may feel disturbed by excessive noise.

- Make sure that the pre-delivery inspection work has been carried out by an authorized KTM workshop.
 - ✓ You receive a delivery certificate and the service record at vehicle handover.
- Before your first trip, read the entire operating instructions carefully.
- Get to know the controls.
- Adjust the basic position of the clutch lever. (🔧 p. 67)

(all EXC models)

- Adjust the free travel of the hand brake lever. (🔧 p. 69)

(all XC-W models)

- Adjust the basic position of the hand brake lever. (🔧 p. 69)
- Adjust the basic position of the foot brake lever. 🦶 (🔧 p. 73)
- Adjust the basic position of the shift lever. 🦶 (🔧 p. 95)
- Get used to handling the motorcycle on a suitable piece of land before making a longer trip.

**Info**

Offroad, you should be accompanied by another person on another machine so that you can help each other.

- Try also to ride as slowly as possible and in a standing position to get a better feeling for the vehicle.
- Do not make any offroad trips that over-stress your ability and experience.

- Hold the handlebar firmly with both hands and keep your feet on the footrests when riding.
- If you carry any baggage, make sure it is fixed firmly as close as possible to the center of the vehicle and ensure even weight distribution between the front and rear wheels.



Info

Motorcycles react sensitively to any changes of weight distribution.

- Do not exceed the overall maximum permitted weight and the axle loads.

Guideline

Maximum permissible overall weight	335 kg (739 lb.)
Maximum permissible front axle load	145 kg (320 lb.)
Maximum permissible rear axle load	190 kg (419 lb.)

- Run in the engine. (🔧 p. 27)

7.2 Running-in the engine

- During the running-in phase, do not exceed the specified engine speed and engine performance.

Guideline

Maximum engine speed	
During the first operating hour	7,000 rpm
Maximum engine performance	
During the first 3 operating hours	≤ 75 %

- Avoid fully opening the throttle!

7.3 Preparing the vehicle for difficult riding conditions



Info

Using a motorcycle in difficult conditions can lead to excessive wear of components such as the power train or brakes. For this reason, it may be necessary to service or replace worn parts before the limit specified in the service schedule is reached.

- KTM recommends that you use the specified engine oil for difficult riding conditions and to increase performance.

Engine oil (SAE 10W/60) (00062010035) (🔧 p. 114)

- Clean the air filter and air filter box. 🧰 (🔧 p. 57)



Info

Check the air filter approx. every 30 minutes.

- Seal the air filter box. 🧰 (🔧 p. 57)
- Additionally secure the rubber grip. (🔧 p. 66)
- Check the electrical connector for humidity and corrosion and to ensure it is firmly seated.
 - » If humidity, corrosion or damage is found:
 - Clean and dry the connector, or change it if necessary.

Difficult riding conditions are:

- Rides on dry sand. (🔧 p. 28)
- Rides on wet sand. (🔧 p. 28)
- Rides on wet and muddy surfaces. (🔧 p. 29)
- Rides at high temperature and slow speed. (🔧 p. 29)
- Riding at low temperature or in snow. (🔧 p. 29)



7.4 Preparing for rides on dry sand



- Fit a dust cover on the air filter.

Dust protection device for air filter (77206920000)



Info

See the **KTM PowerParts** fitting instructions.



- Fit a sand cover on the air filter.

Sand protection device for air filter (59006022000)



Info

See the **KTM PowerParts** fitting instructions.



- Clean the chain.

Chain cleaner (☛ p. 116)

- Fit the steel sprocket.



Tip

Do not grease the chain.

- Clean the radiator fins.
- Straighten bent radiator fins carefully.

7.5 Preparing for rides on wet sand



- Fit a rain cover on the air filter.

Waterproofing device for air filter (77206921000)



Info

See the **KTM PowerParts** fitting instructions.



- Clean the chain.

Chain cleaner (☛ p. 116)

- Fit the steel sprocket.



Tip

Do not grease the chain.

- Clean the radiator fins.
- Straighten bent radiator fins carefully.

7.6 Preparing for rides on wet and muddy surfaces



- Fit a waterproofing device on the air filter.

Waterproofing device for air filter (77206921000)



Info

See the **KTM PowerParts** fitting instructions.



- Fit the steel sprocket.
- Clean the motorcycle. (🔧 p. 100)
- Straighten bent radiator fins carefully.

7.7 Preparing for rides at high temperature and slow speed



- Adjust the secondary drive to the road conditions.



Info

The engine oil heats up quickly when the clutch is operated frequently due to an excessively high secondary drive.

- Clean the chain.

Chain cleaner (🔧 p. 116)

- Clean the radiator fins.
- Straighten bent radiator fins carefully.
- Check the coolant level. (🔧 p. 92)

7.8 Preparing for rides at low temperature or in snow



- Fit a waterproofing device on the air filter.

Waterproofing device for air filter (77206921000)



Info

See the **KTM PowerParts** fitting instructions.

8.1 Checks and maintenance work when preparing for use

**Info**

Before riding the vehicle, always check its condition and operating safety.
The vehicle must be in perfect technical condition when used.

- Check the engine oil level. (🔧 p. 96)
- Check the electrical system.
- Check the front brake fluid level. (🔧 p. 70)
- Check the rear brake fluid level. (🔧 p. 74)
- Check the front brake linings. (🔧 p. 71)
- Check the rear brake linings. (🔧 p. 75)
- Check that the brake system is functioning properly.
- Check the coolant level. (🔧 p. 92)
- Check for chain dirt accumulation. (🔧 p. 61)
- Check the chain, rear sprocket, engine sprocket and chain guide. (🔧 p. 63)
- Check the chain tension. (🔧 p. 62)
- Check the tire condition. (🔧 p. 80)
- Check the tire air pressure. (🔧 p. 81)
- Check the spoke tension. (🔧 p. 81)
- Clean the dust boots of the fork legs. (🔧 p. 44)
- Bleed fork legs. (🔧 p. 44)
- Check the air filter.
- Check the settings of all controls and ensure that they can be operated smoothly.
- Check all screws, nuts, and hose clamps regularly for tightness.
- Check the fuel supply.

8.2 Starting

**Danger**

Danger of poisoning Exhaust gases are toxic and inhaling them may result in unconsciousness and/or death.

- When running the engine, always make sure there is sufficient ventilation, and do not start or run the engine in an enclosed space without an effective exhaust extraction system.

Note

Engine failure High engine speeds in cold engines have a negative effect on the service life of the engine.

- Always warm up the engine at low engine speeds.



C00078-11

- Raise the motorcycle off of the stand and secure the stand with the rubber band ❶.
- Shift transmission to neutral.

(EXC AUS)

- Turn the emergency OFF switch to the position ○.

Condition

Ambient temperature: < 20 °C (< 68 °F)

- Pull the idle speed adjusting screw all the way out.

- Press the electric starter button or press the kick starter robustly through its full range.

**Info**

Press the electric starter button for at most 5 seconds. Wait for a least 5 seconds before trying again.

Warning lamp FI lights up briefly as a functional control when starting.



400733-01

8.3 Starting off

**Info**

If your bike has lights, switch them on before riding. You will then be seen earlier by other motorists. When you are riding, the side stand must be folded up and secured with the rubber band.

- Pull the clutch lever, engage 1st gear, release the clutch lever slowly and simultaneously open the throttle carefully.

8.4 Shifting, riding

**Warning**

Danger of accidents If you change down at high engine speed, the rear wheel can lock up.

- Do not change into a low gear at high engine speed. The engine races and the rear wheel can lock up.

**Info**

If you hear unusual noises while riding, stop immediately, switch off the engine, and contact an authorized KTM workshop. First gear is used for starting off or for steep inclines.

- When conditions allow (incline, road situation, etc.), you can shift into a higher gear. To do so, release the throttle while simultaneously pulling the clutch lever, shift into the next gear, release the clutch, and open the throttle.
- After reaching maximum speed by fully opening the throttle grip, turn the throttle back so it is $\frac{3}{4}$ open. This will barely reduce the speed but fuel consumption will be considerably lower.
- Always open the throttle only as much as the engine can handle – abrupt throttle opening increases fuel consumption.
- To shift down, brake and close the throttle at the same time.
- Pull the clutch lever and shift into a lower gear, release the clutch lever slowly, and open the throttle or shift again.
- Switch off the engine if you expect to be standing for a long time.

Guideline

≥ 2 min

- Avoid frequent and longer slipping of the clutch. This heats the engine oil, the engine, and the cooling system.
- Ride with a lower engine speed instead of with a high engine speed and a slipping clutch.

8.5 Braking

**Warning**

Danger of accidents If you brake too hard, the wheels can lock.

- Adapt your braking to the traffic situation and the road conditions.

**Warning**

Danger of accidents Reduced braking efficiency caused by spongy pressure point of front or rear brake.

- Check the brake system and do not continue riding. (Your authorized KTM workshop will be glad to help.)

**Warning**

Danger of accidents Reduced braking efficiency due to a wet or dirty brake system.

- Clean or dry a dirty or wet brake system by riding and braking gently.

- On sandy, wet or slippery surfaces, use the rear brake.
- Braking should always be completed before you go into a bend. Change down to a lower gear appropriate to your road speed.
- Make use of the braking effect of the engine when driving down long downhill stretches. To do so, shift back one or two gears, but do not overrev the engine. You will need to apply the brakes far less often and the brake system will not overheat.

8.6 Stopping, parking



Warning

Risk of misappropriation Usage by unauthorized persons.

- Never leave the vehicle while the engine is running. Secure the vehicle against use by unauthorized persons.



Warning

Danger of burns Some vehicle components become very hot when the vehicle is operated.

- Do not touch hot components such as exhaust system, radiator, engine, shock absorber, and the brake system. Allow these components to cool down before starting work on them.

Note

Danger of damage The parked vehicle may roll away or fall over.

- Always place the vehicle on a firm and even surface.

Note

Fire hazard Some vehicle components become very hot when the vehicle is operated.

- Do not park the vehicle near flammable or explosive substances. Do not place objects on the vehicle while it is still warm from being run. Always let the vehicle cool first.

Note

Material damage Damage and destruction of components by excessive load.

- The side stand is designed for the weight of the motorcycle only. Do not sit on the motorcycle when it is supported by the side stand only. The side stand and/or the frame could be damaged and the motorcycle could fall over.

- Brake the motorcycle.
- Shift transmission to neutral.

(all XC-W models)

- Press and hold the kill switch  while the engine is idling until the engine stops.

(all EXC models)

- Press and hold the kill switch  while the engine is idling until the engine stops.
- Park the motorcycle on firm ground.

8.7 Transport

Note


Danger of damage The parked vehicle may roll away or fall over.

- Always place the vehicle on a firm and even surface.

Note

Fire hazard Some vehicle components become very hot when the vehicle is operated.

- Do not park the vehicle near flammable or explosive substances. Do not place objects on the vehicle while it is still warm from being run. Always let the vehicle cool first.

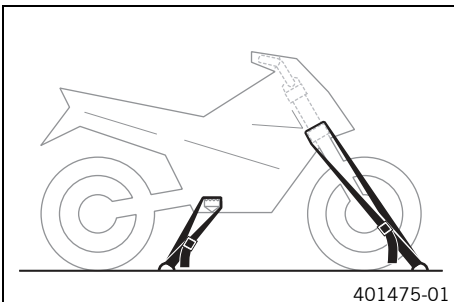

- Switch off the engine.
- Use tension belts or other suitable devices to secure the motorcycle against accidents or falling over.

8.8

Refueling

**Danger**

Fire hazard Fuel is highly flammable.

- Never refuel the vehicle near open flames or burning cigarettes, and always switch off the engine first. Be careful that no fuel is spilt, especially on hot vehicle components. Clean up spilt fuel immediately.
- Fuel in the fuel tank expands when warm and can escape if the tank is overfilled. See the notes on refueling.

**Warning**

Danger of poisoning Fuel is poisonous and a health hazard.

- Avoid contact of the fuel with skin, eyes and clothing. Do not inhale fuel vapors. If fuel gets into your eyes, rinse immediately with water and contact a doctor. Wash affected skin areas immediately with soap and water. If fuel is swallowed, contact a doctor immediately. Change clothing that has come into contact with fuel.

Note


Material damage Premature clogging of the fuel filter.

- In some countries and regions, the available fuel quality and cleanliness may not be sufficient. This will result in problems with the fuel system. (Your authorized KTM workshop will be glad to help.)
- Only refuel with clean fuel that meets the specified standards.

**Warning**

Environmental hazard Improper handling of fuel is a danger to the environment.

- Do not allow fuel to get into the ground water, the ground, or the sewage system.

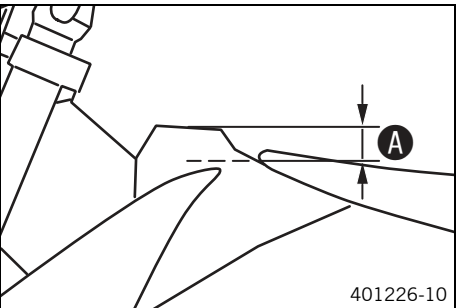

- Switch off engine.
- Open the filler cap. (🔧 p. 22)
- Fill the fuel tank with fuel up to measurement **A**.

Guideline

Measurement of A		35 mm (1.38 in)
Total fuel tank capacity, approx. (all EXC models)	9 l (2.4 US gal)	Super unleaded (ROZ 95/RON 95/PON 91) (🔧 p. 115)
Total fuel tank capacity, approx. (all XC-W models)	8.5 l (2.25 US gal)	Super unleaded (ROZ 95/RON 95/PON 91) (🔧 p. 115)

- Close the filler cap. (🔧 p. 22)

9.1 Service schedule

	S1N	S15A	S30A
Read out the fault memory using the KTM diagnostics tool. 	•	•	•
Check that the electrical equipment is functioning properly.	•	•	•
Check and charge the battery. 		•	•
Check the front brake linings. (🔧 p. 71)		•	•
Check the rear brake linings. (🔧 p. 75)		•	•
Check the brake discs. (🔧 p. 70)		•	•
Check the brake lines for damage and leakage.		•	•
Check the rear brake fluid level. (🔧 p. 74)		•	•
Check the free travel of the foot brake lever. (🔧 p. 73)		•	•
Check the frame and swingarm. 		•	•
Check the swingarm bearing. 			•
Check the heim joints at the top and bottom of the shock absorber. 		•	•
Check the tire condition. (🔧 p. 80)	•	•	•
Check the tire air pressure. (🔧 p. 81)	•	•	•
Check the wheel bearing for play. 		•	•
Check the wheel hubs. 		•	•
Check the rim run-out. 	•	•	•
Check the spoke tension. (🔧 p. 81)	•	•	•
Check the chain, rear sprocket, engine sprocket and chain guide. (🔧 p. 63)		•	•
Check the chain tension. (🔧 p. 62)	•	•	•
Grease all moving parts (e.g., side stand, hand lever, chain, ...) and check for smooth operation. 		•	•
Check/correct the fluid level of the hydraulic clutch. (🔧 p. 67)		•	•
Check the front brake fluid level. (🔧 p. 70)		•	•
Check the free travel of the hand brake lever. (🔧 p. 69)		•	•
Check the steering head bearing play. (🔧 p. 52)	•	•	•
Check the valve clearance. 	•		•
Check the clutch. 			•
Change the engine oil and oil filter and clean the oil screens.  (🔧 p. 97)	•	•	•
Check all hoses (e. g., fuel, cooling, bleeding, drainage) and sleeves for cracking, leaks, and incorrect routing. 	•	•	•
Check the antifreeze and coolant level. (🔧 p. 91)	•	•	•
Check the cables for damage and routing without sharp bends. 		•	•
Check that the cables are undamaged, routed without sharp bends and set correctly.	•	•	•
Clean the air filter and air filter box. 		•	•
Change the glass fiber yarn filling of the main silencer.  (🔧 p. 58)			•
Check the screws and nuts for tightness. 	•	•	•
Check the headlight setting. (🔧 p. 89)	•	•	•
Change the fuel screen.  (🔧 p. 96)	•	•	•
Check the fuel pressure. 		•	•
Adjust the idle speed.  (🔧 p. 95)	•	•	•
Check that the radiator fan is functioning properly. 	•	•	•
Final check: Check the vehicle for roadworthiness and take a test ride.	•	•	•
Read out the fault memory using the KTM diagnostics tool after a test ride. 	•	•	•
Make the service entry in KTM DEALER.NET and in the service record. 	•	•	•

S1N: Once after 1 operating hour

S15A: Every 15 operating hours

S30A: Every 30 operating hours/after every race

9.2 Service work (as additional order)

	S15N	S45A	S105A	J1A
Change the front brake fluid. 				•
Change the rear brake fluid. 				•
Change the hydraulic clutch fluid.  ( p. 67)				•
Grease the steering head bearing.  ( p. 54)				•
Clean the spark arrestor.  (all XC-W models)				•
Perform a fork service. (EXC SIX DAYS) 	•	•		
Perform a fork service. (EXC EU, EXC AUS, all XC-W models) 	•	•		
Service the shock absorber. 		•		
Change the spark plug and spark plug connector. 			•	
Change the piston. 			•	
Check/measure the cylinder. 			•	
Check the cylinder head. 			•	
Check the valves, valve springs, and valve spring seats. 			•	
Check the camshaft and cam lever. 			•	
Change the connecting rod, conrod bearing and crank pin. 			•	
Check the transmission and shift mechanism. 			•	
Check the oil pressure regulator valve. 			•	
Check the oil pumps and lubrication system. 			•	
Check the timing assembly. 			•	
Change all engine bearings. 			•	

S15N: Once after 15 operating hours


S45A: Every 45 operating hours

S105A: Every 105 operating hours/every 50 operating hours when used for motorsports

J1A: Annually

10.1 Checking the basic suspension setting against the rider's weight

i Info When adjusting the basic suspension setting, first adjust the shock absorber and then the fork.

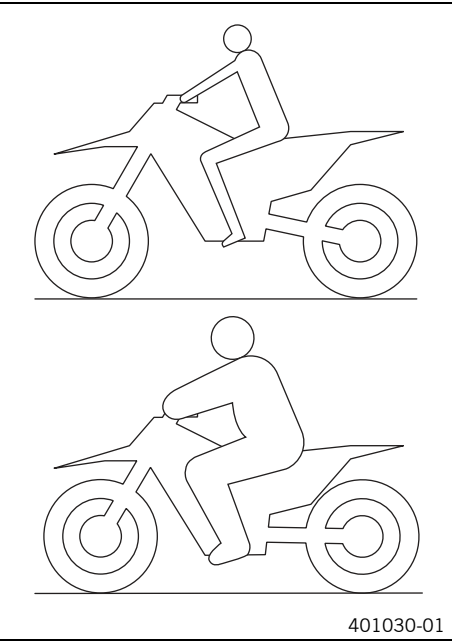

- For optimal motorcycle riding characteristics and to avoid damage to forks, shock absorbers, swingarm and frame, the basic settings of the suspension components must match the rider's weight.
 - As delivered, KTM offroad motorcycles are adjusted for a standard rider weight (with full protective clothing).
- Guideline
- | | |
|-----------------------|------------------------------|
| Standard rider weight | 75... 85 kg (165... 187 lb.) |
|-----------------------|------------------------------|
- If the rider's weight is above or below the standard range, the basic setting of the suspension components must be adjusted accordingly.
 - Small weight differences can be compensated by adjusting the spring preload, but in the case of large weight differences, the springs must be replaced.

10.2 Compression damping of shock absorber


The compression damping of the shock absorber is divided into two ranges: high-speed and low-speed. High-speed and low-speed refer to the compression speed of the rear wheel suspension and not to the vehicle speed. The high-speed setting, for example, has an effect on the landing after a jump: the rear wheel suspension compresses more quickly. The low-speed setting, for example, has an effect when riding over long ground swells: the rear wheel suspension compresses more slowly. These two ranges can be adjusted separately, although the transition between high-speed and low-speed is gradual. Thus, changes in the high-speed range affect the compression damping in the low-speed range and vice versa.

10.3 Adjusting the low-speed compression damping of the shock absorber

! Caution **Danger of accidents** Disassembly of pressurized parts can lead to injury.

- The shock absorber is filled with high density nitrogen. Adhere to the description provided. (Your authorized KTM workshop will be glad to help.)

i Info The low-speed setting can be seen during the slow to normal compression of the shock absorber.

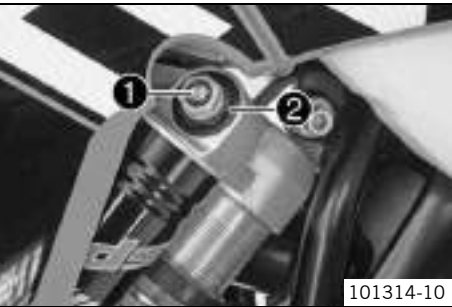

- Turn adjusting screw ❶ clockwise with a screwdriver up to the last perceptible click.
- i Info** Do not loosen nut ❷!
- Turn back counterclockwise by the number of clicks corresponding to the shock absorber type.

Guideline

Compression damping, low-speed	
Comfort	25 clicks
Standard	20 clicks
Sport	15 clicks

**Info**

Turn clockwise to increase damping; turn counterclockwise to reduce damping.

10.4 Adjusting the high-speed compression damping of the shock absorber


**Caution**

Danger of accidents Disassembly of pressurized parts can lead to injury.

- The shock absorber is filled with high density nitrogen. Adhere to the description provided. (Your authorized KTM workshop will be glad to help.)

**Info**

The high-speed setting can be seen during the fast compression of the shock absorber.

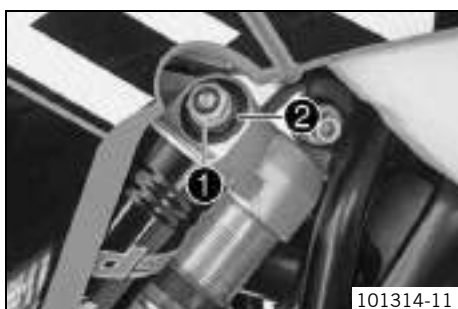

- Turn adjusting screw ❶ all the way clockwise with a socket wrench.

**Info**

Do not loosen nut ❷!

- Turn back counterclockwise by the number of turns corresponding to the shock absorber type.

Guideline

Compression damping, high-speed	
Comfort	2 turns
Standard	1.5 turns
Sport	1.25 turns

**Info**

Turn clockwise to increase damping; turn counterclockwise to reduce damping.

10.5 Adjusting the rebound damping of the shock absorber

**Caution**

Danger of accidents Disassembly of pressurized parts can lead to injury.

- The shock absorber is filled with high density nitrogen. Adhere to the description provided. (Your authorized KTM workshop will be glad to help.)



- Turn adjusting screw ❶ clockwise up to the last perceptible click.

**Info**

Do not loosen nut ❷!

- Turn back counterclockwise by the number of clicks corresponding to the shock absorber type.


Guideline

Rebound damping	
Comfort	28 clicks
Standard	24 clicks
Sport	22 clicks

**Info**

Turn clockwise to increase damping; turn counterclockwise to reduce damping.

10.6 Measuring rear wheel sag unloaded

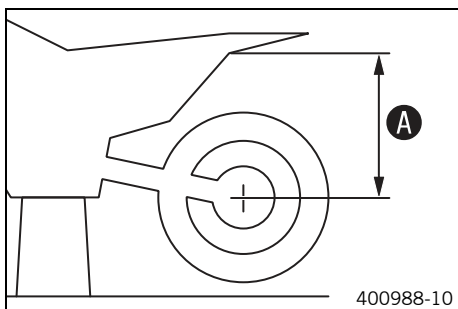**Preparatory work**

- Raise the motorcycle with the lift stand. (🔧 p. 44)


Main work

- Measure the distance – as vertically as possible – between the rear axle and a fixed point such as a mark on the side cover.
- Make note of the value as measurement **A**.

Finishing work

- Remove the motorcycle from the lift stand. (🔧 p. 44)

10.7 Checking the static sag of the shock absorber

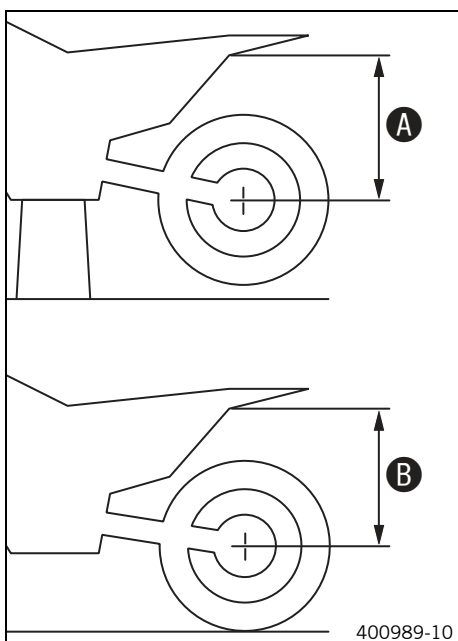

- Measure distance **A** of rear wheel unloaded. (🔧 p. 38)
- Hold the motorcycle upright with the aid of an assistant.
- Measure the distance between the rear axle and the fixed point again.
- Note down the value as dimension **B**.

**Info**


The static sag is the difference between measurements **A** and **B**.

- Check the static sag.

Static sag	33... 35 mm (1.3... 1.38 in)
------------	------------------------------

- » If the static sag is less or more than the specified value:
 - Adjust the spring preload of the shock absorber. 🛠️ (🔧 p. 39)

10.8 Checking the riding sag of the shock absorber

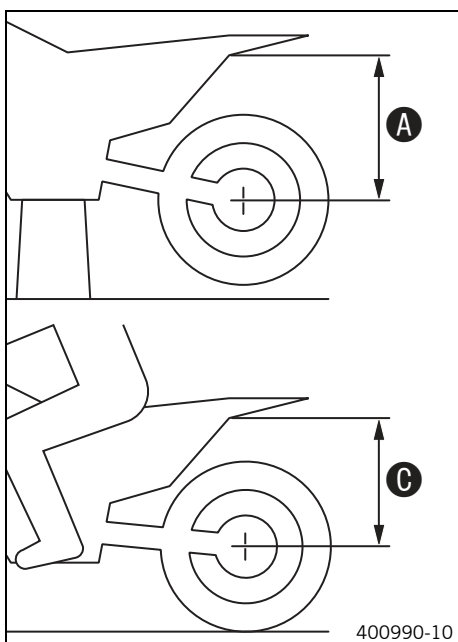

- Measure distance **A** of rear wheel unloaded. (🔧 p. 38)
- With another person holding the motorcycle, the rider, wearing full protective clothing, sits on the seat in a normal sitting position (feet on footrests) and bounces up and down a few times.
 - ✓ The rear wheel suspension levels out.
- Another person now measures the distance between the rear axle and the fixed point.
- Note down the value as dimension **C**.

**Info**

The riding sag is the difference between measurements **A** and **C**.

- Check the riding sag.

Riding sag	105... 115 mm (4.13... 4.53 in)
------------	---------------------------------

- » If the riding sag differs from the specified measurement:
 - Adjust the riding sag. 🛠️ (🔧 p. 39)

10.9 Adjusting the spring preload of the shock absorber


**Caution**

Danger of accidents Disassembly of pressurized parts can lead to injury.

- The shock absorber is filled with high density nitrogen. Adhere to the description provided. (Your authorized KTM workshop will be glad to help.)

**Info**

Before changing the spring preload, make a note of the present setting, e.g., by measuring the length of the spring.

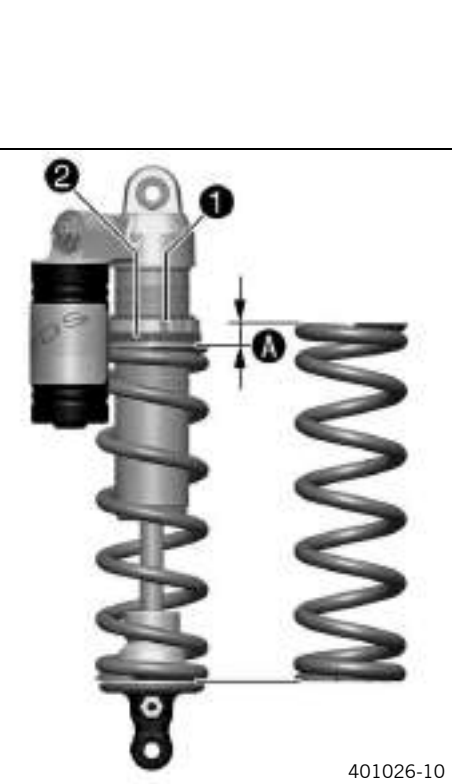

- Preparatory work**
- Raise the motorcycle with the lift stand. (p. 44)
 - Remove shock absorber. (p. 54)
 - After removing the shock absorber, clean it thoroughly.

- Main work**
- Loosen screw 1.
 - Turn adjusting ring 2 until the spring is no longer under tension.

Hook wrench (T106S)

- Measure the overall spring length while the spring is not under tension.
- Tighten the spring by turning adjusting ring 2 to measurement A.

Guideline

Spring preload	
Comfort	9 mm (0.35 in)
Standard	9 mm (0.35 in)
Sport	9 mm (0.35 in)

**Info**

Depending on the static sag and/or the riding sag, it may be necessary to increase or decrease the spring preload.

- Tighten screw 1.

Guideline

Screw, shock absorber adjusting ring	M5	5 Nm (3.7 lbf ft)
--------------------------------------	----	-------------------

- Finishing work**
- Install the shock absorber. (p. 55)
 - Remove the motorcycle from the lift stand. (p. 44)


10.10 Adjusting the riding sag

- Preparatory work**
- Raise the motorcycle with the lift stand. (p. 44)
 - Remove shock absorber. (p. 54)
 - After removing the shock absorber, clean it thoroughly.

- Main work**
- Choose and mount a suitable spring.

Guideline

Spring rate	
Weight of rider: 65... 75 kg (143... 165 lb.)	69 N/mm (394 lb/in)
Weight of rider: 75... 85 kg (165... 187 lb.)	72 N/mm (411 lb/in)
Weight of rider: 85... 95 kg (187... 209 lb.)	76 N/mm (434 lb/in)

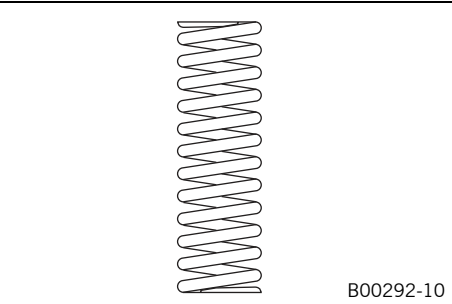




Info
The spring rate is shown on the outside of the spring.
Smaller weight differences can be compensated by changing the spring preload.

Finishing work

- Install the shock absorber. (🔧 p. 55)
- Remove the motorcycle from the lift stand. (🔧 p. 44)
- Check the static sag of the shock absorber. (🔧 p. 38)
- Check the riding sag of the shock absorber. (🔧 p. 38)
- Adjust the rebound damping of the shock absorber. (🔧 p. 37)

10.11 Checking basic setting of fork


i Info
For various reasons, no exact riding sag can be determined for the forks.

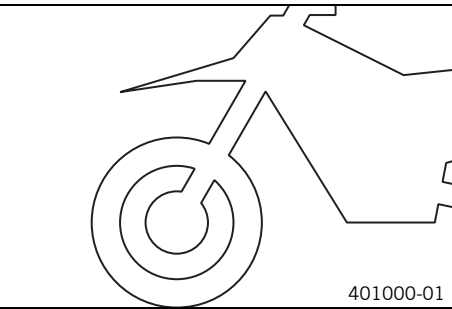

- As with the shock absorber, smaller differences in the rider's weight can be compensated by the spring preload.
- However, if the fork is often overloaded (hard end stop on compression), harder springs must be fit to avoid damage to the fork and frame.

10.12 Adjusting the compression damping of the fork

i Info
The hydraulic compression damping determines the fork suspension behavior.

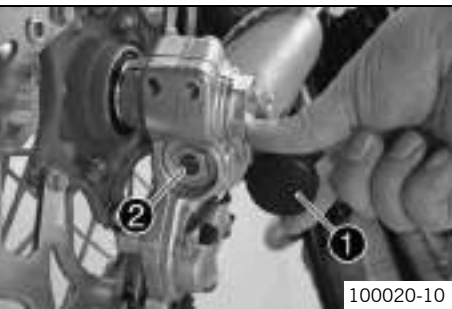

(EXC EU, EXC AUS, all XC-W models)

- Remove protection caps ❶.
- Turn adjusting screws ❷ clockwise all the way.



Info
Adjusting screws ❷ are located at the bottom end of the fork legs.
Make the same adjustment on both fork legs.

- Turn back counterclockwise by the number of clicks corresponding to the fork type.

Guideline

Compression damping	
Comfort	22 clicks
Standard	20 clicks
Sport	18 clicks



Info
Turn clockwise to increase damping; turn counterclockwise to reduce damping.

- Mount protection covers ❶.

**(EXC SIX DAYS)**

- Turn the white adjusting screw ❶ all the way clockwise.

**Info**

Adjusting screw ❶ is located at the upper end of the left fork leg. The compression damping is located in the left fork leg (white adjusting screw). The rebound damping is located in the right fork leg (red adjusting screw).

- Turn back counterclockwise by the number of clicks corresponding to the fork type.

Guideline

Compression damping	
Comfort	24 clicks
Standard	22 clicks
Sport	16 clicks


**Info**

Turn clockwise to increase damping; turn counterclockwise to reduce damping.

10.13 Adjusting the rebound damping of the fork

**Info**

The hydraulic rebound damping determines the fork suspension behavior.

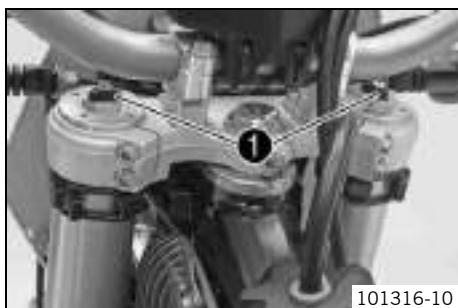**(EXC EU, EXC AUS, all XC-W models)**

- Turn adjusting screws ❶ clockwise all the way.

**Info**

Adjusting screws ❶ are located at the top end of the fork legs. Make the same adjustment on both fork legs.

- Turn back counterclockwise by the number of clicks corresponding to the fork type.

Guideline

Rebound damping	
Comfort	20 clicks
Standard	18 clicks
Sport	16 clicks

**Info**

Turn clockwise to increase damping; turn counterclockwise to reduce damping.

**(EXC SIX DAYS)**

- Turn the red adjusting screw ❶ all the way clockwise.

**Info**

Adjusting screw ❶ is located at the upper end of the right fork leg. The rebound damping is located in the right fork leg (red adjusting screw). The compression damping is located in the left fork leg (white adjusting screw).

- Turn back counterclockwise by the number of clicks corresponding to the fork type.

Guideline

Rebound damping	
Comfort	20 clicks
Standard	18 clicks
Sport	18 clicks

**Info**

Turn clockwise to increase damping; turn counterclockwise to reduce damping.

10.14 Adjusting the spring preload of the fork (EXC EU, EXC AUS, all XC-W models)



- Turn the adjusting screws counterclockwise all the way.

**Info**

Make the same adjustment on both fork legs.


- Turn back clockwise by the number of turns corresponding to the fork type.
Guideline

Spring preload - Preload Adjuster	
Comfort	1 turn
Standard	2 turns
Sport	2 turns

**Info**

Turn clockwise to increase spring preload; turn counterclockwise to reduce spring preload.
Adjusting the spring preload has no influence on the absorption setting of the rebound damping.
Basically, however, you should set the rebound damping higher with a higher spring preload.

10.15 Handlebar position

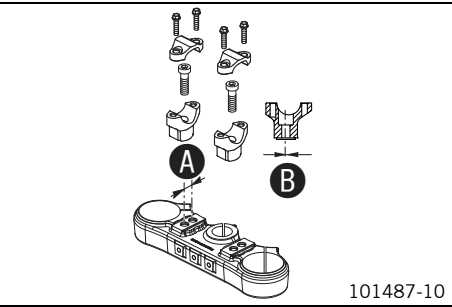

On the upper triple clamp, there are two holes at a distance of **A** to each other.

Hole distance A	15 mm (0.59 in)
------------------------	-----------------

The holes on the handlebar supports are placed at a distance of **B** from the center.

Hole distance B	3.5 mm (0.138 in)
------------------------	-------------------


The handlebar supports can be mounted in four different positions.

10.16 Adjusting handlebar position

**Warning**

Danger of accidents Handlebar breakage.

- If the handlebar is bent or straightened it will cause material fatigue, and the handlebar can break. Always replace handlebar.

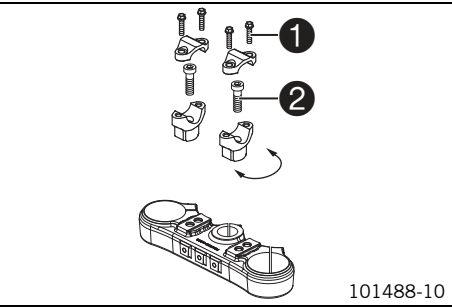

- Remove the four screws **1**. Remove the handlebar clamp. Remove the handlebar and lay it to one side.

**Info**

Protect the motorcycle and its attachments against damage by covering them.
Do not bend the cables and lines.

- Remove the two screws **2**. Remove the handlebar support.
- Place the handlebar support in the required position. Fit and tighten the two screws **2**.

Guideline			
Screw, handlebar support	M10	40 Nm (29.5 lbf ft)	Loctite® 243™



Info
Position the left and right handlebar supports evenly.

- Position the handlebar.



Info
Make sure cables and wiring are positioned correctly.

- Position the handlebar clamps. Fit and evenly tighten the four screws ❶.


Guideline

Screw, handlebar clamp	M8	20 Nm (14.8 lbf ft)
------------------------	----	------------------------



Info
Make sure the gap width is even.

11.1 Raising the motorcycle with the lift stand

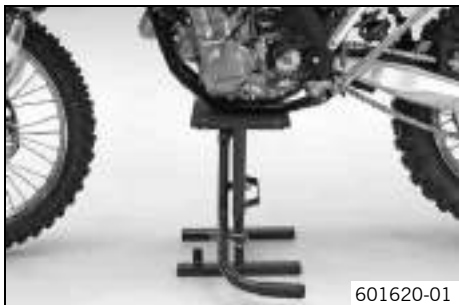

Note

Danger of damage The parked vehicle may roll away or fall over.

- Always place the vehicle on a firm and even surface.

- Raise the motorcycle at the frame underneath the engine.

Lift stand (54829055000)

- ✓ The wheels should no longer touch the ground.

- Secure the motorcycle against falling over.

11.2 Removing the motorcycle from the lift stand

Note

Danger of damage The parked vehicle may roll away or fall over.

- Always place the vehicle on a firm and even surface.



- Remove the motorcycle from the lift stand.
- Remove the lift stand.
- To park the motorcycle, press the side stand ❶ to the ground with your foot and lean the motorcycle on it.

Info

When you are riding, the side stand must be folded up and secured with the rubber band.

11.3 Bleeding fork legs



Preparatory work

- Raise the motorcycle with the lift stand. (☛ p. 44)

Main work

- Remove bleeder screws ❶ briefly.
- ✓ Any excess pressure escapes from the interior of the fork.
- Mount and tighten bleeder screws.

Finishing work

- Remove the motorcycle from the lift stand. (☛ p. 44)

11.4 Cleaning the dust boots of the fork legs



Preparatory work

- Raise the motorcycle with the lift stand. (☛ p. 44)
- Loosen the fork protector. (☛ p. 45)

Main work

- Push dust boot ❶ down on both fork leg.

Info

The dust boots remove dust and coarse dirt particles from the inside fork tubes. Over time, dirt can penetrate behind the dust boots. If this dirt is not removed, the oil seals behind can start to leak.

**Warning**

Danger of accidents Reduced braking efficiency due to oil or grease on the brake discs.

- Always keep the brake discs free of oil and grease, and clean them with brake cleaner when necessary.


- Clean and lubricate the dust boot and inside fork tube on both fork legs.

Universal oil spray (☛ p. 117)


- Press the dust boots back into the installation position.
- Remove excess oil.

Finishing work

- Position the fork protection. (☛ p. 45)
- Remove the motorcycle from the lift stand. (☛ p. 44)

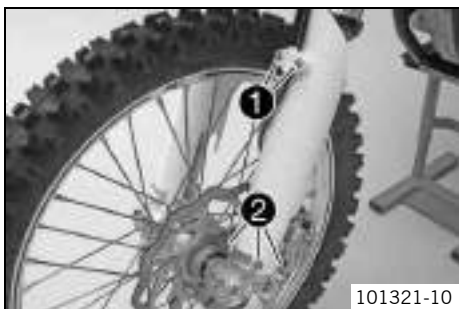11.5 Loosening the fork protector

- Remove screws ❶ and remove the clamp.
- Remove screws ❷ on the left fork leg. Push the fork protector downwards.
- Remove the screws on the right fork leg. Push the fork protector downwards.

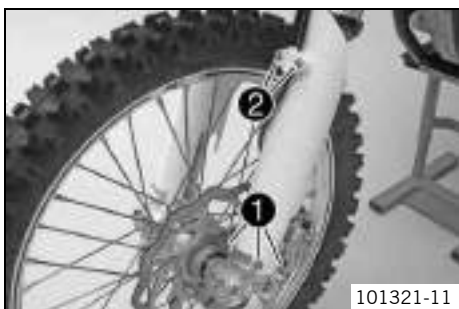11.6 Positioning the fork protection

- Position the fork protection on the left fork leg. Mount and tighten screws ❶.
- Guideline

Remaining screws, chassis	M6	10 Nm (7.4 lbf ft)
---------------------------	----	--------------------

- Position the wiring harness.
- Position the brake line. Put the clamp on, mount and tighten screws ❷.
- Position the fork protection on the right fork leg. Mount and tighten the screws.

Guideline


Remaining screws, chassis	M6	10 Nm (7.4 lbf ft)
---------------------------	----	--------------------


11.7 Removing the fork legs**Preparatory work**

- Remove the headlight mask with the headlight. (☛ p. 87)
- Raise the motorcycle with the lift stand. (☛ p. 44)
- Remove the front wheel. ☛ (☛ p. 78)


Main work

- Remove screws ❶ and take off the clamp.
- Remove cable binder ❷.
- Remove screws ❸ and take off the brake caliper.
- Allow the brake caliper and brake line to hang tension-free to the side.

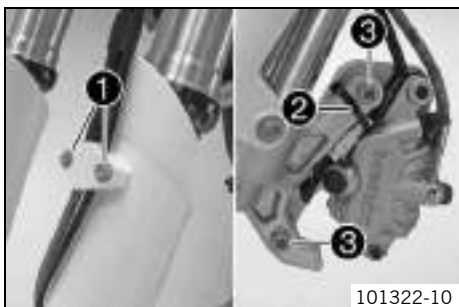

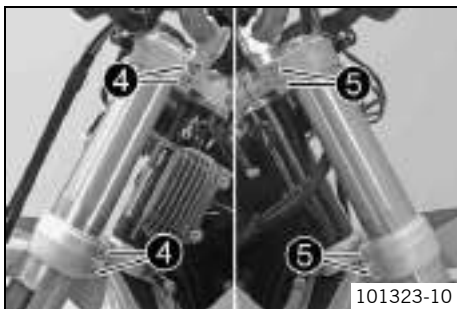**(EXC EU, EXC AUS, all XC-W models)**

- Release screws ④. Take out the left fork leg.
- Release screws ⑤. Take out the right fork leg.

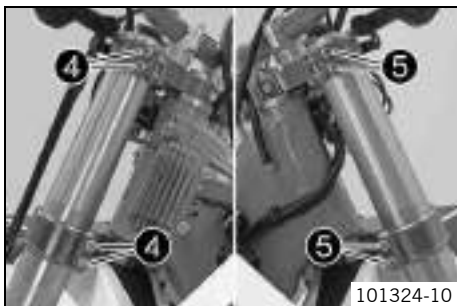**(EXC SIX DAYS)**

- Release screws ④. Take out the left fork leg.
- Release screws ⑤. Take out the right fork leg.


11.8 Installing the fork legs**Main work**

- Position the fork legs.

**Info**

Grooves are milled into the side of the upper end of the fork legs. The second milled groove (from the top) must be flush with the top edge of the upper triple clamp.

Position bleeder screws ① toward the front.

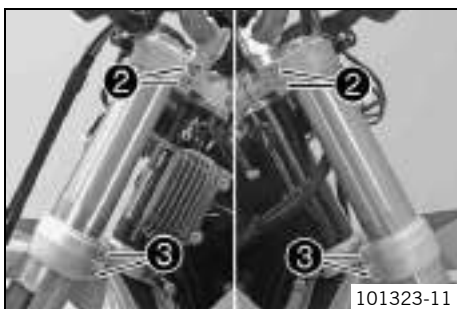**(EXC EU, EXC AUS, all XC-W models)**

- Tighten screws ②.


Guideline

Screw, top triple clamp	M8	20 Nm (14.8 lbf ft)
-------------------------	----	------------------------

- Tighten screws ③.

Guideline

Screw, bottom triple clamp	M8	15 Nm (11.1 lbf ft)
----------------------------	----	------------------------

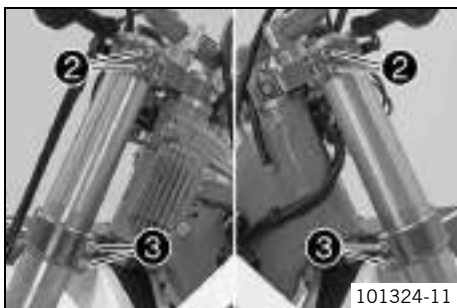**(EXC SIX DAYS)**

- Tighten screws ②.


Guideline

Screw, top triple clamp	M8	17 Nm (12.5 lbf ft)
-------------------------	----	------------------------

- Tighten screws ③.

Guideline

Screw, bottom triple clamp	M8	12 Nm (8.9 lbf ft)
----------------------------	----	-----------------------

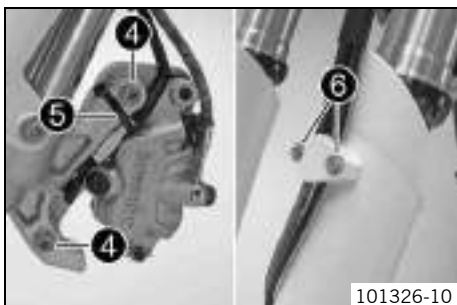

- Position brake caliper, and mount and tighten screws ④.

Guideline


Screw, front brake caliper	M8	25 Nm (18.4 lbf ft)	Loctite® 243™
----------------------------	----	------------------------	---------------

- Mount cable binder ⑤.
- Refit the headlight mask with the headlight. (☛ p. 87)


- Position the brake line, wiring harness, and clamp. Mount and tighten screws ❸.
- Finishing work**
- Install the front wheel. 🛠️ (📖 p. 78)

11.9 Removing the fork protector 🛠️

- Preparatory work**
- Remove the headlight mask with the headlight. (📖 p. 87)
 - Raise the motorcycle with the lift stand. (📖 p. 44)
 - Remove the front wheel. 🛠️ (📖 p. 78)
 - Remove the fork legs. (📖 p. 45)
- Main work**
- Remove screws ❶ on the left fork leg. Remove the fork protector upwards.
 - Remove the screws on the right fork leg. Remove the fork protector upwards.

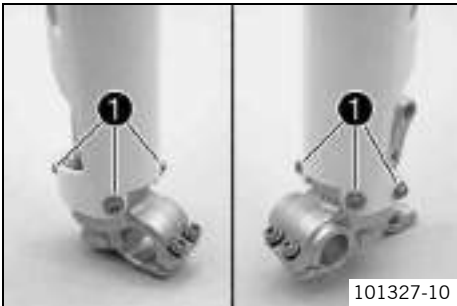

11.10 Installing the fork protector 🛠️

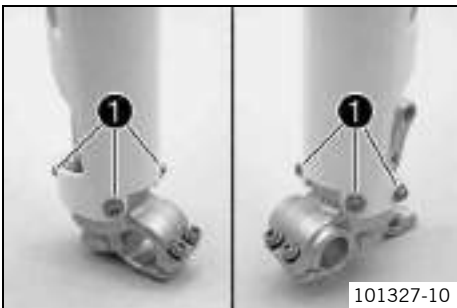


- Main work**
- Position the fork protection on the left fork leg. Mount and tighten screws ❶.
- Guideline
- | | | |
|---------------------------|----|--------------------|
| Remaining screws, chassis | M6 | 10 Nm (7.4 lbf ft) |
|---------------------------|----|--------------------|
- Position the fork protection on the right fork leg. Mount and tighten the screws.
- Guideline
- | | | |
|---------------------------|----|--------------------|
| Remaining screws, chassis | M6 | 10 Nm (7.4 lbf ft) |
|---------------------------|----|--------------------|

- Finishing work**
- Install the fork legs. 🛠️ (📖 p. 46)
 - Install the front wheel. 🛠️ (📖 p. 78)

11.11 Removing the lower triple clamp 🛠️ (EXC EU, EXC AUS, all XC-W models)


- Preparatory work**
- Remove the headlight mask with the headlight. (📖 p. 87)
 - Raise the motorcycle with the lift stand. (📖 p. 44)
 - Remove the front wheel. 🛠️ (📖 p. 78)
 - Remove the fork legs. (📖 p. 45)
 - Remove the front fender. (📖 p. 54)
 - Remove the handlebar cushion.
 - Open the cable holder in front of the right radiator and detach the wiring harness.

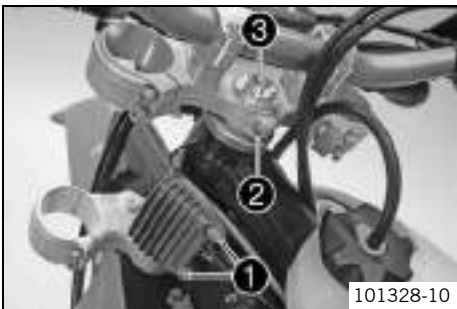

- Main work**
- Remove screws ❶ and hang the voltage regulator to one side.
 - Remove screw ❷ and screw ❸. Take off the upper triple clamp with the handlebar and set it aside.

**Info**

Protect the motorcycle and its attachments against damage by covering them.
Do not bend the cables and lines.

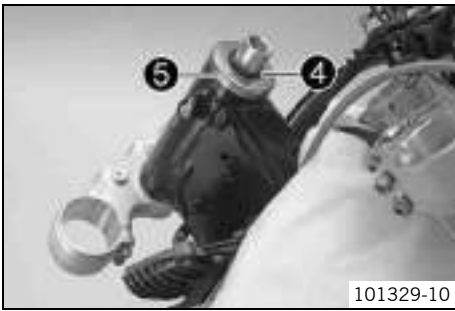

- Remove O-ring ④. Remove protective ring ⑤.
- Take out the lower triple clamp with the steering stem.
- Take out the upper steering head bearing.


11.12 Removing the lower triple clamp 🛠️ (EXC SIX DAYS)

Preparatory work

- Remove the headlight mask with the headlight. (🔧 p. 87)
- Raise the motorcycle with the lift stand. (🔧 p. 44)
- Remove the front wheel. 🛠️ (🔧 p. 78)
- Remove the fork legs. (🔧 p. 45)
- Remove the front fender. (🔧 p. 54)
- Remove the handlebar cushion.
- Open the cable holder in front of the right radiator and detach the wiring harness.


Main work

- Remove screws ① and hang the voltage regulator to the side.
- Remove screw ②. Remove screw ③, take off the upper triple clamp with the handlebar and set it aside.

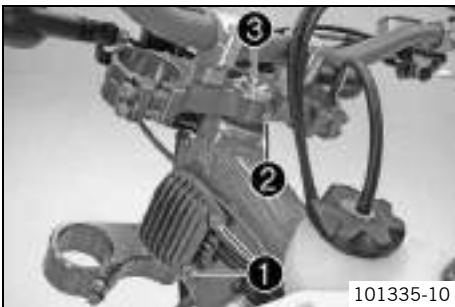


Info

Protect the motorcycle and its attachments against damage by covering them.
Do not bend the cables and lines.

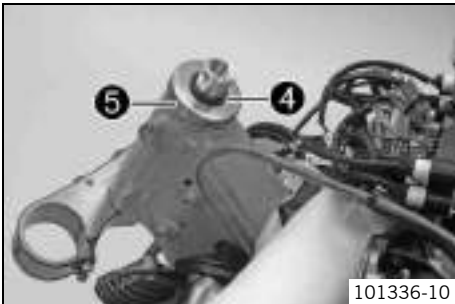


- Remove O-ring ④. Remove protective ring ⑤.
- Take out the lower triple clamp with the steering stem.
- Take out the upper steering head bearing.

11.13 Installing the lower triple clamp (EXC EU, EXC AUS, all XC-W models)

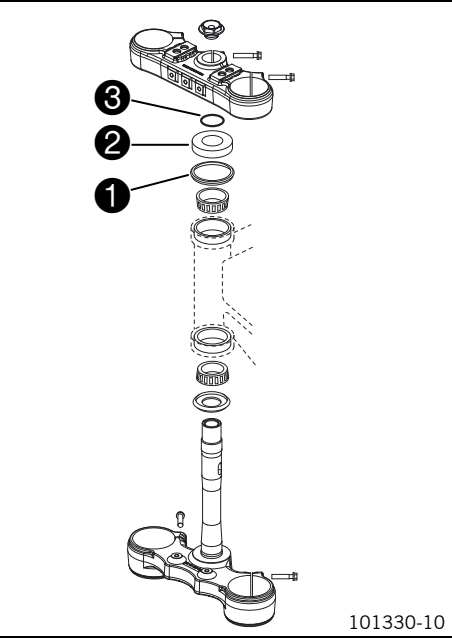

Main work


- Clean the bearing and sealing elements, check for damage, and grease.
High viscosity grease (☛ p. 116)
- Insert the lower triple clamp with the steering stem. Mount the upper steering head bearing.
- Check whether the top steering head seal ❶ is correctly positioned.
- Slide on protective ring ❷ and O-ring ❸.

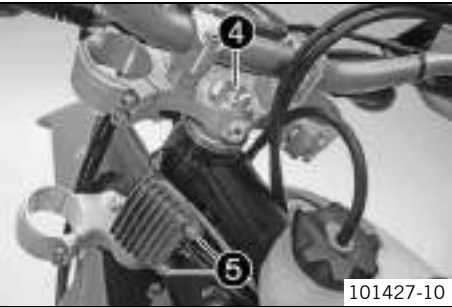

- Position the upper triple clamp with the steering.
- Mount screw ❹ but do not tighten yet.
- Position the clutch line, wiring harness, and voltage regulator. Mount and tighten screws ❺.

Guideline

Remaining screws, chassis	M6	10 Nm (7.4 lbf ft)
---------------------------	----	--------------------

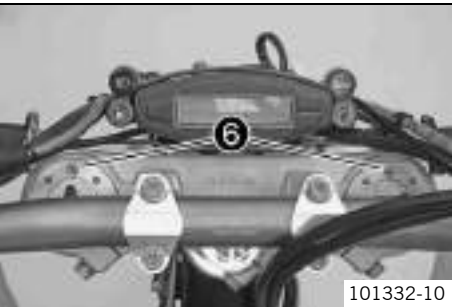


- Position the fork legs.



Info

Grooves are milled into the side of the upper end of the fork legs. The second milled groove (from the top) must be flush with the top edge of the upper triple clamp.
Position bleeder screws ❻ toward the front.

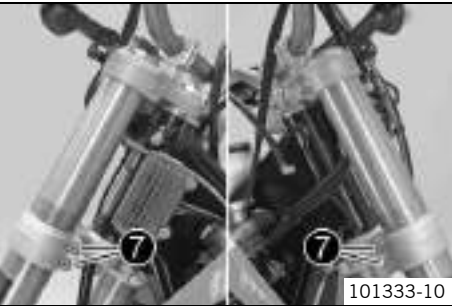

- Tighten screws ❷.

Guideline

Screw, bottom triple clamp	M8	15 Nm (11.1 lbf ft)
----------------------------	----	------------------------



- Tighten screw ❹.

Guideline


Screw, top steering head	M20x1.5	12 Nm (8.9 lbf ft)
--------------------------	---------	--------------------



- Tighten screw ⑧.

Guideline

Screw, top steering stem	M8	20 Nm (14.8 lbf ft)
--------------------------	----	------------------------

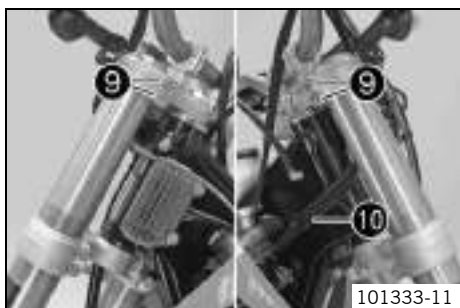


- Tighten screws ⑨.

Guideline

Screw, top triple clamp	M8	20 Nm (14.8 lbf ft)
-------------------------	----	------------------------

- Secure the wiring harness with cable holder ⑩.

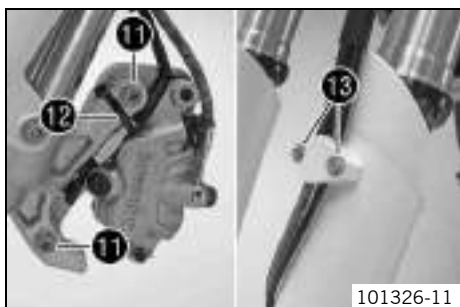

- Position the brake caliper. Mount and tighten screws ⑪.

Guideline


Screw, front brake caliper	M8	25 Nm (18.4 lbf ft)	Loctite® 243™
----------------------------	----	------------------------	---------------

- Mount cable binder ⑫.
- Position the brake line, wiring harness, and clamp. Mount and tighten screws ⑬.

Finishing work

- Install the front fender. (☛ p. 54)
- Mount the handlebar cushion.
- Refit the headlight mask with the headlight. (☛ p. 87)
- Check the headlight setting. (☛ p. 89)
- Install the front wheel. 🛞 (☛ p. 78)
- Check that the wiring harness, cables, and brake and clutch lines can move freely and are routed correctly.
- Check the steering head bearing play. (☛ p. 52)
- Remove the motorcycle from the lift stand. (☛ p. 44)


11.14 Installing the lower triple clamp (EXC SIX DAYS)

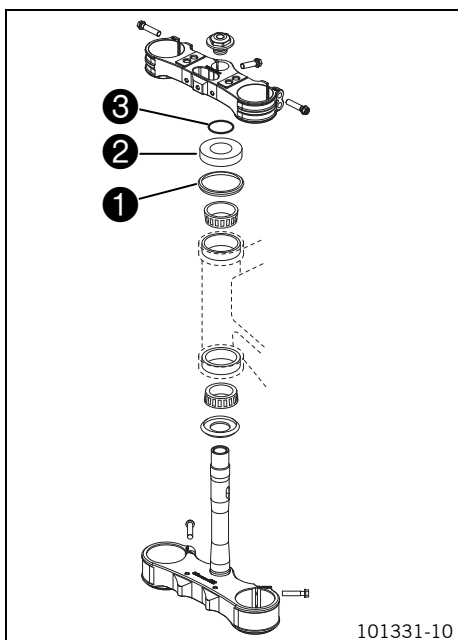**Main work**

- Clean the bearing and sealing elements, check for damage, and grease.

High viscosity grease (☛ p. 116)


- Insert the lower triple clamp with the steering stem. Mount the upper steering head bearing.
- Check whether the top steering head seal ① is correctly positioned.
- Slide on protective ring ② and O-ring ③.

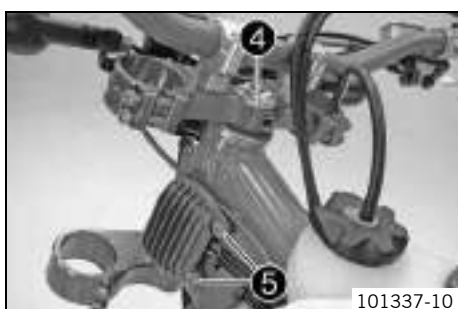

- Position the upper triple clamp with the steering.
- Mount screw ④ but do not tighten yet.
- Position the clutch line, wiring harness, and voltage regulator. Mount and tighten screws ⑤.

Guideline


Remaining screws, chassis	M6	10 Nm (7.4 lbf ft)
---------------------------	----	--------------------

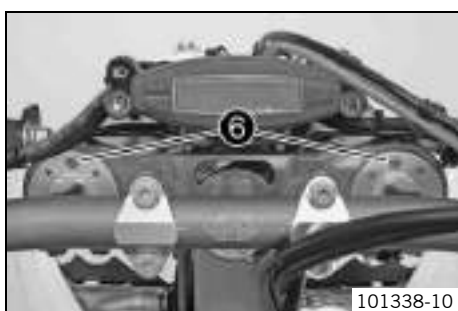

- Position the fork legs.

**Info**

Grooves are milled into the side of the upper end of the fork legs. The second milled groove (from the top) must be flush with the top edge of the upper triple clamp.
Position bleeder screws ⑥ toward the front.

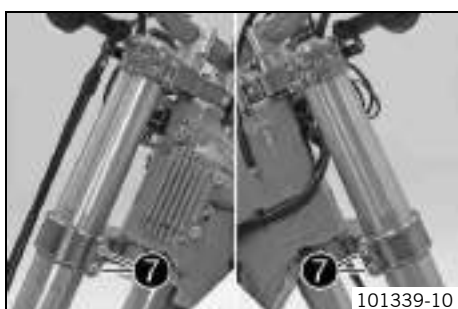

- Tighten screws ⑦.

Guideline


Screw, bottom triple clamp	M8	12 Nm (8.9 lbf ft)
----------------------------	----	--------------------



- Tighten screw ④.

Guideline


Screw, top steering head	M20x1.5	12 Nm (8.9 lbf ft)
--------------------------	---------	--------------------

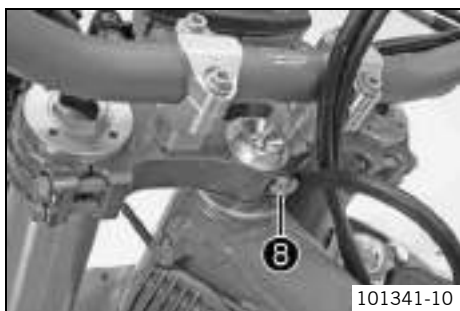

- Mount and tighten screw 8.

Guideline

Screw, top steering stem	M8	17 Nm (12.5 lbf ft)	Loctite® 243™
--------------------------	----	------------------------	---------------

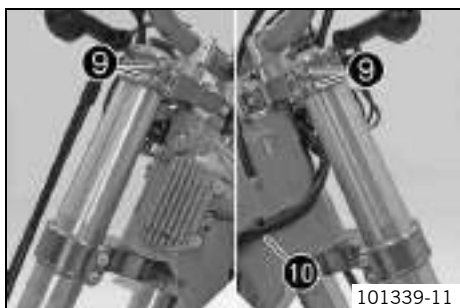


- Tighten screws 9.

Guideline

Screw, top triple clamp	M8	17 Nm (12.5 lbf ft)	
-------------------------	----	------------------------	--

- Secure the wiring harness with cable holder 10.

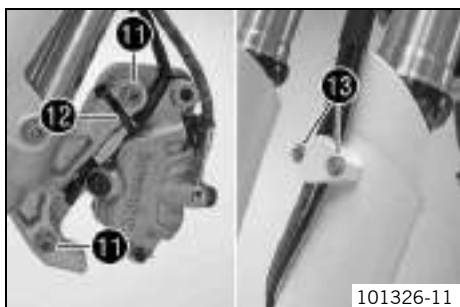

- Position the brake caliper. Mount and tighten screws 11.

Guideline

Screw, front brake caliper	M8	25 Nm (18.4 lbf ft)	Loctite® 243™
----------------------------	----	------------------------	---------------

- Mount cable binder 12.
- Position the brake line, wiring harness, and clamp. Mount and tighten screws 13.

Finishing work

- Install the front fender. (☛ p. 54)
- Mount the handlebar cushion.
- Refit the headlight mask with the headlight. (☛ p. 87)
- Check the headlight setting. (☛ p. 89)
- Install the front wheel. 🛠️ (☛ p. 78)
- Check that the wiring harness, cables, and brake and clutch lines can move freely and are routed correctly.
- Check the steering head bearing play. (☛ p. 52)
- Remove the motorcycle from the lift stand. (☛ p. 44)

11.15 Checking the steering head bearing play



Warning

Danger of accidents Unstable vehicle handling from incorrect steering head bearing play.

- Adjust the steering head bearing play without delay. (Your authorized KTM workshop will be glad to help.)




Info

If the bike is ridden with play in the steering head bearing, the bearing and the bearing seats in the frame can become damaged over time.

Preparatory work

- Raise the motorcycle with the lift stand. (☛ p. 44)

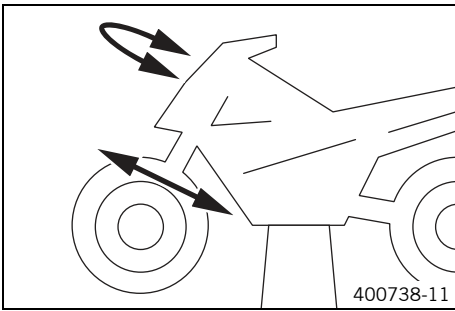**Main work**

- Move the handlebar to the straight-ahead position. Move the fork legs to and fro in the direction of travel.

No play should be noticeable in the steering head bearing.

- » If there is noticeable play present:

(EXC SIX DAYS)

- Adjust the play of the steering head bearing. (p. 53)

(EXC EU, EXC AUS, all XC-W models)

- Adjust the play of the steering head bearing. (p. 53)

- Move the handlebar to and fro over the entire steering range.

The handlebar must be able to move easily over the entire steering range. No resting locations should be noticeable.

- » If click positions are noticeable:

(EXC SIX DAYS)

- Adjust the play of the steering head bearing. (p. 53)


(EXC EU, EXC AUS, all XC-W models)

- Adjust the play of the steering head bearing. (p. 53)

- Check the steering head bearing and replace if required.

Finishing work

- Remove the motorcycle from the lift stand. (p. 44)

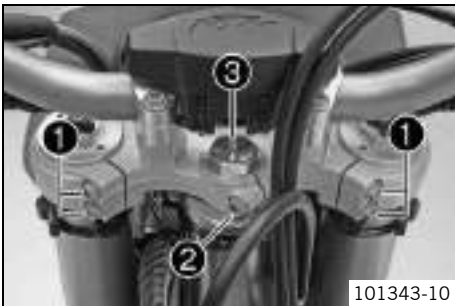11.16 Adjusting the play of the steering head bearing (EXC EU, EXC AUS, all XC-W models)**Preparatory work**

- Raise the motorcycle with the lift stand. (p. 44)

Main work

- Loosen screws ① and ②.
- Loosen and retighten screw ③.

Guideline

Screw, top steering head	M20x1.5	12 Nm (8.9 lbf ft)
--------------------------	---------	--------------------

- Using a plastic hammer, tap lightly on the upper triple clamp to avoid strains.
- Tighten screws ①.

Guideline

Screw, top triple clamp	M8	20 Nm (14.8 lbf ft)
-------------------------	----	---------------------

- Tighten screw ②.

Guideline

Screw, top steering stem	M8	20 Nm (14.8 lbf ft)
--------------------------	----	---------------------

Finishing work

- Check the steering head bearing play. (p. 52)
- Remove the motorcycle from the lift stand. (p. 44)

11.17 Adjusting the play of the steering head bearing (EXC SIX DAYS)**Preparatory work**

- Raise the motorcycle with the lift stand. (p. 44)

Main work

- Loosen screws ①. Remove screw ②.
- Loosen and retighten screw ③.

Guideline

Screw, top steering head	M20x1.5	12 Nm (8.9 lbf ft)
--------------------------	---------	--------------------

- Using a plastic hammer, tap lightly on the upper triple clamp to avoid strains.
- Fully tighten screws ①.

Guideline

Screw, top triple clamp	M8	17 Nm (12.5 lbf ft)
-------------------------	----	---------------------

- Mount and tighten screw ❷.


Guideline

Screw, top steering stem	M8	17 Nm (12.5 lbf ft)	Loctite® 243™
--------------------------	----	------------------------	---------------

Finishing work

- Check the steering head bearing play. (☞ p. 52)
- Remove the motorcycle from the lift stand. (☞ p. 44)

11.18 Greasing the steering head bearing 🛠

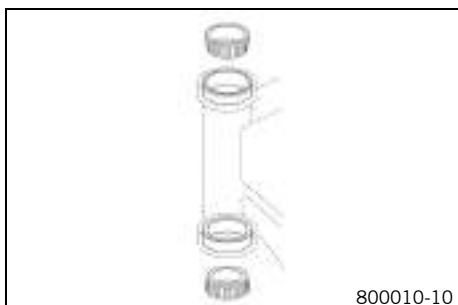


(EXC SIX DAYS)

- Remove the lower triple clamp. 🛠 (☞ p. 48)
- Install the lower triple clamp. 🛠 (☞ p. 51)

(EXC EU, EXC AUS, all XC-W models)


- Remove the lower triple clamp. 🛠 (☞ p. 47)
- Install the lower triple clamp. 🛠 (☞ p. 49)

11.19 Removing the front fender

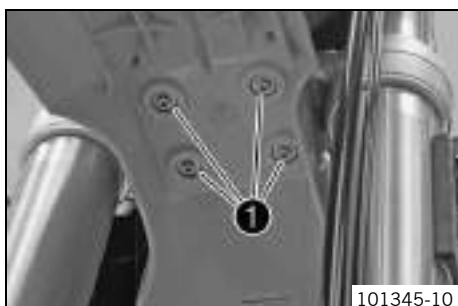

- Remove screws ❶. Remove the front fender.
- Make sure the spacers remain in place.

11.20 Installing the front fender

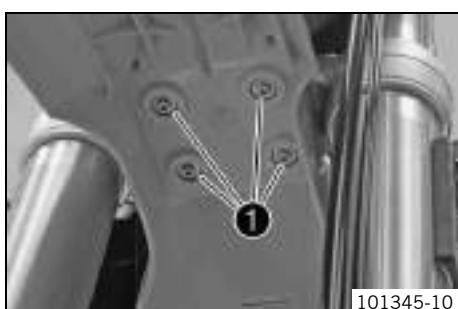

- Ensure that the spacers are mounted in the fender.
- Position the front fender. Mount and tighten screws ❶.

Guideline

Remaining screws, chassis	M6	10 Nm (7.4 lbf ft)
---------------------------	----	--------------------



Info

Make sure the holding lugs engage in the start number plate or headlight mask.


11.21 Removing the shock absorber 🛠


Preparatory work

- Raise the motorcycle with the lift stand. (☞ p. 44)

Main work

- Remove screw ❶ and lower the rear wheel with the swing arm as far as possible without blocking the rear wheel. Fix the rear wheel in this position.
- Remove screw ❷, push splash protector ❸ to the side, and remove the shock absorber.

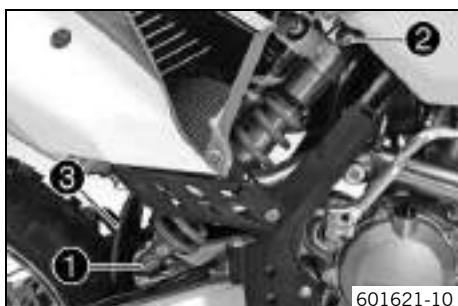

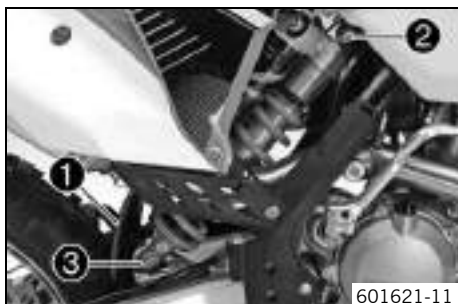11.22 Installing the shock absorber 

601621-11

Main work

- Push splash protector **1** to the side and position the shock absorber. Mount and tighten screw **2**.

Guideline

Screw, top shock absorber	M12	80 Nm (59 lbf ft)	Loctite® 2701
---------------------------	-----	----------------------	---------------

- Mount and tighten screw **3**.

Guideline

Screw, bottom shock absorber	M12	80 Nm (59 lbf ft)	Loctite® 2701
------------------------------	-----	----------------------	---------------

**Info**

The heim joint for the shock absorber at the swing arm is Teflon coated. It must not be greased with grease or with other lubricants. Lubricants dissolve the Teflon coating, thereby drastically reducing the service life.

Finishing work

- Remove the motorcycle from the lift stand. (🔧 p. 44)

11.23 Removing the seat



101346-10

- Remove screw **1**.
- Lift up the seat at the rear, pull it back and then remove it from above.

11.24 Mounting the seat




101347-01

- Hook in the front of the seat at the collar sleeve of the fuel tank, lower it at the rear and simultaneously push it forward.
- Make sure that the seat is correctly locked in.
- Mount and tighten the screw of the seat fixing.

Guideline

Remaining screws, chassis	M6	10 Nm (7.4 lbf ft)
---------------------------	----	--------------------


11.25 Removing the air filter box lid

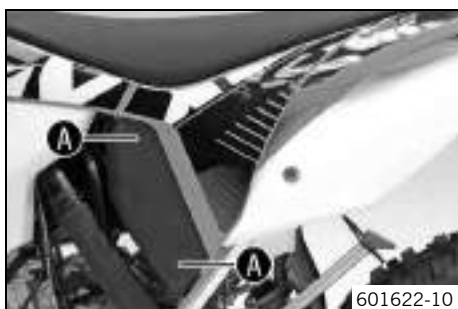

601622-10

- Pull off the air filter box lid in area **A** to the side and remove to the front.

11.26 Installing the air filter box lid

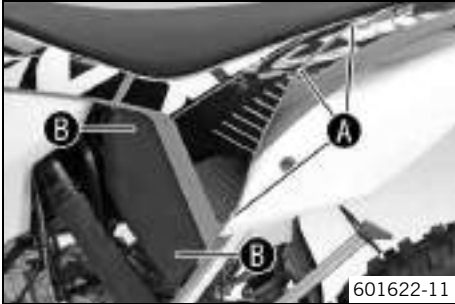

- Insert the air filter box lid into the rear area **A** and clip it into the front area **B**.

11.27 Removing the air filter

Note

Engine failure Unfiltered intake air has a negative effect on the service life of the engine.

- Never ride the vehicle without an air filter since dust and dirt can get into the engine and result in increased wear.



Warning

Environmental hazard Hazardous substances cause environmental damage.

- Oil, grease, filters, fuel, cleaners, brake fluid, etc., should be disposed of as stipulated in applicable regulations.

Preparatory work


- Remove the air filter box lid. (☛ p. 55)

Main work

- Detach air filter holder **1** at the bottom and swing it to one side. Remove the air filter with the air filter support.
- Remove the air filter from the air filter support.



11.28 Installing the air filter

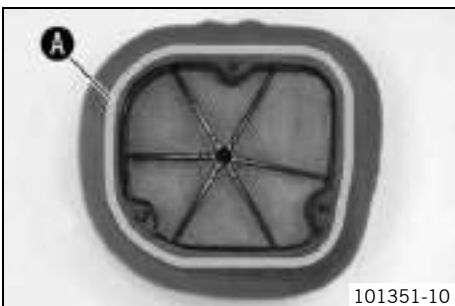

Main work

- Mount the clean air filter onto the air filter support.
- Apply grease to the section **A** of the air filter.


Long-life grease (☛ p. 116)

- Put in both parts together, position them and fix them with air filter holder **1**.



Info

If the air filter is not correctly mounted, dust and dirt can penetrate into the engine and can cause damage.

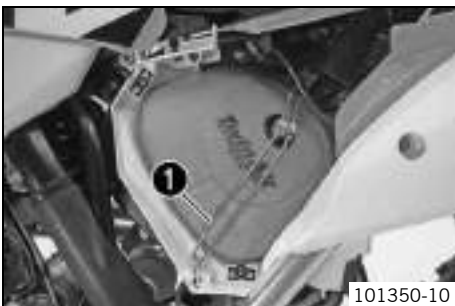

Finishing work

- Install the air filter box lid. (☛ p. 56)


11.29 Cleaning the air filter and air filter box 🛠️

**Warning****Environmental hazard** Hazardous substances cause environmental damage.

- Oil, grease, filters, fuel, cleaners, brake fluid, etc., should be disposed of as stipulated in applicable regulations.

**Info**

Do not clean the air filter with fuel or petroleum since these substances attack the foam.

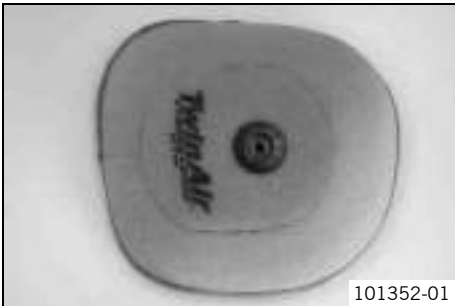**Preparatory work**

- Remove the air filter box lid. (🔧 p. 55)
- Remove the air filter. 🛠️ (🔧 p. 56)

Main work

- Wash the air filter thoroughly in special cleaning liquid and allow it to dry properly.

Air filter cleaner (🔧 p. 116)

**Info**

Only press the air filter to dry it, never wring it out.

- Oil the dry air filter with a high quality filter oil.

Oil for foam air filter (🔧 p. 117)

- Clean the air filter box.
- Check the intake flange for damage and firm seating.

Finishing work

- Install the air filter. 🛠️ (🔧 p. 56)
- Install the air filter box lid. (🔧 p. 56)

11.30 Sealing the air filter box 🛠️




- Seal the air filter box in the marked area A.

11.31 Removing main silencer


**Warning****Danger of burns** The exhaust system gets very hot when the vehicle is driven.

- Allow the exhaust system to cool down. Do not touch hot components.

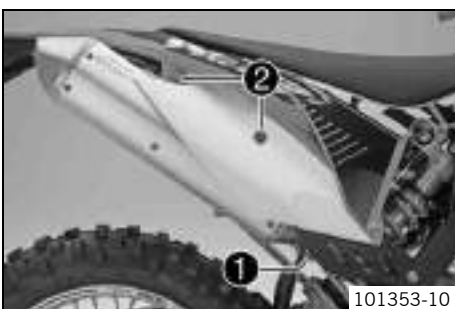

- Disconnect spring ❶.
- Remove screws ❷ and take off main silencer.

11.32 Installing the main silencer

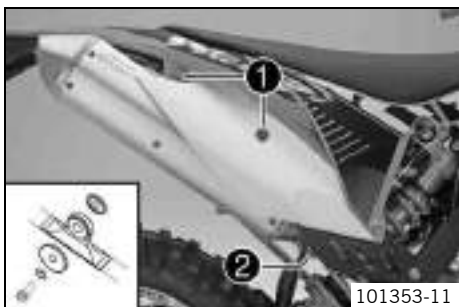

- Mount the main silencer. Mount and tighten screws ❶.

Guideline

Remaining screws, chassis	M6	10 Nm (7.4 lbf ft)
---------------------------	----	--------------------

- Reconnect spring ❷.

11.33 Changing the glass fiber yarn filling of the main silencer

**Warning**

Danger of burns The exhaust system gets very hot when the vehicle is driven.

- Allow the exhaust system to cool down. Do not touch hot components.

**Info**

Over a period, the fibers of the insulating material vanish into the air, and the silencer "burns out". Not only is the noise level higher, the performance characteristic changes.

Preparatory work

- Remove the main silencer. (☛ p. 57)

Main work


(all EXC models)


- Remove screws ❶ of connecting cap ❷.
- Take off the connecting cap with the perforated pipe, O-ring ❸, and glass fiber yarn filling ❹.
- Remove screws ❺ and take off silencer cap ❻ with O-ring ❼ and stuffing yarn ❽.
- Clean the parts that need to be reinstalled and check for damage.
- Mount the O-ring on the silencer cap.
- Mount the new stuffing yarn on the silencer cap and fasten with adhesive tape.
- Position the silencer cap. Mount and tighten the screws.
- Mount the O-ring on the connecting cap.
- Slide the new glass fiber yarn filling over the perforated pipe.
- Mount the connecting cap with the glass fiber yarn filling in the main silencer.

**Info**

Slide the glass fiber yarn filling into the main silencer with a blunt tool.

- Mount and tighten the screws.

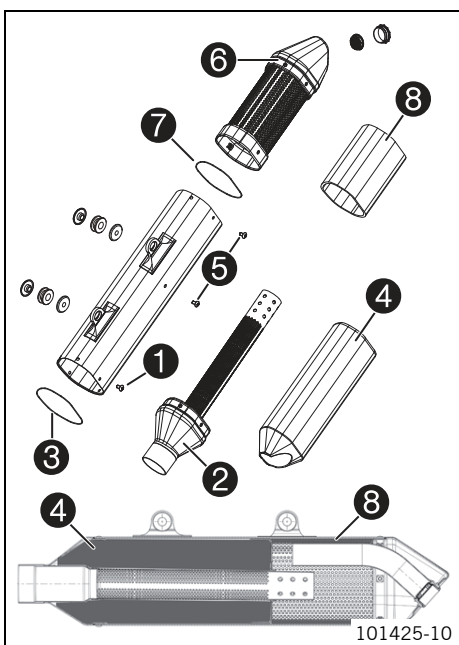

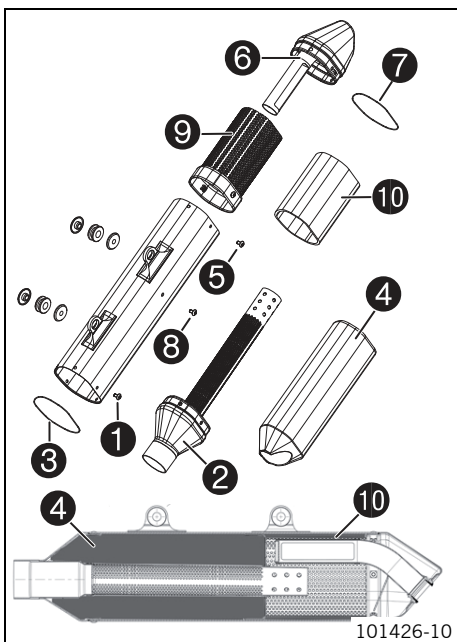**(all XC-W models)**

- Remove screws **1** of connecting cap **2**.
- Take off the connecting cap with the perforated pipe, O-ring **3** and glass fiber yarn filling **4**.
- Remove screws **5** and silencer cap **6** with O-ring **7**.
- Remove screw **8** and remove insert **9** together with stuffing yarn **10**.
- Clean the parts that need to be reinstalled and check for damage.
- Mount the new stuffing yarn on the insert and fasten with adhesive tape.
- Slide the insert with the stuffing yarn into the main silencer and fasten with the screw.
- Mount the O-ring on the connecting cap.
- Slide the new glass fiber yarn filling over the perforated pipe.
- Mount the connecting cap with the glass fiber yarn filling in the main silencer.

**Info**

Slide the glass fiber yarn filling into the main silencer with a blunt tool.

- Mount and tighten the screws.
- Mount the O-ring on the silencer cap.
- Position the silencer cap. Mount and tighten the screws.

Finishing work

- Install the main silencer. (🔧 p. 58)

11.34 Removing the fuel tank 🛠️**Danger**

Fire hazard Fuel is highly flammable.

- Never refuel the vehicle near open flames or burning cigarettes, and always switch off the engine first. Be careful that no fuel is spilt, especially on hot vehicle components. Clean up spilt fuel immediately.
- Fuel in the fuel tank expands when warm and can escape if the tank is overfilled. See the notes on refueling.

**Warning**

Danger of poisoning Fuel is poisonous and a health hazard.

- Avoid contact between fuel and skin, eyes and clothing. Do not inhale fuel vapors. If fuel gets into your eyes, rinse immediately with water and contact a doctor. Wash affected skin areas immediately with soap and water. If fuel is swallowed, contact a doctor immediately. Change clothing that has come into contact with fuel. Store fuel in a suitable canister according to regulations and keep it out of the reach of children.

Preparatory work


- Remove the seat. (🔧 p. 55)

Main work

- Disconnect electric plug-in connection **1** of the fuel pump.
- Remove the tube from the fuel tank breather.



101354-10

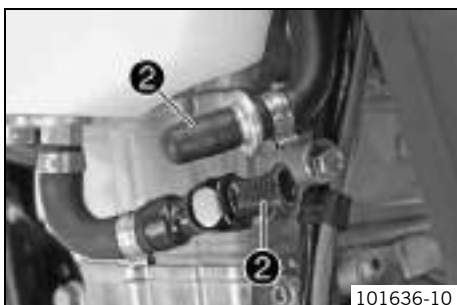

101636-10


- Thoroughly clean the plug-in connection of the fuel line using compressed air.

**Info**


Never let dirt enter the fuel line. Dirt in the fuel line clogs the injection valve.

- Disconnect the plug-in connection of the fuel line.
- Mount wash cap set **2**.


Wash cap set (81212016000)

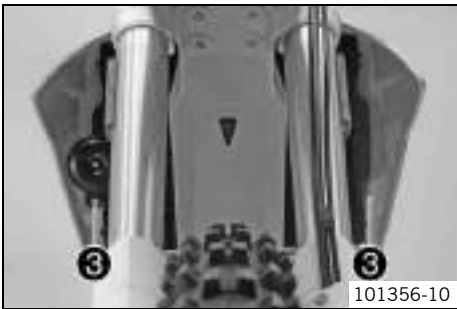

– Remove screws ❸ with the collar bushings and horn.

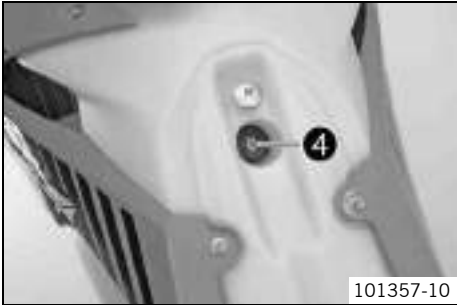

– Remove screw ❹ with the rubber bushing.

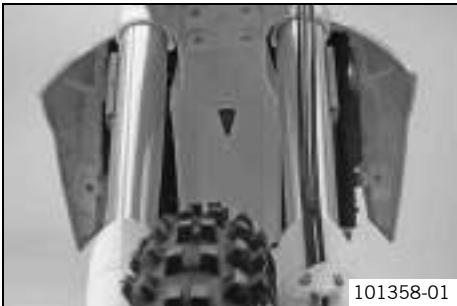

– Pull both spoilers off of the sides of the radiator bracket and lift off the fuel tank.

11.35 Installing the fuel tank

**Danger**
Fire hazard Fuel is highly flammable.

- Never refuel the vehicle near open flames or burning cigarettes, and always switch off the engine first. Be careful that no fuel is spilt, especially on hot vehicle components. Clean up spilt fuel immediately.
- Fuel in the fuel tank expands when warm and can escape if the tank is overfilled. See the notes on refueling.

**Warning**
Danger of poisoning Fuel is poisonous and a health hazard.

- Avoid contact of the fuel with skin, eyes and clothing. Do not inhale fuel vapors. If fuel gets into your eyes, rinse immediately with water and contact a doctor. Wash affected skin areas immediately with soap and water. If fuel is swallowed, contact a doctor immediately. Change clothing that has come into contact with fuel.




Main work

- Check the throttle cable routing. (☛ p. 66)
- Position the fuel tank and fit the two spoilers to the sides of the radiator bracket.
- Make sure that no cables are trapped or damaged.
- Mount the fuel tank breather.
- Mount and tighten screw ❶ with the rubber bushing.

Guideline


Remaining screws, chassis	M6	10 Nm (7.4 lbf ft)
---------------------------	----	--------------------

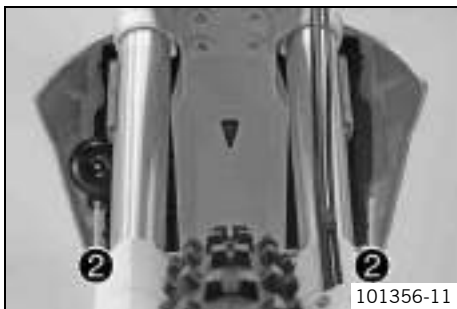

- Position the horn, and fit and tighten screws ② with collar bushings.

Guideline

Remaining screws, chassis	M6	10 Nm (7.4 lbf ft)
---------------------------	----	--------------------

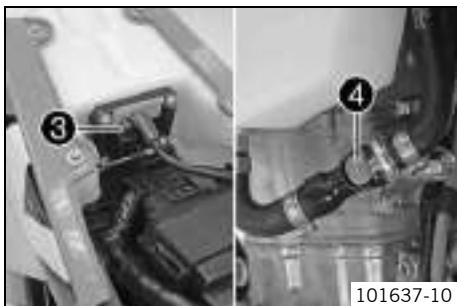

- Connect the electrical plug-in connection ③.
- Thoroughly clean the plug-in connection of the fuel line using compressed air.



Info

Never let dirt enter the fuel line. Dirt in the fuel line clogs the injection valve.

- Remove the wash cap set. Lubricate the O-ring and connect plug-in connection ④ of the fuel line.




Info

Route the cable and fuel line at a safe distance from the exhaust system.

Finishing work

- Mount the seat. (☛ p. 55)

11.36 Checking for chain dirt accumulation

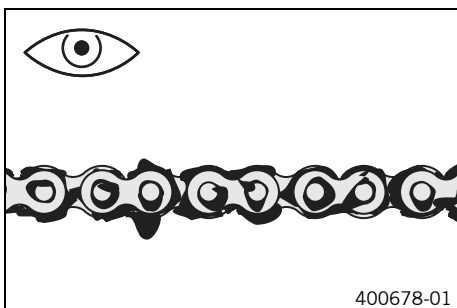

- Check the chain for coarse dirt accumulation.
 - » If the chain is very dirty:
 - Clean the chain. (☛ p. 61)

11.37 Cleaning the chain



Warning

Danger of accidents Oil or grease on the tires reduces their grip.

- Remove oil and grease with a suitable cleaning material.



Warning

Danger of accidents Reduced braking efficiency due to oil or grease on the brake discs.

- Always keep the brake discs free of oil and grease, and clean them with brake cleaner when necessary.



Warning


Environmental hazard Hazardous substances cause environmental damage.

- Oil, grease, filters, fuel, cleaners, brake fluid, etc., should be disposed of as stipulated in applicable regulations.



Info

The service life of the chain depends largely on its maintenance.

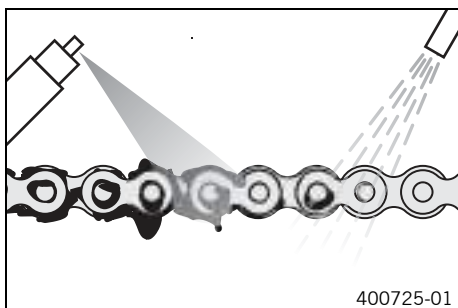


- Clean the chain regularly and then treat with chain spray.

Chain cleaner (☛ p. 116)

Off-road chain spray (☛ p. 116)

11.38 Checking the chain tension

- Warning**
Danger of accidents Danger caused by incorrect chain tension.
- If the chain tension is too high, the components of the secondary power train (chain, engine sprocket, rear sprocket, bearings in transmission and rear wheel) are under additional load. Apart from premature wear, in extreme cases the chain can rupture or the countershaft of the transmission can break. On the other hand, if the chain is loose, it can fall off the engine sprocket or the rear sprocket and block the rear wheel or damage the engine. Check the chain tension and correct if necessary.

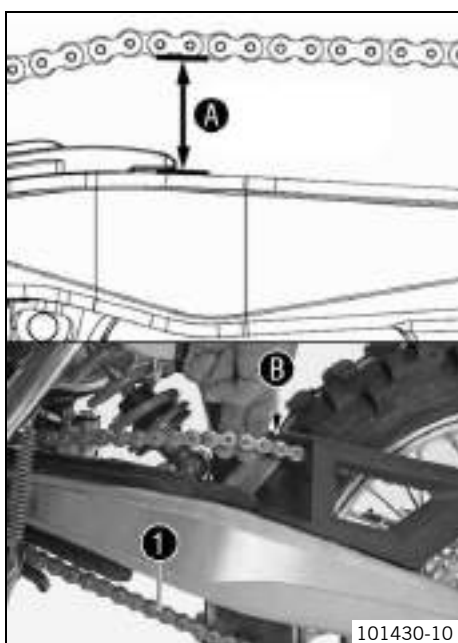

Preparatory work

- Raise the motorcycle with the lift stand. (☛ p. 44)

Main work

- Push the chain at the end of the chain sliding component upwards to measure the chain tension **A**.

i Info

The lower chain section **1** must be taut.

When the chain guard is mounted, it must be possible to pull up the chain at least to the point where it makes contact with chain guard **B**.

Chain wear is not always even, so you should repeat this measurement at different chain positions.

Chain tension	55... 58 mm (2.17... 2.28 in)
---------------	-------------------------------

- » If the chain tension does not meet specifications:
 - Adjust the chain tension. (☛ p. 62)

Finishing work

- Remove the motorcycle from the lift stand. (☛ p. 44)


11.39 Adjusting the chain tension

- Warning**
Danger of accidents Danger caused by incorrect chain tension.

- If the chain tension is too high, the components of the secondary power train (chain, engine sprocket, rear sprocket, bearings in transmission and rear wheel) are under additional load. Apart from premature wear, in extreme cases the chain can rupture or the countershaft of the transmission can break. On the other hand, if the chain is loose, it can fall off the engine sprocket or the rear sprocket and block the rear wheel or damage the engine. Check the chain tension and correct if necessary.

Preparatory work

- Raise the motorcycle with the lift stand. (☛ p. 44)
- Check the chain tension. (☛ p. 62)

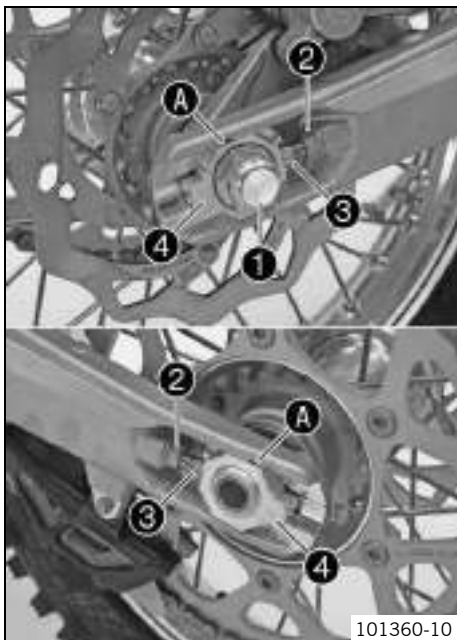**Main work**

- Loosen nut ❶.
- Loosen nuts ❷.
- Adjust the chain tension by turning adjusting screws ❸ left and right.

Guideline

Chain tension	55... 58 mm (2.17... 2.28 in)
Turn adjusting screws ❸ on the left and right so that the markings on the left and right chain adjusters are in the same position relative to the reference marks A. The rear wheel is then correctly aligned.	

- Tighten nuts ❷.
- Make sure that the chain adjusters ❹ are fitted correctly on the adjusting screws ❸.
- Tighten nut ❶.

Guideline

Nut, rear wheel spindle	M20x1.5	80 Nm (59 lbf ft)
-------------------------	---------	-------------------

**Info**

The wide adjustment range of the chain adjusters (32 mm (1.26 in)) enables different secondary ratios with the same chain length. Chain adjusters ❹ can be turned by 180°.

Finishing work

- Remove the motorcycle from the lift stand. (🔧 p. 44)

11.40 Checking the chain, rear sprocket, engine sprocket and chain guide**Preparatory work**

- Raise the motorcycle with the lift stand. (🔧 p. 44)

Main work

- Shift gear to neutral.
- Check the rear sprocket and engine sprocket for wear.
 - » If the rear sprocket or engine sprocket is worn:
 - Change the rear sprocket or engine sprocket. 🔧

**Info**

The engine sprocket, rear sprocket and chain should always be replaced together.

- Pull on the upper part of the chain with the specified weight A.

Guideline

Weight of chain wear measurement	10... 15 kg (22... 33 lb.)
----------------------------------	----------------------------

- Measure the distance B of 18 chain links in the lower chain section.

**Info**



Chain wear is not always even, so you should repeat this measurement at different chain positions.

Maximum distance B at the longest chain section	272 mm (10.71 in)
---	-------------------

- » If the distance B is greater than the specified measurement:
 - Change the chain. 🔧

**Info**

When the chain is replaced, the rear sprocket and engine sprocket should also be changed. New chains wear out faster on old, worn sprockets.

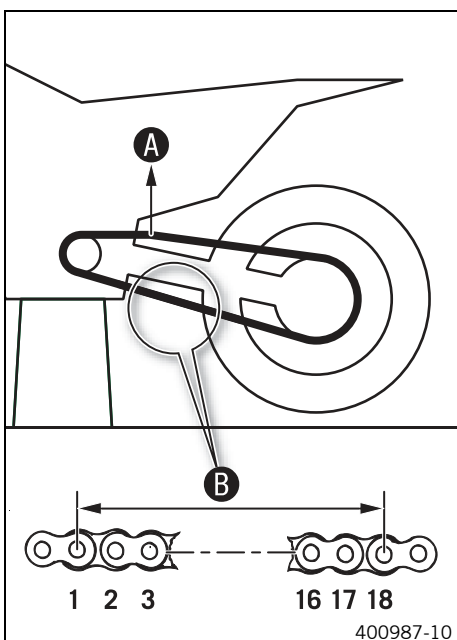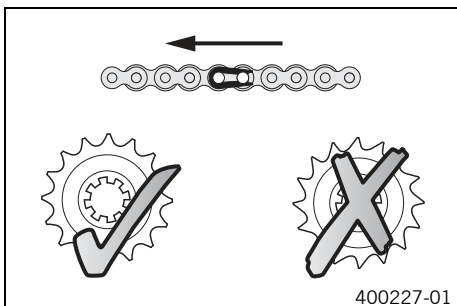




- Check the chain sliding guard for wear.
 - » If the bottom edge of the chain bolt is in line with or below the chain sliding guard:
 - Change the chain sliding guard. 🛠️
- Check that the chain sliding guard is firmly seated.
 - » If the chain sliding guard is loose:
 - Tighten the chain sliding guard.

Guideline


Screw, chain sliding guard	M6	6 Nm (4.4 lbf ft)	Loctite® 243™
----------------------------	----	----------------------	---------------

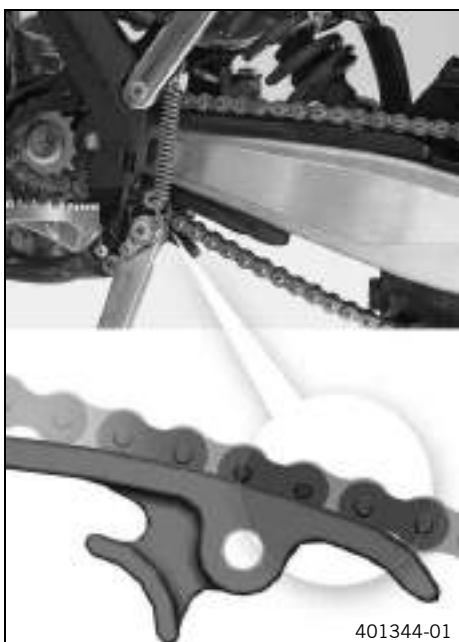

- Check the chain sliding piece for wear.
 - » If the bottom edge of the chain bolt is in line with or below the chain sliding piece:
 - Change the chain sliding piece. 🛠️
- Check that the chain sliding piece is firmly seated.
 - » If the chain sliding piece is loose:
 - Tighten the chain sliding piece.

Guideline

Screw, chain sliding piece	M8	15 Nm (11.1 lbf ft)
----------------------------	----	------------------------

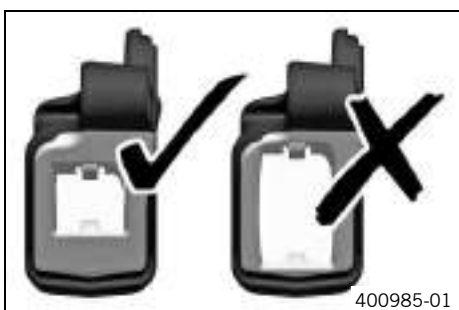


- Check the chain guide for wear.

**Info**

Wear is visible on the front of the chain guide.

- » If the light part of the chain guide is worn:
 - Change the chain guide. 🛠️

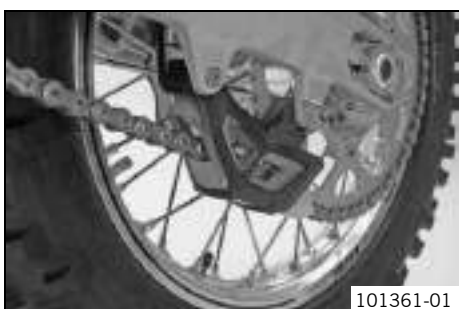

- Check that the chain guide is firmly seated.
 - » If the chain guide is loose:
 - Tighten the chain guide.

Guideline

Remaining screws, chassis	M6	10 Nm (7.4 lbf ft)
Remaining nuts, chassis	M6	10 Nm (7.4 lbf ft)

Finishing work

- Remove the motorcycle from the lift stand. (🔧 p. 44)

11.41 Adjusting the chain guide 🛠️



- Remove the nut of screw ❶.
- Remove screws ❶ and ❷. Take off the chain guide.

Condition

Number of teeth: ≤ 44 teeth

- Insert nut ❸ in hole ❶. Position the chain guide.
- Mount and tighten screws ❶ and ❷.

Guideline

Remaining screws, chassis	M6	10 Nm (7.4 lbf ft)
---------------------------	----	-----------------------

- Mount the nut on screw ❶ and tighten.

Guideline

Remaining nuts, chassis	M6	10 Nm (7.4 lbf ft)
-------------------------	----	-----------------------

Condition

Number of teeth: ≥ 45 teeth

- Insert nut ❸ in hole ❷. Position the chain guide.
- Mount and tighten screws ❶ and ❷.

Guideline

Remaining screws, chassis	M6	10 Nm (7.4 lbf ft)
---------------------------	----	-----------------------

- Mount the nut on screw ❶ and tighten.

Guideline

Remaining nuts, chassis	M6	10 Nm (7.4 lbf ft)
-------------------------	----	-----------------------

11.42 Checking the frame 🛠️



- Check the frame for cracking and deformation.
 - » If the frame exhibits cracking or deformation due to a mechanical impact:
 - Change the frame. 🛠️

**Info**

A frame that has been damaged due to a mechanical impact must always be changed. Repair of the frame is not authorized by KTM.

11.43 Checking the swingarm 🛠️



- Check the swingarm for damage, cracking, and deformation.
 - » If the swingarm shows signs of damage, cracking, or deformation:
 - Change the swingarm. 🛠️

**Info**

A damaged swingarm must always be changed. Repair of the swingarm is not authorized by KTM.

11.44 Checking the throttle cable routing



Preparatory work

- Remove the seat. (☞ p. 55)
- Remove the fuel tank. 🛠️ (☞ p. 59)

Main work

- Check the throttle cable routing.


Both throttle cables must be routed side by side behind the handlebars and above the fuel tank bearing to the throttle valve body.

- » If the throttle cable is not routed as specified:
 - Correct the throttle cable routing.

Finishing work

- Install the fuel tank. 🛠️ (☞ p. 60)
- Mount the seat. (☞ p. 55)

11.45 Checking the rubber grip

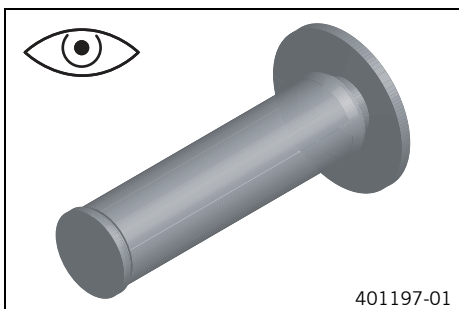

- Check the rubber grips on the handlebar for damage and wear and to ensure they are firmly seated.
 - » If a rubber grip is damaged, worn or loose:
 - Change and secure the rubber grip.

Rubber grip adhesive (00062030051) (☞ p. 117)

11.46 Additionally securing the rubber grip



Preparatory work

- Check the rubber grip. (☞ p. 66)


Main work

- Secure the rubber grip at two points using the securing wire.

Securing wire (54812016000)

Wire twister forceps (U6907854)

- ✓ The twisted wire ends face away from the hands and are bent toward the rubber grip.

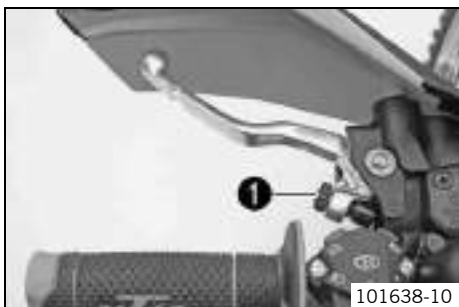11.47 Adjusting the basic position of the clutch lever


- Adjust the basic setting of the clutch lever to your hand size by turning adjusting screw ❶.

i Info

Turn the adjusting screw clockwise to increase the distance between the clutch lever and the handlebar.
 Turn the adjusting screw counterclockwise to decrease the distance between the clutch lever and the handlebar.
 The range of adjustment is limited.
 Turn the adjusting screw by hand only, and do not apply any force.
 Do not make any adjustments while riding!

11.48 Checking/correcting the fluid level of the hydraulic clutch

i Info
 The fluid level rises with increased wear of the clutch lining discs.

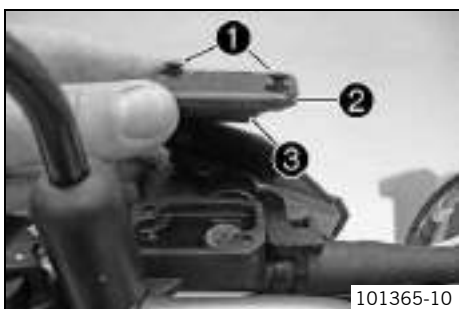

- Move the clutch fluid reservoir mounted on the handlebar to a horizontal position.
- Remove screws ❶.
- Remove cover ❷ with membrane ❸.
- Check the fluid level.

Fluid level below container rim	4 mm (0.16 in)
---------------------------------	----------------

- » If the fluid level does not meet specifications:
 - Correct the fluid level of the hydraulic clutch.

Brake fluid DOT 4 / DOT 5.1 (☛ p. 114)

- Position the cover with the membrane. Mount and tighten the screws.


i Info

Clean up overflowed or spilt brake fluid immediately with water.

11.49 Changing the hydraulic clutch fluid ☛

Warning
Environmental hazard Hazardous substances cause environmental damage.

- Oil, grease, filters, fuel, cleaners, brake fluid, etc., should be disposed of as stipulated in applicable regulations.

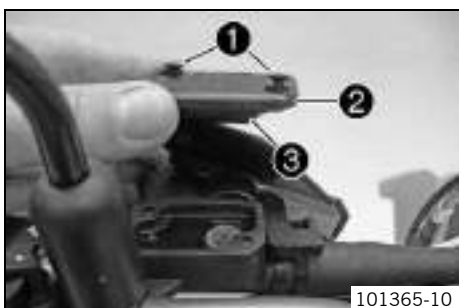

- Move the clutch fluid reservoir mounted on the handlebar to a horizontal position.
- Remove screws ❶.
- Remove cover ❷ with membrane ❸.



- Fill bleeding syringe ❹ with the appropriate hydraulic fluid.

Bleed syringe (50329050000)

Brake fluid DOT 4 / DOT 5.1 (☛ p. 114)

- On the slave cylinder of the clutch, remove bleeder screw ❺ and mount bleeding syringe ❹.



- Inject the liquid into the system until it escapes from openings ⑥ of the master cylinder without bubbles.
- To prevent overflow, drain fluid occasionally from the master cylinder reservoir.
- Remove the bleeding syringe. Mount and tighten screws bleeder screw.
- Correct the fluid level of the hydraulic clutch.

Guideline

Fluid level below container rim	4 mm (0.16 in)
---------------------------------	----------------

- Position the cover with the membrane. Mount and tighten the screws.

11.50 Removing the engine guard (EXC SIX DAYS, EXC AUS)



- Turn quick release ① counterclockwise until it disengages. Remove the engine guard.

11.51 Installing the engine guard (EXC SIX DAYS, EXC AUS)




- Attach the engine guard on the frame at the rear and swing up at the front.
- Turn quick release ① clockwise all the way.

12.1 Checking free travel of hand brake lever

**Warning****Danger of accidents** Brake system failure.


- If there is no free travel on the hand brake lever, pressure builds up on the front brake circuit. The front brake may fail due to overheating. Adjust the free travel on hand brake lever according to specifications.

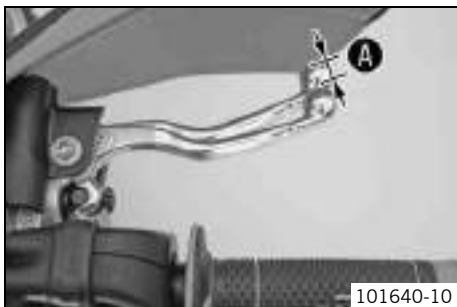**(all EXC models)**

- Push the hand brake to the handlebar and check free travel **A**.

Free travel of hand brake lever	$\geq 3 \text{ mm } (\geq 0.12 \text{ in})$
---------------------------------	---

- » If the free travel does not meet specifications:
 - Adjust the free travel of the hand brake lever. (🔧 p. 69)

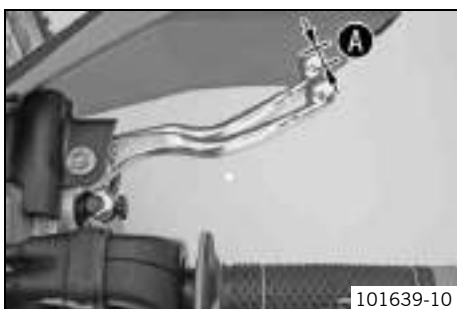
**(all XC-W models)**

- Push the hand brake lever forwards and check free travel **A**.

Free travel of hand brake lever	$\geq 3 \text{ mm } (\geq 0.12 \text{ in})$
---------------------------------	---

- » If the free travel does not meet specifications:
 - Adjust the basic position of the hand brake lever. (🔧 p. 69)

12.2 Adjusting free travel of hand brake lever (all EXC models)

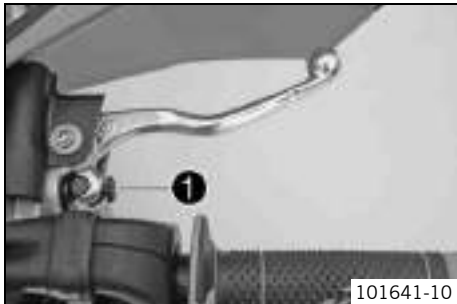


- Check the free travel of the hand brake lever. (🔧 p. 69)
- Adjust the free travel of the hand brake lever with adjusting screw **1**.

**Info**

Turn the adjustment screw clockwise to reduce free travel. The pressure point moves away from the handlebar.
 Turn the adjustment screw counterclockwise to increase free travel. The pressure point moves towards the handlebar.
 The range of adjustment is limited.
 Turn the adjusting screw by hand only, and do not apply any force.
 Do not make any adjustments while riding!

12.3 Adjusting the basic position of the hand brake lever (all XC-W models)

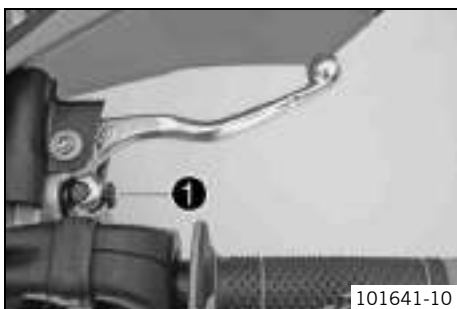

- Check the free travel of the hand brake lever. (🔧 p. 69)
- Adjust the basic setting of the hand brake lever to your hand size by turning adjusting screw **1**.


**Info**

Turn the adjusting screw clockwise to increase the distance between the hand brake lever and the handlebar.
 Turn the adjusting screw counterclockwise to decrease the distance between the hand brake lever and the handlebar.
 The range of adjustment is limited.
 Turn the adjusting screw by hand only, and do not apply any force.
 Do not make any adjustments while riding!

12.4 Checking the brake discs

**Warning****Danger of accidents** Reduced braking efficiency due to worn brake disc(s).

- Change the worn brake disc(s) without delay. (Your authorized KTM workshop will be glad to help.)

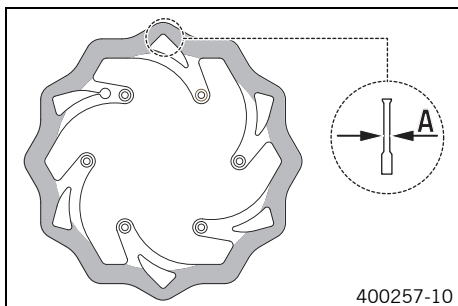

400257-10

- Check the thickness of the front and rear brake discs at several places on the disk to see if it conforms to measurement **A**.

**Info**

Wear reduces the thickness of the brake disc around the area used by the brake linings.

Brake discs - wear limit

Front	2.5 mm (0.098 in)
Rear	3.5 mm (0.138 in)

- » If the brake disc thickness is less than the specified value:
 - Change the brake disc.
- Check the front and rear brake discs for damage, cracking and deformation.
 - » If the brake disc shows signs of damage, cracking, or deformation:
 - Change the brake disc.

12.5 Checking the front brake fluid level

**Warning****Danger of accidents** Failure of the brake system.

- If the brake fluid level falls below the **MIN** mark, this indicates a leakage in the brake system or worn-out brake linings. Check the brake system and do not continue riding. (Your authorized KTM workshop will be glad to help.)

**Warning****Danger of accidents** Reduced braking efficiency due to old brake fluid.

- Change the brake fluid of the front and rear brake according to the service schedule. (Your authorized KTM workshop will be glad to help.)



C00123-10

- Move the brake fluid reservoir mounted on the handlebar to a horizontal position.
- Check the brake fluid level in the viewer **1**.
 - » If the brake fluid is below the **MIN** marking:
 - Add front brake fluid. 🛠️ (📖 p. 70)

12.6 Adding front brake fluid 🛠️

**Warning****Danger of accidents** Failure of the brake system.

- If the brake fluid level falls below the **MIN** mark, this indicates a leakage in the brake system or worn-out brake linings. Check the brake system and do not continue riding. (Your authorized KTM workshop will be glad to help.)

**Warning****Skin irritation** Brake fluid can cause skin irritation on contact.

- Avoid contact with skin and eyes, and keep out of the reach of children.
- Wear suitable protective clothing and goggles.
- If brake fluid comes into contact with the eyes, flush the eyes thoroughly with water and consult a physician immediately.

**Warning****Danger of accidents** Reduced braking efficiency due to old brake fluid.

- Change the brake fluid of the front and rear brake according to the service schedule. (Your authorized KTM workshop will be glad to help.)

**Warning****Environmental hazard** Hazardous substances cause environmental damage.


- Oil, grease, filters, fuel, cleaners, brake fluid, etc., should be disposed of as stipulated in applicable regulations.

**Info**

Never use DOT 5 brake fluid! It is silicone-based and purple in color. Oil seals and brake lines are not designed for DOT 5 brake fluid.

Avoid contact between brake fluid and painted parts. Brake fluid attacks paint!

Use only clean brake fluid from a sealed container.

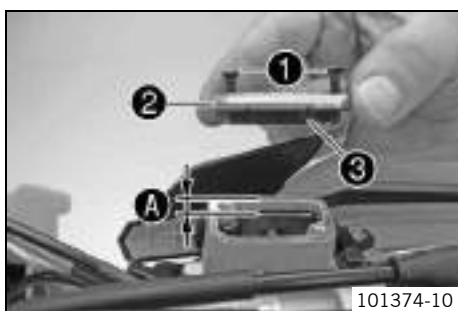

- Move the brake fluid reservoir mounted on the handlebar to a horizontal position.
- Remove screws ❶.
- Remove cover ❷ with membrane ❸.
- Add brake fluid to level A.

Guideline

Dimension A (brake fluid level below top edge of container)	5 mm (0.2 in)
---	---------------

Brake fluid DOT 4 / DOT 5.1 (☞ p. 114)
--

- Position the cover with the membrane. Mount and tighten the screws.


**Info**

Clean up overflowed or spilt brake fluid immediately with water.

12.7 Checking the front brake linings

**Warning****Danger of accidents** Reduced braking efficiency caused by worn brake linings.

- Change worn brake linings immediately. (Your authorized KTM workshop will be glad to help.)

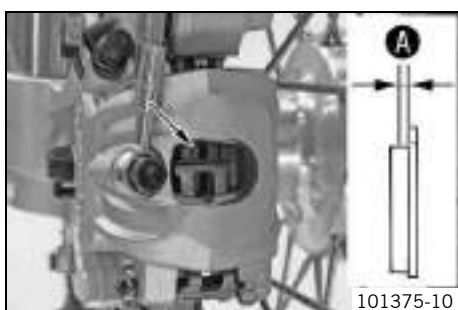

- Check the brake linings for minimum thickness A.

Minimum thickness A	≥ 1 mm (≥ 0.04 in)
---------------------	--------------------

- » If the minimum thickness is less than specified:
 - Change the front brake linings. ☞ (☞ p. 71)
- Check the brake linings for damage and cracking.
 - » If damage or cracking is visible:
 - Change the front brake linings. ☞ (☞ p. 71)

12.8 Changing the front brake linings ☞

**Warning****Danger of accident** Brake system failure.

- Maintenance work and repairs must be carried out professionally. (Your authorized KTM workshop will be glad to help.)

**Warning****Skin irritation** Brake fluid can cause skin irritation on contact.

- Avoid contact with skin and eyes, and keep out of the reach of children.
- Wear suitable protective clothing and goggles.
- If brake fluid comes into contact with the eyes, flush the eyes thoroughly with water and consult a physician immediately.

**Warning**

Danger of accidents Reduced braking efficiency due to old brake fluid.

- Change the brake fluid of the front and rear brake according to the service schedule. (Your authorized KTM workshop will be glad to help.)

**Warning**

Danger of accidents Reduced braking efficiency due to oil or grease on the brake discs.

- Always keep the brake discs free of oil and grease, and clean them with brake cleaner when necessary.

**Warning**

Danger of accidents Reduced braking efficiency due to use of non-approved brake linings.

- Brake linings available from accessory suppliers are often not tested and approved for use on KTM vehicles. The construction and friction factor of the brake linings and therefore the brake power can differ considerably from the original KTM brake linings. If brake linings are used that differ from the originals, there is no guarantee that they comply with the original license. The vehicle no longer corresponds to the condition at delivery, and the warranty is no longer valid.

**Warning**

Environmental hazard Hazardous substances cause environmental damage.


- Oil, grease, filters, fuel, cleaners, brake fluid, etc., should be disposed of as stipulated in applicable regulations.

**Info**

Never use DOT 5 brake fluid! This is based on silicone oil and is colored purple. Oil seals and brake lines are not designed for DOT 5 brake fluid.

Avoid contact between brake fluid and painted parts. Brake fluid attacks paint!

Use only clean brake fluid from a sealed container.

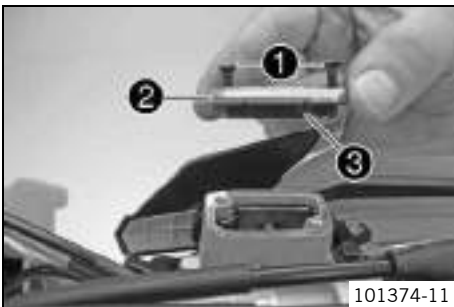


101374-11

- Move the brake fluid reservoir mounted on the handlebar to a horizontal position.
- Remove screws ❶.
- Remove cover ❷ with membrane ❸.
- Press the brake caliper onto the brake disc by hand in order to push back the brake pistons. Ensure that brake fluid does not overflow from the brake fluid reservoir, using suction to remove it if it does.


**Info**

Make sure when pushing back the brake pistons that you do not press the brake caliper against the spokes.

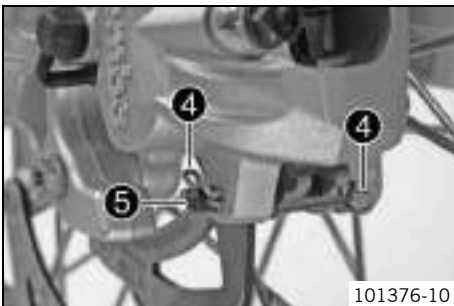


101376-10

- Remove cotter pin ❹, pull out pin ❺, and remove the brake linings.
- Clean the brake caliper and brake caliper support.

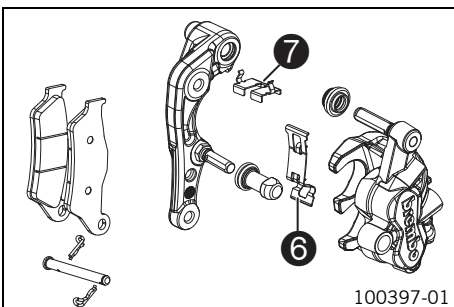


100397-01

- Check that leaf spring ❻ in the brake caliper and sliding plate ❼ in the brake caliper support are seated correctly.

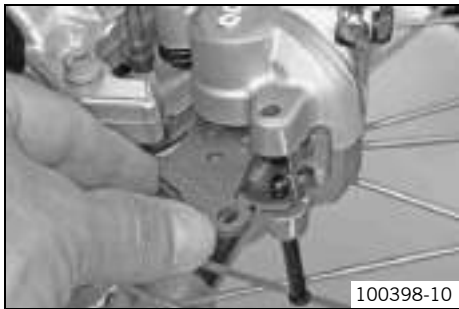

- Insert the brake linings, insert the pin, and mount the cotter pin.
- Operate the hand brake lever repeatedly until the brake linings are in contact with the brake disc and there is a pressure point.

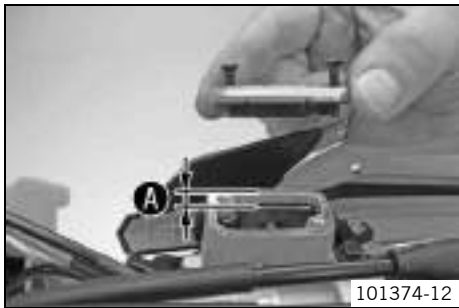

- Correct the brake fluid quantity to level **A**.

Guideline

Measurement of A	5 mm (0.2 in)
Brake fluid DOT 4 / DOT 5.1 (🔧 p. 114)	

- Position the cover with the membrane. Mount and tighten the screws.

**Info**
Clean up overflowed or spilt brake fluid immediately with water.

12.9 Checking the free travel of foot brake lever

**Warning**
Danger of accidents Brake system failure.

- If there is no free travel on the foot brake lever, pressure builds up on the rear brake circuit. The rear brake may fail due to overheating. Adjust the free travel on foot brake lever according to specifications.



- Disconnect spring **1**.
- Move the foot brake lever back and forth between the end stop and the contact to the foot brake cylinder piston and check free travel **A**.

Guideline


Free travel at foot brake lever	3... 5 mm (0.12... 0.2 in)
---------------------------------	----------------------------

- » If the free travel does not meet specifications:
 - Adjust the basic position of the foot brake lever. 🛠️ (🔧 p. 73)
- Reconnect spring **1**.

12.10 Adjusting the basic position of the foot brake lever 🛠️

**Warning**
Danger of accidents Brake system failure.

- If there is no free travel on the foot brake lever, pressure builds up on the rear brake circuit. The rear brake may fail due to overheating. Adjust the free travel on foot brake lever according to specifications.

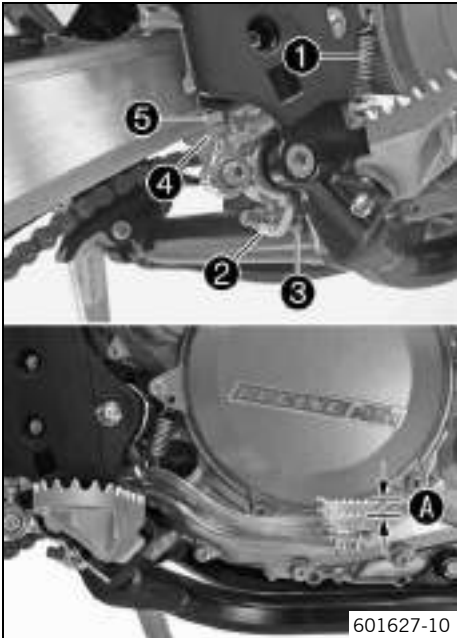

- Disconnect spring ❶.
- Loosen nut ❹ and, with push rod ❺, turn it back until you have maximum free travel.
- To adjust the basic position of the foot brake lever individually, loosen nut ❷ and turn screw ❸ accordingly.

Info
The range of adjustment is limited.

- Turn push rod ❺ accordingly until you have free travel A. If necessary, adjust the basic position of the foot brake lever.

Guideline

Free travel at foot brake lever	3... 5 mm (0.12... 0.2 in)
---------------------------------	----------------------------

- Hold screw ❸ and tighten nut ❷.

Guideline

Nut, foot brake lever stop	M8	20 Nm (14.8 lbf ft)
----------------------------	----	------------------------

- Hold push rod ❺ and tighten nut ❹.

Guideline

Remaining nuts, chassis	M6	10 Nm (7.4 lbf ft)
-------------------------	----	--------------------

- Reconnect spring ❶.

12.11 Checking the rear brake fluid level

Warning
Danger of accidents Failure of the brake system.

- If the brake fluid level falls below the **MIN** mark, this indicates a leakage in the brake system or worn-out brake linings. Check the brake system and do not continue riding. (Your authorized KTM workshop will be glad to help.)

Warning
Danger of accidents Reduced braking efficiency due to old brake fluid.

- Change the brake fluid of the front and rear brake according to the service schedule. (Your authorized KTM workshop will be glad to help.)



- Stand the vehicle upright.
- Check the brake fluid level in the viewer ❶.
 - » When in the viewer ❶ an air bubble is visible:
 - Add brake fluid to the rear brake circuit. 🛠️ (📖 p. 74)

12.12 Adding brake fluid to the rear brake circuit 🛠️

Warning
Danger of accidents Failure of the brake system.

- If the brake fluid level falls below the **MIN** mark, this indicates a leakage in the brake system or worn-out brake linings. Check the brake system and do not continue riding. (Your authorized KTM workshop will be glad to help.)

Warning
Skin irritation Brake fluid can cause skin irritation on contact.

- Avoid contact with skin and eyes, and keep out of the reach of children.
- Wear suitable protective clothing and goggles.
- If brake fluid comes into contact with the eyes, flush the eyes thoroughly with water and consult a physician immediately.

**Warning**

Danger of accidents Reduced braking efficiency due to old brake fluid.

- Change the brake fluid of the front and rear brake according to the service schedule. (Your authorized KTM workshop will be glad to help.)

**Warning**

Environmental hazard Hazardous substances cause environmental damage.

- Oil, grease, filters, fuel, cleaners, brake fluid, etc., should be disposed of as stipulated in applicable regulations.

**Info**

Never use DOT 5 brake fluid! It is silicone-based and purple in color. Oil seals and brake lines are not designed for DOT 5 brake fluid.

Avoid contact between brake fluid and painted parts. Brake fluid attacks paint!

Use only clean brake fluid from a sealed container.



- Stand the vehicle upright.
- Remove screw cap ❶ with membrane ❷ and the O-ring.
- Add brake fluid to level A.

Brake fluid DOT 4 / DOT 5.1 (🔧 p. 114)
--

- Mount the screw cap with the membrane and the O-ring.

**Info**


Clean up overflowed or spilt brake fluid immediately with water.

12.13 Checking the rear brake linings

**Warning**

Danger of accidents Reduced braking efficiency caused by worn brake linings.

- Change worn brake linings immediately. (Your authorized KTM workshop will be glad to help.)

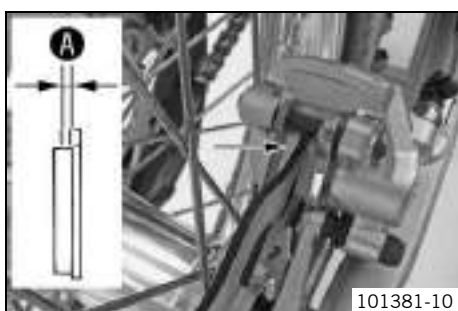

- Check the brake linings for minimum thickness A.

Minimum thickness A	≥ 1 mm (≥ 0.04 in)
---------------------	--------------------

- » If the minimum thickness is less than specified:
 - Change the rear brake linings. 🛠️ (🔧 p. 76)
- Check the brake linings for damage and cracking.
 - » If damage or cracking is visible:
 - Change the rear brake linings. 🛠️ (🔧 p. 76)

12.14 Changing the rear brake linings **Warning****Danger of accident** Brake system failure.

- Maintenance work and repairs must be carried out professionally. (Your authorized KTM workshop will be glad to help.)

**Warning****Skin irritation** Brake fluid can cause skin irritation on contact.

- Avoid contact with skin and eyes, and keep out of the reach of children.
- Wear suitable protective clothing and goggles.
- If brake fluid comes into contact with the eyes, flush the eyes thoroughly with water and consult a physician immediately.

**Warning****Danger of accidents** Reduced braking efficiency due to old brake fluid.

- Change the brake fluid of the front and rear brake according to the service schedule. (Your authorized KTM workshop will be glad to help.)

**Warning****Danger of accidents** Reduced braking efficiency due to oil or grease on the brake discs.

- Always keep the brake discs free of oil and grease, and clean them with brake cleaner when necessary.

**Warning****Danger of accidents** Reduced braking efficiency due to use of non-approved brake linings.

- Brake linings available from accessory suppliers are often not tested and approved for use on KTM vehicles. The construction and friction factor of the brake linings and therefore the brake power can differ considerably from the original KTM brake linings. If brake linings are used that differ from the originals, there is no guarantee that they comply with the original license. The vehicle no longer corresponds to the condition at delivery, and the warranty is no longer valid.

**Warning****Environmental hazard** Hazardous substances cause environmental damage.


- Oil, grease, filters, fuel, cleaners, brake fluid, etc., should be disposed of as stipulated in applicable regulations.

**Info**

Never use DOT 5 brake fluid! This is based on silicone oil and is colored purple. Oil seals and brake lines are not designed for DOT 5 brake fluid.

Avoid contact between brake fluid and painted parts. Brake fluid attacks paint!


Use only clean brake fluid from a sealed container.

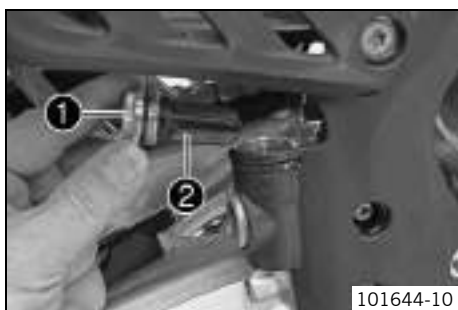


- Stand the vehicle upright.
- Remove screw cap ① with membrane ② and the O-ring.
- Press the brake piston back to its basic position and make sure that no brake fluid overflows from the brake fluid reservoir.

**Info**

Make sure when pushing back the brake piston that you do not press the brake caliper against the spokes.

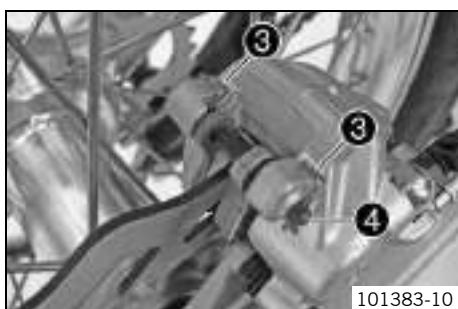

- Remove cotter pin ③, pull out pin ④, and remove the brake linings.
- Clean the brake caliper and brake caliper support.

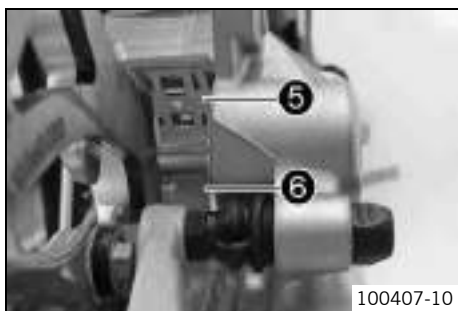

- Check that leaf spring ⑤ in the brake caliper and sliding plate ⑥ in the brake caliper support are seated correctly.



- Insert the brake linings, insert the pin, and mount the cotter pin.
- Operate the foot brake lever repeatedly until the brake linings are in contact with the brake disc and there is a pressure point.



- Add brake fluid to level A.

Brake fluid DOT 4 / DOT 5.1 (☞ p. 114)

- Mount screw cap ① with membrane ② and the O-ring.



Info

Clean up overflowed or spilt brake fluid immediately with water.



13.1 Removing the front wheel



101385-01

Preparatory work

- Raise the motorcycle with the lift stand. (☛ p. 44)

Main work

- Press the brake caliper onto the brake disc by hand in order to push back the brake pistons.




Info

Make sure when pushing back the brake pistons that you do not press the brake caliper against the spokes.



101386-10

- Remove screw ❶.
- Release screws ❷.

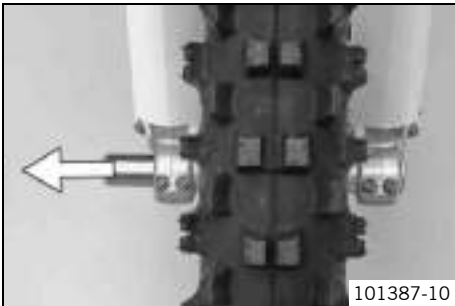


101387-10

- Holding the front wheel, withdraw the wheel spindle. Take the front wheel out of the fork.



Info

Do not pull the hand brake lever when the front wheel is removed. Always lay the wheel down in such a way that the brake disc is not damaged.

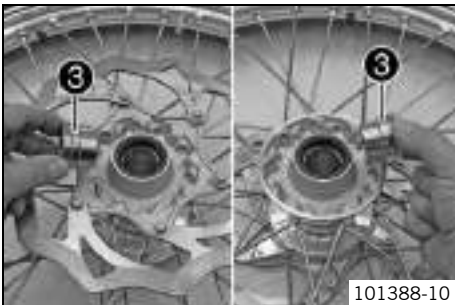

101388-10

- Remove spacers ❸.


13.2 Installing the front wheel



Warning

Danger of accidents Reduced braking efficiency due to oil or grease on the brake discs.

- Always keep the brake discs free of oil and grease, and clean them with brake cleaner when necessary.

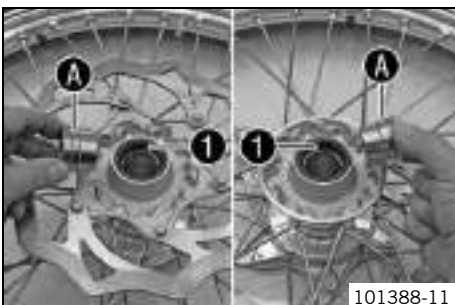


101388-11

- Check the wheel bearing for damage and wear.
 - » If the wheel bearing is damaged or worn:
 - Change the wheel bearing. ☛
- Clean and grease shaft seal rings ❶ and bearing surface A of the spacers.

Long-life grease (☛ p. 116)

- Insert the spacers.

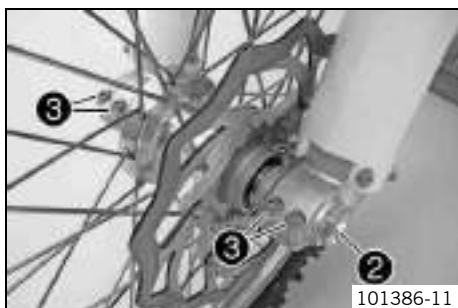

- Lift the front wheel into the fork, position it, and insert the wheel spindle.
- Mount and tighten screw ②.

Guideline

Screw, front wheel spindle	M24x1.5	45 Nm (33.2 lbf ft)
----------------------------	---------	------------------------

- Activate the hand brake lever multiple times until the brake linings are in contact with the brake disc.
- Remove the motorcycle from the lift stand. (🔧 p. 44)
- Pull the front wheel brake and push down hard on the fork several times to align the fork legs.
- Fully tighten screw ③.

Guideline

Screw, fork stub	M8	15 Nm (11.1 lbf ft)
------------------	----	------------------------

13.3 Removing the rear wheel 🛠️

Preparatory work

- Raise the motorcycle with the lift stand. (🔧 p. 44)

Main work

- Press the brake caliper by hand on to the brake disc in order to press back the brake piston.



Info

Make sure when pushing back the brake piston that you do not press the brake caliper against the spokes.



- Remove nut ①.
- Remove chain adjuster ②. Withdraw wheel spindle ③ only enough to allow the rear wheel to be pushed forward.
- Push the rear wheel forward as far as possible. Remove the chain from the rear sprocket.
- Holding the rear wheel, withdraw the wheel spindle. Take the rear wheel out of the swingarm.



Info

Do not operate the foot brake when the rear wheel is removed. Always lay the wheel down in such a way that the brake disc is not damaged.

- Remove spacers ④.

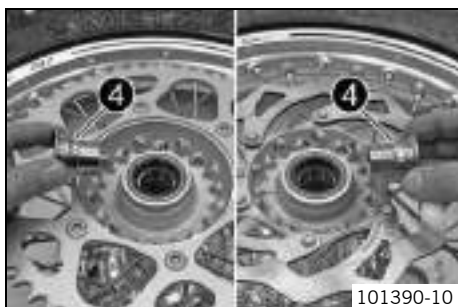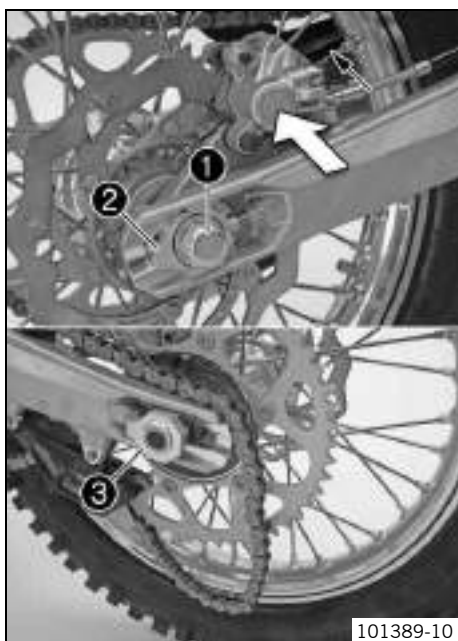


13.4 Installing the rear wheel 🛠️



Warning

Danger of accidents Reduced braking efficiency due to oil or grease on the brake discs.

- Always keep the brake discs free of oil and grease, and clean them with brake cleaner when necessary.

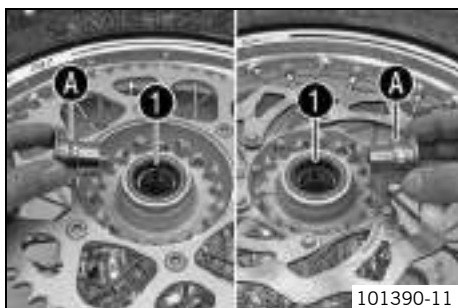**Main work**


- Check the wheel bearing for damage and wear.
 - » If the wheel bearing is damaged or worn:
 - Change the wheel bearing. 🛠️
- Clean and grease shaft seal rings (1) and bearing surface (A) of the spacers.

Long-life grease (🔧 p. 116)

- Insert the spacers.



- Lift the rear wheel into the swingarm, position it, and insert wheel spindle (2).
- Attach the chain.

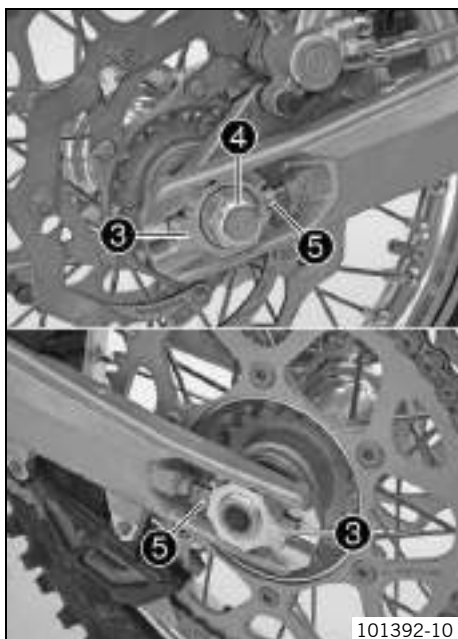

- Position chain adjuster (3). Mount nut (4) but do not tighten it yet.
- Make sure that chain adjusters (3) are fitted correctly on adjusting screws (5).
- Check the chain tension. (🔧 p. 62)
- Tighten nut (4).

Guideline

Nut, rear wheel spindle	M20x1.5	80 Nm (59 lbf ft)
-------------------------	---------	-------------------

**Info**

The wide adjustment range of the chain adjusters (32 mm (1.26 in)) enables different secondary ratios with the same chain length. Chain adjusters (3) can be turned by 180°.

- Operate the foot brake lever repeatedly until the brake linings are in contact with the brake disc and there is a pressure point.

Finishing work

- Remove the motorcycle from the lift stand. (🔧 p. 44)

13.5 Checking the tire condition**Info**


Only mount tires approved and/or recommended by KTM.

Other tires could have a negative effect on handling characteristics.

The type, condition, and air pressure of the tires all have a significant impact on the handling characteristics of the motorcycle.

The tires mounted on the front and rear wheels must have a similar profile.

Worn tires have a negative effect on handling characteristics, especially on wet surfaces.

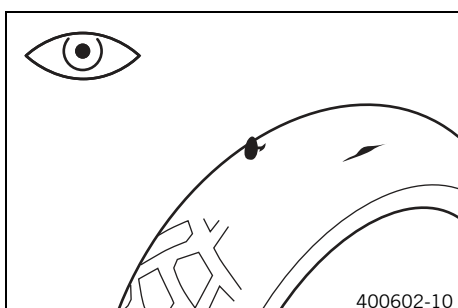

- Check the front and rear tires for cuts, run-in objects, and other damage.
 - » If the tire exhibits cuts, run-in objects, or other damage:
 - Change the tire.
- Check the depth of the tread.

**Info**

Note local national regulations concerning the minimum tread depth.

Minimum tread depth	≥ 2 mm (≥ 0.08 in)
---------------------	--------------------

- » If the tread depth is less than the minimum permissible depth:
 - Change the tire.
- Check the tire age.

**Info**

The tire's date of manufacture is usually part of the tire markings and is indicated by the last four digits of the **DOT** marking. The first two digits indicate the week of manufacture and the last two digits the year of manufacture.


KTM recommends that the tires be changed after 5 years at the latest, regardless of the actual state of wear.

- » If the tire is older than five years:
 - Change the tire.

13.6 Checking tire air pressure

**Info**

Low tire air pressure leads to abnormal wear and overheating of the tire. Correct tire air pressure ensures optimal riding comfort and maximum tire service life.

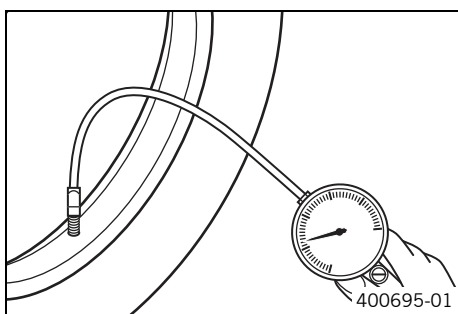

- Remove the dust cap.
- Check tire air pressure when tires are cold.

Tire air pressure off road	
Front	1.0 bar (15 psi)
Rear	1.0 bar (15 psi)

Road tire pressure (all EXC models)	
Front	1.5 bar (22 psi)
Rear	1.5 bar (22 psi)

- » If the tire pressure does not meet specifications:
 - Correct the tire air pressure.
- Fit the dust cap.

13.7 Checking spoke tension


**Warning**

Danger of accidents Instable handling due to incorrect spoke tension.

- Ensure that the spoke tension is correct. (Your authorized KTM workshop will be glad to help.)

**Info**

A loose spoke can cause wheel imbalance, which leads to more loose spokes in a short time. If the spokes are too tight, they can break due to local overload. Check the spoke tension regularly, especially on a new motorcycle.

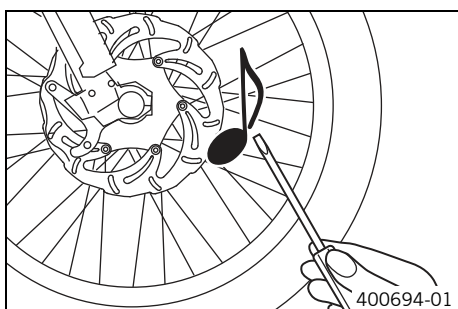

- Tap each spoke with a screwdriver.

**Info**

The sound frequency depends on the length and thickness of the spoke. If there are different sound frequencies in spokes with the same length and thickness, this indicates different spoke tensions.

You should hear a high note.

- » If the spoke tension varies:
 - Correct the spoke tension. 🛠️
- Check the spoke torque.


Guideline

Spoke nipple, front wheel	M4.5	5... 6 Nm (3.7... 4.4 lbf ft)
Spoke nipple, rear wheel	M5	5... 6 Nm (3.7... 4.4 lbf ft)
Torque wrench with various accessories in set (58429094000)		

14.1 Removing the battery


Warning
Risk of injury Battery acid and battery gases cause serious chemical burns.

- Keep batteries out of the reach of children.
- Wear suitable protective clothing and goggles.
- Avoid contact with battery acid and battery gases.
- Keep the battery away from sparks or open flames. Charge only in well-ventilated areas.
- In the event of skin contact, rinse with large amounts of water. If battery acid gets in the eyes, rinse with water for at least 15 minutes and contact a physician.

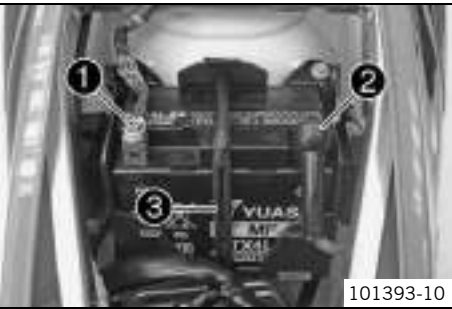

- Preparatory work**
- Switch off all power consumers and switch off the engine.
 - Remove the seat. (p. 55)
- Main work**
- Disconnect negative cable ❶ of the battery.
 - Pull back the positive terminal cover ❷ and disconnect the positive (plus) cable of the battery.
 - Detach rubber band ❸ at the bottom.
 - Lift the battery up and out.

14.2 Installing the battery

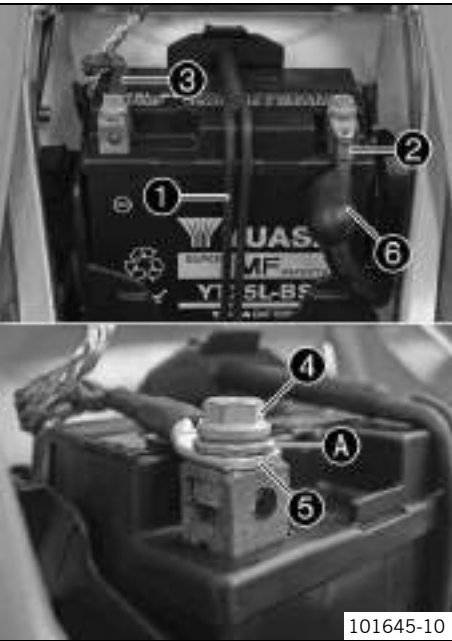

- Main work**
- Insert battery into the battery compartment with the terminals facing to the front.
- Battery (YTX5L-BS) (p. 110)
- Reconnect rubber band ❶.
 - Connect positive cable ❷ and negative cable ❸.
- Guideline
- | | | |
|-------------------------|----|-------------------------|
| Screw, battery terminal | M5 | 2.5 Nm
(1.84 lbf ft) |
|-------------------------|----|-------------------------|
- Info**
Contact disks ❹ must be mounted between screws ❷ and cable sockets ❸ with the claws facing down.
- Slide positive terminal cover ❺ over the positive terminal.

- Finishing work**
- Mount the seat. (p. 55)

14.3 Charging the battery

Warning
Risk of injury Battery acid and battery gases cause serious chemical burns.

- Keep batteries out of the reach of children.
- Wear suitable protective clothing and goggles.
- Avoid contact with battery acid and battery gases.
- Keep the battery away from sparks or open flames. Charge only in well-ventilated areas.
- In the event of skin contact, rinse with large amounts of water. If battery acid gets in the eyes, rinse with water for at least 15 minutes and contact a physician.

- **Warning**
Environmental hazard The battery contains elements that are harmful to the environment.
- Do not discard batteries with the household trash. Dispose of a defective battery in an environmentally compatible manner. Give the battery to your KTM dealer or to a recycling center that accepts used batteries.
- **Warning**
Environmental hazard Hazardous substances cause environmental damage.
- Oil, grease, filters, fuel, cleaners, brake fluid, etc., should be disposed of as stipulated in applicable regulations.

**Info**

Even when there is no load on the battery, it still loses power steadily.
The charge state and the type of charge are very important for the service life of the battery.
Rapid recharging with a high charging current shortens the battery's service life.
If the charging current, charging voltage and charging time are exceeded, electrolyte escapes through the safety valves. This reduces the battery capacity.
If the battery is depleted from starting the vehicle repeatedly, the battery must be charged immediately.
If the battery is left in a discharged state for an extended period, it will become over-discharged and sulfate, destroying the battery.
The battery is maintenance-free, which means that the acid level does not need to be checked.



Preparatory work

- Switch off all power consumers and switch off the engine.
- Remove the seat. (🔧 p. 55)
- Disconnect the negative cable of the battery to avoid damage to the onboard electronics.

Main work

- Connect the battery charger to the battery. Switch on the battery charger.

Battery charger (58429074000)

You can also use the battery charger to test the open-circuit voltage and starting voltage of the battery, and to test the alternator. With this device, you cannot over-charge the battery.

**Info**

Never remove lid ❶.
Charge the battery with a maximum of 10% of the capacity specified on battery housing ❷.

- Switch off the battery charger after charging. Disconnect the battery.

Guideline

The charge current, charge voltage, and charge time must not be exceeded.	
Charge the battery regularly when the motorcycle is not in use	3 months

Finishing work

- Mount the seat. (🔧 p. 55)

14.4 Changing the main fuse

- **Warning**
Fire hazard The electrical system can be overloaded if the wrong fuses are used.
- Use only fuses with the prescribed amperage. Never by-pass or repair fuses.
- **Info**
- The main fuse protects all power consumers of the vehicle. It is located in the starter relay housing under the air filter box cover.


- Preparatory work**
- Switch off all power consumers and switch off the engine.
 - Remove the air filter box lid. (🔧 p. 55)

**Main work**

- Remove screw ❶.



- Lift rear fairing ❷ slightly and pull starter relay ❸ out of the holder.

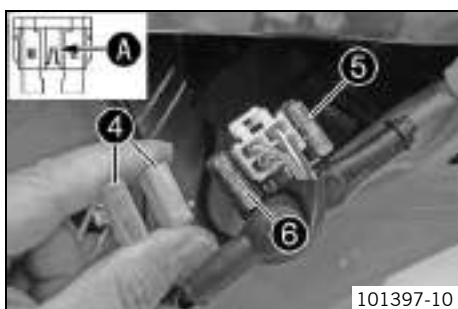

- Remove protection caps ❹.
- Remove the faulty main fuse ❺.

**Info**

A defective fuse can be identified by the burned-out fuse wire **A**.
A reserve fuse **❻** is located in the starter relay.

- Install a new main fuse.

Fuse (58011109120) (☛ p. 110)

- Check that the electrical equipment is functioning properly.

**Tip**

Insert the spare fuse so that it is available if needed.

- Mount the protection caps.
- Mount the starter relay onto the holder and lay the cable.
- Position the rear fairing. Mount and tighten the screw.

Guideline

Remaining screws, chassis	M6	10 Nm (7.4 lbf ft)
---------------------------	----	--------------------

Finishing work

- Install the air filter box lid. (☛ p. 56)

14.5 Changing the fuses of individual power consumers

**Info**

The fuse box containing the fuses of individual power consumers is located under the seat.


Preparatory work

- Switch off all power consumers and switch off the engine.
- Remove the seat. (☛ p. 55)

Main work

- Open fuse box cover ❶.



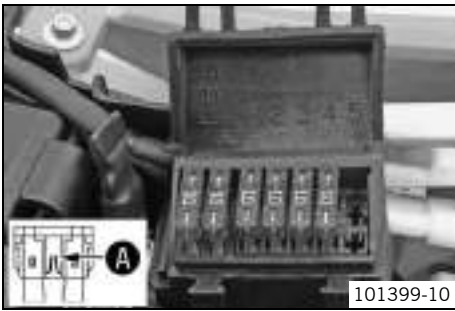

- Remove the defective fuse.

Guideline

Fuse 1 - 10 A - EFI control unit
Fuse 2 - 10 A - fuel pump
Fuse 3 - 10 A - high beam, low beam, parking light, tail light, license plate lamp
Fuse 4 - 10 A - horn, brake light, turn signal, radiator fan
Fuse 5 - 10 A - ignition lock (optional)
Fuses res - 10 A - spare fuses



Info

A defective fuse can be identified by the burned-out fuse wire **A**.



Warning

Fire hazard The electrical system can be overloaded if the wrong fuses are used.

- Use only fuses with the prescribed amperage. Never by-pass or repair fuses.

- Use spare fuses with the correct rating only.

Fuse (58011109110) (☞ p. 110)



Tip

Replace the spare fuse in the fuse box so that it is available if needed.

- Check that the power consumer is functioning properly.
- Close the fuse box cover.

Finishing work

- Mount the seat. (☞ p. 55)


14.6 Changing the fuse of the radiator fan



Warning

Fire hazard The electrical system can be overloaded if the wrong fuses are used.

- Use only fuses with the prescribed amperage. Never by-pass or repair fuses.

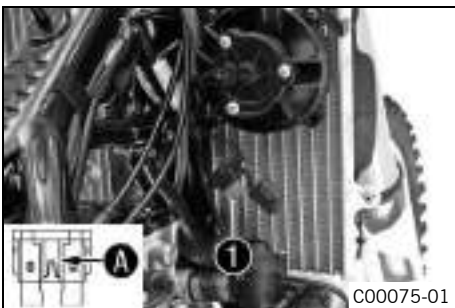

Preparatory work

- Remove the seat. (☞ p. 55)
- Remove the fuel tank. ☞ (☞ p. 59)

Main work

- Take off the protection cap.



Info

Fuse **1** of the radiator fan is located in the vicinity of the right radiator.

- Remove the faulty fuse.
- Insert the new fuse.

Fuse (58011109105) (☞ p. 110)



Info

Always replace faulty fuses with fuses of the same quality.

- Mount the protection cap.

Finishing work


- Install the fuel tank. ☞ (☞ p. 60)
- Mount the seat. (☞ p. 55)

14.7 Removing headlight mask with headlight



101401-10


- Switch off all electrical equipment.
- Remove screw ❶ and take off clamp.
- Loosen the rubber band ❷. Push up the headlight mask and swing it forwards.

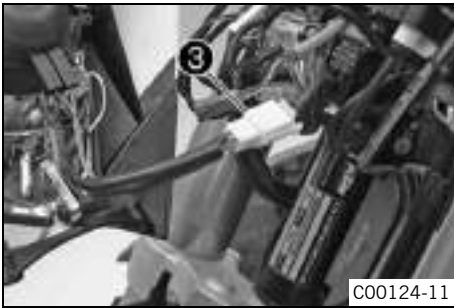

C00124-11

- Pull out the electric plug connector ❸ and remove the headlight mask with the headlight.

14.8 Refitting the headlight mask with the headlight

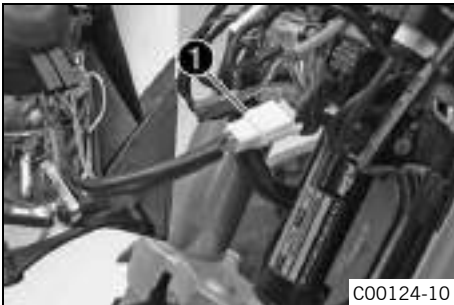

C00124-10

Main work

- Connect the electric plug connector ❶.



101401-11

- Position the headlight mask and fix it with the rubber band ❷.



Info

Ensure that the retaining lugs engage in the fender.

- Position the brake line and wiring harness. Put the clamp on, mount and tighten screw ❸.

Finishing work

- Check the headlight setting. (☛ p. 89)

14.9 Changing the headlight bulb



Note

Damage to reflector Reduced luminance.

- Grease on the lamp will evaporate due to the heat and be deposited on the reflector. Clean the lamp and keep it free of grease before mounting.

Preparatory work

- Remove the headlight mask with the headlight. (☛ p. 87)

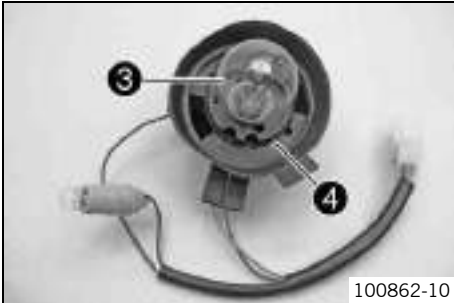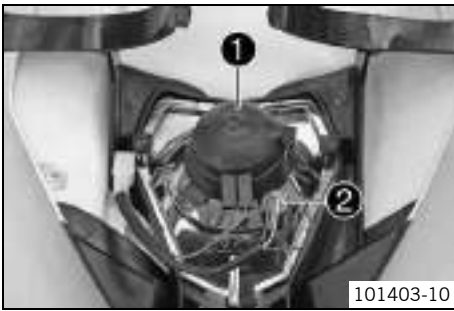

Main work

- Turn rubber cap ❶ together with the underlying lamp socket counterclockwise all the way and remove it.
- Pull lamp socket ❷ of the parking light out of the reflector.

- Press headlight bulb ❸ into the lamp socket lightly, turn it counterclockwise all the way and pull it out.
- Insert a new headlight bulb.

Headlight (S2 / socket BA20d) (☞ p. 110)

- Insert the rubber cap together with the lamp socket into the reflector and turn it clockwise all the way.



Info

Ensure that the O-ring ❹ is seated properly.

- Insert the lamp socket of the parking light into the reflector.

Finishing work


- Refit the headlight mask with the headlight. (☞ p. 87)
- Check the headlight setting. (☞ p. 89)

14.10 Changing the turn signal bulb

Note

Damage to reflector Reduced luminance.

- Grease on the lamp will evaporate due to the heat and be deposited on the reflector. Clean the lamp and keep it free of grease before mounting.

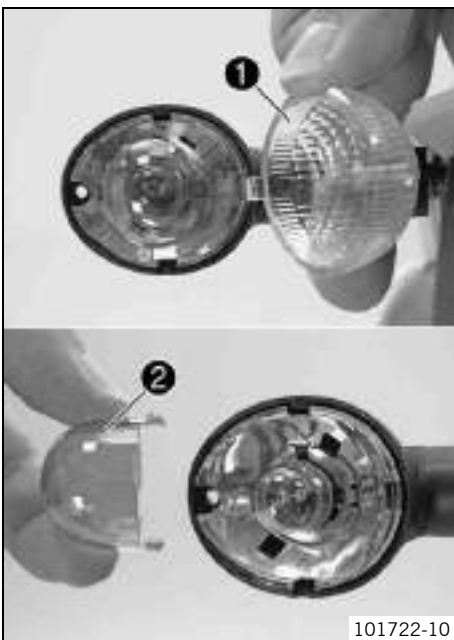

Main work

(all EXC models)

- Remove the screw on the rear of the turn signal housing.
- Carefully remove diffuser ❶.
- Lightly squeeze orange cap ❷ in the area of the holding lugs and take it off.
- Press the turn signal bulb carefully into the socket, turn it counterclockwise by about 30°, and take it out of the socket.



Info

Do not touch the reflector with your fingers, and keep it free from grease.

- Press the new turn signal bulb carefully into the socket and turn it clockwise until it stops.


Turn signal (R10W / socket BA15s) (☞ p. 110)

- Mount the orange cap.
- Position the diffuser.
- Insert the screw and first turn it counterclockwise until it engages in the thread. Tighten the screw slightly.

Finishing work

- Check that the turn signal system is functioning properly.

14.11 Checking the headlight setting

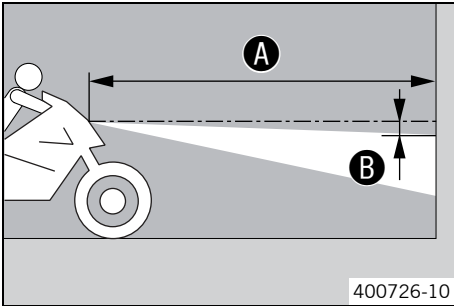

- Position the vehicle upright on a horizontal surface in front of a light wall and make a mark at the height of the center of the low beam headlight.
- Make another mark a distance **B** under the first mark.

Guideline

Distance B	5 cm (2 in)
-------------------	-------------

- Position the vehicle vertically a distance **A** away from the wall.

Guideline

Distance A	5 m (16 ft)
-------------------	-------------

- The rider now sits down on the motorcycle.
- Switch on the low beam.
- Check the headlight setting.

The boundary between light and dark must be exactly on the lower mark for a motorcycle with driver.

- » If the light-dark border does not meet specifications:
 - Adjust the headlight range. (☛ p. 89)

14.12 Adjusting the headlight range



Preparatory work

- Check the headlight setting. (☛ p. 89)

Main work

- Loosen screw **1**.
- Adjust the headlight range of the headlight by moving it up or down.

Guideline

The boundary between light and dark must be exactly on the lower mark for a motorcycle with driver (instructions on how to apply the mark: Checking the headlight setting).




Info

A change in weight on the vehicle may require a correction of the headlight range.

- Tighten screw **1**.

14.13 Changing the speedometer battery

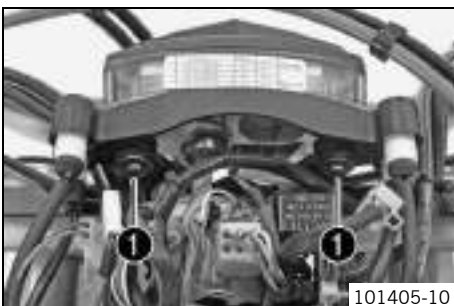


Preparatory work

- Remove the headlight mask with the headlight. (☛ p. 87)

Main work


- Remove screws **1**.
- Pull the speedometer out of the bracket from above.

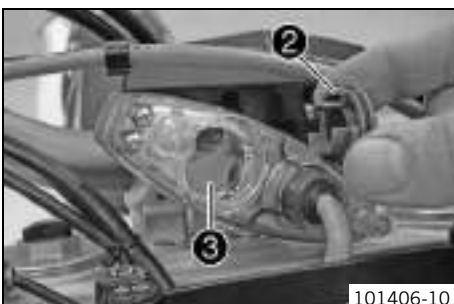

- Using a coin, turn locking cap **2** counterclockwise all the way and remove it.
- Remove speedometer battery **3**.
- Insert the new battery with the label facing upward.

Speedometer battery (CR 2430) (☛ p. 110)
--

- Check that the O-ring of the locking cap is seated properly.

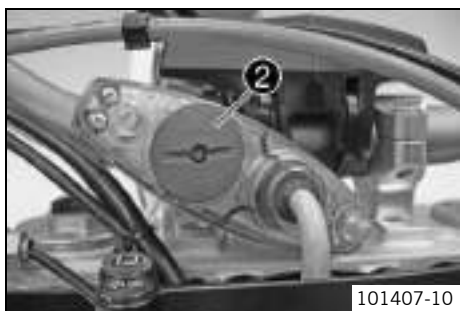

- Position locking cap ② and, using a coin, turn it clockwise all the way.
- Press any button on the speedometer.
 - ✓ The speedometer is activated.
- Position the speedometer in the bracket.
- Mount and tighten the screws with washers.

Finishing work

- Refit the headlight mask with the headlight. (☛ p. 87)
- Check the headlight setting. (☛ p. 89)
- Set kilometers or miles. (☛ p. 16)
- Adjust the speedometer functions. (☛ p. 17)
- Set the clock. (☛ p. 17)

15.1 Cooling system




Water pump ❶ in the engine circulates the coolant.
The pressure resulting from the warming of the cooling system is regulated by a valve in radiator cap ❷. This ensures that operating the vehicle at the specified coolant temperature will not result in a risk of malfunctions.

120 °C (248 °F)

Cooling is effected by the air stream.
The lower the speed, the less the cooling effect. Dirty cooling fins also reduce the cooling effect.
The radiator fan provides extra cooling. It is controlled by a thermoswitch.

15.2 Checking the antifreeze and coolant level


- **Warning**
Danger of scalding During motorcycle operation, the coolant gets very hot and is under pressure.
- Do not remove the radiator cap, radiator hoses or other cooling system components when the engine is hot. Allow the engine and cooling system to cool down. In case of scalding, rinse immediately with lukewarm water.
- **Warning**
Danger of poisoning Coolant is poisonous and a health hazard.
- Avoid contact between coolant and skin, eyes and clothing. If it gets into your eyes, rinse immediately with water and contact a doctor. Wash affected skin areas immediately with soap and water. If coolant is swallowed, contact a doctor immediately. Change clothes that have come into contact with coolants. Keep coolant out of the reach of children.

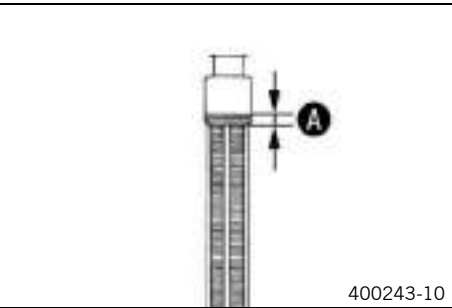

- Condition**
The engine is cold.
- Stand the motorcycle upright on a horizontal surface.
 - Remove the radiator cap.
 - Check antifreeze of coolant.
- 25... -45 °C (-13... -49 °F)
- » If the antifreeze of the coolant does not meet specifications:
 - Correct the antifreeze of the coolant.
 - Check the coolant level in the radiator.
- | | |
|--------------------------------------|-----------------|
| Coolant level ❶ above radiator fins. | 10 mm (0.39 in) |
|--------------------------------------|-----------------|
- » If the coolant level does not meet specifications:
 - Correct the coolant level.
- Alternative 1**
- | |
|--------------------|
| Coolant (☞ p. 114) |
|--------------------|
- Alternative 2**
- | |
|---|
| Coolant (mixed ready to use) (☞ p. 114) |
|---|
- Mount the radiator cap.

15.3 Checking the coolant level


- **Warning**
Danger of scalding During motorcycle operation, the coolant gets very hot and is under pressure.
- Do not remove the radiator cap, radiator hoses or other cooling system components when the engine is hot. Allow the engine and cooling system to cool down. In case of scalding, rinse immediately with lukewarm water.
- **Warning**
Danger of poisoning Coolant is poisonous and a health hazard.
- Avoid contact between coolant and skin, eyes and clothing. If it gets into your eyes, rinse immediately with water and contact a doctor. Wash affected skin areas immediately with soap and water. If coolant is swallowed, contact a doctor immediately. Change clothes that have come into contact with coolants. Keep coolant out of the reach of children.

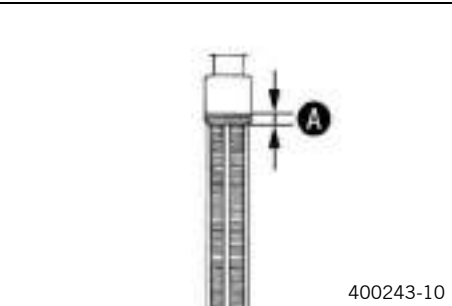

- Condition**
The engine is cold.
- Stand the motorcycle upright on a horizontal surface.
 - Remove the radiator cap.
 - Check the coolant level in the radiator.
- | | |
|---|-----------------|
| Coolant level A above radiator fins. | 10 mm (0.39 in) |
|---|-----------------|
- » If the coolant level does not meet specifications:
 - Correct the coolant level.
- Alternative 1**
- | |
|--------------------|
| Coolant (☛ p. 114) |
|--------------------|
- Alternative 2**
- | |
|---|
| Coolant (mixed ready to use) (☛ p. 114) |
|---|
- Mount the radiator cap.

15.4 Draining the coolant ☛

- **Warning**
Danger of scalding During motorcycle operation, the coolant gets very hot and is under pressure.
- Do not remove the radiator cap, radiator hoses or other cooling system components when the engine is hot. Allow the engine and cooling system to cool down. In case of scalding, rinse immediately with lukewarm water.
- **Warning**
Danger of poisoning Coolant is poisonous and a health hazard.
- Avoid contact between coolant and skin, eyes and clothing. If it gets into your eyes, rinse immediately with water and contact a doctor. Wash affected skin areas immediately with soap and water. If coolant is swallowed, contact a doctor immediately. Change clothes that have come into contact with coolants. Keep coolant out of the reach of children.

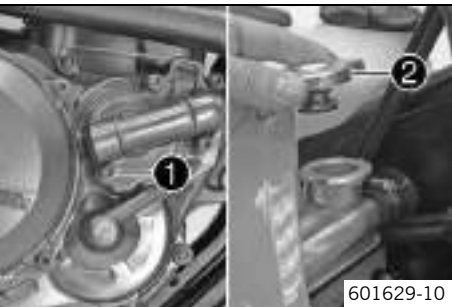


- Condition**
The engine is cold.
- Position the motorcycle upright.
 - Place a suitable container under the water pump cover.
 - Remove screw **1**. Take off radiator cap **2**.
 - Completely drain the coolant.
 - Mount and tighten screw **1** with a new seal ring.
- Guideline
- | | | |
|-------------------------|-------|--------------------|
| Screw, water pump cover | M6x25 | 10 Nm (7.4 lbf ft) |
|-------------------------|-------|--------------------|

15.5 Refilling coolant

Warning
Danger of poisoning Coolant is poisonous and a health hazard.

- Avoid contact between coolant and skin, eyes and clothing. If it gets into your eyes, rinse immediately with water and contact a doctor. Wash affected skin areas immediately with soap and water. If coolant is swallowed, contact a doctor immediately. Change clothes that have come into contact with coolants. Keep coolant out of the reach of children.

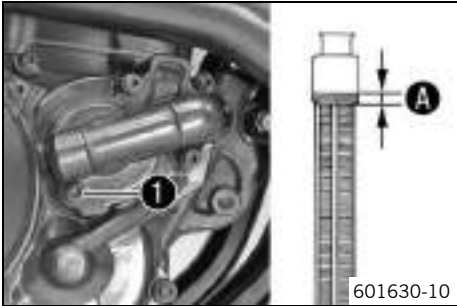


- Make sure that the screw ❶ is tightened.
- Stand the vehicle upright.
- Pour coolant in up to measurement ❶ above the radiator fins.

Guideline		
10 mm (0.39 in)		
Coolant	1.2 l (1.3 qt.)	Coolant (☞ p. 114)
		Coolant (mixed ready to use) (☞ p. 114)

- Refit the radiator cap.
- Make a short test ride.
- Check the coolant level. (☞ p. 92)

16.1 Checking the play in the throttle cable

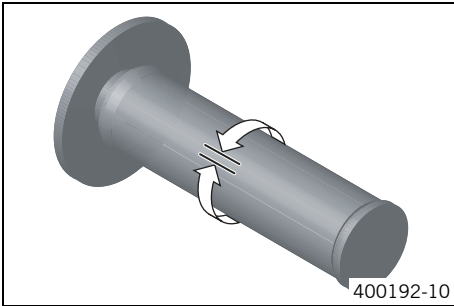

- Check the throttle grip for smooth operation.
- Move the handlebar to the straight-ahead position. Move the throttle grip backwards and forwards to ascertain the play in the throttle cable.

Play in throttle cable	3... 5 mm (0.12... 0.2 in)
------------------------	----------------------------

- » If the throttle cable play does not meet specifications:
 - Adjust the play in the throttle cable. 🛠️ (📖 p. 94)

**Danger**

Danger of poisoning Exhaust gases are toxic and inhaling them may result in unconsciousness and/or death.


- When running the engine, always make sure there is sufficient ventilation, and do not start or run the engine in an enclosed space without an effective exhaust extraction system.

- Start the engine and let it run idle. Move the handlebar to and fro over the entire steering range.

The idle speed must not change.

- » If the idle speed changes:
 - Adjust the play in the throttle cable. 🛠️ (📖 p. 94)

16.2 Adjusting the play in the throttle cable 🛠️

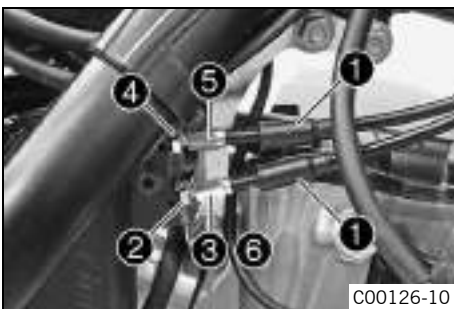**Preparatory work**

- Remove the seat. (📖 p. 55)
- Remove the fuel tank. 🛠️ (📖 p. 59)
- Check the throttle cable routing. (📖 p. 66)

Main work

- Move the handlebar to the straight-ahead position.
- Push back sleeves ❶.
- Release nut ❷. Fully screw in adjusting screw ❸.
- Loosen nut ❹. Turn adjusting screw ❺ to create play in the throttle cable at the throttle grip.


Guideline

Play in throttle cable	3... 5 mm (0.12... 0.2 in)
------------------------	----------------------------

- Tighten nut ❹.
- Press the throttle grip into the fully closed position and hold it there. Unscrew adjusting screw ❸ until there is no more play in cable ❻.
- Tighten nut ❷.
- Slide on sleeves ❶. Check the throttle grip for smooth operation.

Finishing work

- Install the fuel tank. 🛠️ (📖 p. 60)
- Mount the seat. (📖 p. 55)
- Check the play in the throttle cable. (📖 p. 94)

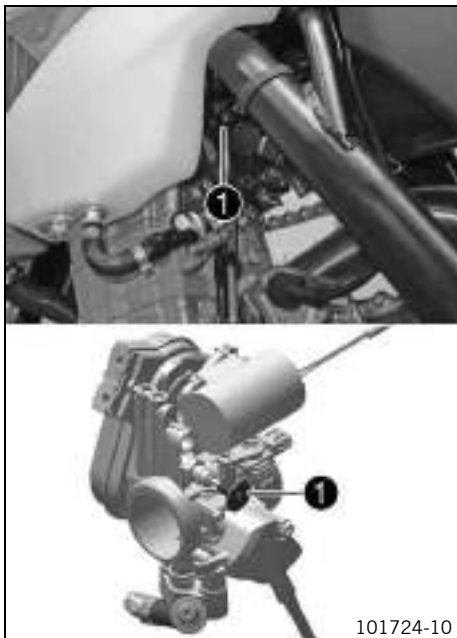16.3 Adjusting the idle speed 

- Run the engine warm and push the idle speed adjusting screw ❶ all the way in.
- Set the desired idle speed by turning the idle speed adjusting screw.


Guideline

Idle speed	1,800... 1,900 rpm
------------	--------------------

**Info**

Turn counterclockwise to increase the idle speed.
Turn clockwise to decrease the idle speed.

16.4 Checking the basic position of the shift lever

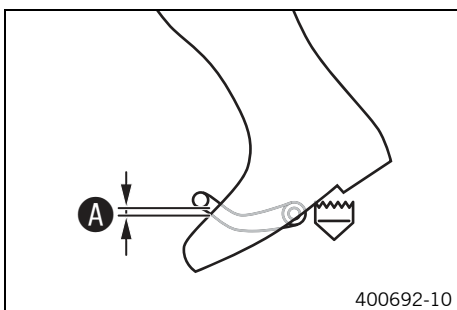


- Sit on the vehicle in the riding position and determine the distance A between the upper edge of your boot and the shift lever.

Gap between the shift lever and the top of the boot	10... 20 mm (0.39... 0.79 in)
---	-------------------------------

- » If the distance does not meet the specifications:
 - Adjust the basic position of the shift lever.  (p. 95)

16.5 Adjusting the basic position of the shift lever 

- Remove screw ❶ and take off shift lever ❷.

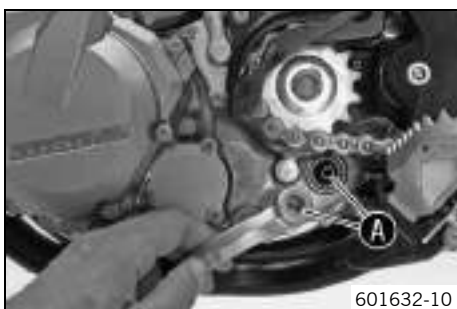

- Clean gear teeth A of the shift lever and shift shaft.
- Mount the shift lever on the shift shaft in the required position and engage the gearing.

**Info**

The range of adjustment is limited.
The shift lever must not come into contact with any other vehicle components during the shift procedure.

- Mount and tighten the screw.

Guideline

Screw, shift lever	M6	14 Nm (10.3 lbf ft)	Loctite® 243™
--------------------	----	------------------------	---------------

17.1 Changing the fuel screen **Danger****Fire hazard** Fuel is highly flammable.


- Never refuel the vehicle near open flames or burning cigarettes, and always switch off the engine first. Be careful that no fuel is spilt, especially on hot vehicle components. Clean up spilt fuel immediately.
- Fuel in the fuel tank expands when warm and can escape if the tank is overfilled. See the notes on refueling.

**Warning****Danger of poisoning** Fuel is poisonous and a health hazard.

- Avoid contact of the fuel with skin, eyes and clothing. Do not inhale fuel vapors. If fuel gets into your eyes, rinse immediately with water and contact a doctor. Wash affected skin areas immediately with soap and water. If fuel is swallowed, contact a doctor immediately. Change clothing that has come into contact with fuel.

**Warning****Environmental hazard** Improper handling of fuel is a danger to the environment.

- Do not allow fuel to get into the ground water, the ground, or the sewage system.

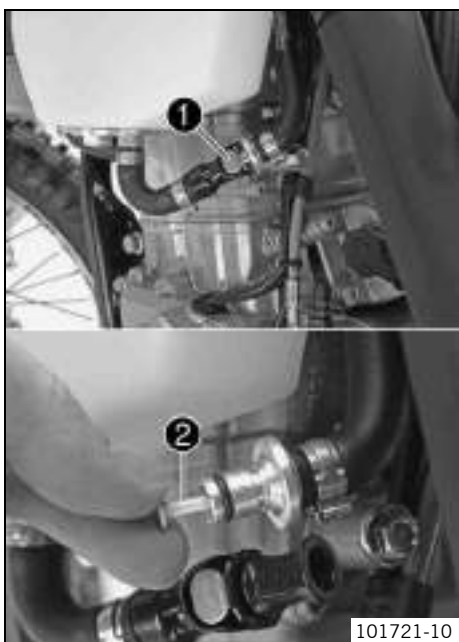

- Clean the plug-in connection ❶ of the fuel line thoroughly with compressed air.

**Info**

Under no circumstances should dirt enter into the fuel line. Dirt clogs the injection valve.

- Disconnect the plug-in connection of the fuel line.
- Pull fuel screen ❷ out of the connecting piece.
- Insert the new fuel screen all the way into the connecting piece.
- Connect the plug-in connection of the fuel line.

**Danger****Danger of poisoning** Exhaust gases are toxic and inhaling them may result in unconsciousness and/or death.

- When running the engine, always make sure there is sufficient ventilation, and do not start or run the engine in an enclosed space without an effective exhaust extraction system.
- Start the motor and check the response.

17.2 Checking the engine oil level

Condition

The engine is at operating temperature.

Preparatory work

- Stand the motorcycle upright on a horizontal surface.

Main work

- Check the engine oil level.

**Info**

After switching off the engine, wait one minute before checking the level.

The engine oil level is between ❶ and ❷.

- » If the engine oil level is below marking ❶:
 - Add engine oil. (🔧 p. 99)
- » If the engine oil level is at marking ❷ or above:
 - Correct the engine oil level.




17.3 Changing the engine oil and oil filter, cleaning the oil screens


- **Warning**
Danger of scalding Engine oil and gear oil get very hot when the motorcycle is ridden.
 - Wear appropriate protective clothing and safety gloves. In case of burns, rinse immediately with lukewarm water.
- **Warning**
Environmental hazard Hazardous substances cause environmental damage.
 - Oil, grease, filters, fuel, cleaners, brake fluid, etc., should be disposed of as stipulated in applicable regulations.

**Info**
Drain the engine oil only when the engine is warm.

- Preparatory work**
(EXC SIX DAYS, EXC AUS)
- Remove the engine guard. ( p. 68)
 - Park the motorcycle on a level surface.

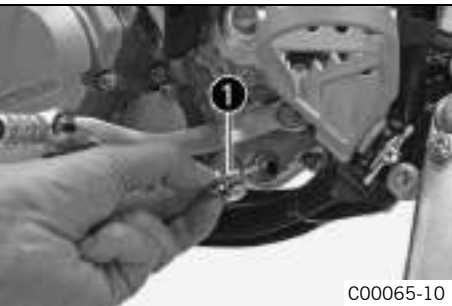


- Main work**
- Place a suitable container under the engine.
 - Remove oil drain plug **1** with the magnet and seal ring.

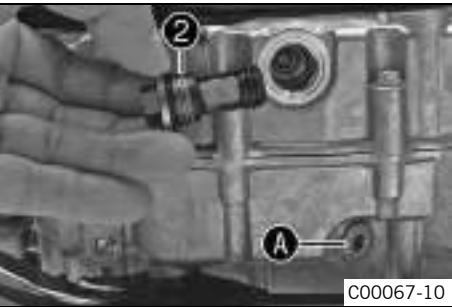


- Remove screw plug **2** with the gear oil screen and the O-rings.

**Info**
Do not remove screw **A**.

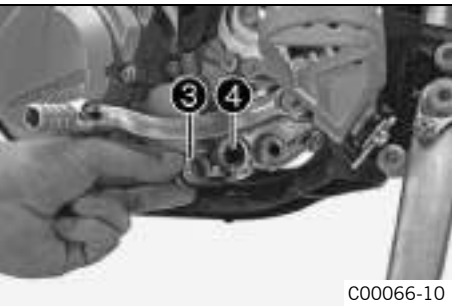


- Remove screw plug **3** with engine oil screen **4** and the O-rings.
- Completely drain the engine oil.
- Thoroughly clean the parts and sealing surfaces.

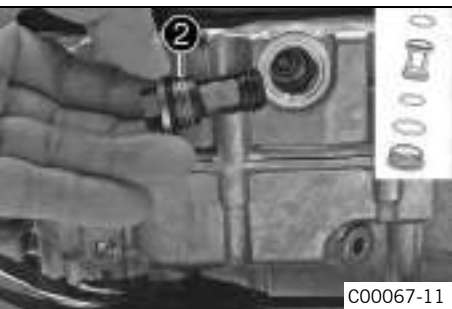


- Mount and tighten screw plug **2** with the gear oil screen and the O-rings.
- Guideline

Screw plug, gear oil screen	M20x1.5	15 Nm (11.1 lbf ft)
-----------------------------	---------	------------------------

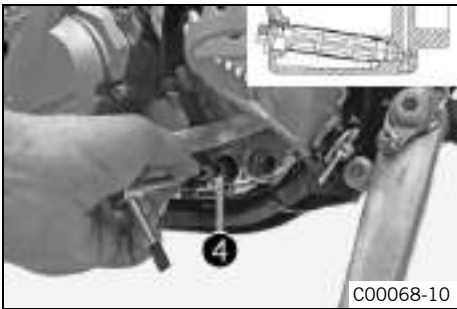

- Push the engine oil screen with the O-rings onto a pin wrench.
- Push the pin wrench through the opening into the drill hole of the opposite engine case wall and push the oil screen as far as possible into the engine case.

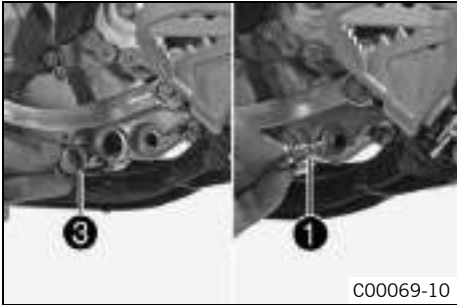

- Mount and tighten screw plug 3 with the O-ring.


Guideline

Screw plug, engine oil screen	M20x1.5	15 Nm (11.1 lbf ft)
-------------------------------	---------	------------------------


- Mount and tighten the oil drain plug 1 with the magnet and a new seal ring.

Guideline

Oil drain plug with magnet	M12x1.5	20 Nm (14.8 lbf ft)
----------------------------	---------	------------------------

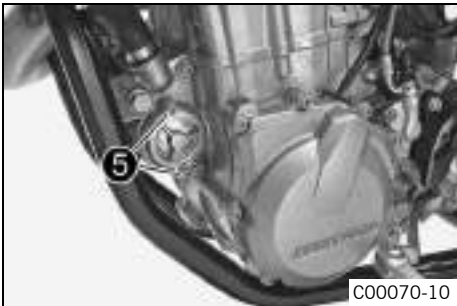


- Remove screws 5. Remove the oil filter cover with the O-ring.

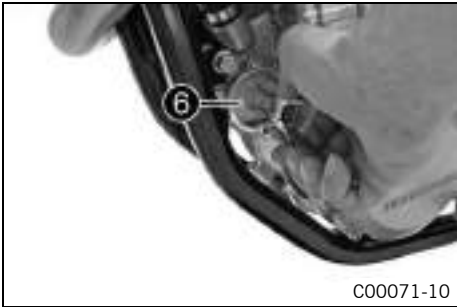

- Pull oil filter 6 out of the oil filter housing.

Circlip pliers reverse (51012011000)

- Completely drain the engine oil.
- Thoroughly clean the parts and sealing area.

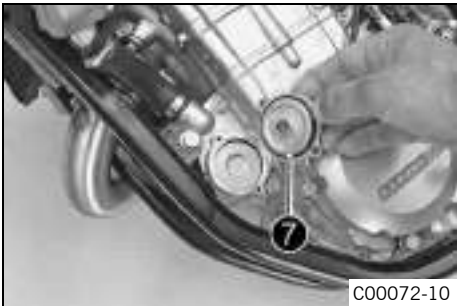

- Lay the motorcycle on its side and fill the oil filter housing to about 1/3 full with engine oil.
- Oil the O-ring of the oil filter cover and mount it with the oil filter cover 7.
- Mount and tighten the screws.

Guideline

Screw, oil filter cover	M5	6 Nm (4.4 lbf ft)
-------------------------	----	-------------------

- Stand the motorcycle upright.



- Remove the oil filler plug 8 with the O-ring from the clutch cover and fill up with engine oil.

Engine oil	1.5 l (1.6 qt.)	Engine oil (SAE 10W/50) (☛ p. 114)	
		Alternative engine oil for harsh operating conditions and increased performance	Engine oil (SAE 10W/60) (00062010035) (☛ p. 114)

 **Info**

Too little engine oil or poor-quality engine oil results in premature wear to the engine.

- Install and tighten the oil filler plug with O-ring.

**Danger**

Danger of poisoning Exhaust gases are toxic and inhaling them may result in unconsciousness and/or death.

- When running the engine, always make sure there is sufficient ventilation, and do not start or run the engine in an enclosed space without an effective exhaust extraction system.

- Start the engine and check that it is oil-tight.

Finishing work

(EXC SIX DAYS, EXC AUS)

- Install the engine guard. (🔧 p. 68)
- Check the engine oil level. (🔧 p. 96)

17.4 Adding engine oil

**Info**

Too little engine oil or poor-quality engine oil results in premature wear to the engine.



- Remove the oil filler plug ❶ with the O-ring from the clutch cover.
- Add the same engine oil that was used when the motor was changed.

Engine oil (SAE 10W/50) (🔧 p. 114)

Alternative 1

Engine oil (SAE 10W/60) (00062010035) (🔧 p. 114)

**Info**

For optimal performance of the engine oil, do not mix different types of engine oil.
If appropriate, change the engine oil.

- Install and tighten the oil filler plug with O-ring.

**Danger**

Danger of poisoning Exhaust gases are toxic and inhaling them may result in unconsciousness and/or death.

- When running the engine, always make sure there is sufficient ventilation, and do not start or run the engine in an enclosed space without an effective exhaust extraction system.

- Start the engine and check that it is oil-tight.

18.1 Cleaning the motorcycle**Note**

Material damage Damage and destruction of components by high-pressure cleaning equipment.

- When cleaning the vehicle with a pressure cleaner, do not point the water jet directly onto electrical components, connectors, cables, bearings, etc. Maintain a minimum distance of 60 cm between the nozzle of the pressure cleaner and the component. Excessive pressure can cause malfunctions or destroy these parts.


**Warning**

Environmental hazard Hazardous substances cause environmental damage.

- Oil, grease, filters, fuel, cleaners, brake fluid, etc., should be disposed of as stipulated in applicable regulations.

**Info**

If you clean the motorcycle regularly, its value and appearance will be maintained over a long period. Avoid direct sunshine on the motorcycle during cleaning.

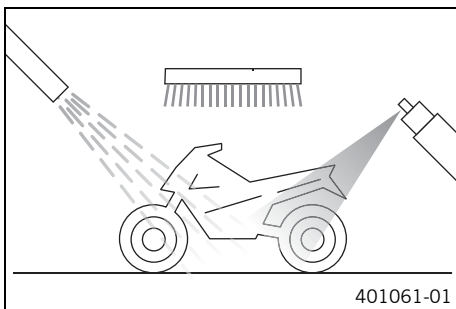

- Close off the exhaust system to prevent water from entering.
- First remove coarse dirt particles with a gentle spray of water.
- Spray very dirty areas with a normal motorcycle cleaner and then clean with a paintbrush.

Motorcycle cleaner (☛ p. 116)

**Info**

Use warm water containing normal motorcycle cleaner and a soft sponge. Never apply motorcycle cleaner to the dry vehicle; always rinse with water first.

- After rinsing the motorcycle with a gentle spray of water, allow it to dry thoroughly.
- Remove the plug from the exhaust system.

**Warning**

Danger of accidents Reduced braking efficiency due to a wet or dirty brake system.

- Clean or dry a dirty or wet brake system by riding and braking gently.

- After cleaning, ride a short distance until the engine reaches operating temperature.

**Info**

The heat produced causes water at inaccessible locations in the engine and brake system to evaporate.

- After the motorcycle has cooled off, lubricate all moving parts and bearings.
- Clean the chain. (☛ p. 61)
- Treat bare metal parts (except for brake discs and exhaust system) with anti-corrosion materials.


Cleaning and preserving materials for metal, rubber and plastic (☛ p. 116)

- Treat all plastic parts and powder-coated parts with a mild cleaning and care product.

Paint cleaner and polish for high-gloss and matte finishes, bare metal and plastic surfaces (☛ p. 117)

18.2 Checks and maintenance steps for winter operation

- i Info**
If the motorcycle is used in the winter, salt can be expected on the roads. Precautions need to be taken against road salt corrosion.
If the vehicle was operated in road salt, clean it with cold water after riding. Warm water would enhance the corrosive effects of salt.

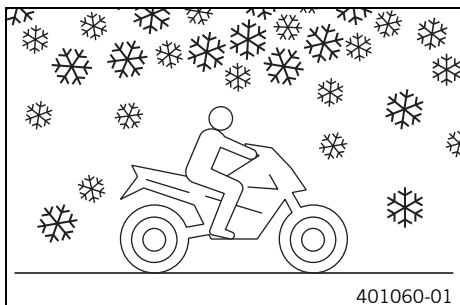

- Clean the motorcycle. (🔧 p. 100)
- Clean the brake system.

- i Info**
After **EVERY** trip on salted roads, thoroughly wash the brake calipers and brake linings with cold water and dry carefully. This should be done after the parts are cooled down and while they are installed.
After riding on salted roads, thoroughly wash the motorcycle with cold water and dry it well.

- Treat the engine, swingarm, and all other bright and zinc-plated parts (except for the brake discs) with a wax-based corrosion inhibitor.

- i Info**
Corrosion inhibitor is not permitted to come in contact with the brake discs as this would greatly reduce the braking force.

- Clean the chain. (🔧 p. 61)

19.1 Storage



Warning


Danger of poisoning Fuel is poisonous and a health hazard.

- Avoid contact between fuel and skin, eyes and clothing. Do not inhale fuel vapors. If fuel gets into your eyes, rinse immediately with water and contact a doctor. Wash affected skin areas immediately with soap and water. If fuel is swallowed, contact a doctor immediately. Change clothing that has come into contact with fuel. Store fuel in a suitable canister according to regulations and keep it out of the reach of children.



Info

If you want to garage the motorcycle for a longer period, take the following steps. Before storing the motorcycle, check all parts for function and wear. If service, repairs or replacements are necessary, you should do this during the storage period (less workshop overload). In this way, you can avoid long workshop waiting times at the start of the new season.

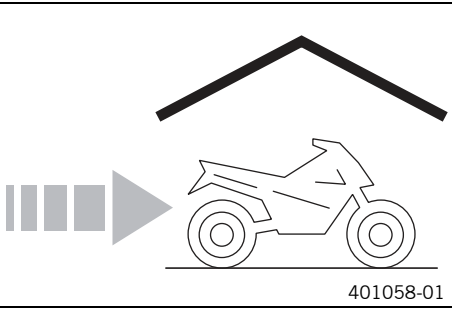

- Clean the motorcycle. (🔧 p. 100)
 - Change the engine oil and oil filter and clean the oil screens. 🛢️ (🔧 p. 97)
 - Check the antifreeze and coolant level. (🔧 p. 91)
 - When refueling for the last time before taking the motorcycle out of service, add fuel additive.
- Fuel additive (🔧 p. 116)
- Check the tire air pressure. (🔧 p. 81)
 - Remove the battery. 🛢️ (🔧 p. 83)
 - Charge the battery. 🛢️ (🔧 p. 83)

Guideline

Storage temperature of battery without direct sunlight	0... 35 °C (32... 95 °F)
--	--------------------------

- Store the vehicle in a dry location that is not subject to large fluctuations in temperature.



Info

KTM recommends raising the motorcycle.


- Raise the motorcycle with the lift stand. (🔧 p. 44)
- Cover the motorcycle with a porous sheet or blanket. Do not use non-porous materials since they prevent humidity from escaping, thus causing corrosion.



Info

Avoid running the engine for a short time only. Since the engine cannot warm up properly, the water vapor produced during combustion condenses and causes valves and exhaust system to rust.

19.2 Preparing for use after storage

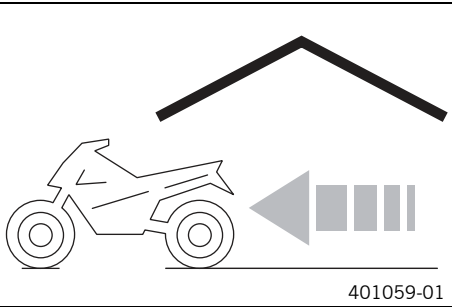

- Remove the motorcycle from the lift stand. (🔧 p. 44)
- Install the battery. 🛢️ (🔧 p. 83)
- Refuel. (🔧 p. 33)
- Perform checks and maintenance work when preparing the vehicle for use. (🔧 p. 30)
- Take a test ride.

Faults	Possible cause	Action
The engine cannot be cranked (electric starter)	Operating error	– Carry out the start procedure. (🔧 p. 30)
	Battery is discharged	– Charge the battery. 🔧 (🔧 p. 83) – Check the charging voltage. 🔧 – Check the closed current. 🔧 – Check the stator winding of the alternator. 🔧
	Main fuse blown	– Change the main fuse. (🔧 p. 84)
	Starter relay defective	– Check the starter relay. 🔧
	Starter motor defective	– Check the starter motor. 🔧
Engine turns but does not start	Operating error	– Carry out the start procedure. (🔧 p. 30)
	Coupling of fuel hose connection not joined together	– Join the fuel hose connection.
	Fuse 1 blown	– Change the fuses of individual power consumers. (🔧 p. 85)
	Fuse 2 blown	– Change the fuses of individual power consumers. (🔧 p. 85)
	Idle speed is not set correctly	– Adjust the idle speed. 🔧 (🔧 p. 95)
	Spark plug oily or wet	– Clean and dry the spark plug or replace if necessary.
	Electrode distance (plug gap) of spark plug too wide	– Adjust the plug gap. Guideline Spark plug electrode gap 0.9 mm (0.035 in)
	Ignition system defective	– Check the ignition system. 🔧
	Short-circuit cable in wiring harness frayed, kill switch or emergency OFF switch defective	– Check the wiring harness. (visual check) – Check the electrical system.
	The connector of the EFI control device, the ignition pulse generator, or the ignition coil is oxidized	– Clean the connector and treat it with contact spray.
Engine does not speed up	Defect in fuel injection system	– Read out the fault memory using the KTM diagnostics tool. 🔧
	Ignition system defective	– Ignition coil - check the secondary winding. 🔧 – Check the spark plug connector. 🔧 – Check the stator winding of the alternator. 🔧
Engine has too little power	Air filter heavily contaminated	– Clean the air filter and air filter box. 🔧 (🔧 p. 57)
	Fuel filter is very dirty	– Change the fuel filter. 🔧
	Defect in fuel injection system	– Read out the fault memory using the KTM diagnostics tool. 🔧
	Exhaust system leaky, deformed or too little glass fiber yarn filling in main silencer	– Check exhaust system for damage. – Change the glass fiber yarn filling of the main silencer. 🔧 (🔧 p. 58)
	Valve clearance too little	– Adjust the valve clearance. 🔧
	Ignition system defective	– Ignition coil - check the secondary winding. 🔧 – Check the spark plug connector. 🔧 – Check the stator winding of the alternator. 🔧
Engine dies during the trip	Lack of fuel	– Refuel. (🔧 p. 33)
	Fuse 1 blown	– Change the fuses of individual power consumers. (🔧 p. 85)
	Fuse 2 blown	– Change the fuses of individual power consumers. (🔧 p. 85)
Engine overheats	Coolant level low in cooling system	– Check the cooling system for leaks. – Check the coolant level. (🔧 p. 92)

Faults	Possible cause	Action
Engine overheats	Insufficient airflow	– Switch off engine when stationary.
	Radiator fins very dirty	– Clean radiator fins.
	Foam formation in cooling system	– Drain the coolant. (🔧 p. 92) – Refill the coolant. (🔧 p. 93)
	Bent radiator hose	– Change the radiator hose. (🔧)
	Thermostat defective	– Check the thermostat. (🔧) Guideline Opening temperature: 70 °C (158 °F)
	Defect in radiator fan system	– Check the radiator fan fuse. – Check fuse 4. – Check the radiator fan. (🔧)
FI warning lamp (MIL) lights up/flashes	Defect in fuel injection system	 Info See blink code – Stop the motorcycle and identify the faulty part using the blink code. – Check the cabling for damage and the electrical plug-in connections for corrosion and damage. – Read out the fault memory using the KTM diagnostics tool. (🔧)
High oil consumption	Engine vent hose bent	– Route the vent hose without bends or replace it if necessary.
	Engine oil level too high	– Check the engine oil level. (🔧 p. 96)
	Engine oil too thin (low viscosity)	– Change the engine oil and oil filter and clean the oil screens. (🔧 p. 97)
	Piston and cylinder worn	– Measure the piston/cylinder mounting clearance. (🔧)
Battery discharged	Battery is not being charged by alternator	– Check the charging voltage. (🔧) – Check the stator winding of the alternator. (🔧)
	Undesired power consumer	– Check the closed current. (🔧)
Speedometer values deleted (time, stop watch, lap times)	The battery in the speedometer is discharged	– Change the speedometer battery. (🔧 p. 89)
The high beam, low beam, parking light, tail light, and license plate lamp are not working	Fuse 3 blown	– Change the fuses of individual power consumers. (🔧 p. 85)
The speedometer, horn, brake light, turn signal, and radiator fan (optional) are not working	Fuse 4 blown	– Change the fuses of individual power consumers. (🔧 p. 85)

Blink code FI warning lamp (MIL)	 02 FI warning lamp (MIL) flashes 2x short
Error level condition	Crankshaft position sensor - circuit fault
Blink code FI warning lamp (MIL)	 06 FI warning lamp (MIL) flashes 6x short
Error level condition	Throttle position sensor circuit A - input signal too low
	Throttle position sensor circuit A - input signal too high
Blink code FI warning lamp (MIL)	 09 FI warning lamp (MIL) flashes 9x short
Error level condition	Manifold absolute pressure sensor cylinder 1 - input signal too low
	Manifold absolute pressure sensor cylinder 1 - input signal too high
Blink code FI warning lamp (MIL)	 12 FI warning lamp (MIL) flashes 1x long, 2x short
Error level condition	Engine coolant temperature sensor - input signal too low
	Engine coolant temperature sensor - input signal too high
Blink code FI warning lamp (MIL)	 13 FI warning lamp (MIL) flashes 1x long, 3x short
Error level condition	Intake air temperature sensor - input signal too low
	Intake air temperature sensor - input signal too high
Blink code FI warning lamp (MIL)	 15 FI warning lamp (MIL) flashes 1x long, 5x short
Error level condition	Rollover sensor (A/D type) - input signal too low
	Rollover sensor (A/D type) - input signal too high
Blink code FI warning lamp (MIL)	 17 FI warning lamp (MIL) flashes 1x long, 7x short
Error level condition	EXC EU, EXC SIX DAYS Lambda sensor cylinder 1, sensor 1 - circuit fault
Blink code FI warning lamp (MIL)	 33 FI warning lamp (MIL) flashes 3x long, 3x short
Error level condition	Injector cylinder 1 - circuit fault
Blink code FI warning lamp (MIL)	 37 FI warning lamp (MIL) flashes 3x long, 7x short
Error level condition	Ignition coil 1, cylinder 1 - circuit fault
Blink code FI warning lamp (MIL)	 41 FI warning lamp (MIL) flashes 4x long, 1x short
Error level condition	Fuel pump control - open/short circuit to ground
	Fuel pump control - input signal too low

Blink code FI warning lamp (MIL)	 45 FI warning lamp (MIL) flashes 4x long, 5x short
Error level condition	EXC EU, EXC SIX DAYS Lambda sensor heater cylinder 1, sensor 1 - short circuit to ground or open circuit
	EXC EU, EXC SIX DAYS Lambda sensor heater cylinder 1, sensor 1 - input signal too high

22.1 Engine

Design	1-cylinder 4-stroke engine, water-cooled
Displacement (All 450 models)	449.3 cm ³ (27.418 cu in)
Displacement (All 500 models)	510.4 cm ³ (31.147 cu in)
Stroke (All 450 models)	63.4 mm (2.496 in)
Stroke (All 500 models)	72 mm (2.83 in)
Bore	95 mm (3.74 in)
Compression ratio	11.8:1
Idle speed	1,800... 1,900 rpm
Control	OHC, 4 valves controlled via rocker arm, drive via tooth/wheel chain
Valve diameter, intake	40 mm (1.57 in)
Valve diameter, exhaust	33 mm (1.3 in)
Valve clearance	
Exhaust at: 20 °C (68 °F)	0.12... 0.17 mm (0.0047... 0.0067 in)
Intake at: 20 °C (68 °F)	0.10... 0.15 mm (0.0039... 0.0059 in)
Crankshaft bearing	2 grooved ball bearings
Conrod bearing	Needle bearing
Piston pin bearing	No bearing bushes - DLC-plated piston pins
Pistons	Forged light alloy
Piston rings	1 compression ring, 1 oil scraper ring
Engine lubrication	Pressure circulation lubrication with two rotary pumps
Primary transmission	32:76
Clutch	Multidisc clutch in oil bath / hydraulically activated
Transmission ratio	
1st gear	14:36
2nd gear	17:32
3rd gear	19:28
4th gear	22:26
5th gear	24:23
6th gear	26:21
Alternator	12 V, 200 W
Ignition	Contactless controlled fully electronic ignition with digital ignition adjustment, type Kokusan
Spark plug	NGK LKAR 8AI - 9
Spark plug electrode gap	0.9 mm (0.035 in)
Cooling	Water, permanent circulation of coolant by water pump
Starter	Electric starter/kick starter

22.2 Engine tightening torques

Oil jet, piston cooling	M4	2 Nm (1.5 lbf ft)	Loctite® 243™
Screw, cable holder in alternator cover	M4	4 Nm (3 lbf ft)	Loctite® 243™
Oil jet, piston cooling	M5	2 Nm (1.5 lbf ft)	Loctite® 243™
Oil jet, rocker arm lubrication	M5	2 Nm (1.5 lbf ft)	Loctite® 243™
Screw, bearing retainer	M5	6 Nm (4.4 lbf ft)	Loctite® 2701
Screw, clutch spring retainer	M5	6 Nm (4.4 lbf ft)	–
Screw, ignition pulse generator	M5	6 Nm (4.4 lbf ft)	Loctite® 243™
Screw, locking lever	M5	6 Nm (4.4 lbf ft)	Loctite® 243™
Screw, oil filter cover	M5	6 Nm (4.4 lbf ft)	–
Screw, oil pump cover	M5	6 Nm (4.4 lbf ft)	Loctite® 243™
Screw, stator	M5	6 Nm (4.4 lbf ft)	Loctite® 243™

Nut, water pump impeller	M6	8 Nm (5.9 lbf ft)	Loctite® 243™
Plug, vacuum connection	M6	2.5 Nm (1.84 lbf ft)	Loctite® 243™
Screw, alternator cover	M6x25	10 Nm (7.4 lbf ft)	–
Screw, camshaft bearing support	M6	10 Nm (7.4 lbf ft)	Loctite® 243™
Screw, clutch cover	M6x25	10 Nm (7.4 lbf ft)	–
Screw, cylinder head	M6	10 Nm (7.4 lbf ft)	–
Screw, engine case	M6x40	10 Nm (7.4 lbf ft)	–
Screw, engine case	M6x60	10 Nm (7.4 lbf ft)	–
Screw, engine case	M6x75	10 Nm (7.4 lbf ft)	–
Screw, engine case	M6x80	10 Nm (7.4 lbf ft)	–
Screw, engine case	M6x85	10 Nm (7.4 lbf ft)	–
Screw, exhaust flange	M6	10 Nm (7.4 lbf ft)	Loctite® 243™
Screw, idler	M6	10 Nm (7.4 lbf ft)	Loctite® 243™
Screw, kick starter spring hanger	M6	10 Nm (7.4 lbf ft)	Loctite® 243™
Screw, kick starter stop	M6	10 Nm (7.4 lbf ft)	Loctite® 243™
Screw, oil pump cover	M6	10 Nm (7.4 lbf ft)	Loctite® 243™
Screw, shift drum locating	M6	10 Nm (7.4 lbf ft)	Loctite® 243™
Screw, shift lever	M6	14 Nm (10.3 lbf ft)	Loctite® 243™
Screw, starter motor	M6	10 Nm (7.4 lbf ft)	–
Screw, timing chain guide rail	M6	10 Nm (7.4 lbf ft)	Loctite® 243™
Screw, timing chain securing guide	M6	10 Nm (7.4 lbf ft)	Loctite® 243™
Screw, timing chain tensioner	M6	10 Nm (7.4 lbf ft)	–
Screw, timing chain tensioning rail	M6	10 Nm (7.4 lbf ft)	Loctite® 243™
Screw, torque governor	M6	10 Nm (7.4 lbf ft)	Loctite® 243™
Screw, valve cover	M6	10 Nm (7.4 lbf ft)	–
Screw, water pump cover	M6x25	10 Nm (7.4 lbf ft)	–
Screw, water pump cover	M6x55	10 Nm (7.4 lbf ft)	–
Oil jet for balancer shaft lubrication	M6x0.75	4 Nm (3 lbf ft)	–
Oil nozzle for conrod bearing lubrication	M6x0.75	4 Nm (3 lbf ft)	–
Plug, oil channel	M7	9 Nm (6.6 lbf ft)	Loctite® 243™
Screw, rocker arm bearing	M7x1	15 Nm (11.1 lbf ft)	–
Plug, crankshaft location	M8	10 Nm (7.4 lbf ft)	–
Screw, clutch cover	M8	10 Nm (7.4 lbf ft)	–
Screw, kick starter	M8	25 Nm (18.4 lbf ft)	Loctite® 2701
Plug, timing chain tensioner	M8x1	8 Nm (5.9 lbf ft)	–
Plug, oil drilling	M10	15 Nm (11.1 lbf ft)	Loctite® 243™
Screw, engine sprocket	M10	60 Nm (44.3 lbf ft)	Loctite® 2701
Screw, cylinder head	M10x1.25	Tightening sequence: Tighten diagonally, beginning with the rear screw on the timing chain shaft. Step 1 10 Nm (7.4 lbf ft) Step 2 30 Nm (22.1 lbf ft) Step 3 50 Nm (36.9 lbf ft)	Lubricated with engine oil
Nut, rotor	M12x1	60 Nm (44.3 lbf ft)	–
Spark plug	M12x1.25	15... 20 Nm (11.1... 14.8 lbf ft)	–
Engine coolant temperature sensor	M12x1.5	12 Nm (8.9 lbf ft)	–
Oil drain plug with magnet	M12x1.5	20 Nm (14.8 lbf ft)	–
Oil pressure control valve plug	M12x1.5	20 Nm (14.8 lbf ft)	–

Plug, SLS	M12x1.5	20 Nm (14.8 lbf ft)	–
Plug, rocker arm	M14x1.25	20 Nm (14.8 lbf ft)	–
Nut, inner clutch hub	M18x1.5	100 Nm (73.8 lbf ft)	–
Nut, primary gear	M20LHx1.5	100 Nm (73.8 lbf ft)	Loctite® 648™
Screw plug, engine oil screen	M20x1.5	15 Nm (11.1 lbf ft)	–
Screw plug, gear oil screen	M20x1.5	15 Nm (11.1 lbf ft)	–

22.3 Capacities

22.3.1 Capacity - engine oil

Engine oil	1.5 l (1.6 qt.)	Engine oil (SAE 10W/50) (☛ p. 114)	
		Alternative engine oil for harsh operating conditions and increased performance	Engine oil (SAE 10W/60) (00062010035) (☛ p. 114)

22.3.2 Capacity - coolant

Coolant	1.2 l (1.3 qt.)	Coolant (☛ p. 114)	
		Coolant (mixed ready to use) (☛ p. 114)	

22.3.3 Capacity - fuel

Total fuel tank capacity, approx. (all EXC models)	9 l (2.4 US gal)	Super unleaded (ROZ 95/RON 95/PON 91) (☛ p. 115)	
Total fuel tank capacity, approx. (all XC-W models)	8.5 l (2.25 US gal)	Super unleaded (ROZ 95/RON 95/PON 91) (☛ p. 115)	
Fuel reserve, approx.		1.5 l (1.6 qt.)	

22.4 Chassis

Frame	Central tube frame made of chrome molybdenum steel tubing
Fork (EXC EU, EXC AUS, all XC-W models)	WP Suspension Up Side Down 4860 MXMA PA
Fork (EXC SIX DAYS)	WP Suspension Up Side Down 4860 4CS
Suspension travel (EXC EU, EXC AUS, all XC-W models)	
Front	300 mm (11.81 in)
Suspension travel (EXC SIX DAYS)	
Front	292 mm (11.5 in)
Suspension travel	
Rear	335 mm (13.19 in)
Fork offset	20 mm (0.79 in)
Shock absorber	WP Suspension PDS 5018 DCC
Brake system	Disc brakes, brake calipers on floating bearings
Brake discs - diameter	
Front	260 mm (10.24 in)
Rear	220 mm (8.66 in)
Brake discs - wear limit	
Front	2.5 mm (0.098 in)
Rear	3.5 mm (0.138 in)
Tire air pressure off road	
Front	1.0 bar (15 psi)
Rear	1.0 bar (15 psi)
Road tire pressure (all EXC models)	
Front	1.5 bar (22 psi)
Rear	1.5 bar (22 psi)
Final drive (All 450 EXC models)	14:52 (13:52)

Final drive (All 500 EXC models)	14:50 (13:50)
Final drive (450 XC-W USA)	13:52
Final drive (500 XC-W USA)	13:50
Chain	5/8 x 1/4"
Rear sprockets available	38, 40, 42, 45, 48, 49, 50, 51, 52
Steering head angle	63.5°
Wheelbase	1,482±10 mm (58.35±0.39 in)
Seat height unloaded	970 mm (38.19 in)
Ground clearance unloaded	345 mm (13.58 in)
Weight without fuel, approx. (All 450 EXC models)	112 kg (247 lb.)
Weight without fuel, approx. (All 500 EXC models)	112.5 kg (248 lb.)
Weight without fuel, approx. (450 XC-W USA)	111 kg (245 lb.)
Weight without fuel, approx. (500 XC-W USA)	112 kg (247 lb.)
Maximum permissible front axle load	145 kg (320 lb.)
Maximum permissible rear axle load	190 kg (419 lb.)
Maximum permissible overall weight	335 kg (739 lb.)

22.5 Electrical system

Battery	YTX5L-BS	Battery voltage: 12 V Nominal capacity: 4 Ah Maintenance-free
Speedometer battery	CR 2430	Battery voltage: 3 V
Fuse	58011109105	5 A
Fuse	58011109110	10 A
Fuse	58011109120	20 A
Headlight	S2 / socket BA20d	12 V 35/35 W
Parking light	W5W / socket W2.1x9.5d	12 V 5 W
Indicator lamps (all EXC models)	W2.3W / socket W2x4.6d	12 V 2.3 W
Turn signal (all EXC models)	R10W / socket BA15s	12 V 10 W
Brake/tail light	LED	
License plate lamp (all EXC models)	W5W / socket W2.1x9.5d	12 V 5 W

22.6 Tires

Validity	Front tires	Rear tires
(all EXC models)	80/100 - 21 M/C 51M TT MAXXIS MAXX CROSS SI	140/80 - 18 M/C 70R TT MAXXIS MAXX ENDURO
(all XC-W models)	80/100 - 21 51M TT Dunlop GEOMAX MX51	110/100 - 18 64M TT Dunlop GEOMAX MX51
Additional information is available in the Service section under: http://www.ktm.com		

22.7 Fork**22.7.1 EXC EU, EXC AUS, all XC-W models**

Fork part number	14.18.7L.69
Fork	WP Suspension Up Side Down 4860 MXMA PA
Compression damping	
Comfort	22 clicks
Standard	20 clicks
Sport	18 clicks
Rebound damping	
Comfort	20 clicks
Standard	18 clicks
Sport	16 clicks
Spring preload - Preload Adjuster	
Comfort	1 turn
Standard	2 turns
Sport	2 turns
Spring length with preload spacer(s)	
Weight of rider: 65... 75 kg (143... 165 lb.)	513 mm (20.2 in)
Weight of rider: 75... 85 kg (165... 187 lb.)	513 mm (20.2 in)
Weight of rider: 85... 95 kg (187... 209 lb.)	513 mm (20.2 in)
Spring rate	
Weight of rider: 65... 75 kg (143... 165 lb.)	4.2 N/mm (24 lb/in)
Weight of rider: 75... 85 kg (165... 187 lb.)	4.4 N/mm (25.1 lb/in)
Weight of rider: 85... 95 kg (187... 209 lb.)	4.6 N/mm (26.3 lb/in)
Fork length	940 mm (37.01 in)
Air chamber length	110 ⁺¹⁰ ₋₂₀ mm (4.33 ^{+0.39} _{-0.79} in)
Fork oil per fork leg	618 ml (20.89 fl. oz.)
Fork oil (SAE 4) (48601166S1) (☛ p. 115)	

22.7.2 EXC SIX DAYS

Fork part number	24.18.7M.69
Fork	WP Suspension Up Side Down 4860 4CS
Compression damping	
Comfort	24 clicks
Standard	22 clicks
Sport	16 clicks
Rebound damping	
Comfort	20 clicks
Standard	18 clicks
Sport	18 clicks
Spring length with preload spacer(s)	470 mm (18.5 in)
Spring rate	
Weight of rider: 65... 75 kg (143... 165 lb.)	4.4 N/mm (25.1 lb/in)
Weight of rider: 75... 85 kg (165... 187 lb.)	4.6 N/mm (26.3 lb/in)
Weight of rider: 85... 95 kg (187... 209 lb.)	4.8 N/mm (27.4 lb/in)
Fork length	932 mm (36.69 in)
Oil capacity per fork leg	607 ml (20.52 fl. oz.)
Fork oil (SAE 4) (48601166S1) (☛ p. 115)	

22.8 Shock absorber

Shock absorber part number	12.18.7L.69
Shock absorber	WP Suspension PDS 5018 DCC
Compression damping, low-speed	
Comfort	25 clicks
Standard	20 clicks
Sport	15 clicks
Compression damping, high-speed	
Comfort	2 turns
Standard	1.5 turns
Sport	1.25 turns
Rebound damping	
Comfort	28 clicks
Standard	24 clicks
Sport	22 clicks
Spring preload	
Comfort	9 mm (0.35 in)
Standard	9 mm (0.35 in)
Sport	9 mm (0.35 in)
Spring rate	
Weight of rider: 65... 75 kg (143... 165 lb.)	69 N/mm (394 lbf/in)
Weight of rider: 75... 85 kg (165... 187 lb.)	72 N/mm (411 lbf/in)
Weight of rider: 85... 95 kg (187... 209 lb.)	76 N/mm (434 lbf/in)
Spring length	250 mm (9.84 in)
Gas pressure	10 bar (145 psi)
Static sag	33... 35 mm (1.3... 1.38 in)
Riding sag	105... 115 mm (4.13... 4.53 in)
Fitted length	417 mm (16.42 in)
Damper oil	Shock absorber oil (SAE 2.5) (50180342S1) (► p. 115)

22.9 Chassis tightening torques

Spoke nipple, front wheel	M4.5	5... 6 Nm (3.7... 4.4 lbf ft)	–
Screw, battery terminal	M5	2.5 Nm (1.84 lbf ft)	–
Screw, intake air temperature sensor	M5	2 Nm (1.5 lbf ft)	–
Screw, shock absorber adjusting ring	M5	5 Nm (3.7 lbf ft)	–
Screw, spoiler on fuel tank (all XC-W models)	M5x12	1.5 Nm (1.11 lbf ft)	–
Spoke nipple, rear wheel	M5	5... 6 Nm (3.7... 4.4 lbf ft)	–
Remaining nuts, chassis	M6	10 Nm (7.4 lbf ft)	–
Remaining screws, chassis	M6	10 Nm (7.4 lbf ft)	–
Screw, ball joint of push rod on foot brake cylinder	M6	10 Nm (7.4 lbf ft)	Loctite® 243™
Screw, chain sliding guard	M6	6 Nm (4.4 lbf ft)	Loctite® 243™
Screw, front brake disc	M6	14 Nm (10.3 lbf ft)	Loctite® 243™
Screw, rear brake disc	M6	14 Nm (10.3 lbf ft)	Loctite® 243™
Screw, throttle grip	M6	3 Nm (2.2 lbf ft)	–
Fuel connection on fuel pump	M8	10 Nm (7.4 lbf ft)	–
Nut, foot brake lever stop	M8	20 Nm (14.8 lbf ft)	–
Nut, rear sprocket screw	M8	35 Nm (25.8 lbf ft)	Loctite® 2701
Nut, rim lock	M8	10 Nm (7.4 lbf ft)	–
Remaining nuts, chassis	M8	25 Nm (18.4 lbf ft)	–

Remaining screws, chassis	M8	25 Nm (18.4 lbf ft)	–
Screw, bottom triple clamp (EXC SIX DAYS)	M8	12 Nm (8.9 lbf ft)	–
Screw, bottom triple clamp (EXC EU, EXC AUS, all XC-W models)	M8	15 Nm (11.1 lbf ft)	–
Screw, chain sliding piece	M8	15 Nm (11.1 lbf ft)	–
Screw, engine brace	M8	33 Nm (24.3 lbf ft)	–
Screw, fork stub	M8	15 Nm (11.1 lbf ft)	–
Screw, front brake caliper	M8	25 Nm (18.4 lbf ft)	Loctite® 243™
Screw, handlebar clamp	M8	20 Nm (14.8 lbf ft)	–
Screw, side stand attachment	M8	45 Nm (33.2 lbf ft)	Loctite® 2701
Screw, subframe	M8	35 Nm (25.8 lbf ft)	Loctite® 2701
Screw, top steering stem (EXC SIX DAYS)	M8	17 Nm (12.5 lbf ft)	Loctite® 243™
Screw, top steering stem (EXC EU, EXC AUS, all XC-W models)	M8	20 Nm (14.8 lbf ft)	–
Screw, top triple clamp (EXC SIX DAYS)	M8	17 Nm (12.5 lbf ft)	–
Screw, top triple clamp (EXC EU, EXC AUS, all XC-W models)	M8	20 Nm (14.8 lbf ft)	–
Engine attachment bolt	M10	60 Nm (44.3 lbf ft)	–
Remaining nuts, chassis	M10	45 Nm (33.2 lbf ft)	–
Remaining screws, chassis	M10	45 Nm (33.2 lbf ft)	–
Screw, handlebar support	M10	40 Nm (29.5 lbf ft)	Loctite® 243™
Nut, fuel pump fixation	M12	15 Nm (11.1 lbf ft)	–
Screw, bottom shock absorber	M12	80 Nm (59 lbf ft)	Loctite® 2701
Screw, top shock absorber	M12	80 Nm (59 lbf ft)	Loctite® 2701
Nut, seat fixing	M12x1	20 Nm (14.8 lbf ft)	–
Nut, swingarm pivot	M16x1.5	100 Nm (73.8 lbf ft)	–
Nut, rear wheel spindle	M20x1.5	80 Nm (59 lbf ft)	–
Screw, top steering head	M20x1.5	12 Nm (8.9 lbf ft)	–
Screw-in nozzles, cooling system	M20x1.5	12 Nm (8.9 lbf ft)	Loctite® 243™
Screw, front wheel spindle	M24x1.5	45 Nm (33.2 lbf ft)	–

Brake fluid DOT 4 / DOT 5.1**According to**

- DOT

Guideline

- Use only brake fluid that complies with the specified standard (see specifications on the container) and that possesses the corresponding properties. KTM recommends **Castrol** and **Motorex®** products.

Supplier**Castrol**

- **RESPONSE BRAKE FLUID SUPER DOT 4**

Motorex®

- **Brake Fluid DOT 5.1**

Coolant**Guideline**

- Use only suitable coolant (also in countries with high temperatures). Use of low-quality antifreeze can lead to corrosion and foaming. KTM recommends **Motorex®** products.

Mixture ratio

Antifreeze protection: -25... -45 °C (-13... -49 °F)	50 % corrosion inhibitor/antifreeze 50 % distilled water
--	---

Coolant (mixed ready to use)

Antifreeze	-40 °C (-40 °F)
------------	-----------------

Supplier**Motorex®**

- **COOLANT G48**

Engine oil (SAE 10W/60) (00062010035)**According to**

- JASO T903 MA (☛ p. 118)
- SAE (☛ p. 118) (SAE 10W/60)
- KTM LC4 2007+

Guideline

- Use only engine oils that comply with the specified standards (see specifications on the container) and that possess the corresponding properties. KTM recommends **Motorex®** products.

Synthetic engine oil

Supplier**Motorex®**

- **Cross Power 4T**

Engine oil (SAE 10W/50)**According to**

- JASO T903 MA (☛ p. 118)
- SAE (☛ p. 118) (SAE 10W/50)

Guideline

- Use only engine oils that comply with the specified standards (see specifications on the container) and that possess the corresponding properties. KTM recommends **Motorex®** products.

Synthetic engine oil

Supplier**Motorex®**

- **Cross Power 4T**

Fork oil (SAE 4) (48601166S1)

According to

- SAE (🔧 p. 118) (SAE 4)

Guideline

- Use only oils that comply with the specified standards (see specifications on the container) and that possess the corresponding properties.

Shock absorber oil (SAE 2.5) (50180342S1)

According to

- SAE (🔧 p. 118) (SAE 2.5)

Guideline

- Use only oils that comply with the specified standards (see specifications on the container) and that possess the corresponding properties.

Super unleaded (ROZ 95/RON 95/PON 91)

According to

- DIN EN 228 (ROZ 95/RON 95/PON 91)

Guideline

- Only use unleaded super fuel that matches or is equivalent to the specified fuel grade.
- Fuel with an ethanol content of up to 10 % (E10 fuel) is safe to use.

**Info**

Do **not** use fuel containing methanol (e. g. M15, M85, M100) or more than 10 % ethanol (e. g. E15, E25, E85, E100).

Air filter cleaner

Guideline

- KTM recommends **Motorex®** products.

Supplier

Motorex®

- **Twin Air Dirt Bio Remover**

Chain cleaner

Guideline

- KTM recommends **Motorex®** products.

Supplier

Motorex®

- **Chain Clean**

Cleaning and preserving materials for metal, rubber and plastic

Guideline

- KTM recommends **Motorex®** products.

Supplier

Motorex®

- **Protect & Shine**

Fuel additive

Guideline

- KTM recommends **Motorex®** products.

Supplier

Motorex®

- **Fuel Stabilizer**

High viscosity grease

Guideline

- KTM recommends **SKF®** products.

Supplier

SKF®

- **LGHB 2**

Long-life grease

Guideline

- KTM recommends **Motorex®** products.

Supplier

Motorex®

- **Bike Grease 2000**

Motorcycle cleaner

Guideline

- KTM recommends **Motorex®** products.

Supplier

Motorex®

- **Moto Clean 900**

Off-road chain spray

Guideline

- KTM recommends **Motorex®** products.

Supplier

Motorex®

- **Chainlube Offroad**

Oil for foam air filter

Guideline

- KTM recommends **Motorex®** products.

Supplier**Motorex®**

- **Twin Air Liquid Bio Power**

Paint cleaner and polish for high-gloss and matte finishes, bare metal and plastic surfaces

Guideline

- KTM recommends **Motorex®** products.

Supplier**Motorex®**

- **Clean & Polish**

Rubber grip adhesive (00062030051)

Supplier

KTM-Sportmotorcycle AG

- **GRIP GLUE**

Universal oil spray

Guideline

- KTM recommends **Motorex®** products.

Supplier**Motorex®**

- **Joker 440 Synthetic**

JASO T903 MA

Different technical development directions required a new specification for 4-stroke motorcycles – the JASO T903 MA Standard. Earlier, engine oils from the automobile industry were used for 4-stroke motorcycles because there was no separate motorcycle specification. Whereas long service intervals are demanded for automobile engines, high performance at high engine speeds are in the foreground for motorcycle engines. In most motorcycles, the gearbox and the clutch are lubricated with the same oil as the engine. The JASO MA Standard meets these special requirements.

SAE

The SAE viscosity classes were defined by the Society of Automotive Engineers and are used for classifying oils according to their viscosity. The viscosity describes only one property of oil and says nothing about quality.

A	
Accessories	8
Air filter	
cleaning	57
installing	56
removing	56
Air filter box	
cleaning	57
sealing	57
Air filter box lid	
installing	56
removing	55
Antifreeze	
checking	91
Auxiliary substances	8
B	
Basic suspension setting	
checking against the rider's weight	36
Battery	
charging	83
installing	83
removing	83
Blink code	105-106
Brake discs	
checking	70
Brake fluid	
front brake, adding	70
rear brake, adding	74
Brake fluid level	
front brake, checking	70
rear brake, checking	74
Brake linings	
front brake, changing	71
front brake, checking	71
rear brake, changing	76
rear brake, checking	75
Brake system	69-77
C	
Capacity	
coolant	93, 109
engine oil	98, 109
Chain	
checking	63
cleaning	61
Chain guide	
adjusting	65
checking	63
Chain tension	
adjusting	62
checking	62
Chassis number	11
Clutch	
fluid level, checking/correcting	67
fluid, changing	67

Clutch lever	13
basic position, adjusting	67
Compression damping	
fork, adjusting	40
Compression damping, high-speed	
shock absorber, adjusting	37
Compression damping, low-speed	
shock absorber, adjusting	36
Coolant	
draining	92
refilling	93
Coolant level	
checking	91-92
Cooling system	91
Customer service	8
D	
Difficult riding conditions	27
dry sand	28
high temperature	29
low temperatures	29
muddy surfaces	29
slow speed	29
snow	29
wet sand	28
wet surfaces	29
E	
Electric starter button	15
Emergency OFF switch	14
Engine	
running-in	27
Engine guard	
installing	68
removing	68
Engine number	11
Engine oil	
adding	99
changing	97
Engine oil level	
checking	96
Engine sprocket	
checking	63
Environment	7
F	
Figures	8
Filler cap	
closing	22
opening	22
Filling up	
fuel	33
Foot brake lever	24
basic position, adjusting	73
free travel, checking	73
Fork	111
Fork legs	
basic setting, checking	40

bleeding	44
dust boots, cleaning	44
installing	46
removing	45
spring preload, adjusting	42

Fork protector

installing	47
removing	47

Frame

checking	65
----------	----

Front fender

installing	54
removing	54

Front wheel

installing	78
removing	78

Fuel screen

changing	96
----------	----

Fuel tank

installing	60
removing	59

Fuse

individual power consumers, changing	85
main fuse, changing	84
radiator fan, changing	86

H

Hand brake lever

basic position, adjusting	69
free travel, adjusting	69
free travel, checking	69

Handlebar position

adjusting	42
-----------	----

Headlight

headlight range, adjusting	89
----------------------------	----

Headlight bulb

changing	87
----------	----

Headlight mask with headlight

installing	87
removing	87

Headlight setting

checking	89
----------	----

Horn button

	14
--	----

I

Idle speed

adjusting	95
-----------	----

Idle speed adjusting screw

	23
--	----

Intended use

	6
--	---

K

Key number

	11
--	----

Kick starter

	23
--	----

Kill switch

	13
--	----

L

Light switch

	14
--	----

Lower triple clamp

installing	49, 51
------------	--------

removing	47-48
----------	-------

M

Main fuse

changing	84
----------	----

Main silencer

glass fiber yarn filling, changing	58
installing	58
removing	57

Motorcycle

cleaning	100
raising with lift stand	44
removing from lift stand	44

O

Oil filter

changing	97
----------	----

Oil screens

cleaning	97
----------	----

Operating substances

	8
--	---

Overview of indicator lamps

	15
--	----

Owner's Manual

	7
--	---

P

Play in throttle cable

checking	94
----------	----

Preparing for use

advice on first use	26
after storage	102
checks and maintenance work when preparing for use	30

Protective clothing

	7
--	---

R

Rear sprocket

checking	63
----------	----

Rear wheel

installing	79
removing	79

Rebound damping

fork, adjusting	41
shock absorber, adjusting	37

Riding sag

adjusting	39
-----------	----

Rubber grip

checking	66
securing	66

S

Safe operation

	7
--	---

Seat

mounting	55
removing	55

Service

	8
--	---

Service schedule

	34-35
--	-------

Shift lever

	23
--	----

basic position, adjusting	95
basic position, checking	95

Shock absorber

installing	55
------------	----

removing	54
riding sag, checking	38
spring preload, adjusting	39
static sag, checking	38
Side stand	24
Spare parts	8
Speedometer	
adjusting	17
battery, changing	89
clock, setting	17
kilometers or miles, setting	16
overview	16
Spoke tension	
checking	81
Starting	30
Steering	
locking	24
unlocking	25
Steering head bearing	
greasing	54
Steering head bearing play	
adjusting	53
checking	52
Storage	102
Swingarm	
checking	65

T

Technical data	
capacities	109
chassis	109
chassis tightening torques	112
electrical system	110
engine	107
engine tightening torques	107
fork	111
shock absorber	112
tires	110
Throttle cable play	
adjusting	94
Throttle cable routing	
checking	66
Throttle grip	13
Tire condition	
checking	80
Tire pressure	
checking	81
Transport	32
Troubleshooting	103-104
Turn signal bulb	
changing	88
Turn signal switch	14
Type label	11

U

Use definition	6
-----------------------	---

V

View of vehicle

front left side	9
rear right side	10

W

Warranty	8
-----------------	---

Winter operation

checks and maintenance steps	101
------------------------------	-----

Work rules	7
-------------------	---



3211864en

05/2012



KTM-Sportmotorcycle AG
5230 Mattighofen/Austria
<http://www.ktm.com>



Photo: Mitterbauer/KTM

<https://www.motorcycle-manual.com/>