


WIRING DIAGRAM FOR SUPER EXCEL (12V-70W E.I.S. ELECTRONIC IGNITION SYSTEM)

12 V 70W ELECTRONIC WITH IGNITION LOCK, A/C INDICATOR, 'T' NOSE TYPE FOR SUPER EXCEL,
SUPER FE & CHETAK METALLIC

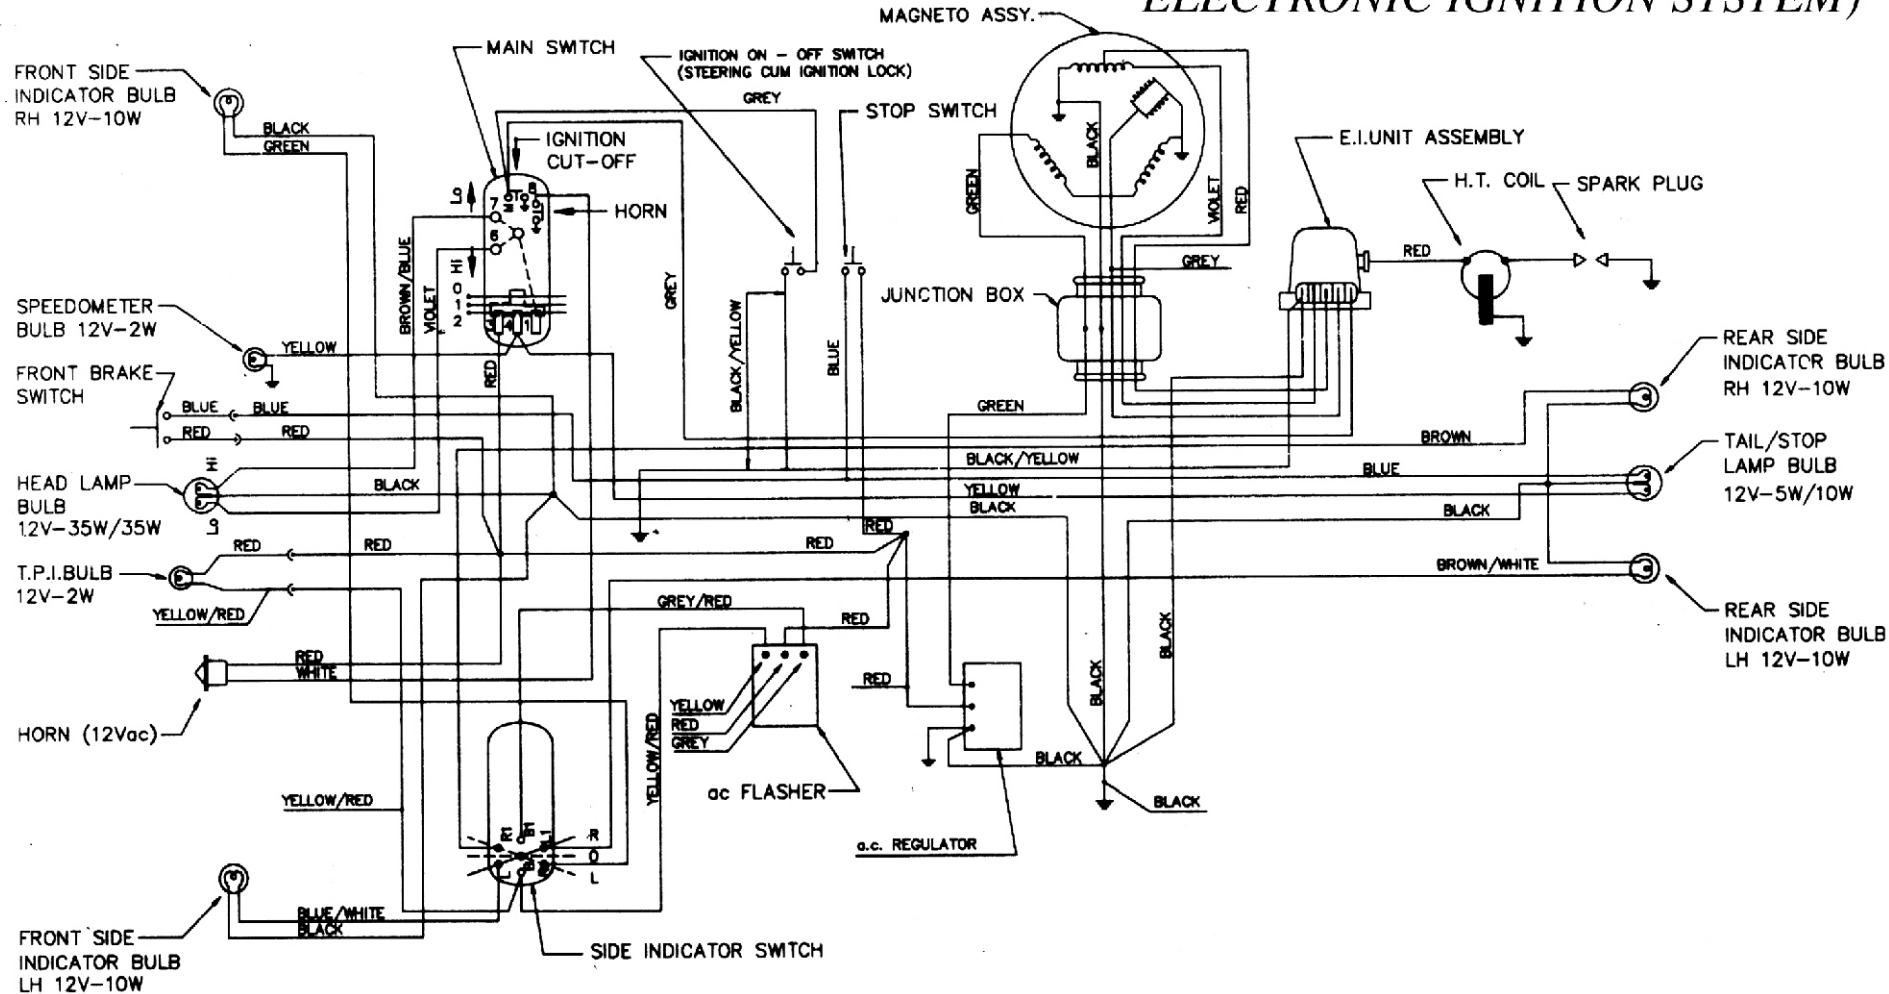

POSITION OF CONTROL SWITCHES

MAIN SWITCH

FOR LIGHTS

- 0 - ALL OFF - TERMINALS 1,3,4 DISCONNECTED
- 1 - TAIL LAMP, SPEEDOMETER LAMP ON
TERMINALS 4 AND 3 CONNECTED
- 2 - HEAD LAMP, TAIL LAMP, SPEEDOMETER LAMP
ON, TERMINALS 4,3,1 CONNECTED

HI-LOW BEAM POSITION

- Hi- PRESS THE BUTTON, HEAD LAMP (IN HI BEAM POSITION) ON,
TERMINALS 7 AND 1 CONNECTED

- Low- PRESS THE BUTTON HEAD LAMP (IN LOW BEAM POSITION) ON,
TERMINAL 6 AND 1 CONNECTED

- FOR HORN - PRESS THE BUTTON TERMINAL 8 CONNECTED TO GROUND
FOR IGNITION CUT-OFF - PRESS THE BUTTON TERMINAL M CONNECTED TO GROUND

SIDE INDICATOR SWITCH

- 0 - NO INDICATOR ON TERMINALS L,L1,B,B1,R,R1 DISCONNECTED
- L - LEFT INDICATOR ON TERMINALS B,L AND B1,L1 CONNECTED
TERMINALS R,R1 DISCONNECTED.
- R - RIGHT INDICATOR ON, TERMINALS B,R AND B1,R1 CONNECTED
TERMINALS L,L1 DISCONNECTED