



ECX50

2009
Owners Parts Service Tuning

CHAMPIONS START HERE

For **parts orders** contact your local dealer

To locate your closest Cobra dealer
log on to

www.cobramotorcycle.com

or call

(517) 437-9100

If you need **technical assistance**
contact your local dealer or call
the Cobra Technical Support Hotline at
(517) 437-9100



Cobra Motorcycle MFG., Inc.
240 Uran Road
Hillsdale, MI 49242

DISCLAIMER OF WARRANTY

This motorcycle is sold "as is" with all faults, obvious or not. There are no warranties expressed or implied, including any warranty of merchantability and warranty of fitness for any particular purpose.

"WARNING"

THE COBRA ECX50 IS A COMPETITION MODEL ONLY AND IS NOT MANUFACTURED FOR, NOR SHOULD IT BE USED ON PUBLIC STREETS, ROADS OR HIGHWAYS.

THE USE OF THIS ATV SHOULD BE LIMITED TO PARTICIPATION IN SANCTIONED COMPETITION EVENTS UPON A CLOSED COURSE BY A SUFFICIENTLY SKILLED RIDER AND SHOULD NOT BE USED FOR GENERAL OFF-ROAD RECREATIONAL RIDING.

IMPROPER USE OF THIS MOTORCYCLE CAN CAUSE INJURY OR DEATH.

THIS BIKE IS INTENDED FOR EXPERIENCED RACERS ONLY AND NOT FOR BEGINNERS.

IT IS YOUR RESPONSIBILITY AS THE OWNER OF THIS COBRA PRODUCT OR AS THE PARENT, OR LEGAL GUARDIAN OF THE OPERATOR, TO KEEP THIS COBRA PRODUCT IN PROPER OPERATING CONDITION.

THIS ATV WAS DESIGNED FOR RIDERS THAT WEIGH LESS THAN 110 LBS WITH FULL RIDING GEAR AND SHOULD NOT BE OPERATED BY RIDERS THAT WEIGH MORE THAT.

BE SURE THAT THE RIDER ALWAYS WEARS ADEQUATE SAFETY GEAR EVERYTIME HE OR SHE RIDES THEIR COBRA ATV.

IMPORTANT SAFETY NOTICE

WARNING

Failure to follow WARNING instructions could result in severe injury or death to the machine operator, a bystander, or a person inspecting or repairing the machine.

CAUTION:

A CAUTION indicates special precautions that must be taken to avoid damage to the machine.

NOTE:

A NOTE provides key information to make procedures easier or clearer.

Table Of Contents

General Information	5
Specifications - General	5
Specifications - Torque Values	6
Optional Suspension Components	7
Spring rate chart for Cobra Fox quad shocks	8
Break-In Procedure	9
Starting Procedure	10
Maintenance	11
Tips	11
Schedule	11
Replacing Transmission / Clutch Lubricant	13
Chain adjustment	14
Air Filter Cleaning	15
Frictional Drive (CFD)	16
Front end	17
Parts	18
Parts – Air Inlet System	18
Parts – Bars and Steering	19
Parts – Bumper, Nerf & Grab Bars	20
Parts - Carburetor	21
Parts – Coolant System	22
Parts – Electrical System	23
Parts – Engine – Bottom End and Transmission	24
Parts – Engine Clutch and Kicker	25
Parts – Engine – Water Pump	26
Parts – Engine – Top End	27
Parts – Exhaust System	28
Parts - Front A-Arms & Steering Upright	29
Parts – Front Brakes (MAGURA)	30
Parts – Front Brakes (AJP)	31
Parts – Front Shock	32
Parts – Miscellaneous	33
Parts – Plastic Bodywork & Seat	34

Parts – Rear Brake.....	35
Parts – Rear Drive.....	36
Parts – Rear Shock (Fox).....	37
Parts – Swingarm Assembly.....	38
Parts – Tie Rod Assembly.....	39
Service.....	40
Engine Service.....	40
Base Gasket Selection.....	41
Engine Removal.....	43
Complete Engine Disassembly Procedure.....	44
Top End Disassembly Procedure.....	44
Splitting the Cases.....	45
Engine assembly.....	46
Clutch.....	48
Ignition.....	53
Cooling System.....	55
Fuel & Air System.....	58
Exhaust.....	61
Tuning.....	62
Gearing.....	62
Carburetion.....	63

General Information

Specifications - General

Items	ECX50
Dimensions	
Wheelbase	42" (1067mm)
Width Front / Rear	43" / 46" (1092mm / 1168mm)
Weight	198lb
Engine	
Type	2-stroke, single cylinder, reed valve
Cooling system	Liquid-cooled
Coolant	50/50 antifreeze-coolant / distilled water
Displacement	49.8 cc
Bore and stroke	39 mm x 41.7 mm, "V" head
Ignition system	Electronic, analog advance
Spark plug	Champion 8339-1, 8332-1 hotter, 8904-1 colder
Gap	0.023" – 0.025" (0.58 – 0.64 mm)
Ignition timing	0.040" (1.02 mm) BTDC
Fuel type	High octane pump gasoline RACE FUELS ARE NOT RECOMMENDED
Oil type	<i>Cobra Venom 2-cycle Race Oil</i>
Fuel / oil mix ratios	Between 32:1 and 40:1 (after engine Break-In)
Carburetion	21 mm Dell'Orto PHBG,
Jet Main / Slow (Pilot)	98 / 55
Slide / Needle	#30 / W-4
Float Height	16mm \pm 0.5mm (0.63" \pm 0.020")
Transmission	
Speed / ratio	Single / 14/38 T
Chain	104 links 420
Transmission / clutch oil type	<i>Cobra Venom 3 Shoe Clutch Milk</i>
Quantity	235 – 350 ml (8 – 12oz)

Chassis	
Tire Pressure front / rear	(7 psi / 5 psi)
Travel, front / rear	240mm / 247mm (9.4" / 9.7")
Race sag, front / rear	96mm / 99mm (3.8" / 3.9")
Free sag, front / rear	38mm / 40mm (1.5" / 1.6")

Specifications - Torque Values

ENGINE Fastener	Torque Value			Size & Remarks
	ft-lb	in-lb	Nm	
Cylinder head nuts	8.8	105	12	M6 x 1.0
Crankcase bolts	8.8	105	12	M6 x 1.0
Spark plug	(SP)	(SP)	(SP)	M14 x 1.25
Stator bolts	2.1	25	2.8	M5 X 0.8
Stator cover bolts	1.7	20	2.3	M4 X 0.75
Clutch cover bolts	5.8	70	7.9	M6 X 1.0
Clutch nut	40	480	54	M10 x 1.25*
Clutch bolts	12	144	16	M6 x 1.0
CFD nut	55	664	75	½" x 20 LHT

Units of mm unless otherwise specified

(G) denotes the use of wicking / bearing retainer (green) thread locking agent to applied to the mating surfaces of the two components but not the threads.

(SP) To apply the proper torque to the spark plug when inserting, one must first screw the spark plug in until the metal gasket ring causes resistance and then turn another 1/8 to ¼ turn.

CHASSIS Fastener	Torque Value			Size & Remarks
	ft-lb	in-lb	Nm	
Handle bar mounts	15	177	20	8 x 1.25
Handle bar clamps	15	177	20	8 x 1.25
Front engine mount	22	265	30	8 x 1.25
Rear brake lever pivot	10	120	13.6	8 x 1.25
Upper shock mount	40	480	54	10 x 1.5
Lower shock mount	40	480	54	10 x 1.5
Swingarm pivot	75	900	102	14 x 2.0

Units of mm unless otherwise specified

(R or G) designates that the application requires the use of high strength (red) thread locking agent applied to the threads.

(B) designates that the application requires the use of medium strength (blue) thread locking agent applied to the threads.

Optional Suspension Components

Front shock springs

Weight of Rider (lb)	Helper	Main
Less than 65	SCEX1080 (RED, 80 LB/IN)	SCEXA145 (RED, 145 LB/IN)
65 to 100		SCEXA155 (YELLOW, 155 LB/IN)
Greater than 100	SCEX1095 (YELLOW, 95 LB/IN)	SCEXA165 (BLACK, 165 LB/IN)

Rear shock springs

Weight of Rider (lb)	Main
Less than 50	SCEX2325 (White, 325 LB/IN)
50 to 75	SCEX2350 (Yellow, 350 LB/IN)
Greater than 75	SCEX2375 (Red, 375 LB/IN)

	Spring Rate (lb/in)	Color	Part Number
Helper	65	Silver	SCEX0065P
	80	Red	SCEX1080
	95	Yellow	SCEX1095
	110	White	SCEDX1110
	125	Gold	SCEX1125
	150	Green	SCEX1150
	175	Black	SCEX0175P
	200	Silver	SCEX0200P
	250	Red	SCEX0250P
	300	Yellow	SCEX0300P
	350	White	SCEX0350P
Fox 8" long main spring (front)			
	105	Orange	SCEX1105
	115	Green	SCEX1115
	125	White	SCEX2125
	135	Blue	SCEX1135
	145	Red	SCEX1145
	155	Yellow	SCEX1155
	165	Black	SCEX1165
Fox 7" long main spring (rear)			
	300	Red	SCEX1300
	315	Yellow	SCEX1315
	330	White	SCEX1330
	350	Red	SCEX1350
	375	White	SCEX1375
	400	Yellow	SCEX1400
	425	Blue	SCEX0425P
	450	Green	SCEX0450P
	475	Black	SCEX0475P
	500	Purple	SCEX0500P
Fox 10" long main spring (rear)			
	325	White	SCEX2325
	350	Yellow	SCEX2350
	375	Red	SCEX2375
	400	Black	SCEX2400

Spring rate chart for Cobra Fox quad shocks

Break-In Procedure

Your Cobra Motorcycle is a close-tolerance high performance machine and break-in time is very important for maximum life and performance. The ECX50 can be ridden hard after the first ½ hour break-in time but it is recommended that no adjustments are made to the carburetion or suspension until the full 8 hours of bike break-in has elapsed. Also, after the engine, transmission, and drive train have been broken-in for the full 8 hours, the bike will be faster!

Use a fuel / oil mixture of 32:1 for the full 8 hour break-in period. Be sure to use 93 octane pump gas, or *Sunoco MO2_x*, with Cobra's specially formulated *Cobra Venom 2-cycle Race Oil*. (Part # MCMUOL02)

CAUTION:

Failure to use proper fuel or oil may result in premature engine wear, or damage to the machine.

Adhering to the following break-in schedule will result in long lasting high performance machine.

- First 5 minute period, operate the bike on the stand with a combination of idle and high RPM operation. (avoid prolonged high RPM but spin the rear wheel good at least once or twice per minute)
- Allow the engine to cool
- Ride for 15 minutes maximum, avoiding prolonged high RPM operation.
- Cool and inspect bike for loose fasteners.
- Next ½ hour of operation, avoid prolonged operation at Wide Open Throttle.
- After 1 hour of operation
 - Check for loose bolts and nuts on the bike and retighten as necessary (proper torque values are listed under Specifications).
 - Clean the carburetor bowl.
 - Change the transmission / clutch lubricant.
 - Replace the fuel filter.
- After 8 hours of operation have a Certified Cobra Mechanic change the shock oils.
- Your bike is now ready for the highest level of competition!

Starting Procedure

Before starting the machine inspect the following:

- Check for proper tire pressure in both tires.
- Observe the chain tension and adjust if necessary.
- Observe the coolant level and fill if necessary.
Verify that the chain rollers and sliders do not have improper wear.
- Verify that the handlebars are tight.
- Check the throttle for smooth operation and sound closing.
- Check for loose bolts and nuts, and re-torque as necessary.
- Verify that the air filter is clean and properly saturated with oil.
- Insure that the fuel tank contains an adequate volume of fuel / oil mixture to complete the distance required. (High octane pump gas with Cobra's specially formulated *Cobra Venom 2-cycle Race Oil*)
- Turn the fuel on by rotating the fuel petcock knob to the vertically downward position (reserve position is horizontally forward)

CAUTION:

For best results from your Cobra Motorcycle use only the recommended fuels. Testing has shown that most 'race' fuels actually degrade performance.

WARNING

Always wear a helmet and other protective riding gear.

When your pre-ride inspection is complete the bike may be started. For a cold engine follow this procedure.

1. Pull up the choke knob and turn it to lock it.
2. Kick start the engine.
3. Rev the engine in short spurts, turning the throttle no more than 1/4 open until the engine will run without the choke.
4. Verify a functional engine shut-off switch by shutting off the engine.
5. Restart the engine and proceed with riding when the engine is sufficiently warm (i.e. the side of the cylinder is warm to touch).

CAUTION:

Never rev an engine full throttle when it's cold or slightly warmed up. Also, for best clutch performance, warm up the bike before taking off.

WARNING

This is a high performance race motorcycle. Too much application of throttle will likely land your little racer on his or her arse. Fenders can be replaced but bruised egos and other body parts take longer.

CAUTION:

Cobra recommends that you tell your child to take it easy the first couple of minutes in practice until the engine comes up to full operating temperature.

CAUTION:

Make sure your riders' foot is not resting on the foot brake while they are riding.

Maintenance

It is important that you adhere to this maintenance schedule so as to promote the longevity of your Cobra Motorcycle.

Tips

1. Cobra lubricants:
 - a. Cobra Clutch Milk has been specifically formulated to meet the stringent temperature, frictional, and load requirements unique to the high engine speeds and centrifugal clutch of the Cobra 50cc motorcycles.
 - b. Cobra Two Cycle Oil exceeds the JASO FD & ISO-L-EGD specifications, which are the worlds most stringent requirements on lubrication, detergency, and smoke. Use only a 2-cycle oil that meets these specifications.
2. Filling your transmission with more than 8.0 oz (235 cc) of lubricant may help to transfer heat from the clutch. Filling with more than 12 oz (295 cc) will degrade performance.
3. The cylinder base gasket has been 'fitted' for your engine. The code number stamped into the engine cases will guide you to what thickness base gasket is required during a common top end service. See the service section of this manual to correspond a code number with a base gasket part number.
4. Evaluate the bikes jetting only after it has been warmed up to race temperatures.
5. A properly maintained machine is safer, faster, and more fun to ride.
6. New chains will stretch on first use. Never install a new chain prior to a race. Always 'break' them in during practice.
7. Your Cobra Motorcycle has a 10 digit VIN (Vehicle Identification Number). The first two digits indicate the model and the seventh indicates the model year (MY).
 - a. Example, Acxxxx7xxx is a 2007 MY quad.

Schedule

- Between each ride
 - Check the air filter (clean and re-oil as necessary).
 - Insure the smooth operation of the throttle cable (throttle soundly 'clacks' shut).

- Check for frayed strands of the throttle cable inside the throttle housing and replace if necessary.
- Check for adequate tire pressures and adjust if necessary.
- Check all nuts and bolts for proper torque and re-torque if necessary.
- Spray all moving parts with WD40 or other light oil.
- Check drive chain for
 - Proper tension and adjust if necessary.
 - Adequate lubrication and lubricate if necessary.
- Insure that the ignition stator and rotor are clean and dry.
- Check the frame for cracks in the metal or cracks in the paint that might indicate that the metal has been stressed beyond it's safe limits. Replace or get properly rewelded as necessary.
- Check the rims for signs of stress, like cracks around the rim, spokes and hub.
- Every 2 hours of operation
 - Replace the transmission oil.
- Every 10 hours of operation
 - Replace the fork oil.
 - Have the shock oil replaced by a Certified Cobra Mechanic.

CAUTION:

1. Because of the amount of heat generated by the clutch and engine during extended periods of riding, it is advisable to remove the ignition cover afterward to allow the ignition to cool off. The heat transfers through the cases and can damage the stator as it cools off because of lack of airflow around the stator.
2. If you ever need to weld anything on the bike, disconnect the spark plug cap, unplug the ignition, disconnect the kill switch, scrape the paint bare near the area to be welded and put the ground clamp as close to the area to be welded as possible.

 WARNING

Be sure the fuel tank and carburetor have been removed and safely located away from the welding process.

3. The frame is 4130 Chrome Moly and it is important to weld it with the proper rod and heat settings set as light as possible. Cobra recommends replacing the frame with a new one if the old one becomes damaged. Use ER70S6 filler if welding on the frame.
4. If your kick-starter lever does not return properly, first try loosening the six kick/clutch cover screws ½ turn. Hold the kick lever ½ way down while retightening the six screws starting for the center and working out.
5. Inspect CFD slip torque every 10 hours of riding or replace the friction papers and the load spring (Bellville spring) every 20 hours.

6. Check proper clutch engagement before and after each ride. If the clutch is engaging properly DO NOT feel the need to take the clutch apart to; measure the spring stack, clean the stack, replace the springs, etc... Cobra has worked real hard to make a clutch that is low maintenance and so only take it apart if it NEEDS to be maintained.

Replacing Transmission / Clutch Lubricant

Tools needed:

- Minimum of 235 ml (8 oz) *Cobra Venom 3 Shoe Clutch Milk* (Part # MCMUGF01).

NOTE:

Up to 350ml (12 oz) can be applied without hurting performance.

Procedure:

1. Begin this procedure with a bike that has been ridden more than 5 minutes but less than 10 minutes. It is desired to have the engine warm enough so that the oil is 'runny' but not so hot that there is risk of being burned by the engine or the oil.

⚠ WARNING

Hot oil and hot components on the motorcycle may cause burns.

2. Lean bike against something or set on stand with oil drain hole.
3. Remove the oil drain plug located on the right side of the engine, on the clutch cover, near the brake lever (figure 1).



Figure 1

4. After it has drained, reinstall the plug, being sure that the gasket is in place.
5. Reapply oil from oil fill plug 235 cc (8.0 oz) *Cobra Venom 3 Shoe Clutch Milk* thru the oil fill plug.

NOTE:

Putting additional oil, up to 350 ml (12 oz), can help clutch life. More than 350 ml (12 oz) will degrade engine performance.

NOTE:

Lean bike over onto it's left hand side so that the clutch cover is up unless you have a squeeze bottle.

6. Reapply the oil fill plug, hand tight, being sure the gasket is in place.

CAUTION:

Cobra has spent considerable time and money developing the proper lubrication to handle the harsh environment of the automatic clutch and transmission of this motorcycle. Cobra's specially developed *Cobra Venom 3 Shoe Clutch Milk* (Part # MCMUGF01) was formulated to provide superior lubrication and cooling capability over extended periods of time and is the recommended lubricant for your Cobra motorcycle.

Chain adjustment

Tools needed:

- 13 mm wrench or socket
- 5mm pin (Screw driver or hex key will do)

Procedure:

1. Loosen the eccentric housing on the swingarm with two 13mm tools.
2. Stick the 5mm pin through the sprocket into the eccentric hole.
3. Push the quad forward or backward, turning the wheels (i.e. the sprocket) in the direction shown until the desired chain tension is achieved (see fig. 2).

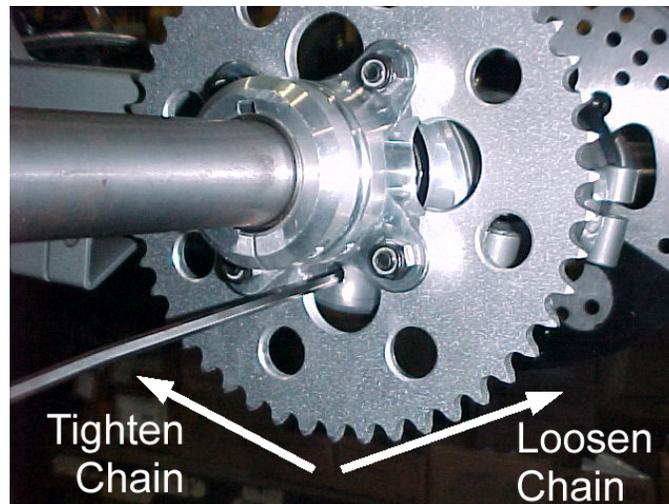


Figure 1

NOTE:

The location of the pin hole is the 'fattest' part of the eccentric. Restated, if the pin hole is all the way forward, the chain is as tight as possible, and if the pin hole is all the way back, the chain is as loose as possible.

CAUTION:

Proper chain tension allows no less than ½" (12mm) free play through out the range of rear suspension travel.

NOTE:

It may be handy to set backwards on the seat and feel the chain as you weight, and unweight, seat to feel for chain free play.

4. After achieving the proper adjustment retighten the two eccentric pinch bolts.

CAUTION:

Be sure to remove the pin from the eccentric before riding.

Air Filter Cleaning

This Cobra Motorcycle comes with a unique air filter / air boot unit designed to facilitate motorcycle service.

Tools recommended for air filter maintenance:

- Srewdriver
- Foam filter oil

Procedure

1. Removed the filter from the carburetor.
2. Clean the filter with cleaning solvent and then again with hot soapy water.
3. Allow it to dry thoroughly.
4. Saturate with foam filter oil and remove excess.

 WARNING

Do not clean the air filter with gasoline or other highly volatile petroleum product. Cleaning solvent, diesel fuel, or kerosene would be preferred but caution should still be taken.

NOTE:

The biodegradable air filter oils, greases, and cleansers work acceptably with this Cobra Motorcycle.

NOTE:

It is very important to keep the air filter clean and properly oiled with high quality water-resistant foam filter oil. It's very important to oil your filter consistently each time because varied amounts of oil will change your carburetor jetting.

NOTE:

Make sure you change or clean your filter after each moto or significant ride. We recommend carrying three or more filters in your toolbox.

- 1 for practice
- 1 for each moto

CAUTION:

Dusty conditions will require more frequent cleaning.


Frictional Drive (CFD)

The Cobra Frictional Drive (CFD) is essentially a slip clutch that dissipates torque spikes transmitted from the rear wheel to the rest of the drive line and engine. Instead of these torque spikes potentially damaging internal components, the CFD allows the transmission to slip with respect to the engine. For this to occur, the CFD must function properly by 'slipping' between a minimum torque value, and a maximum torque value.

The slip torque of the CFD should be checked every 5 hours of operation.

Slip Torque	Ft-lb	N-m
Minimum	55	75
Maximum	92	125

To properly measure the torque at which the CFD (Cobra Frictional Drive) slips, one first access the slip clutch by draining the oil and removing the cover exposing the CFD. Next, brace the CFD gear from turning with a suitable device (Cobra tool EAMU0004 or similar).

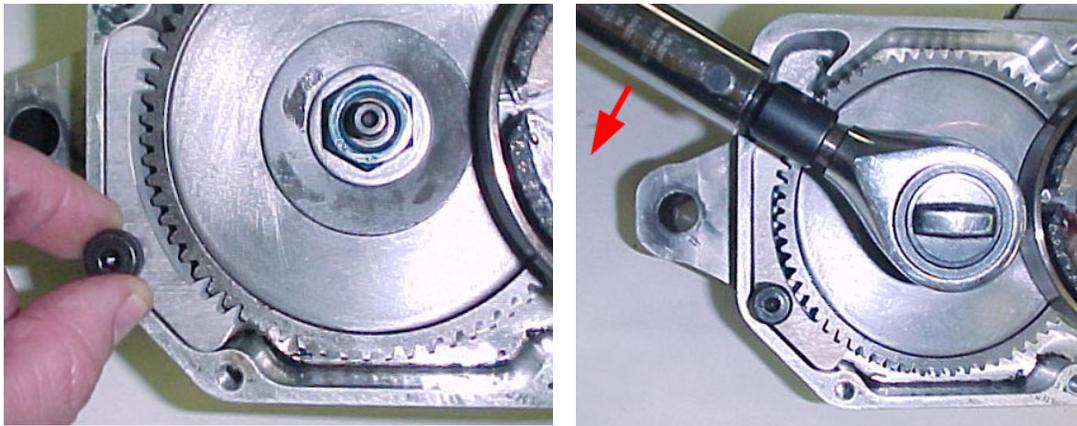

Using a beam style torque wrench, turn the torque wrench counter clockwise and observe the torque measurement when the shaft slips relative to the gear. Using a preset value torque wrench, adjust the setting **55 ft-lb (75 Nm)** and observe whether the wrench clicks first or the shaft slips. If the shaft slips first, the slip torque is below 55 ft-lb and the CFD needs servicing. If the wrench clicks first, the CFD is of acceptable value.

NOTE

To loosen and tighten the blue CFD nut, use a strong wooden object (large hammer handle) through the spokes of the rear wheel as a brace against the swingarm to stop transmission shaft rotation.

CAUTION:

The blue CFD nut has left hand threads which require clock-wise rotation to loosen.

Front end

Toe in adjustment

Riders and parents have provided feedback that they prefer the toe in adjustment between ½" (12mm) out to ½" (12mm) in. This is set by adjusting the length of the tie rod assemblies. See figure 3 for direction of turn.

⚠ WARNING

Adjust both wheels so that they have the same amount of toe in.

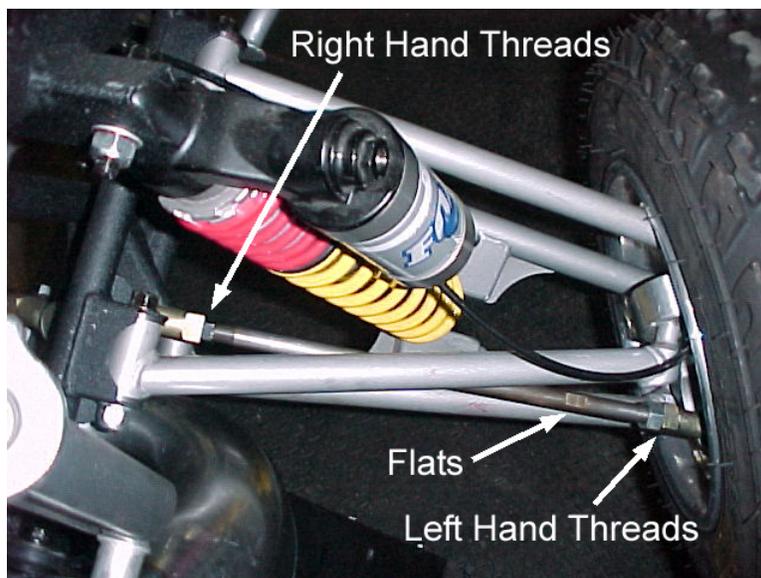


Figure 3

Steering

The unique Cobra front end will exhibit some free play from the factory and that the seals (it that's what you want to call them) will fall out after the first ride. We have found that this causes no adverse effects and that the looseness does not get significantly worse as long as the bearings are sprayed with a spray lubricant (WD40 or similar) upon each ride.

Parts

Parts – Air Inlet System

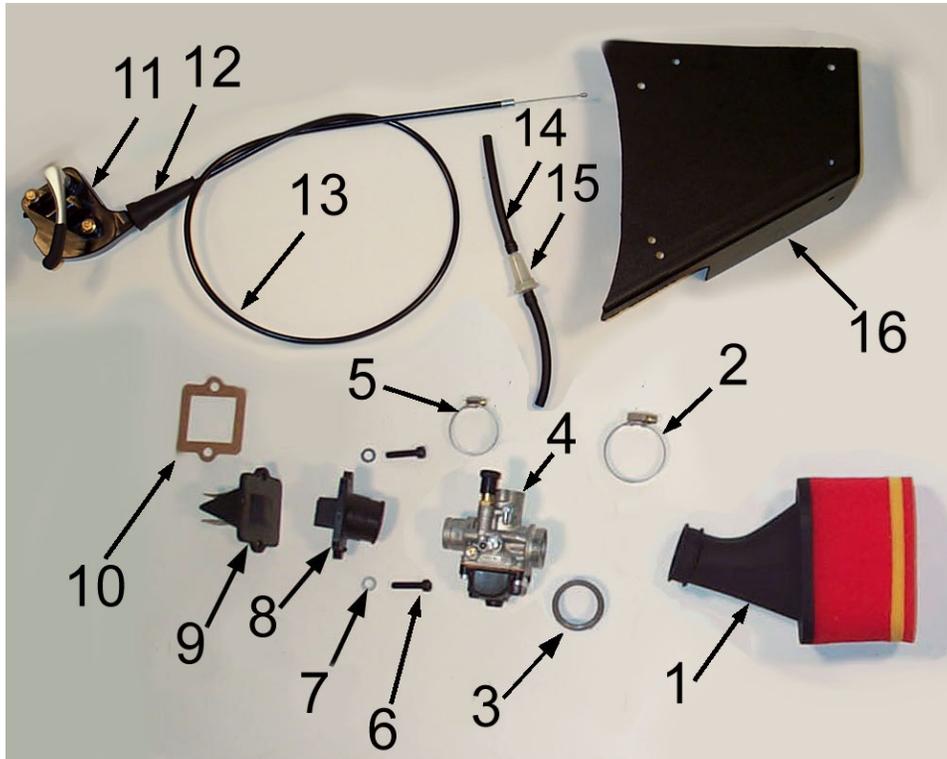


Figure 4

Coolant System		
REF #	PART #	DESCRIPTION
1	RCMU0403	FILTER ASSEMBLY
2	MCKGHO01	HOSE CLAMP – BOOT TO CARB
3	RCCM1301	VELOCITY STACK
4	RAEX0021	CARBURETOR, 21MM DELL'ORTO PHBG
	RCMU0022	VENT HOSE
5	MCKGHO04	HOSE CLAMP – CARB TO MANIFOLD
6	HCBC0625	M6X25 SOCKET HEAD CAP SCREW
7	HCWF0601	6MM FLAT WASHER
8	ECKG0203	INLET MANIFOLD
9	ECKG0202	REED CAGE ASSEMBLY WITH REEDS
NOT SHOWN	ECKG0205	REED REPLACEMENT KIT
10	ZCMU0132	GASKET – REEDS TO ENGINE
11	FCEX0016	THROTTLE, QUAD THUMB STYLE
12	FCPW0004	THROTTLE CABLE END GROMMET
13	RCEX0001	CABLE – THROTTLE, ECX50
14	RCE50001	FUEL LINE 5 INCH
15	FCDC0093	FILTER, FUEL
16	RCEX0019	COVER, AIR FILTER

Parts – Bars and Steering

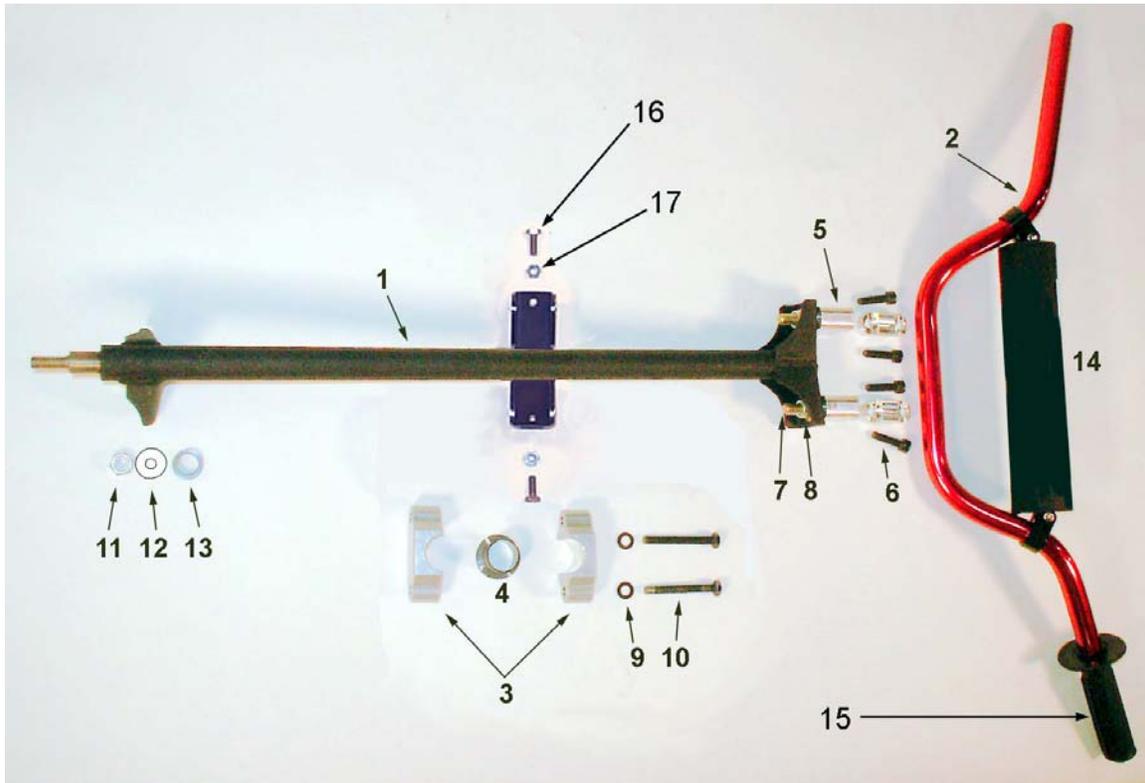


Figure 5

Bars and Steering		
REF #	PART #	DESCRIPTION
1	FAEX0020	STEERING STEM
2	TCMU0009	HANDLEBAR - QUAD
3	FCEX0011	STEERING STEM BLOCK (2 REQ'D)
4	MCEXBR07	STEERING STEM BUSHING – SPLIT
NOT SHOWN	ZCEX0002	O'RING – STEERING STEM SEAL (2 REQ'D)
NOT SHOWN	HCBB0403	4MM X 8 BUTTON HEAD SCREW (2 REQ'D)
5	TCMU0404	BAR MOUNT KIT, SHORT – REPLACEMENT (2 REQ'D)
NOT SHOWN	TCMU0403	BAR MOUNT KIT, TALL – OPTIONAL (2 REQ'D)
6	HCBC0806	SOCKET HEAD CAP SCREW M8 X 30 (4 REQ'D)
7	HCBC1001	M10X45 SOCKET HEAD CAP SCREW (2 REQ'D)
8	HCNL1001	M10 LOCK NUT (2 REQ'D)
9	HCWF0801	8MM FLAT WASHER
10	HCBH0810	8MM X 65 HEX HEAD BOLT (2 REQ'D)
11	HCNL1001	10MM LOCK NUT
12	HCWF0010	10MM FLAT WASHER
13	MCEXBR04	STEM PIVOT BUSHING - LOWER
14	MCMU0001	CROSS BAR PAD
15	TCEX0013	GRIPS SET OF TWO
16	HCBH0601	6MM X 16 HEX HEAD BOLT (2 REQ'D)
17	HCNS0601	6MM NUT (2 REQ'D)

Parts – Bumper, Nerf & Grab Bars


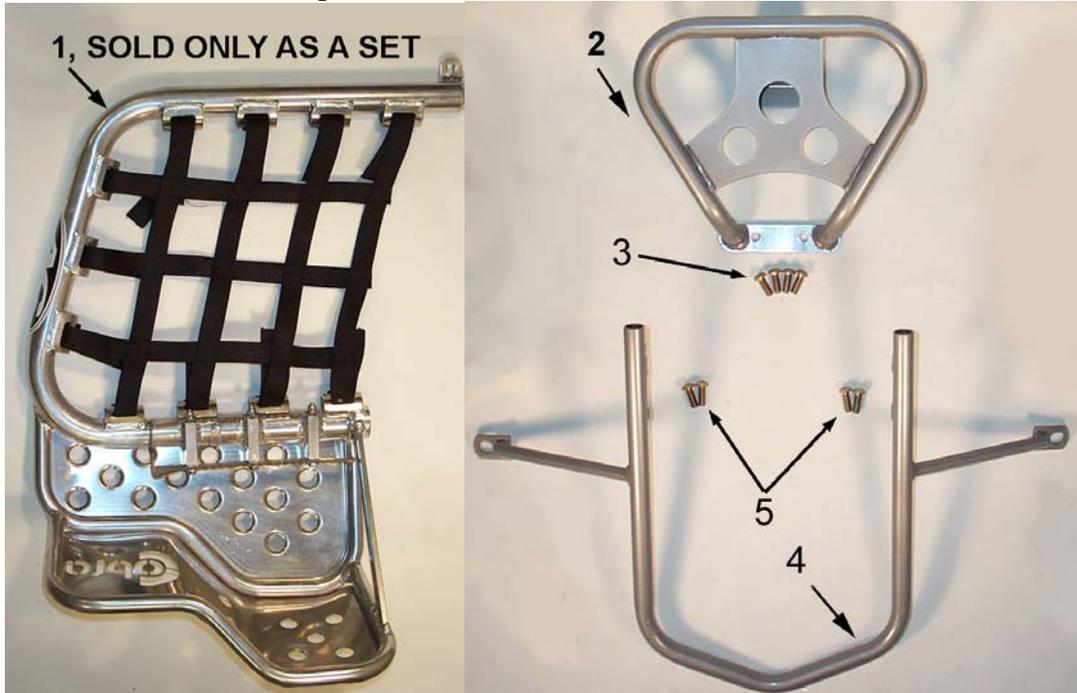


Figure 6

BODY PROTECTION		
REF #	PART #	DESCRIPTION
1	FCEX0024	NERF BARS (LEFT & RIGHT)
	FCEX0067B	NERF NET SET (BLACK)
	FCEX0067R	NERF NET SET (RED)
	FCEX0067Y	NERF NET SET (YELLOW)
NOT SHOWN	HCBH0808	8MM X 30 HEX HEAD BOLT (FRONT MOUNT, 2 PLACES)
NOT SHOWN	HCBH0809	8MM X 50 HEX HEAD BOLT (REAR MOUNT, 2 PLACES)
NOT SHOWN	HCWF0801	8MM FLAT WASHER (2 REQ'D)
NOT SHOWN	HCNL0801	8MM LOCKNUT (2 REQ'D)
2	FAEX0099	FRONT BUMPER
3	HCBB0802	M8 X 20 BUTTON HEAD BOLT (4 REQ'D)
4	FCEX0003	GRAB BAR
5	HCBC0820	M8 X 20 SOCKET HEAD CAP SCREW (4 REQ'D)

Parts - Carburetor

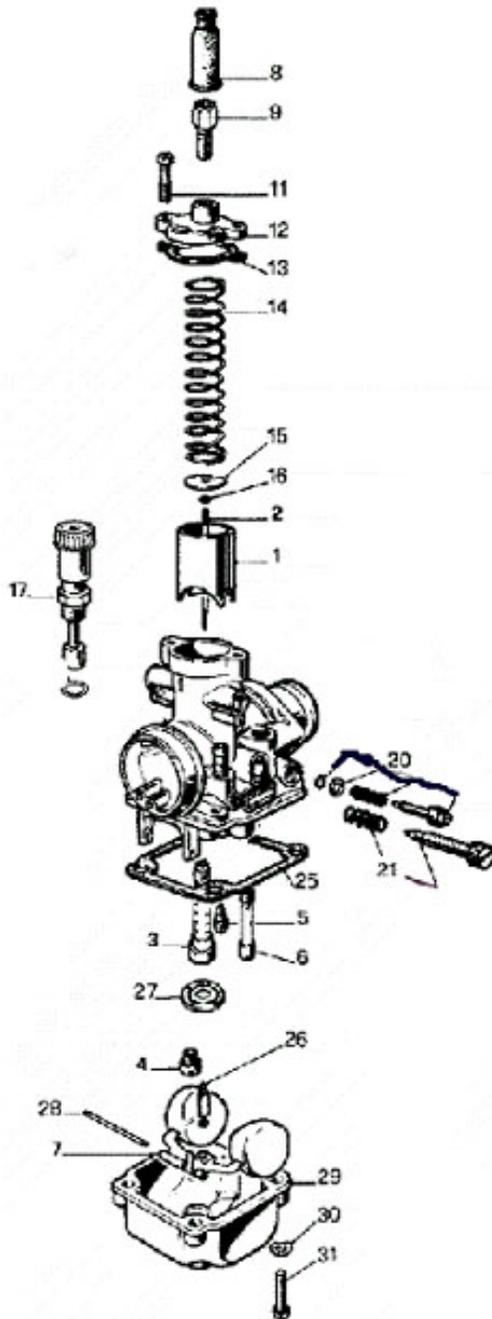

Carburetor		
REF. #	PART #	DESCRIPTION
1	RCMU0031	CARB SLIDE (30 slide)
2	RCMU0026	NEEDLE (W-4)
3	RCMU0023	ATOMIZER 2.62 AU
4	RCMU00xx	MAIN JET (xx denotes size)
5	RCMU00xx	PILOT JET (xx denotes size)
6		CHOKE JET
7	RCMU0301	FLOAT
8	RCMU0102	RUBBER CABLE CAP SEAL
9	RCMU0003	CABLE ADJUSTOR
11	RCMU0006	TOP CARB SCREW
12	RCMU0106	CARB TOP
13	ZCMU0007	TOP CARB GASKET
14	RCMU0004	SLIDE SPRING
15	RCMU0028	NEEDLE RETAINER PLATE
16	RCMU0007	NEEDLE CLIP
17	RCMU0204	CHOKE ASS'Y. 2001 CM
20	RCMU0009	FUEL MIXTURE SCREW
21	RCMU0011	IDLE ADJUSTMENT SCREW
25	RCMU0103	FLOAT BOWL GASKET
26	RCMU0107	FLOAT NEEDLE
27	RCMU0012	DIFFUSER
28	RCMU0016	FLOAT RETAINER PIN
29	RCMU0108	FLOAT BOWL
30	HCWF0401	WASHER 4MM FLAT
31	RCMU0201	SCREW FLOAT BOWL
NOT SHOWN	RCCM1301	VELOCITY STACK -05
NOT SHOWN	MCKGHO01	CLAMP - CARBURETOR TO FILTER
Not Shown	RCE50001	FUEL LINE
Not Shown	MCMUCL04	HOSE CLAMPS - FUEL LINE
	RCMU0022	VENT HOSE

Figure 7

Parts – Coolant System

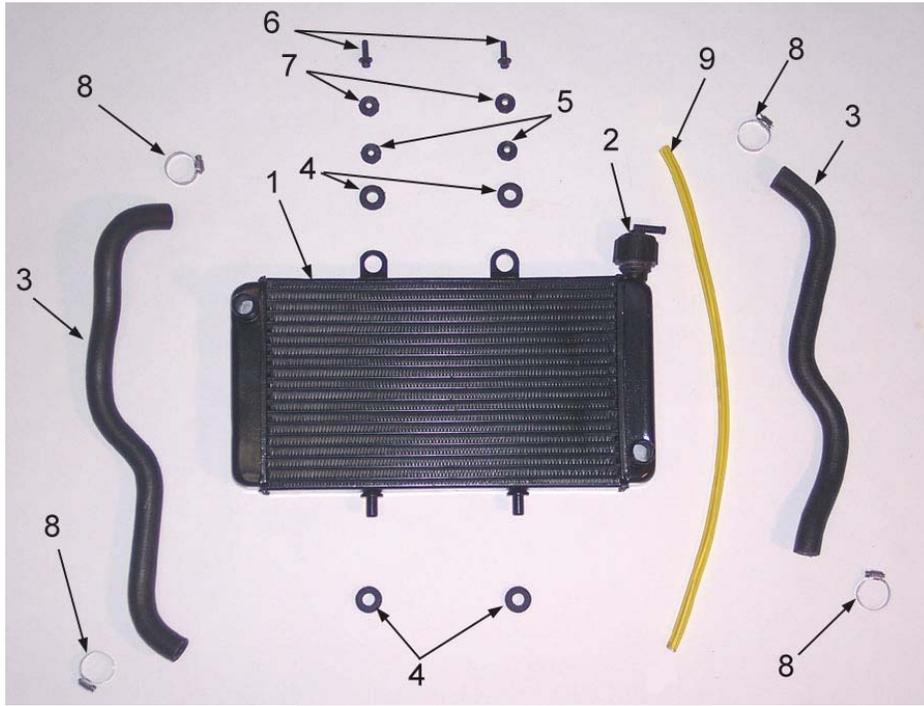


Figure 9

Coolant System		
REF #	PART #	DESCRIPTION
1	FCEX0066	RADIATOR WITH CAP
2	FCMU0020	RADIATOR CAP
3	ECEX0010	RADIATOR HOSE
4	MCEXGR01	GROMMET, RAD MOUNT (4 REQ'D)
5	MCMUGR04	GROMMET, TOP RAD MOUNT (2 REQ'D)
6	HCBF0620	FLANGE HEAD BOLT M6X20 (2 REQ'D)
7	HCWF1478	WASHER RADIATOR MOUNTING
8	MCMUCL07	HOSE CLAMP (4 REQ'D)
9	FCMU0049	RADIATOR OVERFLOW HOSE
Not Shown	MCMUCL05	HOSE CLAMP, OVERFLOW HOSE

Parts – Electrical System

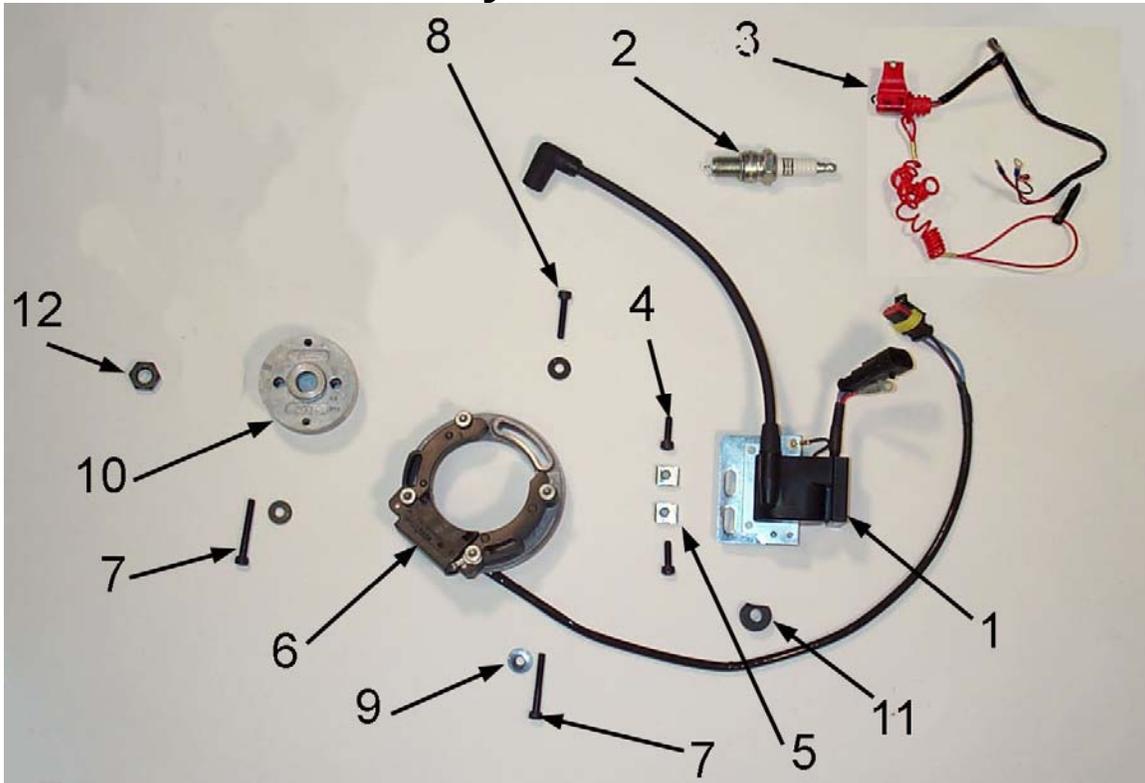


Figure 10

Electrical System		
REF #	PART #	DESCRIPTION
1	IAMU0005	COIL W/SPARK PLUG CAP (3 WIRE)
2	ECMU0065	SPARK PLUG, CHAMPION (8339-1)
2H	ECMU0067	OPTIONAL HOTTER PLUG (8332-1)
2C	ECMU0066	OPTIONAL COLDER PLUG (8904-1)
3	IKEX0001	IGNITION KILL TETHER
4	HCBC0516	SCREW, M5 X 16 (2 PER)
5	HCCN0000	5MM CLIP NUT (2 PER)
6	ICMU0018	STATOR 3 WIRE ANALOG
7	HCBC0535	5mm x 35 SOCKET HEAD CAP SCREW (2 REQ'D)
8	HCBC0525	5mm x 25 SOCKET HEAD CAP SCREW
9	HCWF0504	WASHER FOR STATOR (3 REQ'D)
10	ICMU0006	ROTOR
11	MCKGGR01	GROMMET - STATOR LEAD
12	HCNS1001	NUT 10MM
NOT SHOWN	ICMU0012	WOODRUFF KEY
NOT SHOWN	ECKG0001	IGNITION COVER
NOT SHOWN	ZCKG0101	GASKET, IGNITION COVER

Parts – Engine – Bottom End and Transmission

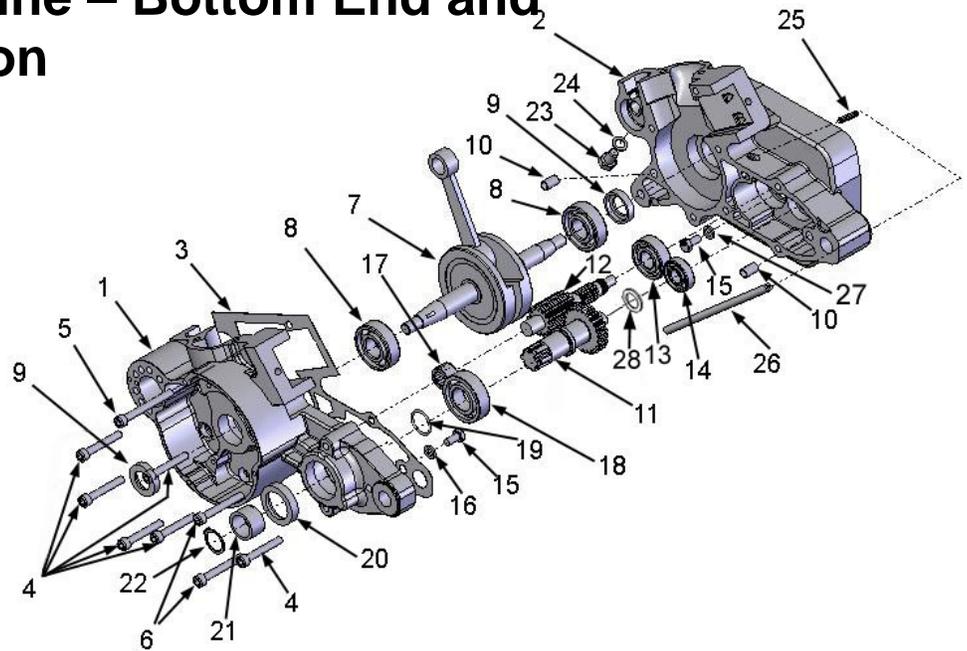


Figure 7A

Engine Bottom End and Transmission		
REF #	PART #	DESCRIPTION
1	EKMU0023	ENGINE CASE SET W/B&S 50 07
2	EKMU0023	ENGINE CASE SET W/B&S 50 07
3	ZCMU0601	GASKET, CRANKCASE CENTER
4	HCBC0605	6X40MM SOCKET HEAD CAP SCREW (6 REQ'D)
5	HCBC0608	6X55MM SOCKET HEAD CAP SCREW (1 REQ'D)
6	HCBC0606	6X45MM SOCKET HEAD CAP SCREW (2 REQ'D)
7	ECMU0038	CRANKSHAFT
8	ECMU0016	BEARING, CRANKSHAFT
9	ECMU0118	SEAL, CRANKSHAFT
10	HCDP1401	DOWEL (SOLID), ENGINE CASE ALIGNMENT (2 REQ'D)
11	ECMU0099	OUTPUT SHAFT, TRANSMISSION WITH GEAR
12	ECMU0100	SECONDARY SHAFT, TRANSMISSION WITH GEAR
13	ECMU0001	BEARING, TRANSMISSION SECONDARY SHAFT
14	ECKG0031	BEARING OUTPUT SHAFT, RIGHT SIDE
15	HCBH0612	M6X12 HEX HEAD SCREW - BEARING RETAINER (2 PLACES)
16	HCWL0601	6MM LOCK WASHER
17	ECMU0020L	BEARING, TRANSMISSION PRECISION
18	ECKGBR01	BEARING, TRANSMISSION OUTPUT SHAFT
19	ZCDCOR01	O-RING, SPROCKET SPACER
20	ECMU0072	SEAL, OUTPUT SHAFT
21	ECMU0073	SPACER, SPROCKET
22	ECKGSR03	SNAP RING, SPROCKET
NOT SHOWN	PCKG0014	SPROCKET, 14 T
23	HCBH0805	M8X12 SCREW – COOLANT DRAIN
24	HCWC0000	COPPER GASKET
25	ECMU0533	FITTING, CRANKCASE VENT
26	RCMU0021	VENT HOSE, CRANKCASE, 9"
27	HCWF0316	WASHER – FLAT
28	ECMU0156	SHIM – OUTPUT SHAFT 50'S

Parts – Engine Clutch and Kicker

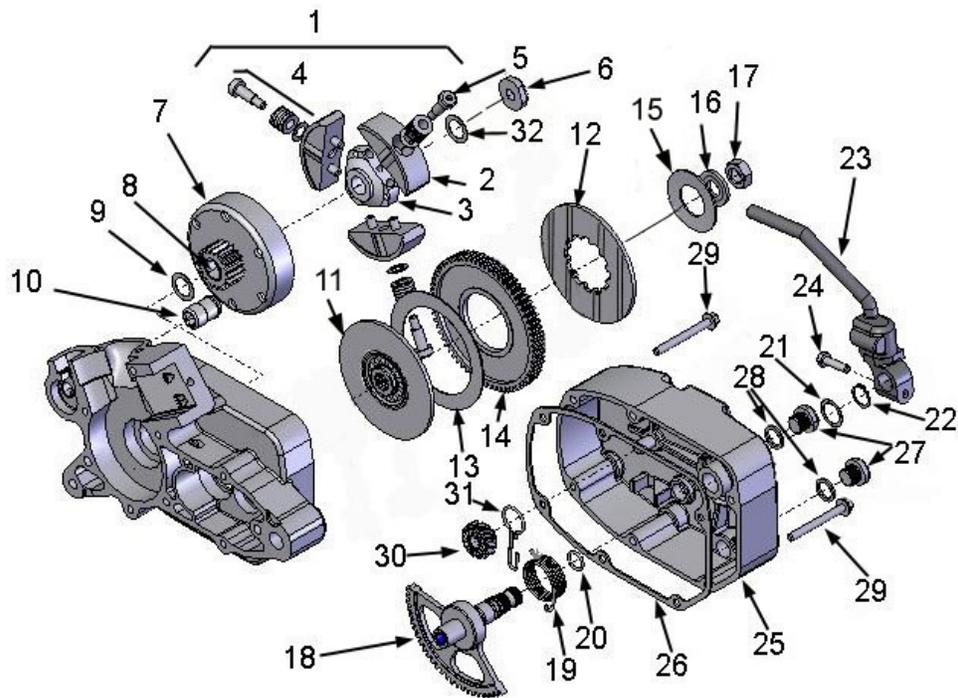


Figure 7B

Engine – Clutch and Kick Starter		
REF #	PART #	DESCRIPTION
1	CAMU0005	CLUTCH COMPLETE
2	CAMU0013	CLUTCH SHOES (SET OF 3) WITH BOLT & WASHERS
3	CCMU0029	CLUTCH ARBOR
4	CAMU0010	SPRINGS, WASHER & BOLT (SET OF 3)
5	HCBS0004	CLUTCH BOLT (3 REQ'D)
6	ECMU0018	CLUTCH NUT, SPECIAL
7	ECMU00120	CLUTCH BASKET WITH NEEDLE BEARING
8	ECMU0119	CLUTCH BEARING
9	ECMU0040	CLUTCH TO HUB SPACER (0.030", 0.76MM)
	ECMU0040T	CLUTCH TO HUB SPACER (THIN – 0.015", 0.38MM)
10	ECMU0132	COOLANT FITTING
11	EAMU0008	CFD HUB / PRESSURE PLATE
12	ECMU0162	PRESSURE PLATE WITH FRICTION MATL, '08 STYLE
13	ECMU0138	FRICTION PAPER, CFD
14	ECMU0161	GEAR, CFD '08 STYLE
15	ECMU0159	SPRING WASHER, CFD, 60MM OD
16	ECMU0160	CENTERING WASHER, CFD
17	HCNS1202	NUT, CFD (½-20 LEFT HAND THREAD – BLUE)
18	EAMU0001	KICKSTART GEAR & SHAFT
19	ECMU0116	SPRING, KICKSTART
20	ZCMUB014	O-RING KICK SHAFT (2 REQ'D)
21	HCWS1622	SHIM, KICK SHAFT
22	ECDC0036	SNAP RING, KICK SHAFT
23	ECDC0046	KICK LEVER W/BOLT & RUBBER
24	HCBF0620	6MM X 20 FLANGE HEAD BOLT
25	ECMU0115	CLUTCH COVER
26	ZCMU0030	CLUTCH COVER GASKET
27	ECMU0037	OIL FILL PLUG
28	ZCMU0005	GASKET, OIL FILL / DRAIN PLUG
29	HCBC0608	6MM X 55 SOCKET HEAD CAP SCREW (6 REQ'D)
30	ECMU0207	KICKSTART GEAR SMALL
31	ECMUSP01	KICK START DOG SPRING (PAPER CLIP)
32	HCWS1016	WASHER – KICK GEAR SPACING

Parts – Engine – Water Pump

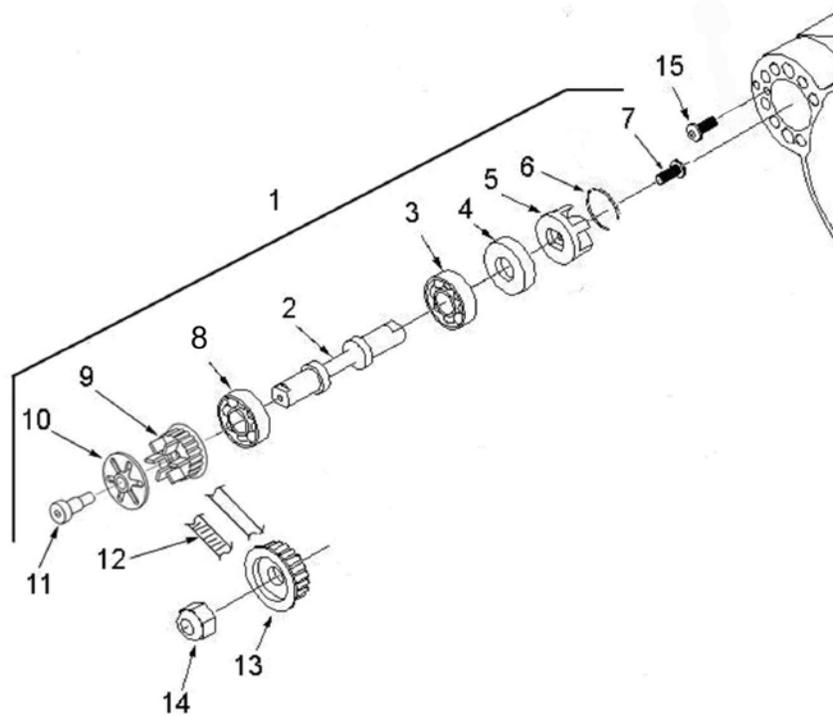


Figure 7C

Engine – Ignition and Water Pump		
REF #	PART #	DESCRIPTION
1	EKMU0001	WATER PUMP KIT
2	ECKG0142	SHAFT, WATER PUMP
3	ECKG0072	BEARING, WATER PUMP
4	ECKG0074	SEAL, WATER PUMP SHAFT
5	ECKG0073	IMPELLER, WATER PUMP (ALUMINUM)
6	ECKG0004	RETAINER, WATER PUMP ASSEMBLY
7	HCBC1512	5X12MM SHCS STAINLESS
9	ECKG0175	WATER PUMP PULLEY, FAN TYPE - DRIVEN
10	ECMU0180	BELT RETAINER
11	HCBS0003	SHOULDER BOLT 6MM
12	ECKG0170	WATER PUMP BELT
13	ECKG0042	WATER PUMP PULLEY, CRANK
14	HCNS1001	NUT 10MM
15	HCBC0408	M4mm x 8 SOCKET HEAD black oxide
16	HCWF0401	4MM WASHER

Parts –
Engine –
Top End

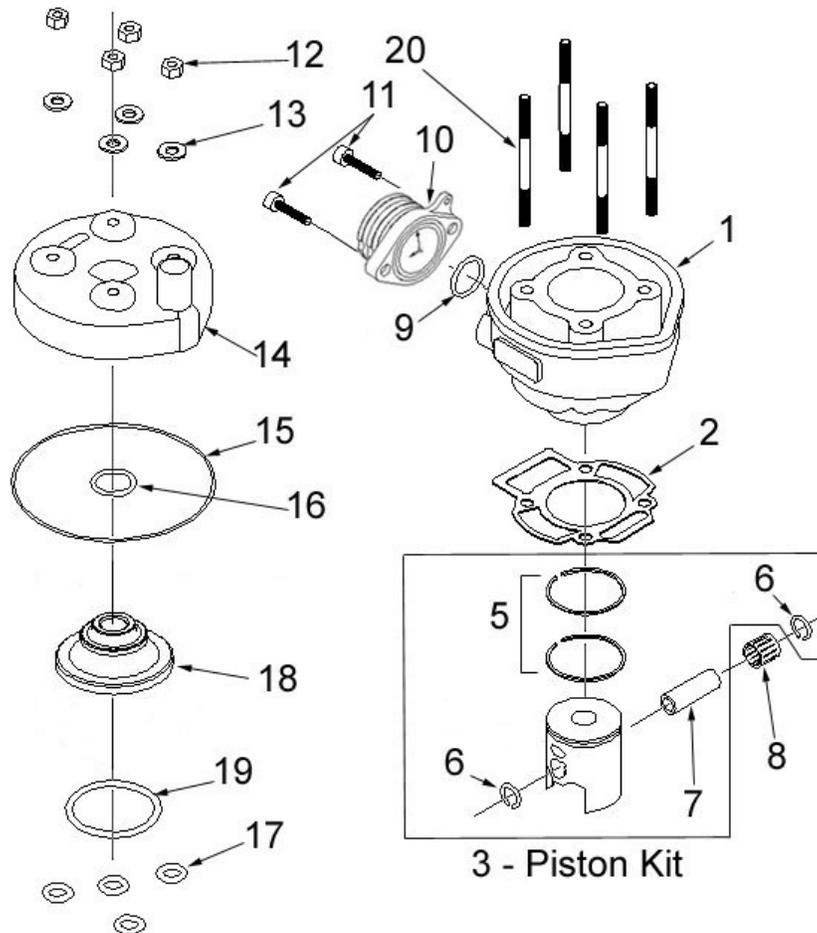


Figure 7D

Engine – Top End		
REF #	PART #	DESCRIPTION
1	ECMU0129	CYLINDER KIT (INCLUDES PISTON, RINGS, PIN & CLIPS)
2	ZCKG0501	BASE GASKET 0.015" (0.4mm thick) For other Base Gaskets refer to Base Gasket Selection section of this manual
3	ECMU0060	PISTON KIT
5	ECMU0155	PISTON RINGS (2 PER SET)
6	ECMUSR00	SNAP RING FOR PISTON (2 REQ'D)
7	ECKG0012	WRIST PIN
8	ECMU0077	BEARING, WRIST PIN
9	ZCMUOR07	O-RING, EXHAUST FLANGE
10	ECMU0086	EXHAUST FLANGE
NOT SHOWN	ZCMOTE11	O-RINGS – PIPE TO FLANGE (2 REQ'D)
11	HCBC0612	M6X12, EXHAUST FLANGE SCREW (2 REQ'D)
12	HCNS0601	6mm Nut
13	HCWF0601	6MM FLAT WASHER
14	ECMU0530	CYLINDER HEAD OUTER
15	ZCMUOR02	O-RING, CYLINDER HEAD LARGE
16	ZCMUV024	O-RING CYLINDER HEAD SMALL
17	ZCMUOR10	O-RING CYLINDER STUD (4 REQ'D)
18	ECMU0532	CYLINDER HEAD, INSERT
19	ZCMUV032	O-RING CYLINDER HEAD MEDIUM
20	ECMU0075	STUD, CYLINDER 6mm

Parts – Exhaust System

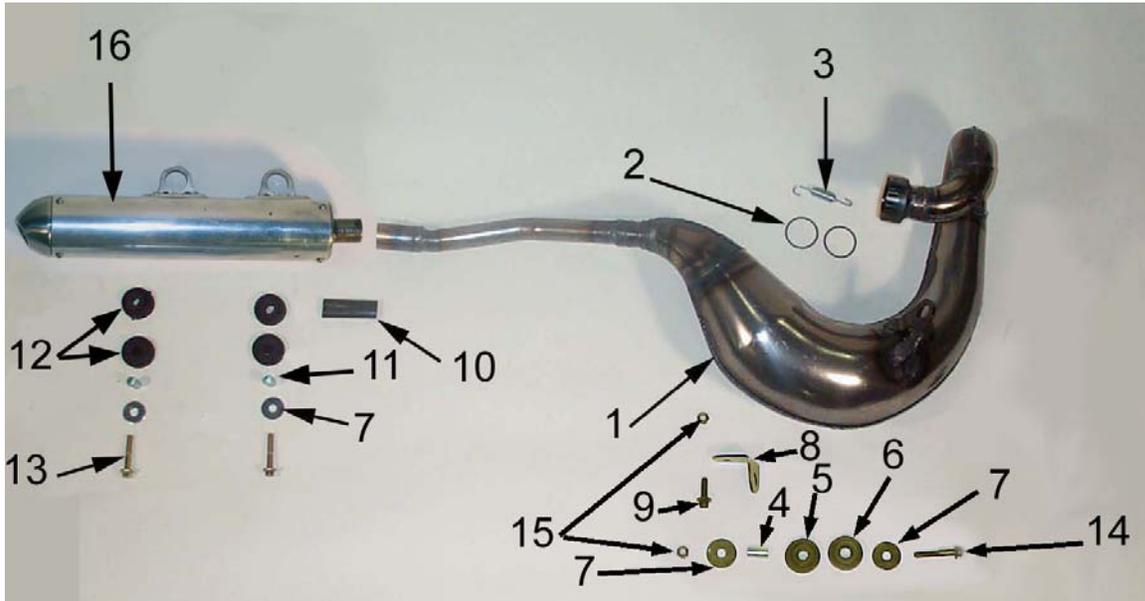


Figure 18

Exhaust System		
REF #	PART #	DESCRIPTION
1	XCEX5006	2006 ECX50 EXHAUST PIPE
2	ZCMOTE11	HEADER PIPE O-RINGS (2 REQ'D)
3	XCMU0005	EXHAUST SPRING - SHORT
4*	MCMUGR02	PIPE GROMMET SPACER (ONLY AVAILABLE IN MCMUGR02 GROMMET KIT)
5*	MCMUGR02	PIPE GROMMET MALE (ONLY AVAILABLE IN MCMUGR02 GROMMET KIT)
6*	MCMUGR10	PIPE GROMMET FEMALE
7*	HCWF1478	PIPE GROMMET WASHER (2 REQ'D)
NOT SHOWN	MCMUGR02	GROMMET KIT
8	FCEX5003	BRACKET – PIPE MOUNT
9	HCBF0620	M6 X 20 FLANGE HEAD BOLT
10	XCKG0009	PIPE / SILENCER SEAL
11	TCKG0001	SPACER
12	MCMUGR03	GROMMET
13	HCBF0630	M6 X 30 FLANGE HEAD BOLT
14*	HCBF0635	M6 X 35 FLANGE HEAD BOLT
15	HCNL0601	6MM LOCKNUT
16	XCMU0032	SILENCER
NOT SHOWN	XAEX0001	SILENCER – 'STAR' REINFORCED
NOT SHOWN	XCMU0026	KIT SILENCER REPACKING
NOT SHOWN	HCBB0408	M4 X 8 SILENCER SCREW

*Parts are included in MCMUGR02 grommet kit.

Parts - Front A-Arms & Steering Upright

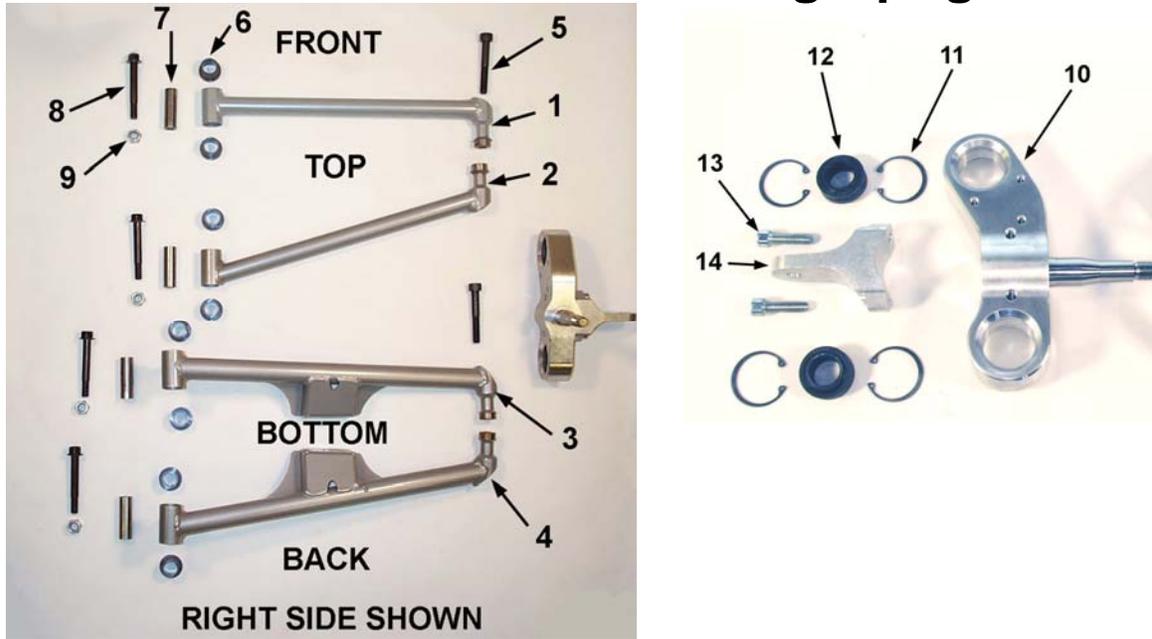


Figure 19

A-arms & steering upright		
REF #	PART #	DESCRIPTION
1	GAEX0001	A-ARM FRONT TOP (SAME PIECE FROM LEFT TO RIGHT)
2	GAEX0002	A-ARM BACK TOP (SAME PIECE FROM LEFT TO RIGHT)
3	GAEX0007	A-ARM FRONT BOTTOM RIGHT
	GAEX0006	A-ARM FRONT BOTOTM LEFT
4	GAEX0009	A-ARM BACK BOTTOM RIGHT
	GAEX0008	A-ARM BACK BOTTOM LEFT
5	HCBC1065	10MM X 65 SOCKET HEAD CAP SCREW (BLACK OXIDE)
6	MCEXBR05	BUSHING, A-ARM
7	GCEX0006	SPACER, A-ARM PIVOT TUBE
8	HCBF1070	10MM X 70 FLANGE HEAD BOLT
9	HCNL1001	10MM LOCKNUT
10	GAEX0003/4	UPRIGHT WITH SPINDLE, 03 Right, 04 Left
	GCEX0032	GREASE FITTING
11	MCEXCL01	SNAP RING, 1-3/8 INTERNAL
12	MCEXBR01	BEARING, SPHERICAL
13	HCBC0806	8MM X 30 SOCKET HEAD CAP SCREW (2 REQ'D)
14	GCEX0009	STEERING ARM

Parts – Front Brakes (MAGURA)


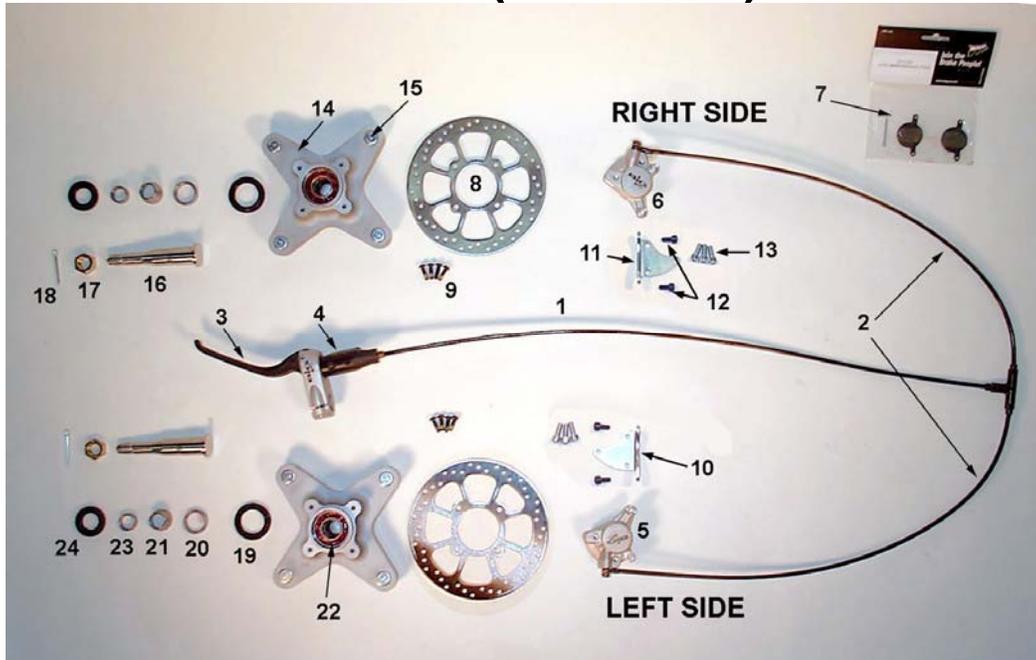


Figure 20

Front Brakes		
REF #	PART #	DESCRIPTION
1	BAEX0001	FRONT BRAKE ASSEMBLY
2	BKEX0001	HOSE – TEE TO CALIPER
3		BRAKE LEVER
4	BCEX0005	BRAKE PERCH & MASTER CYLINDER ASSY W/ LEVER
5	BCEX0005	CALIPER – FRONT RIGHT
6	BCEX0015	CALIPER – FRONT LEFT
7	BCMU0203	REPLACEMENT BRAKE PADS
8	BCEX0002	BRAKE ROTOR - FRONT (SAME L&R)
9	HCBC0501	M5X16 SHCS (4 REQ'D)
10	BCEX0003R	BRAKE CALIPER BRACKET - RIGHT
11	BCEX0003L	BRAKE CALIPER BRACKET - LEFT
12	HCBC0612	6MM X 12 SOCKET HEAD CAP SCREW (2 PER SIDE)
13	HCBC0601	6MM X 16 SOCKET HEAD CAP SCREW (3 PER SIDE)
14	WCEX0001	FRONT HUB WITH WHEEL STUDS
16	GCEX0008	WHEEL SPINDLE (SAME L&R)
17	HCNS1400	M14 CASTLE NUT (SAME L&R)
18	HCCP0002	COTTER PIN (SAME L&R)
19	GCEX0022	INNER HUB SEAL (SAME L&R)
NOT SHOWN	ECKGBR01	INNER HUB BEARING
20	WCEX0301	INNER HUB BUSHING
21	WCEX0300	CENTER HUB SPACER
22	ECMU0001	OUTER HUB BEARING
23	WCEX0302	OUTER HUB BUSHING
24	GCEX0023	OUTER HUB SEAL
NOT SHOWN	BCMU0205	BRAKE OIL, 2 OZ BOTTLE
NOT SHOWN	BCMU0211	BRAKE OIL, 500 CC BOTTLE
NOT SHOWN	BCMU0210	SYSTEM BLEED SYRINGE
NOT SHOWN	BKMU0200	BRAKE BLEEDING KIT (2OZ OIL, SYRINGE, FITTINGS, ETC...)
NOT SHOWN	BCMU0216	MASTER CYLINDER REMOVAL TOOL, TORX WRENCH T08

Parts – Front Brakes (AJP)

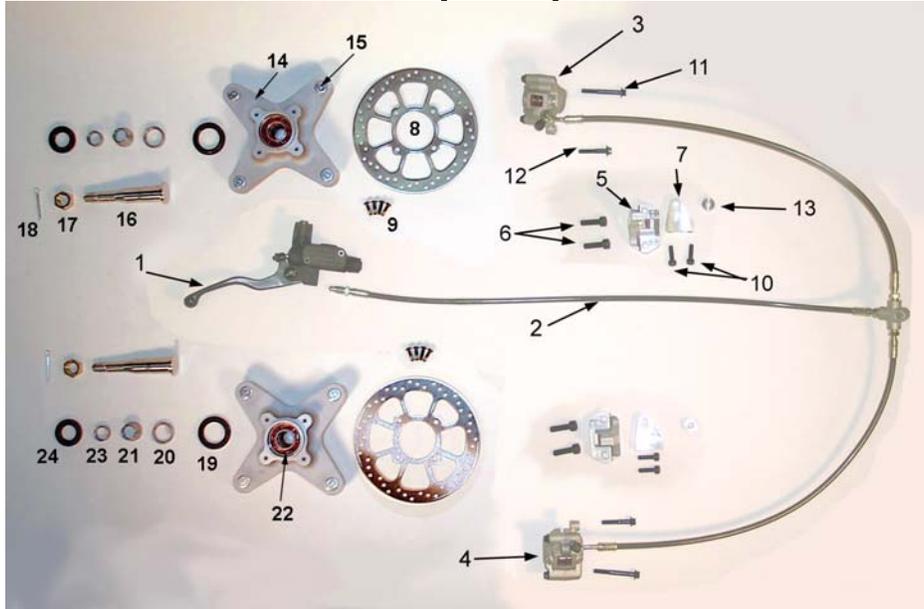

Front Brakes		
REF #	PART #	DESCRIPTION
	BAEX0004	BRAKE SYSTEM COMPLETE
	BCEX0024	BANJO BOLT
	BCEX0025	BRAKE PADS
	BCEX0029	CRUSH WASHER
1	BCDC0003	MASTER CYLINDER
2	BCEX0026	REPLACEMENT LINE
3	BCEX0028	CALIPER LEFT
4	BCEX0027	CALIPER RIGHT
5	BCEX0020	BRAKE ARM
6	HCBC0825	M8 X 25 SHCS
7	BCEX0021	BRAKE MOUNT
8	BCEX0019	BRAKE ROTOR
Not Shown	HCWF0504	BRAKE ROTOR SPACER (4 REQ'D PER ROTOR)
9	HCBB0516	ROTOR BOLT
10	HCBC0602	M6 X 20 SHCS
11	HCBF0640	M6 X 40 FLANGE HEAD BOLT
12	HCBF0635	M6 X 35 FLANGE HEAD BOLT
13	BCEX0022	BRAKE MOUNT SPACER
14	WCEX0001	FRONT HUB WITH WHEEL STUDS
16	GCEX0008	WHEEL SPINDLE (SAME L&R)
17	HCNS1400	M14 CASTLE NUT (SAME L&R)
18	HCCP0002	COTTER PIN (SAME L&R)
19	GCEX0022	INNER HUB SEAL (SAME L&R)
NOT SHOWN	ECKGBR01	INNER HUB BEARING
20	WCEX0301	INNER HUB BUSHING
21	WCEX0300	CENTER HUB SPACER
22	ECMU0001	OUTER HUB BEARING
23	WCEX0302	OUTER HUB BUSHING
24	GCEX0023	OUTER HUB SEAL
		BRAKE FLUID

Parts – Front Shock

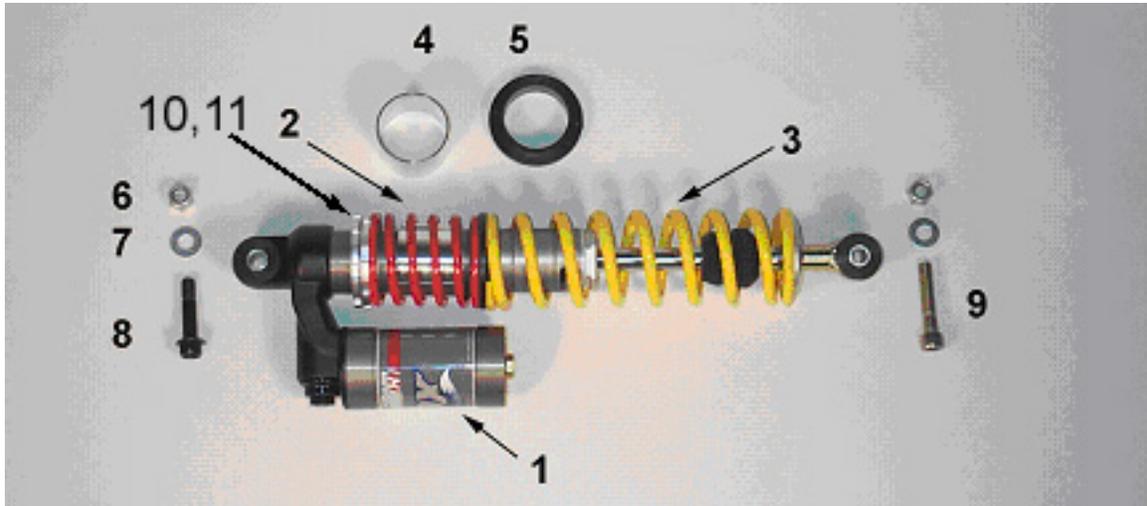


Figure 21

Front Shock		
REF #	PART #	DESCRIPTION
1	SAEX2005	SHOCK ECX50 – FRONT (2 REQ'D)
2	SCEX1080	SPRING, HELPER, 80 LB/IN (STANDARD)
	SCEX1095	SPRING, HELPER, 95 LB/IN (HEAVY)
3	SCEXA155	SHOCK SPRING, STANDARD (YELLOW, 155 LB/IN)
	SCEXA145	SHOCK SPRING, LIGHT (RED, 145 LB/IN)
	SCEXA165	SHOCK SPRING, HEAVY (BLACK, 165 LB/IN)
4	SCSP0001	TRAVEL LIMITER (1.50")
	SCSP0002	TRAVEL LIMITER (1.25")
	SCSP0003	TRAVEL LIMITER (1.00")
5		TOP SPRING PERCH
6	HCNL1001	10MM LOCK NUT (2 REQ'D)
7	HCWF0010	10MM FLAT WASHER
8	HCBF1040	10MM X 44 SHOCK BOLT
9	HCBC1002	10MM X 50 SOCKET HEAD CAP SCREW
10	SCKGFX04	PRELOAD RING BOTTOM
11	SCKGFX05	PRELOAD RING TOP (LOCK RING)

Parts – Miscellaneous

If you couldn't find it in one of the other pictures try the table below.

PART #	DESCRIPTION
WCEX0007	REAR WHEEL WITH TIRE 6X8"
WCEX0004L	LEFT FRONT WHEEL WITH TIRE
WCEX0004R	RIGHT FRONT WHEEL WITH TIRE
FAEX2006	FRAME
FCEX0002	CHAIN SLIDER SPLIT BUSHING
HCBC1120	M10 X 120 (FRONT ENGINE MOUNT BOLT)
HCWF0010	10MM FLAT WASHER (2 REQ'D)
HCNL1001	10MM LOCK NUT
FAE50001	MOTOR MOUNT LH 50 QUAD
FAE50002	MOTOR MOUNT RH 50 QUAD
FCEX0039	SPACER, ENGINE MOUNT 50CC RIGHT

Parts – Plastic Bodywork & Seat


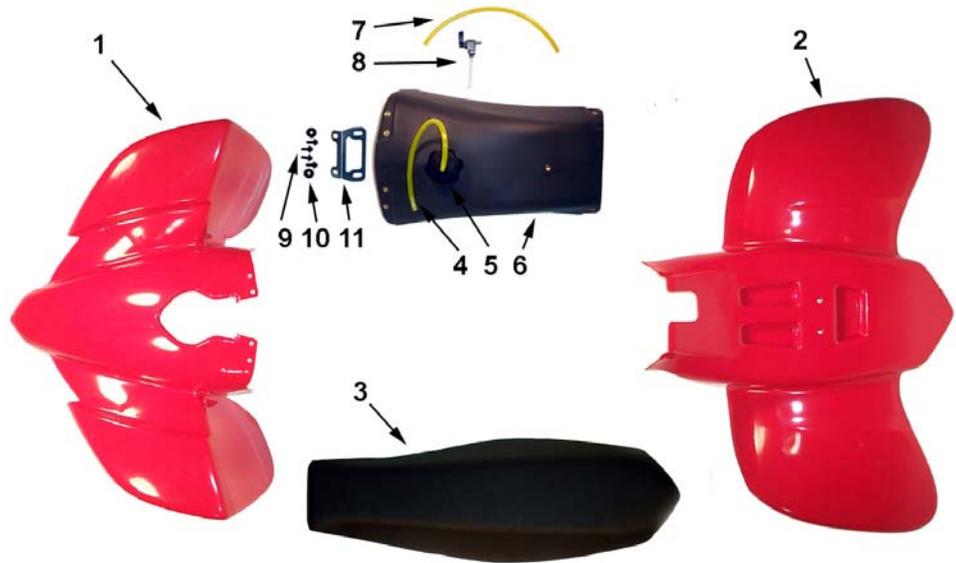


Figure 22

Plastic and Bodywork		
REF #	PART #	DESCRIPTION
1	TCEX0001	FRONT CLIP
NOT SHOWN	HCBB0616	M6 X 16 BUTTON HEAD (4 REQ'D AT BACK)
NOT SHOWN	HCWF0601	6 MM FLAT WASHER (4 REQ'D AT BACK)
NOT SHOWN	HCBB0625	M6 X 25 BUTTON HEAD (2 REQ'D AT FRONT)
NOT SHOWN	HCWF0601	6MM FLAT WASHER (2 REQ'D AT FRONT)
NOT SHOWN	MCMUGR10	GROMMET, (2 REQ'D AT FRONT)
NOT SHOWN	HCWF1478	WASHER, FENDER (2 REQ'D AT FRONT)
NOT SHOWN	HCNL0601	6MM LOCK NUT (2 REQ'D AT FRONT)
2	TCEX0002	REAR DECK
NOT SHOWN	HCBB0625	M6 X 25 BUTTON HEAD (2 REQ'D PLASTIC TO GRAB BAR)
NOT SHOWN	HCWF0601	6MM FLAT WASHER (2 REQ'D PLASTIC TO GRAB BAR)
NOT SHOWN	MCMUGR10	GROMMET, (2 REQ'D PLASTIC TO GRAB BAR)
NOT SHOWN	HCWF1478	WASHER, FENDER (2 REQ'D PLASTIC TO GRAB BAR)
NOT SHOWN	HCNL0601	6MM LOCK NUT (2 REQ'D PLASTIC TO GRAB BAR)
NOT SHOWN	HCBB0616	6MM BUTTON HEAD (2 REQ'D AT FRONT)
NOT SHOWN	HCWF0601	6MM FLAT WASHER (2 REQ'D AT FRONT)
3	TAEX0011	SEAT
NOT SHOWN	HCBB0635	M6 X 35 BUTTON HEAD (1 REQ'D SEAT TO PLASTIC)
NOT SHOWN	MCMUGR04	GROMMET (1 REQ'D SEAT TO PLASTIC)
NOT SHOWN	HCWF1478	WASHER, FENDER (1 REQ'D SEAT TO PLASTIC)
NOT SHOWN	HCNL0601	6MM LOCK NUT (1 REQ'D SEAT TO PLASTIC)
4	RCE50002	TANK VENT HOSE
5	TCHA0002	FUEL CAP
6	TCEX0019	FUEL TANK (NO PETCOCK, CAP, OR BRACKET)
7	RCE50001	FUEL LINE
8	TCMU0000	FUEL PETCOCK ('06 LEVER)
9	HCBC0601	M6 X 16 SOC. HEAD BOLT (2 REQ'D)
10	MCMUGR04	GROMMET (2 REQ'D)
11	TCEX0110	FUEL TANK BRACKET
NOT SHOWN	TCHA0005	TANK MOUNT REAR
NOT SHOWN	HCFH0620	M6 X 20 FLAT HEAD
NOT SHOWN	HCBF0616	M6 X 16 FLANGE HEAD BOLTS (2 REQ'D)
NOT SHOWN	HCBF0620	M6 X 20 FLANGE HEAD BOLT (1REQ'D AT THE REAR)
NOT SHOWN	TCKG0001	SPACER, TANK MOUNT (1REQ'D AT THE REAR)
NOT SHOWN	TCEX2009	GRAPHICS

Parts – Rear Brake

Figure 23

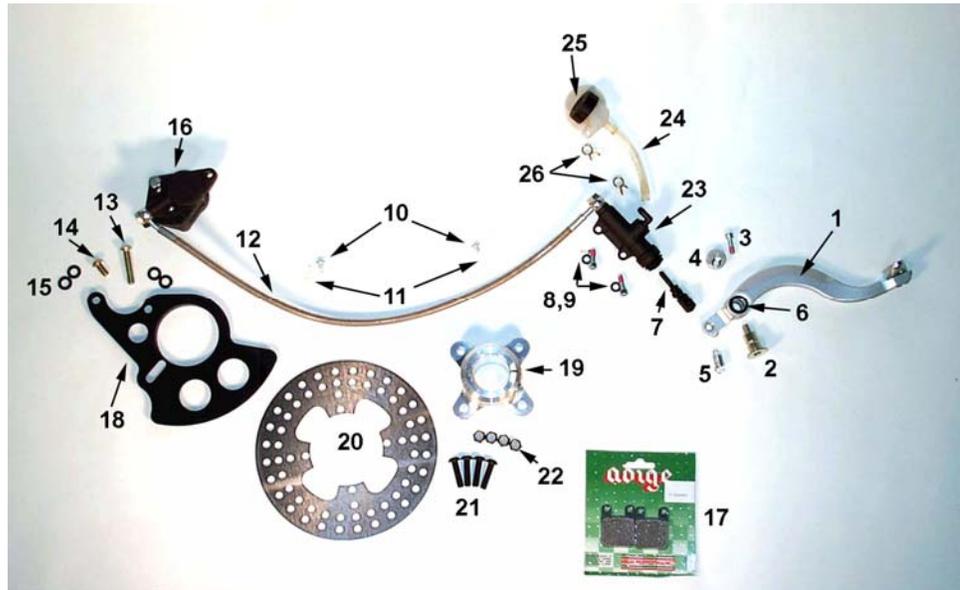

Rear Brake System		
REF #	PART #	DESCRIPTION
	BADC0001	BRAKE COMPLETE
1	BCEX0007	BRAKE PEDAL
2	BCDC0009	BRAKE PIVOT BOLT
3	HCBC0601	M6X16 SOC. HEAD BOLT
4	FCEX0018	BRAKE ADJUST ECCENTRIC
5	BCEX0012	BRAKE RETURN SPRING
6	BCMU0501	SEAL – BRAKE PEDAL (2 REQ'D)
7	BCDC0004	PUSH ROD, REAR BRAKE
8	HCBC0601	M6X16 SOC. HEAD BOLT (2 REQ'D)
9	HCWF0601	6MM FLAT WASHER (2 REQ'D)
10	HCPP0832	BRAKE HOSE CLAMP FASTENER (2 REQ'D)
11	HCCC0000	BRAKE HOSE CLAMP (2 REQ'D)
12	BCDC0151	REAR BRAKE HOSE
13	HCBC0850	M8X50 SOCKET HEAD CAP SCREW
14	HCBC0825	M8X25 SOCKET HEAD CAP SCREW
NOT SHOWN	BCEX0032	SPACER – CALIPER MOUNT
15	BCEX0014	CALIPER SPACER (2 REQ'D)
16	BCDC0002	CALIPER – REAR BRAKE
17	BCDC0007	BRAKE PAD KIT – ORGANIC
17	BCEX0013	BRAKE PAD KIT – SINTERED METAL
18	BAEX0006	REAR BRAKE CARRIER, FULL ADJUSTABLE
NOT SHOWN	GCEX0016	SPACER BRAKE HUB
NOT SHOWN	WCEX0006	SNAP RING, BRAKE CARRIER RETAINER
19	GCEX0014	BRAKE/SPROCKET HUB
20	BCEX0004	BRAKE ROTOR REAR QUAD
NOT SHOWN	HCBC0625	6MM X 25 SOCKET HEAD CAP SCREW (2 REQ'D)
21	HCBB0830	8MM X 30 BUTTON HEAD (4 REQ'D)
22	HCNL0801	8MM LOCKNUT (4 REQ'D)
23	BCDC0005	MASTER CYLINDER - REAR
24	BCDC0012	BRAKE LINE – RESERVOIR TO MASTER CYLINDER
NOT SHOWN	HCBC0601	M6X16 SOC. HEAD BOLT
NOT SHOWN	WCMU0006	SPACER – RESERVOIR MOUNT
25	BCDC0006	BRAKE FLUID RESERVOIR
26	MCMUCL05	LINE CLAMP (2 REQ'D)
NOT SHOWN	BCDC0152	BANJO BOLT
NOT SHOWN	BCDC0153	CRUSH WASHER

Parts – Rear Drive

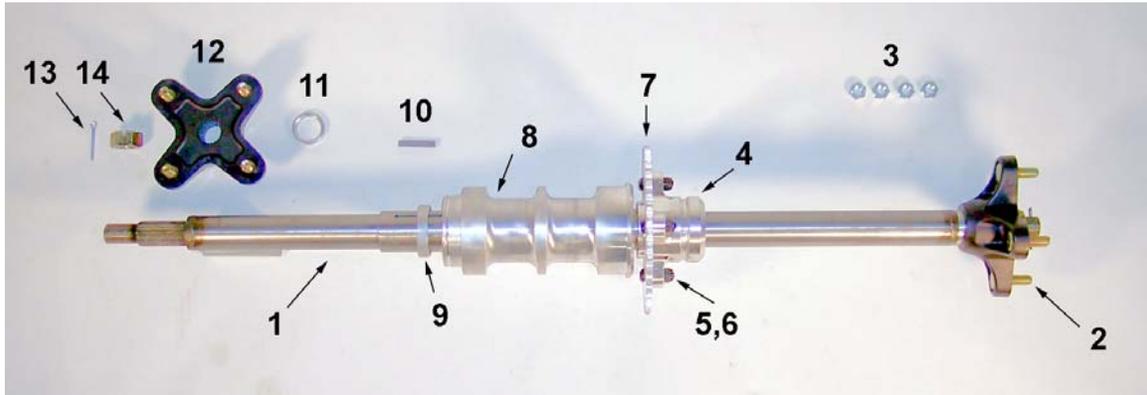
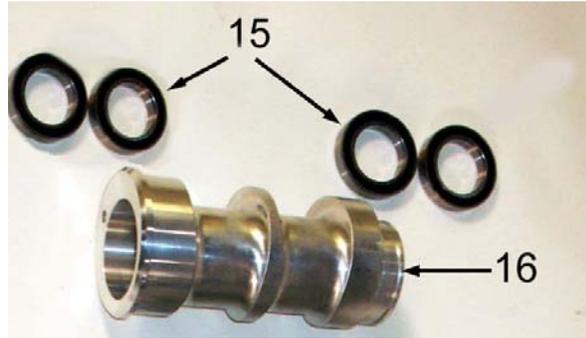


Figure 24

Rear Drive		
REF #	PART #	DESCRIPTION
1	GAEX0005	REAR AXLE
2	WCEX0003	WHEEL LUG (8 REQ'D)
3	HCNS1001	LUG NUT (8 REQ'D)
NOT SHOWN	HCWF0010	LUG WASHER (8 REQ'D)
4	GCEX0014	BRAKE/SPROCKET HUB (2 REQ'D)
NOT SHOWN	HCBC0625	M6 X 25 HUB PINCH BOLT (2 PER HUB)
5	HCBH0808	M8 X 30 HEX HEAD BOLTS (4 REQ'D)
6	HCNL0801	M8 LOCK NUT (4 REQ'D)
7	PCDC00XX	SPROCKET (37T – 51T) – XX DENOTES # OF TEETH
9	GCEX0016	BRAKE HUB SPACER
10	HCKW0001	HUB KEY
11	GCEX0024	REAR WHEEL HUB SPACER (2 REQ'D)*
12	GCEX0011	REAR WHEEL HUB (2 REQ'S)
13	HCCP0002	COTTER PIN (2 REQ'D)
NOT SHOWN	PCMU0104	420 CHAIN – 104 LINK
14	HCNC0020	20 MM X 1.5 NUT CASTLE
15	MCEXBR03	BEARING, REAR AXLE (4 TOTAL, 2 PER SIDE)
16	GCEX0015	ECCENTRIC

- UP TO TWO HUB SPACERS CAN BE USED PER SIDE TO ADJUST TRACK WIDTH. USING THREE HUB SPACERS MAY CAUSE THE SPLINES TO STRIP.

Parts – Rear Shock (Fox)

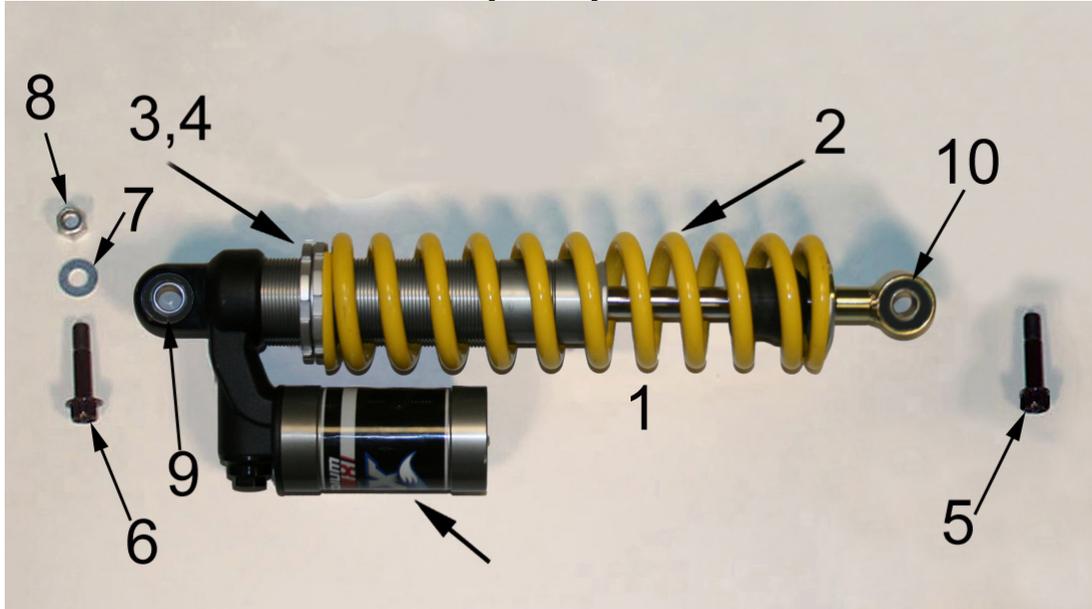


Figure 25

Rear Shock		
REF #	PART #	DESCRIPTION
1	SAE52009	SHOCK, REAR QUAD FOX
2	SCEX2350	SHOCK SPRING, STANDARD (350 LB/IN)
	SCEX2325	SHOCK SPRING, LIGHT (325 LB/IN)
	SCEX2400	SHOCK SPRING, HEAVY (400 LB/IN)
3	SCKGFX04	PRELOAD RING BOTTOM
4	SCKGFX05	PRELOAD RING TOP (LOCK RING)
5	HCBC1050	10MM X 50 SHCS
6	HCBF1040	10MM X 44 SHOCK BOLT
7	HCWF0010	10MM FLAT WASHER
8	HCNL1001	10MM LOCKNUT
9	SCEAFX01	END BUSHING PLASTIC (TOP)
9	SCEAFX02	STEEL EYELET (TOP)
10	SCEAFX03	END BUSHING PLASTIC (BOTTOM)
10	SCEAFX04	STEEL EYELET (BOTTOM)

Parts – Swingarm Assembly

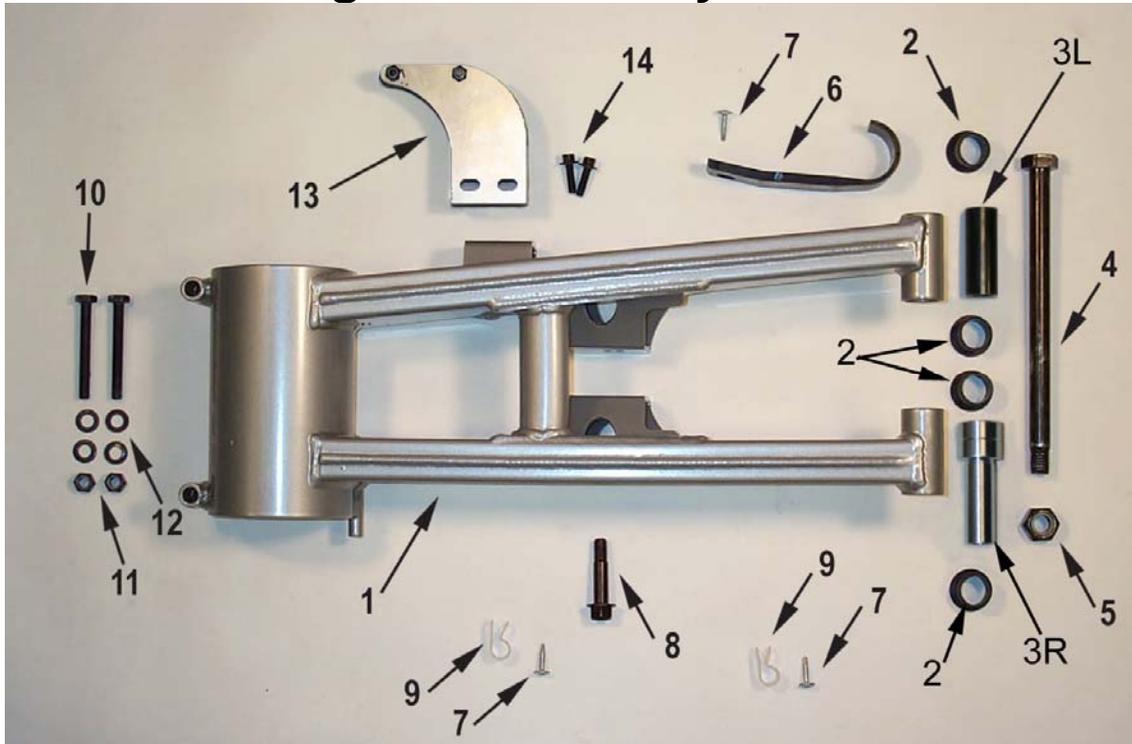


Figure 26

Swingarm		
REF #	PART #	DESCRIPTION
1	GAEX2009	SWINGARM (2009)
2	GCMU0030	BUSHING, SWINGARM (4 PER)
3R	GCE50001	SPACER, SWINGARM PIVOT (RIGHT SIDED / STEPPED SPACER)
3L	GCEX5016	SPACER, SWINGARM PIVOT (LEFT SIDE / TUBE)
4	HCBH1421	SWINGARM PIVOT BOLT (M14 X 1 HEX HEAD)
5	HCNL1402	SWINGARM LOCK NUT (M14 X1)
6	GCEX0050	TOP SWINGARM GUARD – ECX50
7	HCPP0834	SELF TAPPING SCREW
8	HCBF1040	BOLT, SHOCK
9	HCCC0000	BRAKE HOSE CLAMP (2 REQ'D)
10	HCBH0810	ECCENTRIC PINCH BOLT (2 REQ'D)
11	HCNL0801	8MM LOCK NUT (2 REQ'D)
12	HCWF0801	8MM FLAT WASHER (4 REQ'D)
13	PAEX0001	CHAIN GUIDE ASSEMBLY COMPLETE W/ ALUMINUM PLATE
14	HCBF0620	6MM X 20 FLANGE HEAD BOLT (2 REQ'D)

Parts – Tie Rod Assembly

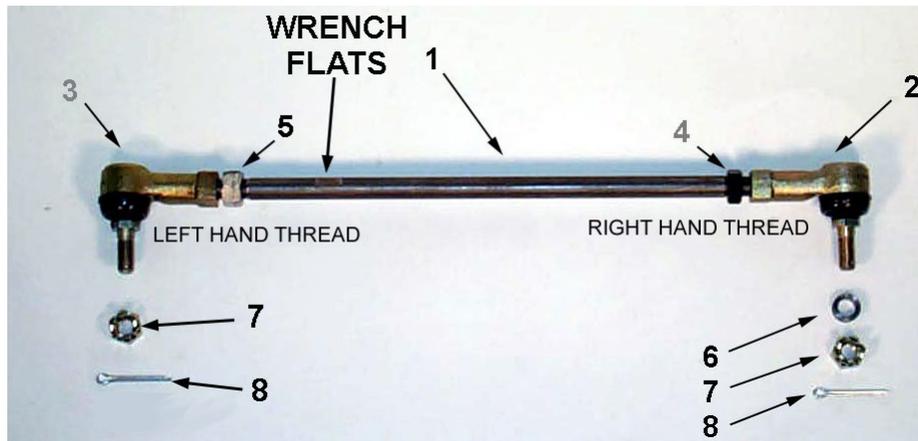


Figure 27

Tie Rod Assembly		
REF #	PART #	DESCRIPTION
1	FAEX0002	TIE ROD
2	MCEXBR02R	RH TIE ROD END
3	MCEXBR02L	LH TIE ROD END
4	HCNJ120L	LH JAM NUT
5	HCNJ120R	RH JAM NUT
6	GCEX0002	SPACER, BALL JOINT
7	HCNC0010	10MM CASTLE NUT (2 REQ'D)
8	HCCP0003	COTTERPIN 3/32" X 3/4" (2 REQ'D)

Service

Trained technicians with precision gauging and proper assembly fixtures carefully assemble all Cobra engines to specific tolerances. If you feel you have the skills, and the appropriate tools, to perform the following service tasks please follow the instructions closely. The part numbers are listed throughout to help you when ordering parts from your local Cobra dealer.

If you don't feel comfortable with the service work, log on to www.cobramotorcycle.com to find a Cobra dealer or Call 517 437 9100.

Engine Service

One method for determining whether the top end of your engine needs rebuilt is to perform a WOT (Wide Open Throttle) kicking compression test. Before performing the procedure please read the caution notes below.

CAUTION:

- There appears to be a wide range of variability in reading compression gauges across the country.
- The head volume of this Cobra Motorcycle is very small and so requires many kicks ~20 before you establish the most accurate reading possible.
- Because of the geometry of the spark plug used in this Cobra Motorcycle, the adapter used with your compression tester must have a similar volume protruding into the combustion chamber to establish an accurate value.
- Length of hose on the compression tester will affect the reading. The shorter the hose length the more accurate your reading will be.

Because of these difficulties in measuring an *absolute* compression value, a useful *relative* value can be achieved by testing your bike's compression with your own particular gauge after a new top end or when the bike is new so that you know what your particular gauge reads on a 'fresh' engine. When it has dropped to 90% of its original value the engine will be down on power and would benefit from a rebuild. When it's dropped to 80% it really needs rebuilt! Using the table below will help you determine monitor the condition of your top end.

	Engine is Fresh Measured Value	Engine Down on Power Measured Value * 0.9	Engine NEEDS Rebuilt Measured Value * 0.8
Example	110 psi	110 psi * 0.9 = 99 psi	110 psi * 0.8 = 88 psi
Your Values			

Procedure for Compression Testing

1. Shut off the fuel petcock.
2. Install the compression gauge into the spark plug hole.
3. Hold the throttle to wide open, and kick repeatedly (approximately 20 times) or until the gauge reading does not increase in value with each kick.

Base Gasket Selection

Tools required

- 17mm wrench
- 1mm flexible solder material
- measurement calipers

When rebuilding the ‘top end’ of your Cobra motorcycle, care must be taken to ensure the proper squish clearance. Squish clearance is defined as the minimum distance between cylinder head and piston at TDC, and there are negative effects of either having too much or too little clearance. Since parts like the crank, connecting rod, cylinder head, piston, and crankcases all have varying tolerances, Cobra offers several different base gasket thickness’ to ensure that you can always set the squish clearance of your engine to factory specifications.

For base gasket replacement use the code (see figure 21 for location) along with the table on the following page reorder the correct thickness gasket.

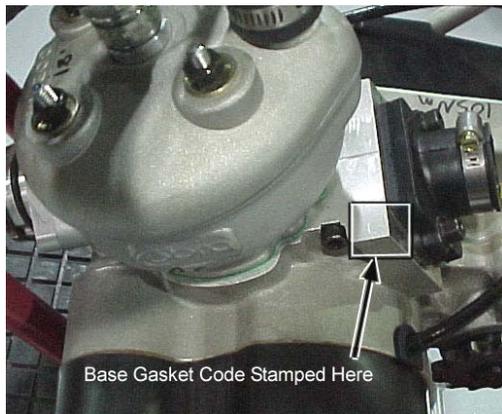


Figure 21

Code	Supplied Base Gasket Thickness		Cobra #
	#	mm	inch
2	0.2	0.008	ZCMU0702
	0.25	0.010	ZCMU0011
3	0.3	0.012	ZCMU0703
4	0.4	0.015	ZCKG0501
5	0.5	0.020	ZCMU0705
6	0.6	0.024	ZCMU0706
7	0.7	0.028	ZCMU0707
8	0.8	0.031	ZCMU0708
9	0.9	0.035	ZCMU0015
1	1.0	0.039	ZCMU0016

NOTE

Tolerances will affect the actual gasket thicknesses.

If during the course of the maintenance more parts than the base gasket are changed, the squish clearance should be measured, and possibly a different base gasket will be required.

The easiest way to measure squish clearance is with 1mm to 1.5mm thick flexible solder wire (available through most popular electronic stores). The process is as follows:

- Assemble the top end of the engine with either; 1) the crankcase stamp recommended base gasket or, 2) if assembling with a new set of cases assemble with a 0.4mm (0.015”) base gasket, and torque the head nuts to the proper torque specifications leaving off the spark plug and ignition cover (piston rings can be left off to ease assembly).
- Carefully insert the solder wire through the spark plug hole, into the cylinder far enough such that the tip of the wire touches the left or right side cylinder wall (not the front or back as the piston will rock more and give incorrect measurement).
- Hold the wire at this position and rotate the crankshaft, by the flywheel nut (or kick lever) three revolutions to ‘smush’ the solder wire.

CAUTION:


If you rotate the flywheel nut in a counterclockwise direction there is a risk of loosening the nut.

- Pull out the wire and measure the solder thickness at the thinnest location near its tip accurately with the thin tips of calipers.
- Adjust base gasket thickness as necessary to get the desired value.

Upon completion, your final assembly squish clearance should agree with the chart below

Measured Squish Clearance (minimum)

(These numbers only apply when measured as described above)

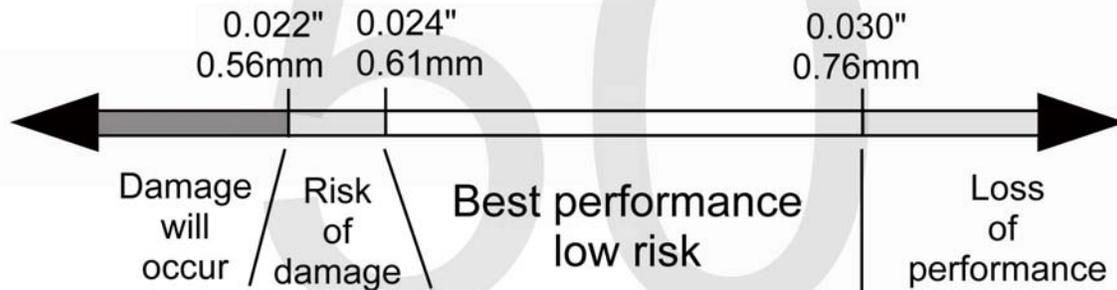

Engine Removal

To service the bottom end and transmission, the engine must be removed from the frame.

Tools required

- 10, 11, 13, 22 mm wrench
- 8, 10, 14, 17 & 19 mm sockets
- 3, 4 & 5 mm hex key (Allen wrench)
- 7 mm nut driver, flat or Phillip, screwdriver for hose clamps
- Spring remover
- Flywheel / clutch puller (#MCMUTL68)
- Clutch nut removal tool (Call local dealer for details).

Procedure

1. Remove the seat.
2. Turn of the fuel at the petcock and disconnect the fuel line.
3. Remove the tank (8 mm socket).
4. Remove the carburetor from the inlet (flat head or Phillips head screwdriver, 7 mm nut driver).
5. Remove the silencer & pipe (spring remover, 8mm socket).
6. Locate a suitable container for the engine coolant and disconnect the coolant lines connected to the engine (8 mm socket).

NOTE:

If the coolant looks to be free of contaminates it may be reused.

7. Remove the master link from the chain.
8. Remove front engine mount bolt (13 mm socket, 6 mm hex key).

9. Remove the swingarm bolt (22mm socket).

NOTE:

Only drive the swingarm bolt far enough to clear the engine, leave it holding the one side of the swingarm to the frame

10. Remove the engine from the right side of the frame.

NOTE:

If you are merely performing a top end service skip ahead to *Top End Disassembly Procedure*.

Complete Engine Disassembly Procedure

1. Remove the magneto cover (4mm hex key)
2. Remove the bolt from the water pump shaft (4mm) and slide off the belt cover and the water pump belt
3. Using a flywheel holding tool and 14 mm socket remove the nut that secures the flywheel.
4. Using the Cobra flywheel / clutch puller (#MCMUTL68), remove the flywheel from the crankshaft.
5. Remove the stator (5mm hex key).
6. Remove the nut holding the large gear to the transmission input shaft (19 mm socket).
7. Remove the special nut / starter gear that holds on the clutch (special tool available, contact your local dealer).
8. With the Cobra flywheel / clutch puller (#MCMUTL68), remove the clutch from the crankshaft (details in Clutch Service portion of this manual).

Top End Disassembly Procedure

1. Remove the cylinder head nuts (11mm).
2. Remove the cylinder head outer.
3. Remove the cylinder head insert.

INSPECTION NOTE:

Inspect the cylinder head for deposits and abrasions.

1. If there are deposits they should be removed
 - a. Black oily deposits (indicating a rich mixture or improper oil type/quantity) can be removed with solvent
 - b. Crusty deposits (indicating dirt ingestion) can be removed with solvent and may require some scraping.
2. Abrasions
 - a. Pitting or erosion indicates detonation and may require cylinder head replacement, also
 - i. Retard the ignition timing
 - ii. Use a higher octane fuel
 - b. Missing chunks or indentations indicate broken hardware or ingested items - replace the cylinder head.

4. Remove the cylinder.

INSPECTION NOTE:

Inspect the cylinder bore for abrasions, deposits, and missing coating.

1. If abrasions: scrapes, scratches, pitting, etc... are found, replace the cylinder.
2. If deposits are all are found
 - a. Clean with muratic acid.
 - b. Once the deposits are removed, inspect for abrasions and missing surface coating.
 - i. If there are abrasions or missing coating, replace.
 - ii. If all looks well, the cylinder may be saved.

 WARNING

Muratic acid can be dangerous. Follow the manufacturers instructions closely.

5. Remove the piston clip with a scribe.
6. Remove the piston pin with a piston pin remover.

INSPECTION NOTE:

Inspect the piston for abrasions and deposits on the top and sides and clean or replace as necessary.

INSPECTION NOTE:

Piston ring end gap should be between 0.008" (0.2 mm) and 0.020" (0.5 mm)

Splitting the Cases

1. Remove the fasteners holding the two halves of the crankcase together.
2. Separate the cases with a proper case splitting tool.

CAUTION:

Take caution when handling the crankshaft. It is the main power transfer to the rest of the engine. If it is out of alignment, it will cause premature failure of your bearings which can lead to serious damage to the cylinder as well as the rest of the engine. Do not try to true the crank yourself. Truing the crank should be done professionally.

CAUTION:

- If you split the cases, check the gear tooth faces for chipping & signs of fatigue.
- Check the small needle bearings for fatigue. If the bearings are damaged, the engine cases should be checked to make sure the needle-bearing casing didn't oblong the bearing hole in the case.
- Needle bearings should be replaced every couple months of hard racing.

Engine assembly

CAUTION:

For any seals that are to be installed, apply a light amount of grease to the seals' ID, assembly lube on all bearings and a small amount of Loctite to the OD.

1. Press the three bearings into the respective holes in each case half.
2. Press in the crank seals such that the concave side faces the crank weights.
3. Press in the counter shaft seal (concave side faces inside of transmission)
4. Install the water pump assembly wire ring retainer
5. Press in the water pump assembly
6. Tap both ways axially then verify easy rotation.
7. Inspect the crankshaft for proper true geometry (no more than 0.002", 0.05mm, measured at bearing journal area while supported from the ends).

CAUTION:

Insert a 7.05mm (0.278") shim between the crank throws before pressing on the crank.

8. Insert the screws with the proper lengths at locations shown.

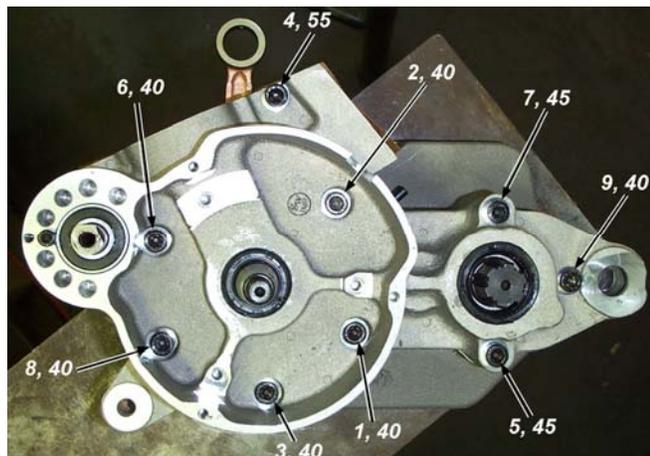


Figure 28

9. Torque to 12 Nm (105 in-lb) in the pattern shown in figure 28.
10. Trim away any excess gasket material if necessary.

NOTE: Check engine mount holes for excess material that may cause problems in engine installation.

11. Install the piston with new wrist pin bearing and, pin and clips.

CAUTION:

Be sure to align the piston such that the arrow on the top piston surface points to the exhaust (front of bike/engine) and put assembly lube on the connecting rod bearing.

12. Install the piston rings.

CAUTION:

Ring end gap should be no less than 0.25 mm (0.010") and no more than 0.64mm (0.025")

13. Install the base gasket.
14. Install the cylinder being sure that the piston rings are properly aligned with the indexing pins.

CAUTION:

Never force the cylinder. If resistance is felt, determine the problem and solve it. Once installed slightly rotate the cylinder back and forth insuring that the rings are properly seated.

15. Install cylinder head insert.

NOTE: A light application of silicone grease can help hold the O-RINGS into position during assembly.

16. Pressure test the engine insuring an acceptable leakdown rate.
17. Install O-RINGS as shown in figure 29.

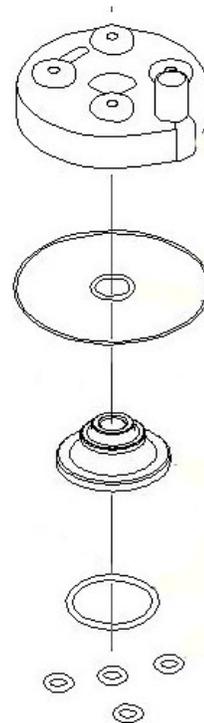


Figure 29

18. Install the cylinder head.
19. Install the washers (with flat side down) and nuts. Torque to 105 in-lb (12 Nm)
20. Install reed and inlet manifold with new gaskets (105 in-lb, 12 Nm) applying 1104 gasket sealer to both sides of all gaskets.
21. Leak check the engine to 20 psi to ensure proper seal.
22. Install stator reinstalling the grommet and wires (snug the bolts).
23. Install the rotor per *Rotor Installation* section, under the S3: *Ignition* portion of this manual.

24. Install the water pump outlet pipe (apply Ultra black Hi-Temp RTV silicon gasket maker to the threads before assembly) before installing the clutch and rotate to a vertical position with the engine resting on a bench
25. Install the clutch per *Clutch Installation* section in this manual.
26. Install the coolant drain plug with copper washer (11 ft-lb, 15 Nm).
27. Make sure that the exhaust spacer is on the cylinder (53 in-lb, 6 Nm).
28. Install the spark plug with a fresh gasket (to apply the proper torque to the spark plug when inserting, one must first screw the spark plug in until the metal gasket ring causes resistance and then turn another 1/8 to 1/4 turn).

Clutch

CAUTION:

The clutch components (arbor, shoes, bolt, and belleville washers) on your 2006 Cobra are similar looking but different in geometry from prior years. Do not mix old and new parts as damage will occur.

Cobra clutch puller assembly:

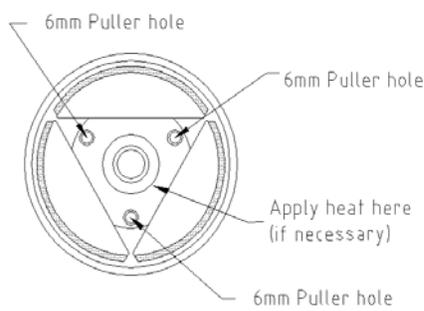


Figure 30

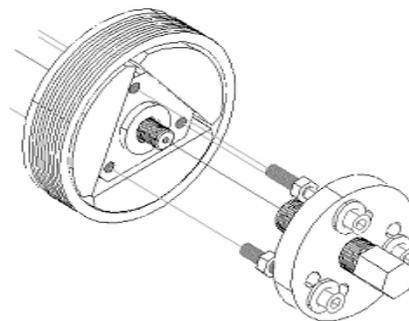


Figure 31 Clutch puller installation

Tools recommended for clutch service:

- Universal clutch puller- a universal puller that pulls the clutch, main drive gear and rotor. (Part # MCMUTL70).
- 5mm T-handle
- Clutch nut removal tool (ECMU0078) & spanner wrench (ECMU0082).
- *Cobra 3 Shoe Clutch Milk* (Part # MCMUGF01).

CLUTCH REMOVAL:

1. Drain the engine transmission oil and remove the clutch cover.
2. Remove the clutch nut (not left hand thread) on the end of the crankshaft with the clutch nut removal tool.
3. Attach the Universal Puller. There are three 6mm clutch puller holes located on the ends of the center hub. (figures 30 & 31) You must use a *draw type puller* to remove the clutch.

CAUTION:

Do not use a jaw type puller or use the 6mm tapped holes as jackscrews or you are likely damage the clutch or drum.

4. If necessary apply heat to the center clutch hub.

CAUTION:

Do not heat the crankshaft threads or the aluminum shoes.

5. Keep tension on the puller as you are heating it.

⚠ WARNING

The clutch will often pop off under tension from the puller and it will be very hot.

CLUTCH WASHER STACKUPS:

Once the clutch is removed, and cool to touch, carefully put it into a vice and remove the center shoulder bolt out of each clutch shoe. You will probably have to heat the center hub again to remove the bolts. Once you get a bolt loosened, carefully remove it with the shoe and observe the way the spring washers are stacked. Clean the washers and bolt if you intend to reuse.

The spring stacks in your 2006 Cobra clutch will contain 11 individual springs and a flat washer configured as a 5 ½ stack. See figure 32. This clutch is designed such that it reconfigured by the customer to achieve different clutch engagements 'hits' by changing washer counts and configurations.

CAUTION:

Generally reassemble the springs as you removed them from the engine or as you received them from Cobra. This will be either a 3, 4 ½ or, 5 stack. If you are unsure call the Cobra Technical Support Group 330 549 9600, and consult the experts.

CLUTCH ASSEMBLY REFERENCE DRAWING		
REF #	PART #	DESCRIPTION
1	CAMU0013	Set of three shoes, springs, bolts, flat washers & nuts
2	CAMU0010	Set Of three springs, washers, bolts & nuts
4	HCBS0004	One metric clutch bolt

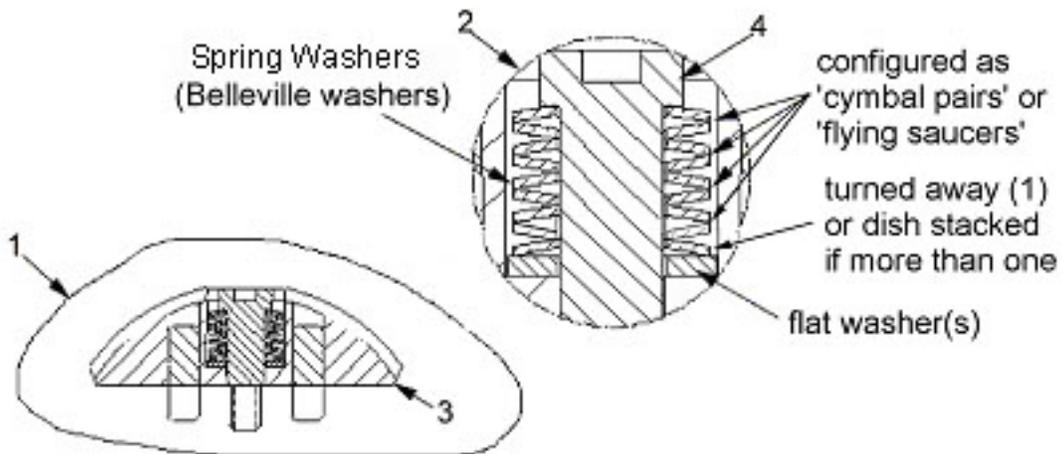


Figure 32 Some configuration of clutch spring stack. Each 'spring' stack contains multiple springs (Belleville washers) - arranged into three, four, or five 'flying saucers', or turned away against the flat washer(s). Shown is the 4 ½ stack.

Stack	Total Springs	Flying Saucers or Cymbal Pairs	Turned Away or Dish Stacked	Std. Flat Washer
5 ½	11	5	1	

Clutch adjustment washers

Your Cobra comes stock with a single flat washer at the bottom of the spring washer stack. The thickness of that flat washer is 0.031" (0.79mm). Cobra offers several thicknesses of thin adjustment washers that allow clutch engagement tuning. Increasing the flat washer(s) thickness increases the engine speed for clutch engagement thus increasing the abruptness of clutch engagement (harder hit). Conversely, decreasing the flat washer(s) thickness decreases the engine speed for clutch engagement thus decreasing the abruptness of clutch engagement (softer hit).

Part #	Thickness mm (inch)
HKCSM015	1.5 (0.060)
HKCSM012	1.2 (0.047)
HKCSM008	0.8 (0.031)
HKCSM006	0.6 (0.025)
HKCSM005	0.5 (0.020)
HKCSM004	0.4 (0.015)

Use the table above to order adjustment washers. Replace the stock washer with the proper combination of adjustment washers that delivers the desired clutch hit.

Hit	Thickness (mm)	Thickness (inch)
Softer	0.8	0.031
	0.9 (0.4 + 0.5)	0.015 + 0.020
	1.0 (0.5 + 0.5)	0.020 + 0.020
	1.1 (0.6 + 0.5)	0.020 + 0.025
Harder	1.2	0.047

CAUTION:

It is easy to prematurely damage the clutch and other engine components with improper clutch adjustment. If you are unsure of how to adjust the clutch, by even the slightest, contact the Cobra Technical Support Group before making adjustments.

Clutch shoe wear:

- If the clutch has been slipping and shows signs of glazing, it is best to replace the shoes. We have found that once the shoes are glazed, even if deglazed with emery paper or a file, the performance is reduced.

- The best way to prevent glazing is by not gearing too high, changing the oil as specified and by not blipping the throttle. Every time you blip the throttle, you are working your clutch springs.

CAUTION:

The clutch produces a tremendous amount of heat and when a rider is blipping the throttle. This makes the clutch and clutch springs wear out quicker. This also makes your engine tend to run hotter which decreases engine power and degrades ignition stator efficiency. It is important to train your rider **NOT** to be a **throttle 'blipper'**.

CAUTION:

Sludge build-up between the spring washers also keeps the clutch shoe from engaging fully and this will cause the clutch to start to slip. So you will need to clean the sludge out or just replace the spring washers and bolts with new ones. How quickly this sludge builds up depends on how often you **change your oil** and whether your rider is a throttle 'blipper'.

REF #	PART NO.	DESCRIPTION
1	ECMU0118	Crank seal
2	ECMU0040	Clutch to hub spacer (standard 0.030" 0.76mm)
	ECMU0040T	Clutch to hub spacer (thin, 0.015" 0.38mm)
3	ECMU0119	Brass bearing
4	ECMU0120	Clutch basket with bearing
5	CAMU0005	Clutch Complete w/ Arbor
6	ECMU0018	Clutch nut
	CCMU0029	Clutch arbor

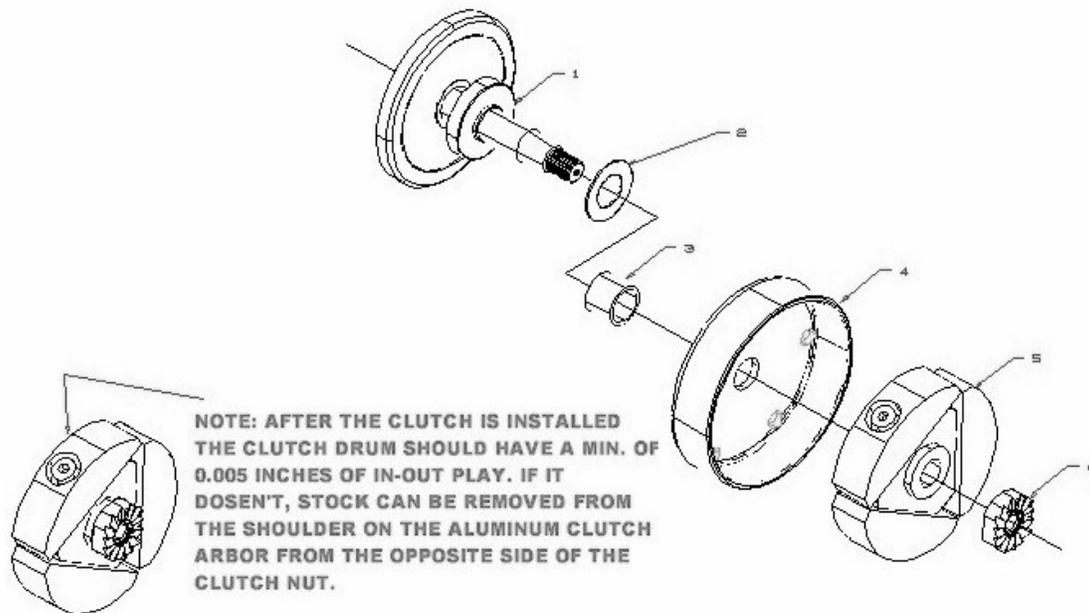


Figure 33, Clutch Assembly Drawing

CLUTCH ASSEMBLY:

1. After cleaning or replacing the spring washers, reassemble the stack up of washers.

CAUTION:

It is important to reassemble the washer stack to that which is recommended or to your own specialized stack.

CAUTION:

It is also important that all three shoes are stacked the same. (See figure 32)

2. Clean the threads of the stack bolt and the clutch with contact cleaner removing all old thread locking material.
3. Apply high strength (red) thread lock material to the stack bolt and tighten to 12 ft-lb (16 N-m).

CAUTION:

Avoid allowing excess thread lock material to contact the spring washers and the clutch or the clutch is likely to malfunction.

4. Use fine emery paper on the center hole of the clutch and on the tapered section of the crankshaft.
5. Apply a small amount of wicking / bearing retainer (green) thread lock agent to the center tapered section of the crankshaft and taper of clutch arbor.

CAUTION:

Lean the bike / engine such that any excess thread lock agent goes away from the bushing in the clutch drum.

6. Put the clutch back in.
7. Apply high strength (red) thread locking agent to the threads and install the nut and torque to 40 ft-lb (54Nm) with the special socket (see figure 33).

CAUTION:

Use high strength (red) thread locker on the threads of the clutch nut. If you are using an impact socket, just zap it lightly with an air wrench to tighten it because there are only about 4 threads inside the nut and they can be easily stripped. If you are tightening it by hand, you can hold the crank from turning with the clutch removal spanner ECMU0082.

Install the clutch cover tightening the bolts from inside out. (8 or 10 mm socket, 5.8 ft-lb, 7.8 Nm).

INSPECTION NOTE:

- a. There must be in / out play in installed clutch, 0.4mm to 1.0 mm (0.015" to 0.040").
- b. Excess in/out will cause early crank seal failure.
- c. A blue clutch drum is worn out from excessive slippage or improper lubrication.

NOTE:

To ensure proper engagement of the kick gear with the starter nut, tighten the six screws only to the point of being not extremely loose. Using one hand rotate the kick lever to ½ stroke and hold while tightening the six screws completely with the other hand.

8. Fill with oil (235 ml (8.0 oz) *Cobra 3 Shoe Clutch Milk* (Part # MCMUGF01)).

Ignition

Stator care

Stator failure will result from running the bike hot. Following is a list of things that will make your engine run hot.

1. The timing should not exceed the maximum specifications listed.
2. Improper carburetor jetting.
3. Improper spark plug heat range. Never run a hotter plug than the specified spark plug.
4. Clutch slippage. See “CLUTCH” section for causes of slippage.

CAUTION:

- Because of the amount of heat generated by the clutch and engine during extended periods of riding, it is advisable to remove the ignition cover afterward to allow the ignition to cool off. The heat transfers through the cases and can damage the stator as it cools off because of lack of airflow around the stator.
- Ignition will overheat if the gap between the rotor and stator is not large enough. There should be even clearance as the rotor rotates relative to the stator.
- Non-resistor spark plug caps should be used. Resistor caps will result in a weaker spark that will reduce performance.
- Make sure ground wires are secure.
- Make sure connections are free of dirt.

CAUTION:

If the engine is hot, it would be helpful to take the ignition cover off to allow cooling.

The proper ignition timing for this model of is at **0.040”** before Top Dead Center (that means 0.040” before the piston reaches the highest point of it’s travel in the cylinder).

CAUTION:

Advancing the ignition timing will cause the engine to run hotter, in-turn causing power loss, shortened clutch life, and possibly lead to premature stator failure, and can also cause detonation which can lead to premature piston and ring failure.

Tools recommended for timing service:

- Compact motorcycle dial indicator
- Universal clutch puller- a universal puller that pulls the clutch, main drive gear and rotor. (Part # MCMUTL70).

TIMING YOUR IGNITION:

1. Remove the spark plug cap, and sparkplug.
2. Insert the dial indicator into the spark plug hole.
3. Remove the four bolts from the ignition cover.
4. Remove the water pump belt from the rotor and water pump shaft.
5. Turn the crankshaft counterclockwise until it reaches top dead center.
6. Set the dial indicator to zero
7. Turn the crankshaft clockwise until the dial indicator reaches 0.040" (1.02mm) from top dead center.
8. Line up the lines on the stator and the rotor (figure 35). Otherwise loosen the three 5mm bolts to adjust the stator.

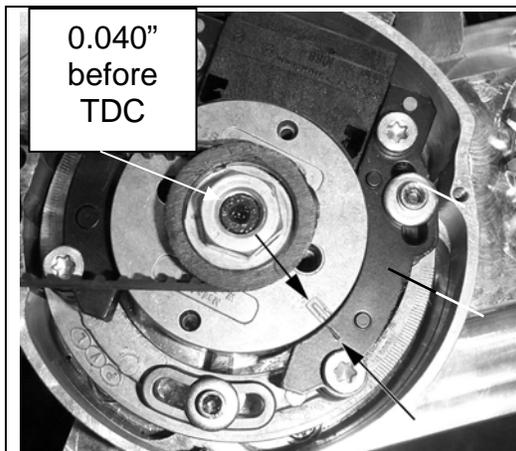


Figure 35, Lining up the line on the rotor with the line on the stator.



Figure 36, Using a dial indicator to measure piston height for setting ignition timing.

ROTOR INSTALLATION:

1. Use wicking / bearing retainer (green) thread locker on the inside of the rotor, and on tapered part of crankshaft.

CAUTION:


It is recommended that you apply the proper thread locking primer to the components that are to receive thread locking material per the manufacturers instructions.

2. Eyeball the lines on the rotor and stator then press the rotor onto the crankshaft firmly (figure 35).
3. Torque the nut on the rotor to 40 ft-lb (54 Nm) with high strength (red) thread locking agent.
4. Recheck the timing following the procedure of *timing your ignition*.
5. Install the water pump belt back on.
6. Bolt the ignition cover back on.
7. Put the spark plug back in, and firmly stick the spark plug cap onto the spark plug.

Cooling System

Radiator fluid removal:

Remove the coolant drain plug (13mm bolt) on the front of the engine cases.

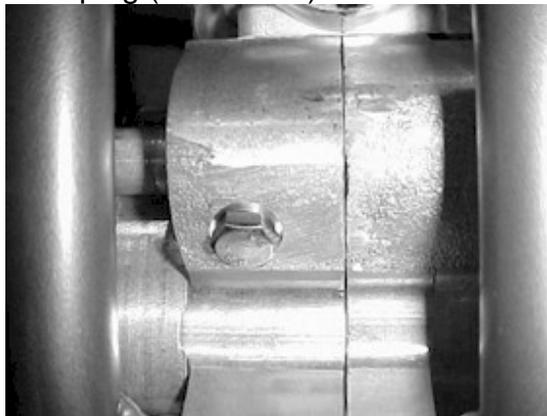

NOTE: Inspect the old coolant for evidence of oil, combustion byproducts (black 'oil slick' stuff) or other things that may indicate a problem.

Tools recommended for impeller service:

- Flat head screwdriver
- 13mm- hex wrench
- 3mm hex key
- 4mm hex key
- 5mm hex key
- 8mm hex key
- Water Pump Installation tool
 - MCMUTL09, 2009 King
 - MCMUTL08, 2009 JR & all older models
- Slide hammer with
 - fitting to thread into threads on end of shaft (M5x1.0)
 - single and double hook ends for removing plastic impeller

- Dead blow hammer

COBRA IMPELLER SERVICE INSTRUCTIONS

1. Remove radiator cap and drain engine coolant as described above.

NOTE:

If the impeller is damaged or broken completely back flush the coolant system to ensure no solid pieces are in the system.


2. Remove ignition cover using a 4mm hex key (four places)
3. Stick a 3mm hex key in the water pump shaft cross hole, and remove belt retainer screw using a 4mm hex key. (Figure 41 - item 1)
4. Remove belt retainer, water pump belt and water pump fan pulley.
5. Remove bearing retainer screw using a 3mm hex key.
6. Thread a slide hammer onto the end of the water pump shaft and remove the assembly.



NOTE:

It is quite common for the older plastic impellers to fall off the end of the shaft during this step of the process if that is the case, then follow the steps at the end of this section to remove the seal and impeller.

7. Clean any debris or particles from the bore and use some light emery cloth to remove any scratches in the surface that the removal process may have created.
8. Lubricate the bore with grease.
9. Prepare for assembly by installing the water pump assembly into the assembly tool and align the tool with engine case making sure alignment pin is in proper hole.

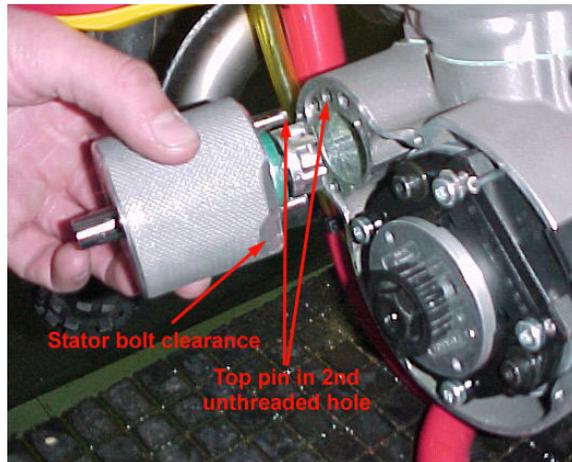

CAUTION:

Damage may occur if one attempts to install the water pump and the device is not orientated correctly. If the tool does not sit flat against the cases, the orientation of the tool to the engine is not correct. Make sure that the top alignment pin is in the 2nd unthreaded hole, the bottom alignment pin is also in the 2nd unthreaded hole, and that the relief for the stator bolt head is oriented toward the stator.

10. Hold the installation tool firmly against the engine case and tap on the end of the water pump shaft with a dead blow hammer until the insertion punch is needed



11. Continue driving the assembly with the punch until the head is flush.

NOTE:

The insertion punch is 0.010" (0.25mm) longer than the housing so as to seat the water pump assembly just in from the case surface.

12. The assembly is installed properly when the retaining screw can be tightened and it does not cause a bind on the spinning shaft (use medium strength thread lock on the retainer screw).

NOTE:

It may be necessary to tap the water pump shaft in (hammer) and out (with slide hammer) to insure proper free operation of the shaft.

13. Reinstall the pulley, belt and fan cover using a 3mm hex key to stop the rotation of the water pump assembly while tightening with medium strength thread lock to 10 ft-lb (14Nm).

14. Reinstall the cover

NOTE:

Refill the coolant system with 50/50 antifreeze-coolant / distilled water.

CAUTION:

Do not mix Propylene Glycol based coolant / antifreeze solutions with Ethylene Glycol based coolant / antifreeze solutions.

Fuel & Air System

Carburetor:

Tools recommended for carburetor service:

- Small flat head screwdriver
- WD-40
- 8mm socket

Your Cobra is equipped with an adjustable carburetor. Some fine-tuning may be needed according to weather condition and altitude. Proper jetting is **very** important for engine performance and engine life. Serious damage to the engine can occur if not properly adjusted.

IDLE ADJUSTMENT:

On the left side of the carburetor, there are two adjustment screws. The larger screw with the knurled head is the idle adjustment screw. To raise the idle, turn the screw in clockwise (in 1/4 turn increments) and rev the engine after each adjustment. To lower the idle, turn the screw counter-clockwise.

TOP END JETTING:

Indications that the engine is running too rich (too much fuel for the air) are:

- Engine not revving out or blubbering at high RPMs.
- Engine will not 'clean out'
- Wet or black spark plug

NOTE: Before changing jetting be sure that the air filter is properly cleaned and has the usual amount of air filter oil. An overly dirty air filter can cause the engine to run rich.

If the engine is running rich on the top end it should be leaned out. Leaning it out can be done by:

1. Changing the main jet to a smaller number.

2. Raising the needle clip (this lowers the jet needle) one notch at a time on the slide.

Indications that the engine is running too lean are:

- Engine cutting out on top end.
- Engine overheating and ultimately seizure.
- White spark plug

CAUTION:

It is much safer to operate the engine slightly rich as opposed to slightly lean. This is because an overly rich engine will just run poorly while an overly lean engine will seize, potentially causing an expensive top end rebuild and a DNF.

To richen the carburetor:

1. Change the main jet one number at a time (larger).
2. Lower the needle clip (raising the jet needle) one notch at a time until the engine starts to blubber on the top end, then move the clip back up one notch or until you get the blubber out.

FUEL MIXTURE SCREW

The smaller brass screw that is towards the front of the engine is a fuel mixture screw. This screw will also richen and lean your engine more on the bottom and mid-range. In warmer conditions, turn the screw in. In colder conditions, turn the screw out. Be sure to keep the carburetor very clean and make sure you don't have water or dirt in the carburetor bowl. Use automotive carburetor cleaner or WD-40 to clean the carburetor inside and out.

STOCK CARBURETOR SETTINGS

The 2005 KING stock carburetor settings from the factory are:

- 65 pilot jet
- 97 main jet

Cleaning the carburetor:

 WARNING

Clean the carburetor in a well-ventilated area, and take care that there is no spark or flame anywhere near the working area; this includes any appliance with a pilot light. Because of the danger of highly flammable liquids, do not use gasoline or low flash-point solvent to clean the carburetor.

1. Make sure the fuel is shut off.
2. Remove the carburetor.
3. Drain the fuel from the carburetor.
4. Disassemble the carburetor.
5. Immerse all the metal parts in a carburetor cleaning solution.
6. After the parts are cleaned, dry them with compressed air.
7. Blow out the fuel passages with compressed air.

8. Assemble the carburetor
9. Install the carburetor onto the motorcycle.

CAUTION:

1. The motorcycle will only operate properly if the carburetor top is installed properly with the mounting screws, cable and choke knob oriented as shown in figure 43.

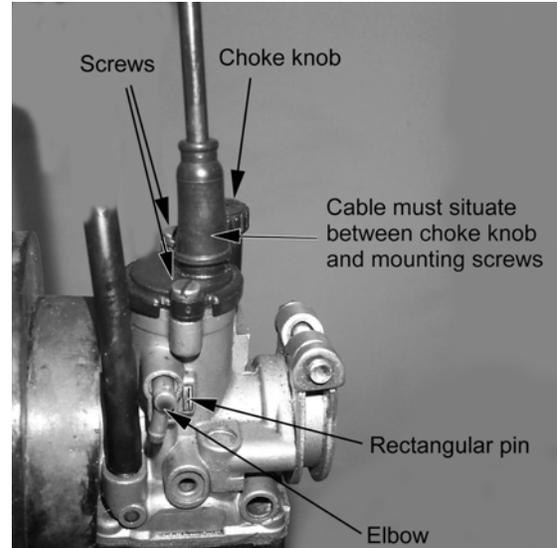


Figure 43 Proper carburetor top installation and location of rectangular slide indexing pin and vent elbows.

Reeds:

- The reeds must lay flat on the reed cage.
- If the reed tips aren't lying flat, replace them immediately.
- The reeds must have a tight seal on the reed cage.
- If the reed is damaged in any way, replace it. This means cracks, chips, and ruptures. Anything abnormal, replace the reeds.

Take the reed cage out and hold it up to the light and look in through the cage. If you see light, it is not necessarily a bad thing, but the pedals may need to be replaced. (See figure 44) Bikes have been known to run real well with light visible past the reed tips as long as the jetting proper for the conditions. (See figure 44)

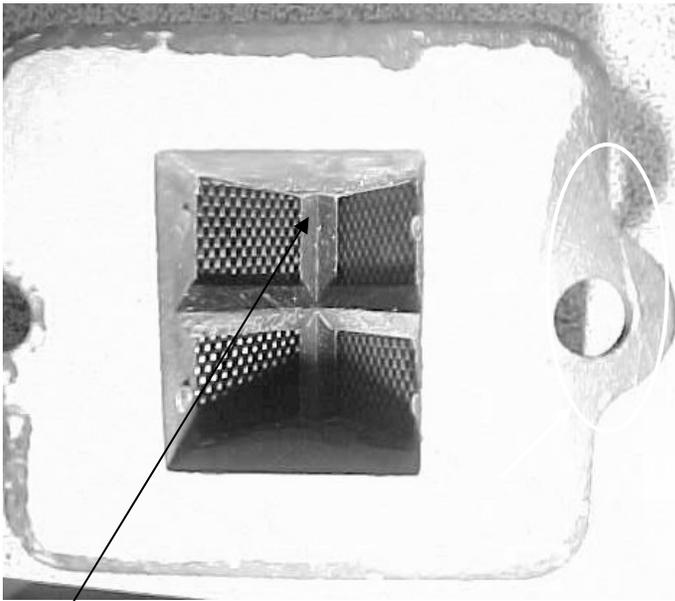


Figure 44

The presence of light may indicate that the reeds should be replaced, or turned over.

Exhaust

The pipe is a crucial element to a motorcycle. Any kinks, dents, or damage done to the pipe will result in a major performance loss.

NOTE:

Be sure to take the pipe off, and any carbon that may be built up. Carbon build up is created from exhaust. Exhaust has oils in it, and the oils cling to the walls of the inside of the pipe. Over a long period of time, the diameter of the pipe will decrease, due to carbon build up. So it is essential to clear the residue.

CAUTION:

It is important to repack the silencer. Signs of your silencer needing to be repacked are:

- The bike is louder than normal.
- A loss of power.

Tuning

Gearing

For a bike with a centrifugal clutch, it's better to be geared too low than too high.

What happens with improper gearing?

- Poor performance
- Not enough top end speed
- No snap
- Over heat clutch
- Premature failure of engine seals, bearings, & electronics
- High clutch wear

Condition	Gear Taller	Gear Lower
Mud		↓ ↓
Sand		↓
Hills		↓
Hard Pack	↑	
Throttle Blipper (novice)		↓ *

*It may be helpful to set up the clutch to hit early for smooth power delivery

Front Sprocket		Rear Sprocket	Gear Ratio	
		15	33	2.20
		15	34	2.27
		15	35	2.33
	14		33	2.36
		15	36	2.40
	14		34	2.43
		15	37	2.47
	14		35	2.50
		15	38	2.53
13			33	2.54
	14		36	2.57
		15	39	2.60
13			34	2.62
	14		37	2.64
		15	40	2.67
13			35	2.69
	14	stock	38	2.71
		15	41	2.73
13			36	2.77
	14		39	2.79
		15	42	2.80
13			37	2.85
	14		40	2.86
13			38	2.92
	14		41	2.93
13			39	3.00
	14		42	3.00
13			40	3.08
13			41	3.15
13			42	3.23

Ratio Write © Cobra R&D 2004

Carburetion

Although your Cobra is sent from the factory with the carburetor jetted for optimal performance, you may find it necessary to adjustment your particular jetting due to current weather conditions, altitude, fuel variations, and/or engine modifications.

CAUTION:

Proper jetting is very important for engine performance and engine life. Symptoms of improper jetting are listed below.

- Symptoms of incorrect oil or oil / fuel ratio
 - Poor acceleration
 - Misfire at low engine speeds
 - Excessive smoke
 - Spark plug fouling
 - Excessive black oil dripping from exhaust system
- Symptoms of too rich a fuel mixture
 - Poor acceleration
 - Engine will not 'rev' out, blubbers on top
 - Misfire at low engine speeds
 - Excessive smoke
 - Spark plug fouling
 - Wet, black, or overly dark spark plug (when removed for inspection)
- Symptoms of too lean a fuel mixture
 - Pinging or rattling
 - Erratic acceleration
 - Same actions as running out of fuel
 - High engine temperature
 - White spark plug (when removed for inspection)

NOTE:

When inspecting the spark plug to evaluate jetting, a properly jetted machine will produce a spark plug that is dry and light tan in color.

Environmental and altitude related mixture adjustments		
Condition	Mixture will be	Required adjustment
Cold air	Leaner	Richer
Warm air	Richer	Leaner
Dry air	Leaner	Richer
Very humid air	Richer	Leaner
Low altitude	Standard	None
High altitude	Richer	Leaner
Low barometric pressure	Richer	Leaner
High barometric pressure	Leaner	Richer

NOTE:

- Before making any carburetor jetting changes verify that:
 - You are using the proper fuel and oil
 - The fuel is fresh and uncontaminated
 - The oil and fuel have been mixed in the proper ratio
 - The carburetor is clean (no plugged jets)
 - The air filter is properly clean and oiled
 - The float height is within proper specification (proper measuring technique is described later in this section)

NOTE:

Perform all jetting changes on a motorcycle that has been warmed up to proper operating temperature.

The carburetor on your Cobra motorcycle is quite adjustable. Figure 49 shows its range of adjustment and in particular what adjustable component affects what range of operation (specifically throttle position).

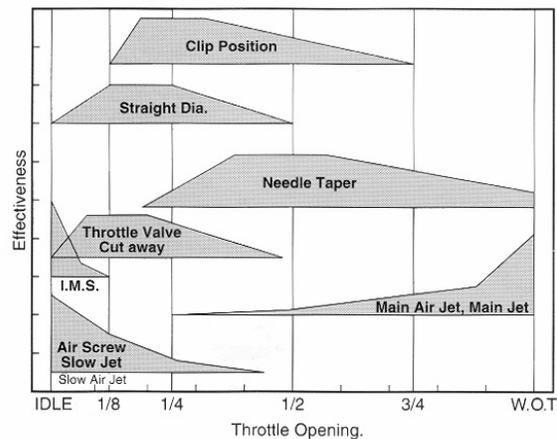


Figure 49

FUEL SCREW ADJUSTMENT:

Adjust for maximum idle speed

The fuel adjustment screw is located on the left side of the carburetor. It is the smaller of the two adjustment screws and requires the use of a small flat blade screw driver for adjustment. After adjusting for maximum idle speed, use the idle screw to adjust the desired idle speed.

NOTE:

If the fuel screw requires more than 3 turns out, replace the pilot jet for one that is one size richer (larger number) then readjust the fuel screw.

IDLE ADJUSTMENT:

Adjust for desired idle speed

The idle speed screw is located on the left side of the carburetor. It is the larger of the two screws on the side of the carburetor and is unique with its knurled head for easy fingertip adjustment. To raise the idle, turn the screw in, clockwise, (in 1/4 turn increments) and rev the engine after each adjustment. To lower the idle, turn the screw counter-clockwise.

TOP END JETTING:

Adjust for clean full throttle acceleration

Jet your top end (main jet) based on the acceleration of your Cobra Motorcycle on the longest straight at the track. Observe any of the lean or rich symptoms (spark plug appearance and bike performance) listed above and change your jetting accordingly.

PART THROTTLE

Adjust for desired acceleration

Using an area of the track that allows the rider to operate and mid throttle and transition (accelerate, or 'roll on') from closed, or mostly closed throttle, to a larger throttle opening. Observe the rich and lean symptoms listed above. Adjust the jet needle position by moving the clip from its current position (move the clip higher on the needle to make the bike run leaner, or move the clip lower on the needle to make the bike run richer) to one higher or lower.

Troubleshooting

1) Engine not behaving properly

- a) Carburetor top is installed backwards (happens a lot)
- b) The carburetor slide indexing pin is missing

2) Engine is down on power

- a) Clutch engagement is not set properly
- b) Jetting is incorrect
- c) Silencer needs repacked
- d) Exhaust pipe
 - i) Has excess carbon buildup
 - ii) Has large dent in it
- e) Compression is low
 - i) Piston
 - ii) Rings
- f) Reeds are damaged
- g) Ignition timing is incorrect

3) Engine is excessively loud

- a) Silencer needs repacking

4) Engine 'blubbers' at high RPMs

- a) Jetting too rich

5) Engine won't start

- a) Fuel
 - i) None in tank
 - ii) Is sour or bad
- b) Carburetor is dirty
- c) Ignition
 - i) Spark plug fouled
 - ii) Spark plug cap off
 - iii) Engine Shut-off 'kill' switch is shorted
 - iv) Bad electrical ground
 - v) Stator winding damaged
- d) Exhaust is plugged

6) Engine won't idle

- a) Idle knob needs adjusted
- b) Carburetor jets are dirty

Index

A-arms	29	Engine	
Air Filter	18	Specifications	5
Maintenance.....	15	Engine Mount Front.....	33
Axle.....	36	Exhaust	61
Bars and Controls	19	Parts	28
Base Gasket Selection.....	41	Fenders	34
Break-In	9	Frame Parts	33
Bumper	20	Frictional Drive	16
Carburetion		Front Brake	30
Specifications	5	Fuel System	
Carburetor		Parts list.....	58
Parts.....	21	Service.....	58
Service	58	Gas Tank.....	34
CFD Cobra Frictional Drive	16	Grab Bar.....	20
Chain		Hardware	
Adjustment	14	Frame	33
Chassis		Plastic.....	34
Specification	5	Ignition	
Torque.....	7	Parts	26
Clutch		Service.....	53
Parts.....	25	Timing.....	54
Service	48	Jetting	
Clutch Lubricant		How To	58
Replacing	13	Stock.....	5
Compression test.....	40	Troubleshooting	63
Cooling System.....	55	Lubrication	
Cylinder head		Recommended	5
torque	6	Maintenance	
Eccentric	36	Schedule.....	11
Electrical		Tips.....	11
Parts.....	23	Nerf Bars	20

Oil		Spherical Steering Bearing.....	17
Recommended	5	Starting.....	10
Optional Components	7	Stator	
Parts		torque	6
Bottom End & Transmission	24	Steering Stem	19
Carburetor	21	Steering Upright	29
Clutch & Kick Starter	25	Suspension	65
Engine	24	Swingarm Parts.....	38
Ignition & Water Pump	26	Throttle.....	18
Top End.....	27	Tie Rod.....	39
Plastic	34	Toe In Adjustment	17
Radiator	22	Top End	
Rear Brake		Parts	27
Parts.....	35	Service.....	40
Rear Drive.....	36	Torque	
Rear Shock		Chassis.....	7
Parts.....	37	Transmission	
Reeds	61	Specifications	5
Parts.....	18	Transmission Lubricant	
Seat	34	Replacing.....	13
Shock		Troubleshooting	
Service	65	General.....	66
Shock.....	32	Jetting	63
Slip Clutch.....	16	VIN reading	11
Spark Plug		WARNING	2
Recommended	5	Water Pump	
Specifications.....	5	Parts	26
Torque Values.....	6	Wheels	33